

**BY ORDER OF THE SECRETARY
OF THE AIR FORCE**



**AIR FORCE MANUAL 11-202,
VOLUME 3**

10 JANUARY 2022

**AIR MOBILITY COMMAND
Supplement**

29 JULY 2024

**439 AIRLIFT WING
Supplement**

16 APRIL 2026

Flying Operations

FLIGHT OPERATIONS

COMPLIANCE WITH THIS PUBLICATION IS MANDATORY

ACCESSIBILITY: Publications and forms are available on the e-Publishing website at www.e-Publishing.af.mil for downloading or ordering.

RELEASABILITY: There are no releasability restrictions on this publication.

OPR: AFFSA/XOF

Certified by: AF/DA3O
(Mr. Trent Dudley)

Supersedes: AFMAN11-202V3, 10 June 2020

Pages: 438

(AMC)

OPR: AMC/A3V

Certified by: AMC/A3V
(Mr. Scott J. Lubin)

Supersedes: AFMAN11-202V3_AMCSUP, 14 June 2021

Pages: 438

(439AW)

OPR: 439OG/CC

Certified by: 439AW/CC
(Colonel Christopher C. Holland)

Pages: 438

This manual implements Air Force Policy Directive (AFPD) 11-2, *Aircrew Operations*, by prescribing general flight rules that govern the operation of United States Air Force (USAF) aircraft. This manual applies to individuals at all levels who operate Air Force (AF) aircraft

(manned and unmanned), to include civilian aircrews, and uniformed members of the Regular Air Force, the Air Force Reserve and the Air National Guard (ANG), and pilots assigned to other services or from other nations (in accordance with applicable Memorandums of Agreement). This publication does not apply to the United States Space Force (USSF). Individual aircraft flight manuals should provide detailed instructions for specific aircraft instrumentation or characteristics. Ensure all records generated as a result of processes prescribed in this publication adhere to Air Force Instruction (AFI) 33-322, *Records Management and Information Governance Program*, and are disposed in accordance with the Air Force Records Disposition Schedule, which is located in the Air Force Records Information Management System. Refer recommended changes and questions about this publication to the office of primary responsibility (OPR) using the AF Form 847, *Recommendation for Change of Publication*; route AF Forms 847 from the field through the appropriate functional chain of command. This publication may be supplemented, but all supplements must be routed to AFFSA/XOF for coordination prior to certification and approval. Mission Design Series (MDS)-specific 11-series Volume 3 Air Force Manuals (AFMAN) (e.g., AFMAN 11-2C-17, Volume 3) may contain specific operational guidance unique to individual aircraft and crew positions. MDS-specific, Volume 3 manuals will not be less restrictive than this manual. The authorities to waive wing or unit level requirements in this publication are identified with a Tier (“T-0, T-1, T-2, or T-3”) number following the compliance statement. See Department of the Air Force Instruction (DAFI) 33-360, *Publications and Forms Management*, for a description of the authorities associated with the Tier numbers. The Director of Operations, AF/A3O, is the waiver authority for any non-tiered directive guidance in this manual. Submit requests for waivers through the chain of command in accordance with [paragraph 1.7](#) of this AFMAN. The use of the name or mark of any specific manufacturer, commercial product, commodity, or service in this publication does not imply endorsement by the Air Force. Compliance with Attachments [1](#) and [5](#) is mandatory. Compliance with [Attachment 2](#) through [Attachment 4](#) and [Attachment 6](#) through [Attachment 8](#) in this publication is not mandatory and these attachments exist for information and educational use.

(AMC) This supplement implements and extends guidance of Air Force Manual (AFMAN) 11-202V3, *Flight Operations*, by prescribing general flight rules, lead command operational policy and standardized procedures for the Mobility Air Forces (MAF). This supplement is approved by Air Mobility Command (AMC), Air Combat Command (ACC), Air Force Reserve Command (AFRC), Air National Guard (ANG), Pacific Air Force (PACAF), United States Air Forces in Europe-Air Forces Africa (USAFE-AFAFRICA), collectively referred to as Mobility Air Forces. This publication applies to all MAF Regular Air Force, AFRC MAF units, and ANG MAF units. This publication is not applicable to United States Space Forces. Ensure all records generated as a result of processes prescribed in this publication adhere to Air Force Instruction (AFI) 33-322, *Records Management and Information Governance Program*, and are disposed in accordance with (IAW) the Air Force Records Disposition Schedule, which is located in the Air Force Records Information Management System. Refer recommended changes and questions about this publication to the Office of Primary Responsibility (OPR) using the Department of the Air Force (DAF) Form 847, *Recommendation for Change of Publication*; route DAF Form 847s from the field through appropriate functional chain of command. The authorities to waive wing and unit level requirements in this publication are identified with a tier number (“T-0, T-1, T-2, T-3”) following the compliance statement. See Department of the Air Force Manual (DAFMAN) 90-161, *Publishing Processes and Procedures*, for a description of the authorities associated with the

Tier numbers. Submit requests for waivers through the chain of command to the appropriate Tier waiver approval authority, or alternately, to the Publication OPR for non-tiered compliance items, utilizing guidance identified in DAFMAN 90-161. See [paragraph 1.7](#). This publication may be supplemented at any level, but all supplements must be routed to the OPR of this publication for coordination prior to certification and approval. This publication requires the collection and/or maintenance of information protected by the Privacy Act of 1974 authorized by 10 U.S.C. 8013, Secretary of the Air Force. The Privacy Act System of Record Notice(s) (SORN) F011 AF XO A, Aviation Resource Management System (ARMS) covers required information and is available at <http://dpcllo.defense.gov/Privacy/SORNs.aspx>. The authority for maintenance of ARMS is Title 37 U.S.C. 301a (Incentive Pay), Public Law 92-204, Section 715 (Appropriations Act for 1973), Public Laws 93-570 (Appropriations Act for 1974), 93-294 (Aviation Career Incentive Act of 1974), and Executive Order 9397. The use of the name or mark of any specific manufacturer, commercial product, commodity, or service in this publication does not imply endorsement by the Air Force.

(439AW) This supplement implements AFMAN 11-202, Volume 3, 10 January 2022 and AFMAN 11-202, Volume 3, *Air Mobility Command Supplement*, 29 July 2024 and is supplemented as follows. This supplement defines specific policies and procedures applicable to members assigned or attached to the 439th Operations Group (439 OG). Ensure that all records created as a result of processes prescribed in this publication are maintained in accordance with AFI 33-322, *Records Management and Information Governance*, and disposed of in accordance with the Air Force Records Information Management System (AFRIMS) Records Disposition Schedule (RDS). Refer recommended changes and questions about this publication to the 439 OG/OGV using the AF Form 847, *Recommendation for Change of Publication*; route AF 847, through the appropriate chain of command to 439 OG/OG V, 650 Hangar Ave, Box 48, Westover Air Reserve Base (ARB), Chicopee, MA 01022-1777.

SUMMARY OF CHANGES

Major changes include: (1) incorporating GM 2021-01; (2) departure procedure clarifications ([Chapter 5](#)); (3) IFR DER crossing restrictions in [Table 5.1](#) and [paragraph 5.10](#); (4) FLIP Decision Tree ([Attachment 6](#)); (5) IFR Filing Tree ([Attachment 7](#)); (6) Departure Decision Tree ([Attachment 8](#)); and (7) changes since 10 June 2020 version are tracked in the document with a black bar in the left margin.

(AMC) This document has been rewritten to integrate into the current AFMAN 11-202V3. Major guidance changes include: Tactical/Receiver AAR maximum Flight Duty Period (FDP) (Table 3.1 Notes), added required designation of enroute alternate for unsuccessful AR, added guidance for enroute alternates with GNSS-only approaches, added guidance for use of Jeppesen® products, change to the 10-minute plot requirement, added CAT II ILS RVR guidance, added Opportune Air Refueling guidance, reorganized [Chapter 29](#) (separated Aircrew Member Duties into new [Chapter 30](#)), changed briefing requirement for Stabilized Approach Criteria.

(439AW) This document is revised and must be completely reviewed. This revision supplements Air Mobility Command (AMC) supplemented guidance in this manual; clarifies computer flight plan (CFP) annotations; identifies further weapons handling requirements; highlights passenger manifest acceptance.

Chapter 1—OVERVIEW	26
1.1. General.....	26
1.2. Scope.....	26
1.3. References to Source Material.	27
1.4. Flight Operations in International Airspace.....	29
1.5. Flight Operation in Foreign Airspace.	29
1.6. Flight Operations within the NAS.	30
1.7. Waivers.	31
1.7. (AMC) Waivers.	31
1.7. (439AW) Waiver authority for the 439th Airlift Wing (439 AW) supplement to AFMAN 11-202V3_AMCSUP is the 439th Operations Group Commander (439 OG/CC).	31
1.8. Violations.....	32
1.9. Deviations.	32
1.10. Aviation Safety Reporting.	32
1.11. Airworthiness.....	32
Chapter 2—ROLES AND RESPONSIBILITIES	33
2.1. Air Force Flight Standards Agency (AFFSA).	33
2.2. Major Command (MAJCOM).	33
2.3. Pilot in Command (PIC).	36
2.4. Aircrew.	37
Chapter 3—GENERAL FLIGHT RULES	38
3.1. Crew Rest.....	38
3.2. Flight Duty Period (FDP).	43
3.2. (AMC) Flight Duty Period (FDP).	43
Table 3.1. Maximum FDP.	45
Table 3.1. (AMC) Maximum FDP.....	46
3.3. Deadhead Time.	47
3.4. Maximum Flying Time.	48
3.4. (AMC) Maximum Flying Time.	48
3.5. Controlled Cockpit Rest.....	48
3.6. Aircrew Flight Equipment.	48

	3.7.	Aircrew Medical Standards.....	49
	3.8.	Nonrated Flyers.....	49
	3.9.	Flight Demonstrations and Aerial Events.	50
	3.10.	Transporting Passengers Under the Influence.	50
	3.11.	Tobacco Use.	50
	3.12.	Transport of Drugs.....	50
	3.13.	Hazardous Cargo.....	50
	3.13.	(AMC) Airlifting Hazardous Cargo.....	50
	3.14.	Flight Displays.....	51
	3.15.	Authorized Resources for Flight and Mission-Related Duties.	51
	3.15.	(AMC) Authorized Resources for Flight and Mission-Related Duties.....	51
	3.16.	Portable Electronic Devices (PEDs).	52
	3.17.	Electronic Flight Bags (EFBs).	52
	3.18.	Aircraft Movement on the Ground.	54
	3.19.	Crew at Stations.	54
	3.19.	(AMC) Crew at Stations.	54
	3.20.	Inflight Reporting.	54
	3.21.	Oxygen and Pressurization Requirements (Not Applicable for UAS).....	55
	3.21.	(AMC) Oxygen and Pressurization Requirements (N/A for UAS).	55
Table	3.2.	Oxygen Requirements for Pressurized Aircraft According to Aircraft Altitude.	56
Table	3.3.	Cabin Altitude Time Limits (Decompression Sickness Prevention).	57
	3.22.	Aircraft Lighting.	58
	3.23.	Airfield Lighting.	58
	3.24.	Right-of-Way.	58
	3.25.	See and Avoid.	59
	3.26.	Adherence to ATC Clearances and Instructions.	60
	3.27.	Descent Gradients.	60
	3.28.	Airspeed Adjustments.....	60
	3.29.	Operating Near other Aircraft.	60
	3.30.	Dropping Parachutists, Stores, or Other Objects.	60
	3.31.	Fuel Jettison.	61
	3.32.	Radio, Laser, and Other Electromagnetic Emitter Restrictions.	62
	3.33.	Communication Equipment.	62

	3.34. Navigation Equipment.	63
	3.35. Transponder Operations.	63
Figure 3.1.	Transponder Emission Summary.	65
	3.36. Automatic Dependent Surveillance – Broadcast (ADS-B) Operations.	65
	3.37. TCAS Operations.	66
	3.38. Communication, Navigation, and Surveillance Equipment Malfunctions.	67
	3.39. Terrain Awareness and Warning Systems (TAWS).	67
	3.40. Carry-On Equipment.	67
	3.41. Formation Flights (Including Air Refueling).	67
	3.41. (AMC) Formation Flights (Including Air Refueling).	67
	3.42. Aerobatics.	69
	3.43. Air Combat Tactics.	70
	3.44. Temporary Flight Restriction (TFR) Airspace.	70
	3.45. Operating at Non-towered Airports.	70
	3.46. Simulated Instrument Flight.	70
	3.47. Simulated Emergency Flight.	70
	3.48. Vertical-Lift Operations.	71
	3.49. (Added-AMC) Check Flights.	71
	3.50. (Added-AMC) Tactical Training.	72
	3.51. (Added-AMC) Aircraft or Aircrew Inter-Fly.	73
	3.52. (Added-AMC) Alertness Management and Fatigue Mitigation.	73
	3.53. (Added-AMC) Alcoholic Beverages.	75
Chapter 4—MISSION PLANNING		76
	4.1. General.	76
	4.2. Flight Authorization.	76
	4.3. Pilot in Command.	77
	4.4. Approval Authority.	77
	4.5. Flight Plans.	77
	4.6. Mission Planning Requirements.	78
	4.7. Civil, Military, and Joint-Use Airports.	81
	4.8. UAS Airfields and Operations.	82
	4.9. Aviation Into-Plane Reimbursement Card (AIR Card®) Responsibilities.	82
	4.9. (AMC) Aviation Into-Plane Reimbursement Card (AIR Card®) Responsibilities.	82

	4.10.	Weather Information.....	82
Table	4.1.	RVR to Prevailing Visibility Conversion.	84
	4.11.	Notices To Airmen (NOTAMs).....	84
	4.12.	Critical Distance Measuring Equipment (DME) NOTAMs.	85
	4.13.	Performance-Based Navigation (PBN).....	85
	4.14.	Aeronautical Information and Publications.	88
	4.15.	IFR Flight.....	89
	4.15.	(AMC) IFR Flight.....	89
	4.16.	IFR Alternate.	89
	4.17.	PBN Alternate Airfield Considerations.	91
	4.18.	IFR Alternate Minimums.....	92
Figure	4.1.	IFR Alternate Minimums Symbol.	92
Figure	4.2.	Alternate Not Authorized Symbol.	92
	4.19.	VFR Flight.....	93
	4.20.	Fuel Requirements.	93
	4.21.	Preflight Briefings.....	95
	4.22.	Aircraft Category.	97
Table	4.2.	Aircraft Category.....	98
	4.23.	Automation Management.	98
	4.23.	(AMC) Automation Management.....	98
	4.24.	Transitioning Airspace Classes.....	98
	4.25.	VFR Flight in Controlled Airspace.....	98
	4.26.	IFR Flight in Uncontrolled Airspace.	99
	4.27.	Airspace and Airspace Classification.	99
Figure	4.3.	NAS Airspace Classification.	100
Figure	4.4.	ICAO Airspace Classification.....	101
	4.28.	Reduced Vertical Separation Minimum (RVSM).....	103
	4.29.	Procedures for Accommodation of Non-RVSM Aircraft in RVSM Airspace.	103
	4.30.	Level Off Operating Practices.	103
	4.31.	Air Traffic Services (ATS).	103
	4.32.	Emergency Frequencies.....	104
	4.32.	(AMC) Emergency Frequencies.	104
	4.33.	Flight Service Station (FSS).	104

	4.34.	Local Airport Advisory.....	104
	4.35.	Remote Airport Information Service.	104
	4.36.	VFR Radar Assistance.	104
	4.37.	VFR Flight Following.....	105
	4.38.	VFR Cruising Altitudes and Flight Levels.	105
Table	4.3.	VFR Cruising Altitudes and Flight Levels.	105
	4.39.	Composite Flight Plan (IFR/VFR Flights).....	105
	4.40.	[ICAO] Transitioning IFR to VFR.	106
	4.41.	VFR Helicopter Operations.	106
	4.42.	VFR-on-top.....	106
	4.43.	Special VFR.....	106
	4.44.	Defense VFR (DVFR).	106
	4.45.	Inadvertent Flight into IMC While Operating Under VFR.....	107
	4.46.	[NAS Only] Declared Distances.	107
Figure	4.5.	[NAS Only] Declared Distance Symbol.....	107
Figure	4.6.	[NAS Only] Declared Distances.....	108
Figure	4.7.	Effects of a Geographical Constraint on Runway Declared Distances.....	109
	4.47.	Altimeter Settings.	109
Figure	4.8.	Types of Altimeter Settings.	110
	4.48.	Altimeter Use in Flight.	111
	4.49.	Flight in Extreme Barometric Pressures.	111
	4.50.	Flight in Colder Than International Standard Atmosphere (ISA) Temperatures.....	111
Figure	4.9.	NAS Designated Mountainous Areas.	112
	4.51.	Cold Weather Altimeter Corrections.	112
Table	4.4.	Cold Weather Altitude Corrections.	113
Table	4.5.	(Added-AMC) MAFPS Equal Time Point Formula.	113
	4.52.	Calculating Cold Temperature Corrections.	114
Figure	4.10.	Temperature Correction Example, KNID, TACAN RWY 32.....	114
Figure	4.11.	Example Temperature Correction.....	115
Figure	4.12.	KATW ILS or LOC RWY 3.....	116
Figure	4.13.	Cold Temperature Corrections – Remote Altimeter Setting.....	117
	4.53.	FAA Cold Temperature Airports.	117
Figure	4.14.	Snowflake Icon.	117

Chapter 5—DEPARTURE	118
5.1. General.....	118
5.2. Weather.....	118
5.2. (AMC) Weather.....	118
5.3. Hazardous Weather.....	118
5.3. (AMC) Hazardous Weather.....	119
5.4. Freezing and Frozen Precipitation or Weather.....	119
5.4. (AMC) Freezing and Frozen Precipitation or Weather.....	119
5.5. Aircraft Ground Deicing.....	119
5.5. (AMC) Aircraft Ground Deicing.....	119
5.6. VFR Communication.....	120
5.7. VFR Departure.....	120
5.7. (AMC) VFR Departures.....	120
5.8. IFR Climb Performance.....	120
5.9. IFR Departure Methods.....	121
5.10. IFR DER Crossing Restrictions.....	122
Table 5.1. IFR DER Crossing Restrictions (Unless Published Otherwise).....	122
5.11. ICAO Departure Speeds.....	122
Table 5.2. ICAO Maximum Allowable Departure Speeds.....	123
5.12. IFR Departure Procedures.....	123
Figure 5.1. “Trouble T” Symbol.....	123
5.13. Takeoff Obstacle Notes.....	123
5.14. Low Close-in Obstacles.....	123
Figure 5.2. Low Close-in Obstacles.....	124
5.15. Diverse Departure.....	124
Figure 5.3. Diverse Departure Obstacle Assessment.....	124
Figure 5.4. Diverse Departure Not Authorized (Runway 36R).....	125
Figure 5.5. Sector Diverse Departure.....	125
5.16. ICAO Omnidirectional Departure.....	125
Figure 5.6. Omnidirectional Departure.....	126
5.17. Non-standard IFR Takeoff Minimums.....	127
Figure 5.7. IFR Takeoff Minimums – Non-standard Example 1.....	127
Figure 5.8. IFR Takeoff Minimums – Non-standard Example 2.....	127

Figure 5.9.	IFR Takeoff Minimums – “Or Standard.”	127
Figure 5.10.	IFR Takeoff Minimums – Specific Aircraft Category	128
5.18.	Specific Routing.	128
Figure 5.11.	Specific Routing.	128
5.19.	Visual Climb Over Airport (VCOA).	128
Figure 5.12.	Visual Climb Area.	129
Figure 5.13.	VCOA Format.....	129
Figure 5.14.	Legacy VCOA Format.	130
Figure 5.15.	Non-Conforming VCOA Format.	130
5.20.	Reduced Takeoff Runway Length Procedure (RTRL).	130
Figure 5.16.	RTRL Procedure.	131
5.21.	Combination of Methods.	131
Figure 5.17.	Combination of Methods.	131
5.22.	Diverse Vector Area (DVA).	131
Figure 5.18.	Diverse Vector Area.	132
5.23.	Specific ATC Departure Instructions.....	132
5.24.	Standard Instrument Departure (SID).	133
Figure 5.19.	Civil SID with Top Altitude.	134
5.25.	SID Clearances.	134
Table 5.3.	NAS SID Phraseology.	135
Table 5.4.	ICAO SID Phraseology.	136
5.26.	Military SID.....	136
Figure 5.20.	Military SID.....	137
5.27.	Civil SID.....	137
Figure 5.21.	Civil SID.....	138
5.28.	ICAO SID.	138
Table 5.5.	ICAO Maximum Speeds for “Turning Departures.”	138
Table 5.6.	(Added-AMC) MAF Standard IFR Takeoff Minimums.....	139
5.29.	Vector SID.	139
Figure 5.22.	Radar Vector SID.....	140
5.30.	MAJCOM-Certified Departure.....	140
5.31.	Special Departure Procedure (SDP).....	140
5.31.	(AMC) Special Departure Procedure (SDP).....	140

Figure 5.23.	Albuquerque ODP (Runway 8).....	141
Figure 5.24.	Albuquerque SDP (Runway 8).	141
5.32.	RNAV Departures.....	141
Figure 5.25.	RNAV Departure Procedures.	142
Chapter 6—PERFORMANCE-BASED NAVIGATION		143
6.1.	General.....	143
Figure 6.1.	Progression from Sensor-based to Performance-based Navigation.	143
6.2.	Area Navigation (RNAV) Operations and RNP Operations.....	143
6.3.	PBN Context.	143
6.4.	Fundamental PBN Concepts.	144
6.5.	Navigation Functional Requirements.	144
6.6.	Designation of RNAV Specifications and RNP Specifications.	144
Figure 6.2.	Navigation Specification Designations.....	145
Figure 6.3.	Lateral Navigation Errors.	146
6.7.	RNAV Designations and RNP Designations.	146
Figure 6.4.	RNAV Designations vs RNP Designations.	147
6.8.	On-board Performance Monitoring and Alerting.....	147
Chapter 7—PERFORMANCE-BASED COMMUNICATION AND SURVEILLANCE		148
7.1.	General.....	148
7.2.	PBCS Operations.	148
7.3.	PBCS Context.	148
Figure 7.1.	Performance-based ATM Model.	148
7.4.	RCP Specifications.	148
7.5.	Actual Communication Performance (ACP).	149
Figure 7.2.	Actual Communications Performance (ACP).....	149
7.6.	RSP Specifications.....	149
Chapter 8—GROUND-BASED NAVIGATION AIDS		150
8.1.	General.....	150
8.2.	Reporting Malfunctions.	150
8.3.	Using Ground-based NAVAIDs.	150
8.4.	VOR Minimum Operational Network (MON).	150
8.5.	TACAN.....	151

8.6.	Instrument Landing System (ILS).	151
8.7.	Localizer (LOC).	151
Chapter 9—SPACE-BASED NAVIGATION AIDS		152
9.1.	General.	152
9.2.	Reporting Malfunctions.	152
9.3.	Global Positioning System (GPS).	152
9.4.	Globalnaya Navigazionnaya Sputnikovaya Sistema (GLONASS).	153
9.5.	Aircraft-based Augmentation System (ABAS).	153
9.6.	RAIM.	153
9.7.	Satellite-Based Augmentation System (SBAS).	154
9.8.	SBAS Avionics.	154
9.9.	SBAS Coverage and Service Areas.	155
9.10.	Ground Based Augmentation System (GBAS).	155
Figure 9.1.	GBAS Landing System (GLS) Approach.	156
9.11.	GBAS Avionics.	156
Chapter 10—INSTRUMENT CHARTS		157
10.1.	General.	157
10.2.	Ground Track.	157
10.3.	Instrument Procedure Design Criteria.	157
Figure 10.1.	Instrument Procedure Design Criteria – U.S. Government.	158
Figure 10.2.	Instrument Procedure Design Criteria – Jeppesen®.	158
10.4.	Waypoints.	159
Figure 10.3.	Fly-by versus Fly-over Waypoint.	159
10.5.	Radius-to-Fix (RF).	159
Figure 10.4.	Radius-to-Fix (RF) Legs.	160
10.6.	High Performance Military Aircraft (HPMA) Criteria.	161
10.7.	Chart Reference Number.	161
Figure 10.5.	DoD Published Foreign Instrument Procedure.	162
10.8.	Foreign Terminal Instrument Procedure (FTIP).	162
10.9.	Non-U.S. Government Published Instrument Procedures.	162
10.10.	FTIP Review Request.	163
10.11.	Comparison Evaluation for Commercially-Produced Products.	164
10.12.	NGA Electronic – Instrument Procedure Library (E-IPL).	164

Chapter 11—WAKE TURBULENCE	165
11.1. General.....	165
11.2. Aircraft Weight Classes.	165
11.3. [ICAO] Wake Turbulence Separation.	165
Table 11.1. ICAO Distance-based Wake Turbulence Minima.	166
Table 11.2. ICAO Time-based Wake Turbulence Minima.....	166
11.4. European Wake Vortex Re-categorization (RECAT-EU).	167
Figure 11.1. RECAT-EU Categories.....	168
Table 11.3. RECAT-EU Distance-based Wake Turbulence Minima.	168
Table 11.4. RECAT-EU Time-based Wake Turbulence Minima.....	169
11.5. [NAS Only] Wake Turbulence Separation.	169
Chapter 12—EN ROUTE NAVIGATION	171
12.1. Airspace and Airspace Classification.	171
12.2. Oceanic and Remote Continental Airspace.	171
12.3. Minimum Aircraft Altitude.....	175
12.4. Aircraft Speed.	176
12.5. Hazard Avoidance.....	177
12.6. VFR Flight.	180
Table 12.1. NAS VFR Cloud Clearance and Visibility Minimums.....	181
Table 12.2. ICAO VFR Cloud Clearance and Visibility Minimums.....	182
12.7. Low-Level and VFR Charts.....	182
12.8. Definitions.	182
Figure 12.1. Applying Magnetic Variation.	183
12.9. Chart Selection.....	183
12.10. Chart Hazards.	184
12.11. Chart Building Requirements.	185
12.12. Route Development.	186
12.13. Route Navigation.	187
12.14. Chart Reading.	188
Figure 12.2. Maximum Elevation Note – Unreliable Relief.	188
12.15. On-Board Navigation Systems.	189
12.16. Low-Level Time-to-Impact.	189
Table 12.3. Time-to-Impact (seconds) – Wings Level.	189

Table	12.4.	Time-to-Impact (seconds) – Banked.....	190
	12.17.	Route Abort.....	190
Chapter 13—HOLDING			191
	13.1.	General.....	191
	13.2.	Holding Patterns.	191
Figure	13.1.	Standard Holding Pattern.....	191
	13.3.	Holding Instructions.	192
Figure	13.2.	Multiple Holding Patterns at Same Fix.....	192
	13.4.	Holding Entry.	192
Figure	13.3.	Holding Entry Sectors.....	192
	13.5.	Holding Bank Angle.	192
	13.6.	Maximum Holding Airspeed.	193
Table	13.1.	Maximum Holding Airspeeds.....	193
Figure	13.4.	Maximum Holding Airspeed.	194
	13.7.	Holding Length.....	194
Figure	13.5.	ICAO Limiting Radial.	195
	13.8.	Drift Corrections.	195
	13.9.	Fuel Consideration.....	195
	13.10.	Use of Area Navigation Guidance and Holding.	195
Chapter 14—ARRIVAL			196
	14.1.	General.....	196
	14.2.	Weather.....	196
	14.3.	Types of Instrument Arrivals.....	197
	14.4.	VFR Arrival.	197
	14.5.	Descent Planning.	197
	14.6.	Initial Descent.	198
	14.7.	ICAO Arrival Routing.	198
	14.8.	Standard Terminal Arrivals (STARs).	198
	14.9.	Arrival Clearances.	198
	14.10.	Arrival Phraseology.	198
Table	14.1.	NAS Phraseology.....	199
Table	14.2.	ICAO Phraseology.....	200
	14.11.	RNAV Arrivals.....	200

Figure	14.1.	RNAV Arrival.....	201
	14.12.	Anticipated Approach.	201
	14.13.	Terminal Routings.	201
	14.14.	Terminal Arrival Area (TAA).....	202
	14.15.	Radar Vectors.	202
	14.16.	Operating at Non-towered Airfields.	203
Chapter 15—	APPROACH		204
	15.1.	General.....	204
	15.2.	Practice Instrument Approaches Under VFR.....	204
	15.2.	(AMC) Practice Instrument Approaches Under VFR.....	204
	15.3.	Instrument Approaches.	204
Table	15.1.	Helicopter Use of Approach Procedures.....	206
	15.4.	Approach Minimums.	206
	15.5.	Inoperative Approach Lighting System (ALS).....	206
	15.6.	Approach Clearance.....	206
	15.7.	Aircraft Speed.	207
Table	15.2.	ICAO Maximum Speeds.....	207
	15.8.	Approach Chart Naming Convention.	207
	15.9.	Duplicate Procedure Identification.	207
	15.10.	Circling-Only Approach.	208
	15.11.	Equipment Required for an Approach.	208
Figure	15.1.	Equipment Required for an Approach.	209
Figure	15.2.	Additional Equipment Required for Approach.....	210
	15.12.	Radar Approaches.....	210
Figure	15.3.	Radar Approach Minimums.....	211
	15.13.	Non-radar Approaches.	211
	15.14.	Reading an Instrument Procedure.	211
Figure	15.4.	Instrument Approach Chart.....	212
Figure	15.5.	Minimum Sector Altitude with Sub-sector Based on Distance.	213
	15.15.	Radar Fixes on Non-radar Approaches.....	214
Figure	15.6.	Radar Fix on Non-radar Approach.	214
	15.16.	PBN Transitions to Conventional Final Approach.	215
Figure	15.7.	PBN Transitions to Conventional Final Approach.	216

	15.17. RNAV Lines of Minima.	217
Figure	15.8. RNAV Lines of Minima.	217
	15.18. Baro-VNAV Systems.	218
	15.19. Baro-VNAV Temperature Limitations.	218
Figure	15.9. Baro-VNAV Temperature Limits.	218
	15.20. Approach Segments.	219
Figure	15.10. Approach Segments.	219
Figure	15.11. Instrument Procedure without a Charted IF.	220
	15.21. Dead Reckoning Segment.	221
Figure	15.12. [ICAO] Dead Reckoning Segment.	221
	15.22. Instrument Approach Segment Descents.	221
	15.23. Established on Track.	221
	15.24. Shuttle, Climb-in Hold, and Descent-in Hold.	222
	15.25. Types of Course Reversals.	222
Figure	15.13. Types of Course Reversals.	222
	15.26. ICAO-Specific Course Reversal and Racetrack Procedures.	222
Figure	15.14. Direct Entry Sector.	223
Figure	15.15. Base Turn Entry Expanded Entry Sector.	223
Figure	15.16. ICAO PANS-OPS versus U.S. TERPS Protected Airspace.	224
Table	15.3. ICAO Course Reversal and Racetrack Descent Rates.	224
Table	15.4. ICAO Maximum Speeds for Course Reversals and Racetrack Procedures.	225
	15.27. Procedure Turn.	225
Figure	15.17. Procedure Turn.	226
Figure	15.18. Procedure Turn Not Authorized.	227
Figure	15.19. Procedure Turn with No FAF Depicted.	229
Figure	15.20. Procedure Turn Fix Altitude.	230
	15.28. Procedure Turn - 45°/180°.	230
Figure	15.21. 45°/180° Procedure Turn.	231
	15.29. Procedure Turn – 80°/260°.	231
Figure	15.22. 80°/260° Procedure Turn.	231
	15.30. Base Turn or [NAS Only] Teardrop.	231
Figure	15.23. Base Turn or [NAS Only] Teardrop.	232
Figure	15.24. Base Turn with More Than One Track.	232

15.31. Racetrack or [NAS Only] HILPT.	233
Figure 15.25. Racetrack or [NAS Only] HILPT.	233
Figure 15.26. HILPT Approach.	234
15.32. Limitations on Procedure Turns [NAS Only].	235
Figure 15.27. [NAS Only] NoPT Routing.	235
15.33. Stepdown Fixes.	236
Figure 15.28. Instrument Procedure Stepdown Fixes.	236
15.34. High Altitude Approaches.	236
15.35. Non-DME Teardrop High Altitude Approach.	236
Figure 15.29. Non-DME Teardrop High Altitude Approach.	238
15.36. Helicopter-Only Approaches.	239
Figure 15.30. Helicopter-Only Approach.	239
Figure 15.31. Short Final Approach.	240
Figure 15.32. Point-in-Space (PinS) Approach.	241
Figure 15.33. PinS Approach to Multiple Heliports.	242
15.37. Not Used.	242
15.38. Visual Approach.	242
15.39. Contact Approach [NAS Only].	243
15.40. Charted Visual Flight Procedures.	244
Figure 15.34. Charted Visual Flight Procedure.	245
15.41. Simultaneous Approaches to Parallel Runways.	246
Figure 15.35. Simultaneous Approaches to Parallel Runways.	246
15.42. Simultaneous Dependent Approaches.	247
Figure 15.36. Simultaneous Dependent Approaches.	247
15.43. Simultaneous Independent Approaches.	247
Figure 15.37. Simultaneous (Parallel) Independent Approaches.	248
15.44. Simultaneous Converging Instrument Approaches.	248
Figure 15.38. Simultaneous Converging Instrument Approach.	248
Chapter 16—FINAL APPROACH	249
16.1. General.	249
16.2. Final Approach Components.	249
16.3. Visual Descent Point (VDP).	249
Figure 16.1. VDP.	250

16.4.	Vertical Descent Angle (VDA).....	250
Figure 16.2.	Visual Segment – Obstacles.....	250
Figure 16.3.	Descent Angle NA.	250
16.5.	Continuous Descent Final Approach (CDFA).	251
Figure 16.4.	Dive and Drive.....	252
Figure 16.5.	CDFA.....	252
Figure 16.6.	Find Rate of Descent with Known VDA or Glideslope.....	254
Figure 16.7.	Find Rate of Descent with Computed Descent Gradient.	254
Figure 16.8.	CDFA Descent Point Beyond the FAF (KTLH VOR 18).	255
Figure 16.9.	Calculating a CDFA Descent Point beyond the FAF.	255
16.6.	Flying the Approach.	256
16.7.	Runway Environment.	256
16.8.	ILS or LOC.	256
16.9.	RNAV (GPS) and GPS Approach Procedures.....	258
16.10.	Visual Segment.	258
Figure 16.10.	Visual Segment.....	259
Chapter 17—SPECIAL AIRCREW AND AIRCRAFT CERTIFICATION REQUIRED APPROACHES		260
17.1.	General.....	260
17.2.	Special Authorization Category I (SA CAT I).....	260
Figure 17.1.	SA CAT I ILS Approach.	260
17.3.	Category II (CAT II).....	261
Figure 17.2.	CAT II ILS Approach.	261
17.4.	“Copter” Category II.....	262
Figure 17.3.	COPTER CAT II ILS Approach.....	262
17.5.	Special Authorization Category II (SA CAT II) with Reduced Lighting.	262
Figure 17.4.	SA CAT II ILS Approach.....	263
17.6.	Category III (CAT III).	263
Figure 17.5.	CAT III ILS Approach.....	264
17.7.	Simultaneous Close Parallel ILS Precision Runway Monitor (PRM) / RNAV PRM / GLS PRM Approaches.....	265
17.8.	Simultaneous Offset Instrument Approaches (SOIA).	265
17.9.	RNP Authorization Required (AR) Approach Procedures.	265

Figure 17.6.	RNP Values.....	266
Figure 17.7.	Nonstandard Missed Approach Climb Gradient.	267
Figure 17.8.	Aircraft Size Restrictions.	268
Figure 17.9.	RNP Parallel Approach Operations.	269
Figure 17.10.	RNP Parallel Approach Runway Transition Operations.....	269
Figure 17.11.	RNP Converging Runway Operations.	270
17.10.	(Added-AMC) True North Approaches.	270
Chapter 18—LANDING		271
18.1.	General.....	271
18.2.	Land and Hold Short Operations (LAHSO).	271
18.3.	Reduced Same Runway Separation (RSRS).....	271
18.4.	Helicopter Landing Areas.	271
18.5.	Landing With Hot Armament.	271
18.6.	Touch-and-Go Landings.	271
18.7.	Turns after Touch-and-Go or Low Approach.	271
18.8.	Traffic Pattern.	271
18.9.	Illusions and Vision in Flight.....	272
18.10.	Approach Lighting Systems (ALS).	273
18.11.	Runway Lighting Systems.	273
18.12.	Runway Markings.....	273
18.13.	Circling Approaches.	273
18.14.	Circling Protected Area.	274
Figure 18.1.	Circling Approach Area.....	274
Table 18.1.	U.S. TERPS Standard Circling Criteria.....	274
Figure 18.2.	Expanded Circling Area Annotation.....	275
Table 18.2.	U.S. TERPS Expanded Circling Approach Maneuvering Airspace.	275
Table 18.3.	PANS-OPS Circling Area Radii.	276
Figure 18.3.	Circling Maneuver Examples.	277
18.15.	Accomplishing the Circling Maneuver.	277
18.16.	[ICAO] Visual Maneuver Using a Prescribed Track.	277
Table 18.4.	Semi-Width of the Corridor.	278
Figure 18.4.	Visual Maneuver Using a Prescribed Track Protected Area.....	278
18.17.	Side-Step Maneuver.....	278

Figure 18.5.	Published Side-Step Minimums.....	279
18.18.	UAS Automatic Landing.	279
Chapter 19—	MISSED APPROACH	280
19.1.	General.....	280
19.1.	(AMC) General.	280
19.2.	Missed Approach.	280
19.3.	ICAO Bank Angle.	280
19.4.	Missed Approach Instructions.	280
19.5.	ATC Notification.	281
19.6.	Missed Approach Airspeed.....	281
Table 19.1.	ICAO Maximum Missed Approach Speed.	281
19.7.	Missed Approach Phases.	281
19.8.	Turning Missed Approach.	282
19.9.	RNAV Missed Approach.....	282
19.10.	Radar Approaches.....	282
19.10.	(AMC) Radar Approaches.	282
19.11.	CDFA Missed Approach Procedures.....	283
19.12.	Early Missed Approach Initiation.....	283
Figure 19.1.	Early Missed Approach Restriction.	284
19.13.	Delayed Missed Approach Decision.....	284
19.14.	Loss of Visual Reference While Circling.	285
Figure 19.2.	Missed Approach from the Circling Approach.....	286
19.15.	Training – Multiple Approaches.....	286
Chapter 20—	EXTREME LATITUDE NAVIGATION	287
20.1.	General.....	287
Figure 20.1.	Heading Indications While Crossing Meridians.	288
20.2.	Boundaries of the AMU.....	288
20.3.	Grid Operations.....	288
20.4.	Definition of an Emergency in the AMU.	289
20.5.	Using the VOR in the AMU.	290
20.6.	Using an NDB in the AMU.	291
20.7.	En Route Navigation at High Latitudes.	291
Figure 20.2.	En Route Charts for Navigation at Higher Latitudes.	292

Figure 20.3.	Canadian Artic, Northern and Southern Control Areas.	293
20.8.	True North En Route Procedures.	293
20.9.	Chart Reading in High Latitudes.	294
Chapter 21—(Added-AMC) MAF COMMAND AND CONTROL (N/A FOR OSA/EA, SEE AFMAN 11-2MDSV3)		296
21.1.	(Added-AMC) General.	296
21.2.	(Added-AMC) Execution Authority.	296
21.3.	(Added-AMC) Mission Clearance Decision.	296
21.4.	(Added-AMC) Operational C2 Reporting.	297
21.5.	(Added-AMC) Mission Commander (MC).	300
21.6.	(Added-AMC) C2 Agency Telephone Numbers.	301
21.7.	(Added-AMC) Close Watch Missions.	301
21.8.	(Added-AMC) Law Enforcement Support.	301
21.9.	(Added-AMC) Enroute Maintenance Support.	301
Chapter 22—(Added-AMC) OPERATIONAL PROCEDURES		302
22.1.	(Added-AMC) On-Time Takeoffs. (.....	302
22.2.	(Added-AMC) Communications Instructions Reporting Vital Intelligence Sightings (CIRVIS) and Other Reports.	302
22.3.	(Added-AMC) In-Flight Meals.	302
22.4.	(Added-AMC) In-Flight Emergency Procedures.	302
22.5.	(Added-AMC) Call Signs.	303
22.6.	(Added-AMC) Maintenance Documentation.	304
22.7.	(Added-AMC) Border Clearance.	304
22.8.	(Added-AMC) Insect and Pest Control.	309
22.9.	(Added-AMC) Dropped Objects.	309
22.10.	(Added-AMC) Aircrew Flight Equipment and Dash 21 Equipment Documentation.	309
22.11.	(Added-AMC) Classified Equipment and Material Security.	310
22.12.	(Added-AMC) Flight Deck Congestion and Loose Objects.	310
22.13.	(Added-AMC) Fleet Service.	310
Chapter 23—(Added-AMC) AIRCRAFT SECURITY (N/A FOR OSA/EA, SEE AFMAN 11-2MDSV3)		311
23.1.	(Added-AMC) Standby Aircraft Security.	311

23.2.	(Added-AMC) Enroute Security.....	311
23.3.	(Added-AMC) Anti-Hijacking Preventive Measures.	312
23.4.	(Added-AMC) Preventing and Resisting Hijacking.	313
23.5.	(Added-AMC) Initial Hijacking Response.	314
23.6.	(Added-AMC) In-Flight Resistance.	314
23.7.	(Added-AMC) Communications Between Aircrew and Ground Agencies.....	315
23.8.	(Added-AMC) Forced Penetration of Unfriendly Airspace.	315
23.9.	(Added-AMC) Detecting Unauthorized Entry.....	315
23.10.	(Added-AMC) Passenger Screening.....	315
23.11.	(Added-AMC) Arming of Aircrew Members.....	315
Chapter 24—	(Added-AMC) OPERATIONAL REPORTS AND FORMS	318
24.1.	(Added-AMC) General.	318
24.2.	(Added-AMC) Aviation Safety Action Program (ASAP).	318
24.3.	(Added-AMC) AF Form 457, USAF Hazard Report.	319
24.4.	(Added-AMC) AF Form 651, Hazardous Air Traffic Report (HATR).	319
24.5.	(Added-AMC) AMC Form 97, AMC In-Flight Emergency and Unusual Occurrence Worksheet.....	320
24.6.	(Added-AMC) Report Violations, Unusual Events, or Circumstances.	322
24.7.	(Added-AMC) Petroleum, Oil, and Lubricants (POL) - Aviation Fuels Documentation.....	324
24.8.	(Added-AMC) AMC Form 54, Aircraft Commander's Report on Services/Facilities.	327
24.9.	(Added-AMC) AMC Form 196, Aircraft Commander's Report on Crew Member.....	327
24.10.	(Added-AMC) DD Form 1748-2, Joint Airdrop Malfunction Report (Personnel-Cargo).	327
24.11.	(Added-AMC) AF Form 4096, Airdrop/Tactical Airland/Air Refueling Mission Recap.	328
24.12.	(Added-AMC) Operational Forms for Boom Operators / Loadmasters.	328
Chapter 25—	(Added-AMC) TRAINING AND OPERATING LIMITATIONS	329
25.1.	(Added-AMC) Simulated Instrument Flight.....	329
25.2.	(Added-AMC) Maintenance Opportune Training (N/A for OSA/EA).....	329
25.3.	(Added-AMC) Practice Emergency Separations.	329
25.4.	(Added-AMC) Multiple Approaches.....	329

Chapter 26—(Added-AMC) CARGO AND PASSENGER PROCEDURES	330
26.1. (Added-AMC) General.	330
26.2. (Added-AMC) Aircraft Concurrent Servicing Operations.	330
26.3. (Added-AMC) Responsibilities for Aircraft Cargo Loading.	330
26.4. (Added-AMC) Pre-Mission and Preflight Duties.	332
26.5. (Added-AMC) Passenger Handling.	337
26.6. (Added-AMC) Emergency Airlift of Personnel.	339
26.7. (Added-AMC) Transportation of Service Animals, Pets, and Other Animals.	339
26.8. (Added-AMC) Enroute and Post-flight Onloading and Offloading.	339
26.9. (Added-AMC) Cargo Validation On/Offloading Procedures and Format.	340
26.10. (Added-AMC) Loading Rucksacks.	340
26.11. (Added-AMC) Additional Cargo Considerations.	341
26.12. (Added-AMC) Handling of Classified Cargo, Registered Mail, Mission Capable (MICAP) Parts, Very, Very Important Part (VVIP), Forward Supply System (FSS) Shipments, and Courier Material.	341
Chapter 27—(Added-AMC) AIR-TO-AIR REFUELING (AAR)	343
27.1. (Added-AMC) Communications Failure.	343
27.2. (Added-AMC) AAR Cancellation Policy.	343
27.3. (Added-AMC) MARSA.	343
27.4. (Added-AMC) Altitude Reservations (ALTRV).	344
27.5. (Added-AMC) Receiver Pilot in Command Responsibilities.	344
27.6. (Added-AMC) Tanker Pilot in Command Responsibilities.	345
27.7. (Added-AMC) ATC Clearance.	346
27.8. (Added-AMC) Coronet Command and Control.	346
27.9. (Added-AMC) DUAL ROLE Procedures.	346
27.10. (Added-AMC) Opportune Air Refueling.	347
27.11. (Added-AMC) Air-to-Air Refueling with Foreign Aircraft.	347
Chapter 28—(Added-AMC) AEROMEDICAL EVACUATION	348
28.1. (Added-AMC) Aeromedical Evacuation (AE) Mission.	348
28.2. (Added-AMC) Operational Control and Reporting of Aeromedical Evacuation Forces.	348
28.3. (Added-AMC) AE Alerting Procedures.	348
28.4. (Added-AMC) Pilot in Command Responsibilities for AE Missions.	349

28.5.	(Added-AMC) Loadmaster/Boom Operator Responsibilities for AE Missions.	350
28.6.	(Added-AMC) Aeromedical Evacuation Crew Member Responsibilities.....	350
28.7.	(Added-AMC) AE Ground Operations.....	350
28.8.	(Added-AMC) Aircraft Concurrent Servicing Operations with Patients On-Board.....	350
28.9.	(Added-AMC) Aerial Refueling during Aeromedical Evacuation (AE) Missions..	351
28.10.	(Added-AMC) AE Aircraft Configuration.	352
28.11.	(Added-AMC) Passengers and Cargo on AE missions.	352
28.12.	(Added-AMC) Crash/Fire/Rescue (CFR) for AE Missions.....	354
28.13.	(Added-AMC) Off Load Message.....	354
28.14.	(Added-AMC) ERO Procedures.	354
28.15.	(Added-AMC) Floor Loading Procedures.	354
Chapter 29—	(Added-AMC) HUMAN FACTORS STRATEGIES	355
29.1.	(Added-AMC) General.	355
29.2.	(Added-AMC) Crew Resource Management (CRM).	355
29.3.	(Added-AMC) Threat and Error Management (TEM).	355
29.4.	(Added-AMC) Automation Management.....	356
29.5.	(Added-AMC) Flight Path Management (FPM).....	356
29.6.	(Added-AMC) Information Automation (IA).....	357
29.7.	(Added-AMC) Operational Risk Management (ORM).	357
29.8.	(Added-AMC) Descent Planning and Energy Management.....	357
Chapter 30—	(Added-AMC) AIRCREW MEMBER DUTIES	359
30.1.	(Added-AMC) General.	359
30.2.	(Added-AMC) Pilot Flying and Pilot Monitoring Duties.....	359
30.3.	(Added-AMC) Crew Resource Management Assertive Statements.....	359
30.4.	(Added-AMC) Head-Up/Head-Down Policy.	360
30.5.	(Added-AMC) Verbalize, Verify, and Monitor (VVM).	360
30.6.	(Added-AMC) Advisory Calls.....	361
Table 30.1.	(Added-AMC) Climb Out Advisory Calls.....	361
Table 30.2.	(Added-AMC) Descent Advisory Calls.....	361
Table 30.3.	(Added-AMC) Non-Precision Approach Advisory Calls.....	362
Table 30.4.	(Added-AMC) Precision Approach Advisory Calls.	363
30.7.	(Added-AMC) Critical Action Coordination.....	364

30.8. (Added-AMC) Stabilized Approach.	364
Attachment 1—GLOSSARY OF REFERENCES AND SUPPORTING INFORMATION	368
Attachment 2—THE “60-TO-1 RULE”	404
Attachment 3—General Turning Performance (Constant Altitude, Steady Turn)	413
Attachment 4—INSTRUMENT FLYING FUNDAMENTALS	414
Attachment 5—INSTRUMENT MANEUVERS	420
Attachment 6—FLIP DECISION TREE	433
Attachment 7—IFR FILING AND WEATHER DECISION TREE	435
Attachment 8—DEPARTURE DECISION TREE	437

Chapter 1

OVERVIEW

1.1. General. This manual provides broad guidance for aircraft operations. It is consolidated to help aviators to identify and synthesize potentially applicable standards and procedures, and to understand application and waiver authority. General guidance cannot address every situation, therefore, Major Commands (MAJCOMs) and wing commanders should provide additional guidance further supporting safe aircraft operations. In the absence of specific guidance, aircrew will seek clarification and use sound judgment.

1.1.1. **(Added-AMC)** Local Supplements. Wing commanders may define local procedures to this manual in a unit supplement. Wing commanders must obtain MAJCOM approval prior to releasing their supplement. Send an electronic copy of the Wg/CC-approved version to MAJCOM Stan/Eval. Air Force Reserve (AFRC) and ANG units will forward local supplements to their MAJCOM office (AFRC/A3MV, or for ANG: NGB/A3M). Total Force Integration units will forward to both AMC Stan/Eval (AMC/A3V) and their respective reserve component's MAJCOM office. **(T-2)**

1.2. Scope.

1.2.1. This manual consolidates guidance for pilots, such as found in the U.S. Code of Federal Regulations (CFR), Department of Defense (DoD) Directives and Instructions, and other USAF guidance for pilots. Supplemental information to this AFMAN may be found in applicable MAJCOM supplements.

1.2.2. Unmanned Aircraft System (UAS) or Remotely Piloted Aircraft applicability. Category 4 and 5 UAS operations shall follow this AFMAN. AFMAN 11-502, *Small Unmanned Aircraft Systems*, shall govern Category 1-3 ("Small") UAS operations. UAS categories are listed in AFMAN 11-502.

1.2.3. Basic civil aviation information for the national airspace system (NAS) available in the *Aeronautical Information Manual* (AIM) is not duplicated in this manual; additional information is available in FAA-H-8083-15, *Instrument Flying Handbook*, FAA-H-8083-16, *Instrument Procedures Handbook*, and FAA-H-8083-25, *Pilot's Handbook of Aeronautical Knowledge*. Federal Aviation Administration (FAA) handbooks and resources may be found at https://www.faa.gov/regulations_policies/handbooks_manuals/aviation/.

1.2.4. Differences between USAF and FAA aviation information are provided in this manual; [Department of Defense Instruction (DoDI) 4540.01, *Use of International Airspace by U.S. Military Aircraft and for Missile and Projectile Firing*] International Civil Aviation Organization [ICAO] aviation information, which U.S. military pilots must observe when practical and compatible with the mission, is also duplicated for ease of access. **(T-0)** When compliance with ICAO procedures is not practical and consistent with the mission, U.S. military pilots must operate with due regard in accordance with Flight Information Publication (FLIP) *General Planning (GP)*, Chapter 8. **(T-0)** Items that are specific to the NAS are annotated accordingly (e.g., "[NAS Only]").

1.2.5. This manual provides broad guidance for Air Force flying under most circumstances. Pilots should exercise sound judgment to safely conduct flying operations if something is not expressly prohibited in this manual.

1.2.6. The intended audience for this manual is winged, post-undergraduate pilot training USAF pilots. Basic flight fundamentals are described in [Attachment 2](#), [Attachment 3](#), [Attachment 4](#), [Attachment 5](#), FAA-H-8083-3, *Airplane Flying Handbook*, FAA-H-8083-25, *Pilot's Handbook of Aeronautical Knowledge*, and FAA-H-8083-16, *Instrument Procedures Handbook*.

1.3. References to Source Material. Pilots must reference and be familiar with the specific cited references to the AIM contained within this manual. **(T-1)** References other than the AIM are for information and educational use only, and are not in all circumstances binding on military aircraft operations. Questions about the applicability of any cited references or documents contained herein to specific activities should be routed through applicable MAJCOM/A3 channels to Headquarters (HQ) Air Force Flight Standards Agency (AFFSA). HQ AFFSA shall in turn seek clarification regarding applicability from the relevant USAF legal office.

1.3.1. All references are provided inside square brackets and listed without any applicable suffix or version (e.g., “[FAA Order 8260.3]”). References at the beginning of a paragraph apply to the entire paragraph; references at the end of a sentence apply only to that sentence.

1.3.2. This manual is current as of its publication date for the references in [Attachment 1](#); however, if a newer version is current, then pilots should refer to the current version (e.g., FAA Order 8260.3E is referenced and FAA Order 8260.3F is current). **Note:** For AIM references, the intent is the subject paragraph referenced, not simply the number. **Example:** If the FAA revises AIM 5-4-1, *Standard Terminal Arrival (STAR) Procedures* to 5-5-1, the intent is to reference the *STAR Procedures* information, not simply the paragraph number.

1.3.3. This manual uses the generic term “aircraft flight manual” to refer to all MDS instructions, technical orders (T.O.), and/or flight manuals that govern MDS operation.

1.3.4. When referencing the pilot in command (PIC) throughout this manual, the PIC is the final authority for the compliance statements. The PIC may delegate a task but retains responsibility for compliance.

1.3.5. MAJCOMs may reference FAA documents, listed in [Attachment 1](#), when developing training, guidance, and operational execution procedures to comply with the intent of this manual.

1.3.5.1. Advisory Circular (AC) 20-131, *Airworthiness Approval of Traffic Alert and Collision Avoidance Systems (TCAS-II) and Mode S Transponders*.

1.3.5.2. AC 20-138, *Airworthiness Approval of Positioning and Navigation Systems*.

1.3.5.3. AC 20-140, *Guidelines for Design Approval of Aircraft Data Link Communication Systems Supporting Air Traffic Services (ATS)*.

1.3.5.4. AC 20-150, *Airworthiness Approval of Satellite Voice (SATVOICE) Equipment Supporting Air Traffic Service (ATS) Communication*.

1.3.5.5. AC 20-151, *Airworthiness Approval of Traffic Alert and Collision Avoidance Systems (TCAS II), Versions 7.0 & 7.1 and Associated Mode S Transponders*.

1.3.5.6. AC 20-165, *Airworthiness Approval of Automatic Dependent Surveillance - Broadcast OUT Systems*.

- 1.3.5.7. AC 20-167, *Airworthiness Approval of Enhanced Vision System, Synthetic Vision System, Combined Vision System, and Enhanced Flight Vision System Equipment.*
- 1.3.5.8. AC 20-172, *Airworthiness Approval for Automatic Dependent Surveillance – Broadcast (ADS-B) In Systems and Applications.*
- 1.3.5.9. AC 90-23, *Aircraft Wake Turbulence.*
- 1.3.5.10. AC 90-91, *North American Route Program.*
- 1.3.5.11. AC 90-96, *Approval of U.S. Operators and Aircraft to Operate Under Instrument Flight Rules (IFR) in European Airspace Designated for Basic Area Navigation (B-RNAV) and Precision Area Navigation (P-RNAV).*
- 1.3.5.12. AC 90-100A, *U.S. Terminal and En Route Area Navigation (RNAV) Operations.*
- 1.3.5.13. AC 90-101, *Approval Guidance for Required Navigation Performance (RNP) Procedures with Authorization Required (AR)*
- 1.3.5.14. AC 90-105, *Approval Guidance for RNP Operations and Barometric Vertical Navigation in the U.S. National Airspace System and in Oceanic and Remote Continental Airspace.*
- 1.3.5.15. AC 90-106, *Enhanced Flight Vision Systems.*
- 1.3.5.16. AC 90-107, *Guidance for Localizer Performance with Vertical Guidance and Localizer Performance without Vertical Guidance Approach Operations in the U.S. National Airspace System.*
- 1.3.5.17. AC 90-108, *Use of Suitable Area Navigation (RNAV) Systems on Conventional Routes and Procedures.*
- 1.3.5.18. AC 90-114, *Automatic Dependent Surveillance-Broadcast Operations.*
- 1.3.5.19. AC 90-117, *Data Link Communications.*
- 1.3.5.20. AC 91-70, *Oceanic and Remote Continental Airspace Operations.*
- 1.3.5.21. AC 91-85, *Authorization of Aircraft and Operators for Flight in Reduced Vertical Separation Minimum (RVSM) Airspace.*
- 1.3.5.22. AC 120-28, *Criteria for Approval of Category III Weather Minima for Takeoff, Landing, and Rollout.*
- 1.3.5.23. AC 120-29, *Criteria for Approval of Category I and Category II Weather Minima for Approach.*
- 1.3.5.24. AC 120-76, *Authorization for Use of Electronic Flight Bags.*
- 1.3.5.25. ICAO Document (Doc) 8400, *ICAO Abbreviations and Codes.*
- 1.3.5.26. Title 14, Code of Federal Regulations, Part 1, *Definitions and Abbreviations, Current Edition.*
- 1.3.5.27. Title 14, Code of Federal Regulations, Part 91, *General Operating and Flight Rules, Current Edition.*

1.3.5.28. Title 14, Code of Federal Regulations, Part 121, *Operating Requirements: Domestic, Flag, and Supplemental Operations*, Current Edition.

1.3.5.29. Title 14, Code of Federal Regulations, Part 135, *Operating Requirements: Commuter and on Demand Operations and Rules Governing Persons on Board Such Aircraft*, Current Edition.

1.4. Flight Operations in International Airspace. [DoDI 4540.01] International airspace exists over the high seas at any point greater than 12 nautical miles from baseline of coastal state. See FLIP GP for DoD policy and procedures for flight operations in international airspace. **Note:** Aircrew operating U.S. military aircraft within international airspace will ensure aircraft do not comply with a State's requirements for those areas the United States considers excessive claims under international law. **(T-0)** See the Maritime Claims Reference Manual for a summary of claims considered excessive http://www.jag.navy.mil/organization/code_10_mcrm.htm.

1.5. Flight Operation in Foreign Airspace. ICAO member states publish their exceptions to ICAO publications in their individual *Aeronautical Information Publication* (AIP) <https://asps.leidos.com/>. Pertinent information from these AIPs should be extracted into the FLIP *Area Planning* (AP) <https://aerodata.nga.mil/AeroDownload/?section=flip> and the *Foreign Clearance Guide* (FCG) <https://www.fcg.pentagon.mil/fcg.cfm>. Refer to diplomatic clearances and the FCG for specific guidance on operation in foreign sovereign airspace.

1.5.1. Sovereignty of U.S. Military Aircraft. DoD aircraft commanders must not authorize any exercise of jurisdiction by foreign authorities except by direction of the appropriate DoD component headquarters or the U.S. Embassy [FCG]. **(T-0)**

1.5.2. U.S. military aircraft are sovereign instrumentalities. When they have received diplomatic clearance to land in foreign territory, it is U.S. principle to assert that they are entitled to the same privileges and immunities customarily accorded warships [FCG].

1.5.3. Privileges and immunities include, in the absence of stipulations to the contrary: exemption from duties and taxation; immunity from search, seizure, and inspections (including customs and safety inspections); and, any other exercise of jurisdiction by the host nation over the aircraft or the personnel, equipment, or cargo on board [FCG].

1.5.4. **(Added-AMC)** Operations in International/Foreign National Airspace. (See FLIP, FCG, and AP, for further guidance). US Military aircraft and Department of Defense (DoD) personnel entering another nation to conduct US government business must have the approval of the foreign government concerned to enter their airspace. **(T-0)** Foreign clearances for US international air operations are obtained through US officials known as Defense Attaché Officers.

1.5.4.1. **(Added-AMC)** Foreign National Airspace. Any airspace that is subject to the sovereignty of a State. This includes airspace above the territorial seas, internal waters, archipelagic waters (for archipelagic States) and land territory of a State. Consistent with international law, the U.S. Government recognizes territorial sea claims up to a maximum distance of 12 nautical miles from a coastal State's baseline drawn in accordance with international law. National airspace is sometimes referred to as territorial airspace.

1.5.5. **(Added-AMC)** Flight Information Region (FIR). [FCG] A FIR is an area of airspace within which flight information and related services are provided. International Civil Aviation Organization (ICAO) has allocated, through regional air navigation agreements, responsibility for civil air traffic management in international airspace adjacent to coastal States in specified FIRs. States responsible for managing FIRs generally establish rules and procedures relating to civil aviation operations to carry out their responsibilities for providing air navigation facilities and air traffic management services in both national airspace and in assigned FIRs. However, DoD understands that these FIR rules and procedures do not apply as a matter of international law to State aircraft, including U.S. military aircraft. If not following ICAO flight procedures, Aircraft may operate within an established FIR without approval of the adjacent country, provided the PIC avoid flight in national airspace.”

1.5.6. **(Added-AMC)** Diplomatic Clearance. Violations of foreign sovereignty result from unauthorized or improper entry or departure of aircraft. Aircrews should not enter foreign national airspace for which a diplomatic clearance has not been duly requested and granted through diplomatic channels.

1.5.6.1. **(Added-AMC)** ATC (Air Traffic Control) agencies are not vested with authority to grant diplomatic clearances for penetration of sovereign airspace where prior clearance is required from the respective country. Aircraft clearances are obtained through diplomatic channels only.

1.5.6.2. **(Added-AMC)** Entry Points. Aircrews on a flight plan route, which takes them from international airspace into foreign national airspace, for which approved aircraft clearances were obtained, should not amend the entry point(s).

1.5.6.3. **(Added-AMC)** Route Conflicts. In the event an ATC agency challenges the validity of a flight routing or attempts to negate existing clearances, PICs should evaluate the circumstances. The normal response is to attempt to advise the ATC agency that the aircraft will continue to the planned destination, as cleared in international airspace. The key phrase is "in international airspace." Safety of flight is paramount in determining mission continuation. Under no circumstances should aircrews construe a clearance as being valid if it routes their mission over sovereign airspace not approved through diplomatic channels before departure.

1.5.6.4. **(Added-AMC)** Aircrews operating missions requiring unique or specially developed routing will normally be briefed at home station, onload station, and/or by the last Command and Control (C2) facility transited before performing the critical portion of the mission.

1.6. Flight Operations within the NAS. [FAA Pilot/Controller Glossary; U.S. AIP] The NAS is the airspace, air navigation facilities, and airfields of the United States. It includes components shared jointly with the military and all associated information, services, rules, regulations, policies, procedures, personnel, and equipment. **Note:** Military aircraft comply with the laws, regulations, and rules which pertain to “aircraft operations.” Many regulations and rules address only “civil aircraft operations,” which does not include military or other public aircraft. Some civil aviation only rules are implemented by the DoD as a matter of principle to which exceptions apply.

1.7. Waivers. Refer to DAFI 33-360 for waiver guidance. The Director of Operations, AF/A3O, is the waiver authority for any non-tiered directive guidance in this manual. MAJCOMs (or subordinate units for Tier 2 and Tier 3 waivers) initiate and staff all waiver packages. Coordination through the Air Force Flight Standards Agency Flight Directives Division (AFFSA/XOF), hqaffsa.xof@us.af.mil, <https://usaf.dps.mil/sites/affsa/SitePages/Flight-Directives.aspx>, is required for Tier 0 and Tier 1 waivers and recommended for Tier 2 and Tier 3 waivers.

1.7. (AMC) Waivers. Tiering levels presented in the AFMAN supplement represent the lowest acceptable level and as such, higher levels may also approve the waiver. For example, a Tier 3 statement may be waived by Tier 2, 1, 0 authorities. Reference the most current AMC tiered waiver delegation memo on the AMC/A3V SharePoint when flying 618 AOC-controlled missions.

1.7. (439AW) Waiver. Authority for the 439th Airlift Wing (439 AW) supplement to AFMAN 11-202V3_AMCSUP is the 439th Operations Group Commander (439 OG/CC).

1.7.1. AFFSA/XOF will pursue external agency approval for Tier 0 waivers and provide results to the requesting MAJCOM (e.g., an exemption granted by the FAA Administrator).

1.7.1.1. Waivers to utilize a current or renewed external agency exemption must be approved by the MAJCOM Director of Operations (MAJCOM/A3). If a new MAJCOM/A3 is appointed, the waiver must be reapproved by them. MAJCOMs will forward a copy of the AF Form 679, *Air Force Publication Compliance Item Waiver Request/Approval*, with MAJCOM/A3 approval within 10 days to HQ AFFSA/XOF for tracking purposes. **Note:** HAF/A3O concurrence on AF Form 679 is not required for renewed waivers to existing FAA exemptions.

1.7.1.2. Current exemptions are available in the AFFSA/XOF SharePoint® (<https://usaf.dps.mil/sites/affsa/SitePages/Flight-Directives.aspx>).

1.7.2. Accomplish all waivers using the AF Form 679. Wings will send a consolidated list of approved waivers to MAJCOM standardization/evaluation and AFFSA/XOF by the last day of each quarter. **(T-1)**

1.7.2. **(AMC)** MAJCOM waiver OPRs are as follows: AMC/A3V: amc.a37v@us.af.mil; ACC/A3TV: accdotvsrtb@us.af.mil; AFRC/A3M: hqafrc.a3mv.workflow@us.af.mil; PACAF: pacaf.a3tv@us.af.mil; USAFE/A3TV: usafea3tv.a3tv@us.af.mil; NGB/A3M: NGB.A2.3.6.A3M.Mobility.Operations.Org@us.af.mil.

1.7.3. **(Added-AMC)** Waivers to specific Flight Manuals (Technical Orders) are submitted through MAJCOM Stan/Eval to the MAJCOM/A3 IAW AFI 11-215, *Flight Manuals Program*. Waivers of this nature may require an extended response time.

1.7.4. **(Added-AMC)** For Flight Manual procedures that require MAJCOM approval, submit requests for approval through MAJCOM Stan/Eval for routing to the appropriate approval authority.

1.8. Violations. A violation (pilot deviation) may result when a USAF aircraft deviates from a flight rule. FAA air traffic control (ATC) deviation reports involving USAF aircraft are processed by the Air Force Representative to the FAA (AFREP) in accordance with Department of the Air Force Manual (DAFMAN) 13-201, *Airspace Management*. USAF ATC deviation reports involving USAF aircraft are processed in accordance with AFI 91-202, *The U.S. Air Force Mishap Prevention Program*. Violations that occur in the airspace of foreign nations are processed in accordance with the procedures of that nation.

1.8.1. If a unit or pilot is notified by an air traffic controller or AFREP of a possible pilot deviation, the unit or pilot shall preserve any available evidence for a minimum of 180 days and contact the AFREP prior to disposal. **(T-1)**

1.8.2. For any communications involving any alleged violation, utilize aircraft call-sign only and do not release any aircrew member information to non-USAF agencies without the permission of the AFREP in coordination with the MAJCOM/A3 or AF/A3O. **(T-1)**

1.9. Deviations. [14 CFR Part 91.3] An ATC clearance is not authority to deviate from this manual. In an inflight emergency requiring immediate action, the PIC may deviate from any rule to the extent required to meet that emergency. When deviating from an ATC clearance, notify ATC of the action taken as soon as possible. **Note:** In the event of a deviation from a flight rule or when given traffic priority by ATC in an emergency, the PIC will verbally report the incident to a supervisor or commander and prepare a detailed written record within 24 hours or as soon as mission permits. **(T-1)**

1.10. Aviation Safety Reporting. Potential hazards to aviation safety should be reported via the military aviation safety action program (ASAP) (<https://asap.safety.af.mil>). Personnel will report incidents involving damage to aircraft, personal injury, or intentional disregard of orders or instructions, whether reported to ASAP or not, to a flight safety officer as soon as possible. **(T-1)** Report hazardous air traffic events in accordance with AFMAN 91-223, *Aviation Safety Investigations and Reports*.

1.10.1. **(Added-AMC)** Data generated from the ASAP process is not used for monitoring personnel performance or to initiate punitive or adverse action. Violations of the UCMJ, US or state criminal code, or foreign criminals statutes should not be reported via ASAP. Aircrews reporting incidents involving personal injury and/or aircraft damage should contact unit or local safety offices for appropriate guidance.

1.10.2. **(Added-AMC)** ASAPs can be submitted via the ASAP app, the ASAP website (<https://asap.safety.af.mil>), or emailed to the ASAP Program Manager (amc.asap@us.af.mil). The ASAP App is also available on the AMC EFB Work Apps store, Apple's App Store, and the Google Play Store.

1.11. Airworthiness. See AFI 62-601, *USAF Airworthiness*.

Chapter 2

ROLES AND RESPONSIBILITIES

2.1. Air Force Flight Standards Agency (AFFSA). AFFSA will:

- 2.1.1. Serve as the OPR for this manual and advise MAJCOMs on all aspects of flight operations.
- 2.1.2. Assist MAJCOMs with identifying and defining communication, navigation and surveillance (CNS) requirements and accomplishing operational approvals.
- 2.1.3. Review MAJCOM operational approvals for consistency with civil standards and for completeness of operational procedures, aircraft flight manuals, and directives prior to staffing for endorsement.
- 2.1.4. Serve as the focal point for all FAA operational exemptions and maintain a registry of current exemptions. Coordinate with AF/A3O prior to submitting an exemption request.

2.2. Major Command (MAJCOM). MAJCOMs will provide guidance, where specified throughout this manual. For the purposes of this manual, flying MAJCOMs are: Air Combat Command (ACC), Air Education and Training Command (AETC), Air Force District of Washington (AFDW), Air Force Global Strike Command (AFGSC), Air Force Material Command (AFMC), Air Force Reserve Command (AFRC), Air Force Special Operations Command (AFSOC), Air Mobility Command (AMC), Defense Intelligence Agency (DIA), National Guard Bureau (NGB), Pacific Air Forces (PACAF), and United States Air Forces Europe-Air Forces Africa (USAFE-AFAFRICA). **Note:** For supplementing this publication, Commander Air Force Forces (COMAFFOR) in the grade of O-8 or higher in combatant commands are considered MAJCOM commanders only for forces under their operational control, and guidance provided by these commanders supersedes conflicting MAJCOM guidance for forces under their operational control. MAJCOMs will:

- 2.2.1. Provide guidance to address aircrew alertness and fatigue management (e.g., use of “go” and “no-go” medications, controlled cockpit rest).
- 2.2.2. Establish alert and compensatory periods in keeping with mission requirements and operational risk management.
- 2.2.3. Manage assigned Mode S dynamic addresses to ensure no two aircraft are operating with the same address simultaneously.
- 2.2.4. Establish transponder procedures (e.g., mission specific and aircraft specific) for operational use of Mode 3A/C, Mode S, and ADS-B.
- 2.2.5. Provide operational guidance for laser eye protection in accordance with AFI 11-301V1, *Aircrew Flight Equipment (AFE) Program* and FAA Advisory Circular (AC) 70-2B, *Reporting of Laser Illumination of Aircraft*.
- 2.2.6. Coordinate with the MDS system program office (SPO) and program managers when developing and approving use of personal, public, or non-DoD resources (hardware or software) to include carry-on hardware components (e.g., Global Positioning System (GPS) pucks) to be utilized by aircrew (e.g., personally owned devices, non-DoD networks, commercial websites).

- 2.2.7. Provide tactical operations guidance for CNS equipment.
- 2.2.8. Provide aircrew training, ensure aircraft certification, and grant operational approval for Area Navigation (RNAV) operations and required navigation performance (RNP) operations.
- 2.2.9. Train aircrew, certify aircraft performance-based communication and surveillance (PBCS) systems, and grant operational approval prior to use PBCS.
- 2.2.10. Publish procedures to ensure that aircraft do not exceed protected airspace if allowing aircraft to fly an instrument approach using a lower category.
- 2.2.11. Develop programs to ensure aircrew are trained, aircraft are certified, and grant operational approval for operations within Reduced Vertical Separation Minimum (RVSM) airspace. **Note:** Formation flights are non-RVSM if any aircraft in the formation is non-RVSM.
- 2.2.12. Develop procedures that account for declared distances during touch-and-go operations.
- 2.2.13. Develop operational guidance on required visual flight rules (VFR) and low-level navigational chart utilization.
- 2.2.14. Establish acceptable methods for calculating a derived decision altitude (DDA) if aircraft flight manual guidance does not adequately address DDA (e.g., use of demonstrated altitude lost in a go-around, use of industry practice 50 feet above the minimum descent altitude (MDA) as the DDA).
- 2.2.15. Provide aircraft-specific operational approval and training prior to authorizing operations using navigational aids (NAVAIDs) oriented to true or grid north.
- 2.2.16. Determine the highest allowable latitude for aircraft capable of displaying only magnetic heading for areas north of 70° North and south of 60° South that are not officially designated as areas of magnetic unreliability (AMU).
- 2.2.17. Where necessary, develop departure procedures for use by specific aircraft and MAJCOM-certified aircrew under specific conditions.
- 2.2.18. Where necessary, develop programs that may authorize pilots to use a suitable RNAV system or RNP system to navigate on the final approach segment of a conventional instrument approach procedure based on a Very High Frequency Omni-directional Range (VOR), Tactical Air Navigation (TACAN), or Non-directional Radio Beacon (NDB).
- 2.2.19. Where necessary, at specific airfields, develop their own approach procedures for use by specific aircraft and MAJCOM-certified aircrew under specific conditions.
- 2.2.20. Provide training and operational approval for special aircrew and aircraft certification required approaches. **Note:** Training and approval for one procedure type does not extend to other procedure types (e.g., operational approval for Category (CAT) II procedures does not also authorize Special Authorization (SA) CAT I procedures).
- 2.2.21. Where necessary, authorize special authorization (SA) CAT II aircrew to continue CAT II operations if the installed touch down zone or runway centerline lights fail.
- 2.2.22. MAJCOMs will develop aircrew training for use of non-United States Government (USG) products to include commercial publications or host nation products. **Note:** AFFSA does not maintain a current list of accepted host nation products and publications.

2.2.23. In coordination with MDS SPO, provide operating guidance, procedures, and training prior to authorizing electronic flight bag (EFB) usage. **Note:** MDS SPO approval is required if connecting to aircraft power. AFFSA will assist lead MAJCOM with the development and implementation of EFB programs. MAJCOMs should reference FAA AC 120-76 when developing programs.

2.2.24. Conduct large-scale exercises in permanent or temporary special use airspace established according to FAA JO 7400.2, *Procedures for Handling Airspace Matters*, and FAA Job Order (JO) 7610.4, *Special Operations*. When MAJCOMs approve large-scale exercises or short-term special missions they will ensure information on approved activities is available to the non-participating flying public and coordinate these operations with:

2.2.24.1. Affected non-participating military flying units. (T-0)

2.2.24.2. Affected FAA Air Route Traffic Control Center. (T-0)

2.2.24.3. Affected FAA regions through the AFREP. (T-0)

2.2.24.4. Other agencies, as appropriate. (T-0)

2.2.25. CNS Operational Approvals. MAJCOM/A3 approves operational use of CNS and navigation safety systems. Coordinate with AFFSA/XON for capabilities that require operational approval and AF/A3O endorsement. Contact AFFSA/XON at (hqaffsa.xon@us.af.mil).

2.2.25.1. Provide aircrew training and certification, instructions, procedures, and minimum equipment lists for CNS capabilities to aircrew and maintenance personnel. **Note:** At MAJCOM/A3's discretion, MAJCOMs may utilize the lead command's endorsements for similar platforms (e.g., USAFE-AFAFRICA or AFRC may use AMC C-40 RNP Authorization Required (AR) operational approval). If training, instructions, procedures, or minimum equipment lists differ from the lead command, a separate operational approval is required.

2.2.25.2. Reference AFI 63-101/20-101, *Integrated Life Cycle Management*.

2.2.26. Any primary flight reference (PFR) used for instrument flight will be endorsed by AF/A3O. Contact AFFSA/XON (hqaffsa.xon@us.af.mil) for endorsement process. **Note:** Lead command will define display requirements for aircraft not certified or authorized for instrument flight.

2.2.26.1. USAF aircraft cockpits and UAS control stations must always be capable of providing full-time attitude, altitude, airspeed information, and the capability to recognize, confirm, and recover from unusual attitudes in all pilot positions.

2.2.26.2. UAS control stations must display full time link status, link availability, lost link indications, and logic information (autopilot control mode, primary route, and contingency route). **Exception:** Contingency route may be immediately available if not displayed at all times.

2.2.26.3. MAJCOMs will issue guidance for configuration of pilot-selectable flight displays. In actual instrument meteorological conditions (IMC) or when there is no discernible horizon, an AF/A3O-endorsed PFR shall be displayed in the pilot flying position.

2.2.27. Foreign Terminal Instrument Procedure (FTIP).

2.2.27.1. Design Criteria Review. MAJCOM Terminal Instrument Procedures (TERPS) offices validate the safety of the host nation instrument procedures by comparing the design against approved criteria (US TERPS, ICAO PANS-OPS, or NATO MIPS). The TERPS function then identifies nonstandard conditions that require mitigation.

2.2.27.2. MAJCOM Operational Risk Management Assessment. Establish operational risk management assessment procedures for MAJCOM approval of FTIP reviews.

2.2.27.3. Flyability Check. Establish procedures for obtaining Foreign Terminal Instrument Procedure (FTIP) flyability checks when required. FTIP flyability checks are another means for MAJCOM instrument procedure specialists to ensure FTIPs are safe, practical, and consistent with good procedure design prior to publication in DoD FLIP.

2.3. Pilot in Command (PIC). The PIC is the aircrew member designated by competent authority, regardless of rank, as being responsible for, and is the final authority for the operation of the aircraft [14 CFR Part 91.3, DAFMAN 11-401, *Aviation Management*]. **(T-0)** PIC will ensure the aircraft is not operated in a careless, reckless, or irresponsible manner that could endanger life or property. [14 CFR Part 91.13] **(T-0)**

2.3.1. The PIC should not accept an aircraft for flight if they suspect the aircraft is not airworthy (e.g., an aircraft that is involved in an incident that results in damage to the aircraft.).

2.3.2. The PIC will ensure compliance with this AFMAN and the following: Headquarters Air Force (HAF), MAJCOM, and MDS-specific manuals, FLIP and FCG, ATC clearances, Notices to Airmen (NOTAMs), aircraft T.O., and combatant commander's instructions including other associated directives. **(T-1)**

2.3.3. **(Added-AMC)** PICs are:

2.3.3.1. **(Added-AMC)** In command of all persons aboard the aircraft.

2.3.3.2. **(Added-AMC)** Vested with authority to accomplish the assigned mission. The PIC will only fly events authorized in the mission tasking unless, in the PIC's judgment, an emergency condition demands otherwise. **(T-2)** Fly unscheduled training events (e.g., AAR or transition training) only after obtaining approval of the execution authority. **(T-3)**

2.3.3.3. **(Added-AMC)** The final mission authority for decisions not assigned to higher authority.

2.3.3.4. **(Added-AMC)** The final authority for requesting or accepting aircrew or mission waivers.

2.3.3.5. **(Added-AMC)** Responsible for passing mission progress reports (at least daily) to C2 agents. **(T-3)**

2.3.3.6. **(Added-AMC)** Responsible for interaction between aircrew members and mission support personnel and will establish a point-of-contact (POC) with the appropriate C2 agent prior to entering crew rest. **(T-3)** Local C2 agents are responsible for coordinating mission support requirements on the PIC's behalf.

2.3.3.7. **(Added-AMC)** Responsible for the welfare of aircrew members, Mission Essential Personnel (MEP), passengers, and the safe accomplishment of the mission.

2.4. Aircrew. Individuals designated on the flight authorization responsible to fulfill specific aeronautical tasks regarding operating USAF aircraft.

2.4.1. Follow AFMAN 11-403, *Aerospace Physiological Training Program*, guidance for flight restrictions following an altitude (hypobaric) chamber flight. **Exception:** There are no flight restrictions following reduced oxygen breathing device (ROBD) training or to conduct UAS flight operations.

2.4.2. Aircrew will not fly or assume aircraft control for UAS:

2.4.2.1. When appropriate crew rest was not obtained in accordance with [paragraph 3.1](#). **(T-3)**

2.4.2.2. If any alcohol was consumed within 12 hours prior to takeoff or if impaired by alcohol or any other intoxicating substance, to include the effects or after-effects. **(T-1)**

2.4.2.3. Anytime a physical or psychological condition is suspected or known to be detrimental to the safe performance of flight duty. **(T-1)**

2.4.2.4. While self-medicating unless cleared in accordance with [paragraph 3.7.2](#).

2.4.2.5. Within 72 hours after donating blood, plasma, or bone marrow. **(T-1)**

2.4.2.6. Within 24 hours of compressed gas diving including SCUBA, surface supplied diving, aircraft pressurization checks exceeding 10 minutes in duration below sea level or hyperbaric (compression) chamber exposure. **(T-1) Note:** Not applicable (N/A) for UAS.

2.4.2.6.1. As an exception to [paragraph 2.4.2.6](#), following helicopter emergency egress device system (HEEDS) training, aircrew may only fly if the aircraft's maximum altitude remains below 10,000 feet mean sea level (MSL). **(T-1)**

2.4.2.6.2. As an exception to [paragraph 2.4.2.6](#), Air Force divers on aeronautical orders will follow guidelines in accordance with SS521-AG-PRO-010, *U.S. Navy Diving Manual* for flying and diving restrictions. **(T-0)**

2.4.2.7. **(Added-AMC)** If any alcohol is consumed within 12 hours prior for alert time for ALFA and BRAVO.

Chapter 3

GENERAL FLIGHT RULES

3.1. Crew Rest. Commanders and supervisors will ensure aircrew are provided a 12-hour rest opportunity prior to beginning the flight duty period. **(T-3)** Crew rest is free time and includes time for meals, transportation, and an opportunity for at least 8 hours of uninterrupted sleep. Crew rest cannot begin until after the completion of official duties. Crew rest is compulsory for aircrew members prior to performing any duties involving aircraft operations and is a minimum of 12 non-duty hours before the flight duty period (FDP) begins.

3.1.1. Aircrew members must inform the PIC or mission execution authority if not sufficiently rested for flight duties. **(T-3)**

3.1.1. **(AMC)** It is the aircrew member's responsibility to be properly rested for each mission. If circumstances prevent this, no aircrew member should feel pressured to fly when not properly rested. An aircrew member who is fatigued should immediately notify the PIC of this situation. If unable to start or complete a mission safely, declaring "safety of flight" may be required.

3.1.2. If crew rest is interrupted, individuals will immediately inform the PIC or mission execution authority and will either begin a new crew rest period or not perform flight duties. **(T-1)** An interruption is any official business conducted after crew rest. **Exception:** PIC (or designee) may initiate mission-related communication with official agencies without interrupting crew rest.

3.1.3. The authority waiving the 12-hour crew rest period must ensure that the PIC is notified prior to beginning crew rest. **(T-2)** The PIC is not required to accept reduced crew rest, even if waiver has been granted by the appropriate waiver authority.

3.1.4. When three or more consecutive flight duty periods of at least 12 hours duration are scheduled, crew rest may be reduced by the PIC to a minimum of 10 hours in order to maintain a 24-hour work/rest schedule. The 10-hour crew rest authorization is only used to keep crews in 24-hour clock cycles, not for scheduling convenience or additional sortie generation.

3.1.5. Any reduction from 12-hour crew rest requires pre-coordination for transportation, meals, and quarters so that aircrew members are provided an opportunity for at least 8 hours of uninterrupted sleep.

3.1.6. **(Added-AMC)** Crew Rest/Enroute Ground Time. Units and/or mission execution authorities will establish procedures to place aircrew members in crew rest. **(T-2)**

3.1.6.1. **(Added-AMC)** SQ/CCs and enroute C2 agents will ensure work/rest cycles permit an aircrew adequate time to safely accomplish mission duties and personal time for rest. **(T-2)**

3.1.6.2. **(Added-AMC)** Do not enter aircrew members into crew rest until they complete official post-flight duties. **(T-2)** Those duties may include, but are not limited to, refueling, cargo on-/offload, aircrew arming, minor maintenance, or mission debriefing.

3.1.7. **(Added-AMC)** Home-Station Pre-Departure Crew Rest. For missions planned to keep aircrew members off-station 16 hours or more, unit commanders will enter primary and deadhead aircrew members into pre-departure crew rest 24 hours before the legal for alert time. **(T-3) Exception:** For ARC aircrew, the type of pay status or order (e.g., Inactive Duty Training) determines whether home-station pre-departure crew rest is applicable.

3.1.7.1. **(Added-AMC)** Aircrew members may perform limited non-flying duties like mission planning during the first 12 hours of pre-departure crew rest. **Note:** Home-station pre-departure crew rest begins before initial departure from an aircrew member's home base, not the base of attachment or mission origination.

3.1.8. **(Added-AMC)** Off-Station/Enroute Ground Time. Mobility planners will provide aircrews at least AFMAN 11-2MDSV3-specified minimum ground time between engine shutdown and subsequent takeoff. **(T-3)**

3.1.8.1. **(Added-AMC)** Mobility planners should construct mission itineraries with enroute ground times longer than minimum ground time to afford aircrew members opportunities to recover from the cumulative effects of fatigue caused by flying on several consecutive days or due to transiting several time zones. If practical, make the enroute ground time 36 hours (maximum) after three consecutive, near-maximum FDPs.

3.1.8.1.1. **(Added-AMC)** Mission planners, PICs, or C2 agents may modify ground time in the interest of safety.

3.1.8.1.2. **(Added-AMC)** PICs may modify ground time to no less than required for the minimum crew rest period, completion of mission planning, cargo on-/offload, and non-standard mission related duties. **(T-3)** C2 agents will not ask PICs to accept less than minimum ground time as defined in AFMAN 11-2MDSV3. **(T-2)**

3.1.9. **(Added-AMC)** Crew Enhancement Crew Rest (CECR). CECR provides PICs a means to minimize the adverse effects of an aircrew alert and report period outside normal duty time. CECR periods should be of minimum duration and are normally used during de-positioning legs. Tasking authorities will approve requests to delay alert time to normalize the work-rest cycle or increase messing options when mission allows. **(T-2)** If inflexible user or mission requirements preclude the C2 agency from accommodating changes to the mission, the C2 agent will inform the PIC of the reason for disapproval.

3.1.10. **(Added-AMC)** Post-Mission Crew Rest (PMCR). SQ/CCs will give aircrew members returning to home base sufficient time to recover from cumulative effects of the mission and tend to personal needs. PMCR begins when all post-flight and post-mission duties are complete. **Exception:** For ARC aircrew, the type of pay status or order (e.g., Inactive Duty Training) determines whether home-station post-mission crew rest is applicable.

3.1.10.1. **(Added-AMC)** For missions that keep an aircrew off station 16 or more hours, the SQ/CC will provide at least 1 hour (up to 96 hours) PMCR for each 3 hours off-station. **(T-3)** Do not enter aircrew members in pre-departure crew rest until the PMCR period expires. **(T-3)**

3.1.10.2. **(Added-AMC)** PMCR is not applicable to continuing missions and MAJCOM/A3 may suspend PMCR during contingency operations.

3.1.11. **(Added-AMC)** Flying Crew Chief (FCC)/Fly Away Security Team (FAS) Work and Rest Plan. For off-station missions, FCCs and FAS teams (including AMC Phoenix Ravens) are responsible to the PIC. Aircrew crew rest rules do not apply. For FCC work-rest plan guidance, see DAFI 21-101, *Aircraft and Equipment Maintenance Management*, and associated MAJCOM supplements. For FAS work-rest plan guidance, see DAFI 31-101, *Integrated Defense*, and associated MAJCOM supplements.

3.1.12. **(Added-AMC)** Aircrew Alerting. SQ/CCs and/or enroute C2 agents will ensure work/rest cycles permit an aircrew adequate time to safely accomplish mission duties and personal time for rest. **(T-2)** Whenever possible, C2 agents should inform PICs and Medical Crew Directors (MCD) of aircraft status, expected patient upload time, and other pertinent mission details to streamline mission launch.

3.1.13. **(Added-AMC)** Legal For Alert Time. Aircrew legal for alert time is defined per AFMAN 11-2MDSV3. Individual locations may increase or decrease this time depending on specific capabilities. Units may establish self-alert procedures for local training missions.

3.1.13.1. **(Added-AMC)** For missions with more than minimum ground time, the PIC may arrange an alert time that provides additional preparation time to accomplish the mission. The PIC may also accept alerting with reduced preparation time when the mission allows. In all cases, the PIC will coordinate changes to standard alerting times with the appropriate C2 agency. **(T-2)** For Operational Support Airlift/Executive Airlift (OSA/EA), reduced preparation time will be coordinated with the aide for the party and expectations will be managed. **(T-3)**

3.1.13.2. **(Added-AMC)** With PIC agreement and when cargo load warrants (i.e., outsized or special cargo), C2 agents may alert Loadmasters/Boom Operators up to 2 hours before normal alert time. When early alerting is warranted, the PIC and C2 agent must notify the Loadmaster/Boom Operator before entering crew rest. **(T-2)** Do not alert the Loadmaster/Boom Operator more than 1 hour before beginning cargo upload. Base the aircrew FDP on the earliest show time.

3.1.13.3. **(Added-AMC)** C2 agents will not alert an aircrew until the aircraft is in commission or there is reasonable assurance that maintenance technicians will complete repairs that allow the aircrew time to preflight and load the aircraft to meet the target takeoff time. **(T-3) Exception:** Missions with a limited launch window (Coronet, etc.) may be alerted.

3.1.13.4. **(Added-AMC)** C2 agents will not alert outbound aircrew when inbound aircraft is on Code-2 or Code-3 status until maintenance technicians determine required parts are available and the aircraft will be repaired within the target ground time. **(T-3)**

3.1.14. **(Added-AMC)** Self-Alerts. Aircrews may self-alert at locations without a C2 agency, but must coordinate with the controlling C2 agency. **(T-3)** The PIC may elect, with C2 concurrence, to self-alert on operational missions at locations with a C2 agency. Coordinating the alert time with local C2 agents can avoid FDP limitations that result from unexpected changes in the mission. OSA/EA aircrews will self-alert unless dictated otherwise by OG/CC. **(T-3)**

3.1.15. **(Added-AMC)** Aircrew Release. The aircrew release policy is as follows:

3.1.15.1. **(Added-AMC)** On the aircrew's initial entry or re-entry into crew rest, the controlling C2 agent, or PIC during self-alerts, will establish an expected alert time. **(T-3)**

3.1.15.2. **(Added-AMC)** For all missions, the latest allowable alert time is 6 hours after the expected alert time (N/A for OSA/EA). **(T-2)** The PIC may extend that window to 8 hours when flying as primary aircrew or 12 hours when flying in deadhead status. The controlling C2 agent will not ask the PIC to accept more than the 6-hour window. **(T-2)** ANG/AFRC aircrew members may extend the window as necessary to deadhead to home station to meet the Firm Scheduled Return Time.

3.1.15.3. **(Added-AMC)** When a C2 agent determines circumstances will not allow for aircrew alerting during the legal for alert window, at that time but not earlier than the expected alert time, the C2 agent will contact the PIC and establish a new expected alert time at least 12 hours from the time of notification. **(T-3)**

3.1.15.4. **(Added-AMC)** At the end of the legal for alert window or if the mission risk becomes elevated and the PIC determines the overall risk of the mission prohibits safe continuation, he/she will contact the C2 agent and establish a new expected alert time. **(T-3)**

3.1.15.5. **(Added-AMC)** If the mission cannot depart within 4 hours of any scheduled takeoff, the PIC may continue the mission after a thorough re-evaluation of all Operational Risk Management (ORM) factors. The controlling C2 agent will not ask or pressure the PIC to accept a takeoff outside of the 4-hour window. **(T-2)** The PIC will coordinate with C2 to continue the mission or enter crew rest and establish a legal for alert time. **(T-2)**

3.1.16. **(Added-AMC)** Stage Management.

3.1.16.1. **(Added-AMC)** Stage Posture. Stages operate on a positive launch principle. C2 agents will alert aircrews using the following priority/hierarchy. **(T-2)**:

3.1.16.1.1. **(Added-AMC)** Aircrews that require an emergency return to home station.

3.1.16.1.2. **(Added-AMC)** De-positioning stage aircrews will be prioritized by their Firm Scheduled Return Times.

3.1.16.1.3. **(Added-AMC)** Aircrews in sequence of arrival time.

3.1.16.1.4. **(Added-AMC)** If the stage manager returns an aircrew in the stage to crew rest because of a mission delay or abort, that aircrew becomes first out when legal for alert.

3.1.16.2. **(Added-AMC)** Mechanical Stage. A C2 agent may create a mechanical stage when a delayed or aborted mission will not resume before that aircrew's FDP expires. Aircrews in a mechanical stage will be first out when a mission in the same direction transits their location while they are legal for alert. A C2 agent may bump an inbound aircrew with FDP to complete that mission to cycle aircrews in a mechanical stage. C2 agents should not normally establish a mechanical stage for ANG and AFRC aircrews flying unit-equipped aircraft.

3.1.17. **(Added-AMC)** Standby (Alert) Force Duty. MAJCOM C2 Agents will task units for Standby Force Duty not later than 18 hours prior to legal for alert time. **(T-2)** This allows aircrew members 12 hours of pre-standby crew rest and 6 hours for aircraft preflight duty. When aircrews are unable to complete all preflight duties within 6 hours of crew show time, provide an additional 12-hour pre-standby crew rest. If MAJCOM C2 agents are unable to provide 18 hours prior notification, SQ/CC will place the pre-standby crew in 12-hour crew rest and follow aircraft generation procedures in [paragraph 3.1.13](#) to prepare the aircraft for launch. Aircrews may remain in ALFA/BRAVO status up to 48 hours. The mission execution authority may extend this period for contingencies. After completion of an alert period, launch, release, or re-enter aircrew into 12-hour pre-departure crew rest. Units may provide additional local procedures for management of Standby Force Duties. Aircrew Member Support of Aircraft Generation Activities (Preflight, cargo up-/offload, start, and taxi aircraft) require crew rest. The duty day begins when the aircrew member reports for official duties.

3.1.17.1. **(Added-AMC)** ALFA Standby Aircraft Preflight Generation and Security. When tasked, units will posture an aircraft and aircrew as an ALFA Standby Force able to launch within 1 hour (1+30 for C-5). **(T-2)** The following procedures apply to primary aircraft as well as spare aircraft generated for ALFA alerts. Appropriate maintenance and aircrew preflights must be completed. Preflight validity will be IAW applicable T.O./Flight Manuals. After the preflight, the PIC will notify the controlling agency. **(T-2)** The aircraft will remain in a sealed posture and be referred to as “cocked on alert.” Documentation of when the aircraft was cocked on alert must be placed in the forms. PIC will assure aircraft is secure IAW AFMAN 11-2MDSV3 guidance. **(T-2)** The aircrew preflight portion remains valid if performed by one aircrew, cocked on alert, and launched by another aircrew. Uncocking a generated aircraft is not a standard procedure but may be accomplished on a case-by-case basis. The PIC or a designated aircrew representative must be present if access to the aircraft is required. Ensure command and control and the controlling agency are notified when uncocking and re-cocking generated aircraft. Follow-on preflights may be done during normal waking hours, provided they do not interfere with an aircrew member’s opportunities for meals, transportation, or 8 hours of uninterrupted sleep. After preflight duties have been completed, subsequent C2 taskings will begin a new FDP. **(T-2)**

3.1.17.2. **(Added-AMC)** BRAVO Standby Force. When tasked, units will posture an aircraft and/or aircrew in BRAVO Standby Force to permit launch within 3 hours (3+45 for C-5). **(T-2)** Follow-on preflights, if required, interrupt crew rest. Begin CDT/FDP when aircrew shows for duty.

3.1.17.2.1. **(Added-AMC)** Extended BRAVO Standby Force. (N/A AFRC) When necessary, the OG/CC (or equivalent), may place aircrews in a BRAVO status for up to 7 days (168 hours).

3.1.17.2.2. **(Added-AMC)** Extended BRAVO will only be used while at home station. **(T-2)**

3.1.17.2.3. **(Added-AMC)** Extended BRAVO aircrews may be used to preflight their own aircraft or its replacement, provided the preflights are done during normal waking hours, and do not interfere with an aircrew member's opportunities for meals, transportation, or 8 hours of uninterrupted sleep. After preflight duties have been completed, subsequent C2 taskings will begin a new FDP.

3.1.17.2.4. **(Added-AMC)** While in alert status, aircrews will not be asked to perform any duties other than the preflight duties addressed above. **(T-2)**

3.1.17.3. **(Added-AMC)** CHARLIE Standby Force. When tasked, units will posture aircrews as a CHARLIE Standby Force ready to enter crew rest within 2 hours. **(T-2)** Tasked aircrews will be legal for alert 12 hours after entering crew rest. **(T-2)** SQ/CC may keep aircrews in CHARLIE status up to 72 hours. After 72 hours, release aircrews or enter them into 12 hours crew rest for directed mission, training mission, or subsequent standby force duty.

3.1.17.4. **(Added-AMC)** Wing Standby Force. Units may place aircrews in Wing Standby status. After a 12-hour pre-departure crew rest period, aircrews are legal for alert for 12 hours and must be able to launch within normal launch timing. After 12 hours, launch, release, or re-enter aircrews in 12-hour crew rest period before subsequent 12 hours Wing Standby duty.

3.1.17.4.1. **(Added-AMC)** OSA/EA Wing Standby/Soft Alert see AFMAN 11-2MDSV3.

3.1.17.5. **(Added-AMC)** Post-Standby Missions. On completion of standby duty, aircrew members may be dispatched on a mission. If started, post-standby crew rest must be completed before the start of pre-departure crew rest. If an aircrew member is dispatched on a mission, compute the post-mission crew rest time on standby time plus mission time.

3.1.17.6. **(Added-AMC)** Post-Standby Crew Rest. Aircrew members not dispatched on a mission following standby duty will receive post-mission standby crew rest as follows. **(T-3)**:

3.1.17.6.1. **(Added-AMC)** If standby duty is performed away from normal quarters, crew rest time is computed from this standby time on the same basis as for mission time.

3.1.17.6.2. **(Added-AMC)** If standby duty was performed in normal quarters, no crew rest time is authorized.

3.2. Flight Duty Period (FDP). Mission execution authority shall schedule FDPs in accordance with **Table 3.1.** **(T-3)**

3.2. (AMC) Flight Duty Period (FDP). Based on worst-case Flight Duty Period (FDP) in the mission directive, SQ/CC will augment an aircrew when FDP exceeds 16 hours and the mission profile will allow augmenting aircrew members adequate time to rest enroute. **(T-2)** See **Table 3.1** for limitations. Once enroute, the mission directive or C2 agent will inform the PIC if an augmented FDP is expected for the next duty day, prior to the aircrew entering crew rest. **(T-3)**

3.2.1. The FDP begins when an aircrew member first reports for official duty and ends at final engine shutdown after the final flight of the completed mission. FDP for UAS aircrew member ends at final engine shutdown, final in-flight handover briefing, or final crew swap, whichever occurs last.

3.2.1. **(AMC)** For planning purposes, FDP/CDT will begin no later than 1 hour after aircrew alert notification (or at aircrew show time when self-alerting). **(T-3)** Aircrew may self-alert with C2 (618 AOC for AMC and AMC-gained missions) concurrency prior to entering crew rest. The PIC will coordinate the self-alert time before entering crew rest. **(T-3) Note:** OSA/EA missions may normally self-alert without prior coordination.

3.2.2. The PIC is authorized to extend FDP a maximum of 2 hours to compensate for unplanned mission delays.

3.2.2. **(AMC)** This authority should be used judiciously based upon an accurate, updated ORM assessment by the PIC. C2 agents will not ask or pressure PICs to exercise this option. **(T-2)** If an FDP is extended, the CDT is also extended by the same amount of time. PICs will inform C2 of the decision to exercise this authority as soon as practical. **(T-3)**

3.2.3. If official post-flight duties are anticipated to exceed 2 hours, consider reducing the FDP to ensure safe completion of those duties.

3.2.4. **(Added-AMC)** If an augmented crew entered crew rest scheduled for a basic FDP, the PIC may accept an augmented FDP as long as: 1) the C2 agent or PIC discovers the extenuating circumstances requiring the augmented FDP before the first takeoff and 2) the PIC verifies all augmenting aircrew members can get adequate rest enroute.

3.2.5. **(Added-AMC)** Crew Duty Time (CDT). CDT is that period of time an aircrew may perform combined ground/flight duties. CDT includes both military duty and civilian work and begins when an individual reports for their first duty period (military or civilian). Missions will be planned so aircrew members may complete post-mission duties within maximum CDT. **(T-3)**

Table 3.1. Maximum FDP.

Aircraft Type	Basic Crew (Hours)	Augmented Crew (Hours)
Single Piloted Aircraft	12	Not Applicable
Fighter, Attack or Trainer (Dual Control)	12	16
Bomber, Reconnaissance, Electronic Warfare, or Battle Management (Dual Control)	16	24
Tanker / Transport	16	18
Tanker / Transport with Sleeping Provisions ¹	16	24
Rotary Wing (without Auto Flight Control System)	12	14
Rotary Wing (with Auto Flight Control System)	14	18
Utility	12	18
Unmanned Aircraft System (Single Control)	12	Not Applicable
Unmanned Aircraft System (Dual Control)	16	Not Applicable
Tilt-rotor	16	Not Applicable
Note 1: Sleeping provisions are crew bunks or other MAJCOM-defined rest facilities aboard the aircraft. Rest facilities should provide adequate privacy and noise levels to obtain suitable rest.		

Table 3.1. (AMC) Maximum FDP.

Aircraft Type	Basic FDP (Hours)^{1,2,5}	Augmented FDP (Hours)^{3,4,5,6}	Basic CDT (Hours)	Augmented CDT (Hours)
C-17, C-5, KC-10/46/135	16	24	18	24+45
C-32/40, VC-25	16	24	16+45	24+45
C-130H/J	16	18	18	20
C-37	16	N/A	16+45	N/A
C-21	14	N/A	16	N/A
AE	Will have same FDP/CDT as the aircrew on their assigned mission			

Notes:

1. Training, JA/ATT, and FCF/ACF Missions. Limited to a Basic FDP. After the first 12 hours of the FDP, events are limited to those required to deposition to home base. **(T-3) Exception:** ANG and AFRC crews may perform these events on training missions provided their basic CDT and FDP are not exceeded. C-17 Basic FDP includes basic crew +1.

2. Basic FDP. Complete all operational tactical or receiver AAR events during the first 14 hours of the FDP. **(T-3) Exception:** C-130H/J complete all operational tactical events during the first 12 hours of the FDP; PIC may approve tactical events up to 14 hours. C-17 Basic FDP includes basic crew +1.

3. 18-hour Augmented FDP. 18-hour Augmented FDP requires a mission profile with at least one 5-hour leg or two 3-hour legs. Complete all tactical or receiver AAR events during the first 14 hours of the FDP. **Exception:** C-130H/J complete all tactical events during the first 12 hours of the FDP; PIC may approve tactical events up to 14 hours. Once an aircrew begins an 18-hour Augmented FDP, only the appropriate waiver authority may extend it to a 24-hour augmented FDP (all other restrictions still apply). **Exception:** Leg length requirements N/A for C-130H/J using 18-hour Augmented FDP. **(T-3)**

4. 24-hour Augmented FDP. A 24-hour Augmented FDP requires a mission profile with at least one 6-hour leg or two 4-hour legs, and no more than 3 intermediate stops after 14 hours FDP.

Exceptions: N/A for C-32/40/VC-25; C-5s no more than 2 intermediate stops after 16 hours; KC-10 no more than 2 intermediate stops after 14 hours; each Receiver AAR or airdrop counts as an intermediate stop (multiple airdrops within 1 hour count as 1 airdrop). The PIC will validate planned leg times against actual conditions and may swap an extended ground time (4 hours) for a mission leg when conditions afford aircrew members a chance for rest. If these requirements cannot be met, an 18-hour Augmented FDP can be used. Complete all tactical or receiver AAR events during the first 18 hours of the FDP. For C-17 and C-5, two AR-qualified ACs are required if AAR is accomplished after 14 hours FDP. **(T-3)**

5. Inoperative Automation. When the autopilot cannot be fully utilized (per the AFMAN 11-2MDSV3), pilots are limited to a 12-hour Basic FDP and a 16-hour Augmented FDP (**Exception:** 18-hour augmented FDP for KC-135 and KC-46.) **Note:** SQ/CCs need only augment the pilot portion of the aircrew when the autopilot pitch axis is inoperative since the aircrew is restricted to a basic FDP (16 hours). **(T-3)**

6. Rest Facilities. Rest facilities are defined as a bunk or similarly sized flat surface with emergency oxygen. A sufficient number of resting seats should be provided to accommodate the number of aircrew members off duty at the same time. If facilities do not provide adequate privacy and noise levels, consideration should be made to restricting FDP.

3.3. Deadhead Time. Deadhead time is an official duty performed by an aircrew member flying as a passenger (no flight-related duties performed) while on flight orders and may be flown without crew rest.

3.3.1. If flight-related duties are planned to be performed following deadheading, crew rest and FDP restrictions apply.

3.3.2. If in-flight or crew-specialty related duties (e.g., aircraft off-loading or performance data calculations) are performed in conjunction with deadheading, crew rest and FDP restrictions apply.

3.3.2. **(AMC)** Current/qualified aircrew members may perform primary aircrew duties after traveling in MEP status, provided they do not exceed a basic FDP (FDP starts at report time for flight in MEP status).

3.3.3. Deadhead aircrew will be annotated as mission essential personnel on the Flight Authorization in accordance with DAFMAN 11-401. **(T-1)**

3.3.3. **(AMC)** Mission Essential Personnel. Procedures and policies regarding MEP are contained in DAFMAN 11-401, *Aviation Management*. PICs will ensure personnel traveling in this status are properly authorized. **(T-2)**

3.3.3.1. **(Added-AMC)** Aircrew members may travel in MEP (Mission Essential Personnel) status after performing primary aircrew duties. C2 agencies will not request that an aircrew member MEP for more than 24 hours from the time the aircrew member's FDP began. **(T-3)** The individual aircrew member may elect to extend this time.

3.3.3.2. **(Added-AMC)** Aircrew members qualified in mobility aircraft are authorized MEP status on any mobility aircraft to pre/de-position in support of mobility operations. MAJCOM-designated aircrew members who are assigned or authorized to accompany the normal crew complement are authorized MEP status. Aircrew members in MEP status are not authorized to:

3.3.3.2.1. **(Added-AMC)** Displace manifested passengers on AMC missions. **(T-2)**

3.3.3.2.2. **(Added-AMC)** Maintain currency and/or log flying time. **(T-2)**

3.3.3.2.3. **(Added-AMC)** Use MEP status for transportation while on leave. **(T-2)**
Exception: ANG/AFRC Air Technicians may travel in leave status IAW DAFMAN 11-401_AFRCSUP, *Aviation Management*.

3.3.3.2.4. **(Added-AMC)** Travel on Special Air Missions/Command Support Mission (SAM/CSM) aircraft unless authorized by the Air Force Special Air Mission Office (HAF/A3M) through the PIC.

3.3.3.2.5. **(Added-AMC)** Travel on Special Assignment Airlift Missions (SAAM) when specifically restricted by the mission directive.

3.3.3.2.6. **(Added-AMC)** Travel on Operational Support Airlift (OSA) aircraft unless authorized by Joint Operational Support Airlift Center through the PIC.

3.3.3.3. **(Added-AMC)** All MEPs require valid travel/flight orders or supporting message authorizing MEP status. **(T-3)**

3.3.3.4. **(Added-AMC)** Flight evaluators administering evaluations have priority and will not be displaced by any other MEP. **(T-2)** The priority for evaluators is MAJCOM, NAF, group, and then squadron level.

3.3.3.5. **(Added-AMC)** MEPs normally travel on the flight deck. If the number of MEPs requiring travel exceeds the capacity of the flight deck, the C2 agency will notify the Air Terminal Operations Center, who in turn will coordinate with the passenger terminal; seats not previously assigned may be used for MEPs.

3.3.3.6. **(Added-AMC)** The PIC, or designated representative, will brief MEPs on seat assignment, appropriate mission information, emergency procedures including egress, and armed aircrew members. **(T-2)** The PIC may assign an MEP aircrew-related duties for which the MEP is qualified and crew-rested.

3.3.3.7. **(Added-AMC)** MEPs will coordinate their travel with the appropriate C2 agency prior to travel. **(T-3)** They will process through the C2 agency as early as possible but NLT 3 hours prior to planned block time. **(T-3)**

3.4. Maximum Flying Time. Maximum flying time is 56 flight hours per 7 consecutive days, 125 flight hours per 30 consecutive days, and 330 flight hours per 90 consecutive days. **(T-2) Note:** Maximum flying time may be waived by MAJCOM/A3 when an operational risk management assessment determines that mission requirements justify the increased risk. MAJCOM/A3 may delegate the waiver authority no lower than squadron commander.

3.4. (AMC) Maximum Flying Time. OG/CC (or equivalent) may waive Maximum Flying Time.

3.5. Controlled Cockpit Rest. As authorized by the MAJCOMs and only during non-critical phases of flight. **Note:** Cockpit rest does not reset required crew rest.

3.5.1. **(Added-AMC)** Controlled Cockpit Rest. Controlled cockpit rest may be implemented when the basic aircrew includes a second qualified pilot. All cockpit aircrew members must remain at their stations. **(T-0)**

3.5.1.1. **(Added-AMC)** Cockpit rest will be taken by only one aircrew member (per crew position, as applicable) at a time, must be restricted to non-critical phases of flight during cruise, terminate one hour prior to planned descent, and should be limited to 45 minutes per rest period. **(T-2)**

3.5.1.2. **(Added-AMC)** More than one rest period per aircrew member is permitted. Cockpit rest is not authorized when aircraft system malfunctions increase cockpit workload (e.g., autopilot, navigation systems). The resting aircrew member must be awakened immediately if a situation develops that affects flight safety. Cockpit rest will not be a substitute for any required crew rest. **(T-2)**

3.6. Aircrew Flight Equipment. Aircrew will wear and use authorized clothing and equipment in accordance with AFI 11-301V1, *Aircrew Flight Equipment (AFE) Program*, MDS-specific Volume 3, aircraft flight manuals, and theater special instructions (SPINS). **(T-1)**

3.6.1. Aircrew must undergo a MAJCOM-approved initial certification course prior to their initial flight with night vision devices (NVDs). **(T-1)** Certification is in accordance with AFMAN 11-202V1, *Aircrew Training*.

3.6.2. Aircrew must have an operable flashlight for night operations. **(T-3) Note:** Not applicable for UAS.

3.6.3. **(Added-AMC)** Aircrews flying into designated laser threat areas will be issued, if available, a minimum of 2 sets (1 day and 1 night variant per set) Aircrew Laser Eye Protection (ALEP) from home station AFE section and comply with AMC risk assessment database guidance (RAD) available on the SIPRNET at www.amcin.scott.af.smil.mil or specific airfield NOTAMs. **(T-2)**

3.6.3.1. **(Added-AMC)** Don ALEP when directed by NOTAM or RAD. Aircraft commanders maintain final authority on distribution of ALEP and may direct removal for safety of flight. ALEP is safe for day or night usage but is not to be used in conjunction with night vision devices or during low-level operations (restricted to a minimum of 1,000 ft above the highest obstacle within a 2,000 ft radius of the aircraft) except for takeoff and landing. Aircrew members receiving direct eye exposure to laser energy will report immediately to the nearest military treatment facility with a qualified flight doctor, or to an emergency room, to undergo an examination. **(T-2)**

3.6.4. **(Added-AMC)** All aircrew members (N/A for OSA/EA) will have Nomex® gloves in their possession. **(T-2)**

3.6.5. **(Added-AMC)** Aircrew members will remove rings (regardless of material) and scarves before performing aircrew duties. **(T-2) Exception:** Executive airlift flight attendants may wear scarves as part of their authorized flight attendant uniform.

3.6.6. **(Added-AMC)** For any mission with a flight planned route above 78 degrees north or below 60 degrees south, the aircraft will be configured with the appropriate quantity of personal cold weather equipment prior to mission execution. **(T-2)**

3.7. Aircrew Medical Standards. Aircrew must maintain a medical clearance in accordance with DAFMAN 48-123, *Medical Examinations and Standards*.

3.7.1. Corrective lenses are authorized in accordance with DAFMAN 48-123. Aircrew who require corrective spectacles will carry a backup set of clear MAJCOM-approved corrective lenses while performing aircrew duties. **(T-1) Exception:** United States Air Force Academy glider pilots only require one set of corrective lenses.

3.7.2. Medical or dental treatment obtained from any source must be cleared by flight medicine prior to reporting for flight duty. **(T-1)**

3.7.2.1. Use of any medication (prescription or over-the-counter), herbal, nutritional, and dietary supplements is governed by DAFMAN 48-123 and as approved by flight medicine.

3.7.2.2. Oxymetazoline or phenylephrine nasal sprays may be carried should unexpected ear or sinus block occur during flight. **Note:** Not for treatment of symptoms prior to flight. If used, the member is considered duties not including flying (DNIF) until cleared by flight medicine.

3.8. Nonrated Flyers. Flying unit commanders must ensure nonrated personnel and civilians who perform in-flight duties receive an indoctrination course on MDS-specific missions, egress, emergency procedures, and use of flight and emergency equipment. **(T-1)** A preflight briefing does not qualify as an indoctrination course.

3.9. Flight Demonstrations and Aerial Events. Do not conduct unauthorized or impromptu flight demonstrations, maneuvers, or flyovers. **(T-1)** Comply with DAFI 11-209, *Participation in Aerial Events*.

3.10. Transporting Passengers Under the Influence. Ensure passengers suspected to be under the influence of intoxicants or narcotics are not allowed to board a USAF aircraft except in an emergency or when authorized by command and control authority. **(T-2)**

3.11. Tobacco Use. Tobacco use in all forms, including electronic nicotine delivery systems, is prohibited on all aircraft and Ground Control Stations (GCSs). **(T-1) Exception:** Nicotine patches, nicotine gum, and lozenges.

3.12. Transport of Drugs. Aircrew will not allow the transport of narcotics, controlled substances, or other dangerous drugs unless such transport has been approved by a U.S. military, federal, or state authority. **(T-0)**

3.13. Hazardous Cargo. Comply with AFMAN 24-604, *Preparing Hazardous Materials for Military Air Shipments*.

3.13. (AMC) Airlifting Hazardous Cargo. PICs will be briefed on size, class, and location and special requirements of hazardous cargo, and will ensure all crew are briefed on hazardous cargo procedures. **(T-2)** For more information regarding hazardous materials, refer to AFMAN 24-604/TM 38-250/NAVSUP PUB 505/MCO P4030.19J/DLAI 4145.3, *Preparing Hazardous Materials for Military Air Shipment*.

3.13.1. **(Added-AMC)** Installed aircraft flares typically do not constitute hazardous cargo (reference FCG to determine country-specific guidance). However, any additional loads of flares or uninstalled flares are not considered aircraft equipment and will be properly packaged and prepared IAW the aforementioned guidance. **(T-2)**

3.13.2. **(Added-AMC)** Hazardous cargo authorized to be carried with passengers IAW the guidance above may be carried with patients unless a clear detriment to the health and well-being of the patient can be demonstrated. P4 and P5 rated hazardous material have no AE restrictions.

3.13.3. **(Added-AMC)** Enter "Hazardous Cargo" and the mission identifier or flight number in the appropriate section of the flight plan. In the DD Form 1801, *International Flight Plan*, DoD, file "HAZMAT" in the block 18 Special Handling Reasons section (STS/HAZMAT). Refer to the Foreign Clearance Guide (FCG) for country-specific requirements concerning over-flight when transporting hazardous materials cargo. The following are rules for identifying hazardous cargo when filing.

3.13.3.1. **(Added-AMC)** Nuclear weapons cargo and inert devices.

3.13.3.2. **(Added-AMC)** DoD Hazard Division 1.1 through 1.3 explosives.

3.13.3.3. **(Added-AMC)** Toxic chemical ammunition and highly toxic substances.

3.13.3.4. **(Added-AMC)** Division 6.2, infectious substances (to include etiological and biological material) requiring technical escorts.

3.13.3.5. **(Added-AMC)** Class 7 (radioactive material) requiring a Category III-Yellow label.

3.13.3.6. **(Added-AMC)** All other hazard classes or divisions when shipped in quantities of 1,000 pounds or more aggregate gross weight with the following **Exceptions**:

3.13.3.6.1. **(Added-AMC)** Do not identify as hazardous cargo or include in the aggregate total any amount of Class 9 and Other Regulated Materials (ORM)-D.

3.13.3.6.2. **(Added-AMC)** Regardless of weight, identify hazardous cargo with DoD hazard class or division 1.4 explosives on flights that depart from or arrive in the United Kingdom, Italy, or Hawaii.

3.13.4. **(Added-AMC)** If possible, plan the flight to minimize overflying heavily populated or otherwise critical areas when the reason for hazardous filing is paragraphs **3.13.3.1** through **3.13.3.5**. Approach, landing, and takeoff tracks are excluded.

3.13.5. **(Added-AMC)** Prepare a departure message at stations when a C2 center is not available. The remarks section of the departure message will include: Class of hazardous material, DoD class or division for explosives, net explosive weight, and gross weight. If required, request special handling (e.g., isolated parking, security, technical escort teams, etc.).

3.13.6. **(Added-AMC)** If estimated time enroute (ETE) is less than 1 hour, or if other circumstances preclude timely message receipt at destination, notify the next destination of the ETA and information listed in **paragraph 3.13.5**. If available, C2 will relay required information to next destination. **(T-2)**

3.14. Flight Displays. Comply with MAJCOM or MDS-specific guidance for configuration of pilot-selectable flight displays. **(T-2)**

3.15. Authorized Resources for Flight and Mission-Related Duties. Do not conduct flight and mission-related duties with devices and resources (e.g., personally owned devices, non-DoD networks, commercial websites) that have not been approved by the MAJCOM. **(T-2)**

3.15. (AMC) Authorized Resources for Flight and Mission-Related Duties. AMC Aircrews may use government-issued devices IAW the current AF Life Cycle Management Center (AFLCMC) Electromagnetic Interference (EMI) Certification memorandum located at <https://usaf.dps.mil/teams/21373/E3/SitePages/Home.aspx> and AFMAN 11-2MDSV3. For Electronic Flight Bag (EFB) devices, refer to AMCI 11-270, *Mobility Air Forces Electronic Flight Bag Program* (AFRC personnel reference AFRCI 11-270). The use of personal, public, or non-DoD resources for flight and mission duties (e.g., personally-owned devices, non-DoD networks, commercial websites) are not authorized unless specifically permitted in AFMAN 11-2MDSV3 or this document.

3.15.1. **(Added-AMC)** AMC aircrews operating in austere, or remote locations will utilize DoD networks and websites to the maximum extent practical. **(T-2)** The use of non-DoD networks and commercial websites may be utilized when other means are not practical. The use of personal cell phones is authorized if essential for mission accomplishment. **Note:** Aircrews will practice appropriate OPSEC procedures when utilizing these resources.

3.15.2. **(Added-AMC)** Lack of authorized resources (DSN phones, DoD network access, functioning DoD-furnished computers, etc.) at enroute locations should be identified to the local OPR and reported via AMC Form 54, *Aircraft Commander's Report on Services/Facilities*, or MAJCOM equivalent.

3.16. Portable Electronic Devices (PEDs). The PIC will prohibit the use of any PED suspected of creating interference with systems on the aircraft. **(T-1)** MAJCOMs will authorize PEDs used to facilitate mission execution (e.g., electronic flight bags, portable GPS units).

3.16.1. The following non-transmitting PEDs may be used at any time or altitude: portable voice recorders, hearing aids, heart pacemakers, electric shavers, calculators, watches, or any other portable electronic device authorized by the MAJCOM. **Note:** Apple® Watches or other transmitting watches must be operated in airplane mode. **(T-1)**

3.16.2. MAJCOM/A3 may authorize use of transmitting PEDs at any altitude with transmitters ON or OFF. In the absence of MAJCOM guidance, the PIC may authorize use of PEDs at or above 10,000 feet MSL with transmitter OFF (e.g., airplane mode).

3.16.2. **(AMC)** Transmitting PEDs will have transmitters turned OFF or be placed in “Airplane Mode” upon closure of the aircraft entry door, except as otherwise authorized by this supplement and AMC EFB guidance. Transmitting PEDs will keep transmitters turned OFF or remain in “Airplane Mode” until clear of active runway after landing, except as authorized by this supplement and AMC EFB guidance. See further restrictions IAW AFMAN IAW 11-2MDSV3.

3.16.3. Pilot use of handheld photo or video recording devices is prohibited when that pilot is the only one with immediate access to the flight controls. **(T-3)**

3.16.4. Normally, only medical equipment referenced in the aircraft flight manual, MDS-specific manual, or listed in the Air Force Medical Logistics website is permitted. See <https://medlog.us.af.mil/>.

3.16.5. Personnel will turn off the cellular function of devices while airborne [Title 47 CFR Part 22.925, *Prohibition on Airborne Operation of Cellular Telephones*]. **(T-0)** It is also USAF guidance to keep cellular devices off when airborne above a foreign territory. **Note:** This restriction exists to prevent potential disruption of the cellular ground network. It is unrelated to aircraft operations.

3.16.6. **(Added-AMC)** Aircrew members will not use uncertified Government Furnished Equipment or personal devices with RF transmit/receive capability on AMC aircraft carrying hazard class 1 explosive cargo at any time. **(T-2)** Prohibited devices include cellular phones, and laptop computers/PDAs with wireless capability enabled (i.e., Bluetooth). Aircrew will ensure passengers comply with this restriction. **(T-2)** Aircrew members may use certified Government Furnished Equipment such as mission planning laptops and PDAs with infrared transmitters. EFB usage is approved provided all transmitting functions are disabled (WiFi, Bluetooth, etc.). **(T-2)**

3.16.7. **(Added-AMC)** Do not connect unauthorized equipment to the aircraft intercom, PA, radio systems, or electrical system. Approved vacuum cleaners are authorized for ground use.

3.17. Electronic Flight Bags (EFBs). [FAA AC 120-76]

3.17.1. EFBs cannot replace any installed equipment that is part of the baseline configuration of the aircraft and will not be used as a PFR. **(T-1)**

3.17.2. When in use, portable EFBs must be secured and viewable during critical phases of flight and must not interfere with flight control movement, emergency egress, or oxygen deployment. **(T-1) Exception:** Aircrew may remove EFB from its securing device and hold by hand during critical phases of flight when operationally necessary (e.g., briefing an approach).

3.17.3. Data downloaded during flight is secondary to the primary navigation displays and onboard weather radar (if equipped). Aircrew will not rely exclusively on weather data downloaded in flight to maneuver the aircraft. **(T-2)**

3.17.4. **(Added-AMC)** EFBs are approved for all phases of flight and will be maintained IAW MAJCOM guidance. **(T-2)** Detailed information is currently located in the EFB folder located on AMC ePubs. All Aircrew members will maintain the All Global and appropriate MDS folders. **(T-2)** Units may direct the use of local folders.

3.17.5. **(Added-AMC)** EFB FLIP requirements. If EFBs are being used for FLIP viewing, all aircrew members will maintain current FLIP in an approved EFB app (Aero®, ForeFlight®, Jeppesen®, etc.). Aircrew members should load complete worldwide FLIP. At a minimum, aircrews will load sufficient FLIP to cover all areas of scheduled operation, and areas of possible dynamic retasking. **(T-2) Exception:** N/A for AE crew, Flight Attendants, and C-130H Loadmasters.

3.17.6. **(Added-AMC)** A minimum of 2 appropriately configured EFBs will be onboard all aircraft to account for possible device malfunction or failure. **(T-3)**

3.17.7. **(Added-AMC)** EFBs will be configured pre- and postflight IAW EFB Supplemental Procedures (EPubs->All_Global->EFB_SharePoint) to ensure security of the devices. **(T-2)**

3.17.8. **(Added-AMC)** The use of EFB peripheral devices, such as ADS-B receivers, will be IAW MAJCOM guidance. **(T-2)** Detailed information is located in AMCI 11-270 and the AMC MAF EFB Hardware and Software List Document located on AMC ePubs.

3.17.9. **(Added-AMC)** The use of personally owned hardware or software is not authorized. Unit or personally-funded subscriptions or information access (such as Jeppesen® or ForeFlight® subscriptions) are authorized as long as the EFB app used for access is approved. **(T-2)**

3.17.10. **(Added-AMC)** The use of handheld or EFB GPS for Moving Map Display is designed as a situational awareness tool, will not be used as a primary source of navigation, and its use is optional. **(T-2)**

3.17.11. **(Added-AMC)** Temporary mounting and use of approved PEDs by units for airdrops and associated mishap prevention is approved. Temporary mounting locations should be thoroughly coordinated with the Loadmaster prior to flight to ensure they will not interfere with normal operations and/or emergency procedures. Only devices which are approved and comply with the AFLCMC EMI certification letter (<https://usaf.dps.mil/teams/21373/E3/SitePages/Home.aspx>) will be allowed for use during flight. Additionally, aircrew members will not mount or operate devices on the ground or during flight; however, the aircrew may assist in installation of the device to maintain safety and turn it off after completion of all applicable checklists. **(T-2)** All usage of portable electronic devices will be for official use only.

3.18. Aircraft Movement on the Ground. Comply with AFMAN 11-218, *Aircraft Operations and Movement on the Ground*, MAJCOM, and locally published procedures. Aircrew will obtain clearance from ATC before taxiing, proceeding onto a runway, takeoff or landing at an airport with an operating control tower. **(T-0)** Aircrew will read back all taxi and hold short instructions. **(T-0)** If a taxi route requires crossing any runway, pilots will hold short until obtaining specific clearance to cross each runway [14 CFR Part 91.123]. **(T-0)**

3.18.1. **(Added-AMC)** Aircraft Recovery from Unprepared Surfaces. Aircrews should not attempt to recover an aircraft after inadvertent entry onto unprepared surfaces not suitable for taxi; ground crews will accomplish aircraft recovery. **(T-2)** Unless an emergency dictates otherwise, aircrews may only accomplish recovery if there is no aircraft damage, the surface supports the aircraft, and the PIC coordinated with appropriate MAJCOM headquarters maintenance authorities through 618 AOC or appropriate C2 agency.

3.19. Crew at Stations. Aircrew must occupy their assigned duty stations from takeoff to landing unless absence is necessary to perform duties in connection with the operation of the aircraft or physiological needs [14 CFR Part 91.105]. **(T-0) Note:** For the purposes of this paragraph only, aircrew is to mean the pilots, flight navigators, and engineers.

3.19. (AMC) Crew at Stations. When additional aircrew personnel are on board, the observer's seat should be occupied, preferably by an MDS-qualified pilot, to assist in avoiding other aircraft during ground operations, takeoffs, departures, penetrations, approaches and landings. Aircrew members will notify the pilot prior to departing assigned primary duty stations. **(T-3)**

3.19.1. **(Added-AMC)** PICs may authorize passengers and observers access to the flight deck after assessing the risk of not having a qualified aircrew member in the jump seat. The total number of persons permitted is limited to the number of seats with operable seat belts and oxygen. Passengers and observers are not permitted access to primary positions.

3.19.2. **(Added-AMC)** All occupants will have a designated seat with a seat belt. **(T-2)** Aircrew members will have seat belts fastened when occupying a duty position unless crew duties dictate otherwise. **(T-3)**

3.19.3. **(Added-AMC)** Aircrew members performing instructor or flight examiner duties (or as designated in AFMAN 11-2MDSV3) are exempt from seat belt requirements if not occupying a primary aircrew position; however, they will have a seat available with an operable seat belt. **(T-2)**

3.19.4. **(Added-AMC)** Litter patients, actual or simulated, must remain secured on litters for takeoff and landing. **(T-2)**

3.20. Inflight Reporting. See also AFMAN 10-206, *Operational Reporting (OPREP)*.

3.20.1. Aircrew will immediately report hazardous weather conditions, wake turbulence, volcanic activity, large concentrations of birds or wildlife on or near the airfield, or any other significant flight condition that may affect aviation safety to the appropriate controlling agency. **(T-2) Note:** See the *Flight Information Handbook* (FIH) for pilot report format.

3.20.2. Declare "minimum fuel" or "emergency fuel" to the appropriate controlling agency when the aircraft may land at the intended destination with less than the MDS-specific minimum reserve or emergency fuel [AIM 5-5-15].

3.20.3. Aircrew will report position as requested by ATC, host-nation procedures, or ICAO procedures. **(T-0)** See the *IFR - Supplement* for position report format.

3.20.4. Aircrew will report encountering a laser illumination event to ATC or applicable command and control entity. **(T-1)**

3.20.5. Report any electromagnetic interference in accordance with joint spectrum interference resolution procedures in the FIH and AFI 17-221, *Spectrum Interference Resolution Program*.

3.21. Oxygen and Pressurization Requirements (Not Applicable for UAS). Ensure sufficient oxygen for the planned mission is available to all occupants before takeoff. **(T-0)** Pilots flying pressurized operations will maintain a cabin altitude below 10,000 feet and must comply with the supplemental oxygen requirements in [Table 3.2](#). **(T-1)** Aircrew will use supplemental oxygen any time the cabin pressure altitude exceeds 10,000 feet MSL except as outlined in [paragraph 3.21.1](#). **(T-1)** When mission essential, aircrew trained in accordance with AFMAN 11-403, *Aerospace Physiological Training Program*, may operate aircraft unpressurized up to Flight Level (FL) 250 in accordance with MAJCOM guidance and the following restrictions:

3.21. (AMC) Oxygen and Pressurization Requirements (N/A for UAS). Supplemental oxygen will be used by all aircrew acting in primary aircrew positions during unpressurized operations above 10,000 feet MSL. **(T-2)** MEPs will follow the restrictions of 3.21.2. **(T-2)**

3.21.1. Aircrew not breathing supplemental oxygen shall:

3.21.1.1. Not operate above 14,000 feet MSL. **(T-2)**

3.21.1.2. Not exceed 1 hour between 10,000 MSL and 12,500 feet MSL if any portion of the flight is conducted in IMC, at night, while employing weapons, conducting airdrop, air-refueling, or if performing high-g maneuvers. **(T-2)**

3.21.1.3. Not exceed 30 minutes between 12,500 MSL and 14,000 feet MSL. **(T-2)**

3.21.2. If any passenger is not trained in accordance with AFMAN 11-403 the following restrictions apply:

3.21.2.1. Do not exceed 13,000 feet. **(T-2)**

3.21.2.2. Do not exceed 3 hours above 10,000 feet. **(T-2)**

3.21.3. Supplemental oxygen will be used by all occupants between 14,000 feet MSL and FL250. **(T-2)** All occupants will wear functional pressure suits above FL250 (See [paragraph 3.21.8](#)). **(T-1) Exception:** AFSOC aircraft and special operations C-17 aircrews conducting MAJCOM/A3 approved high altitude airdrop missions (above FL250).

3.21.3. **(AMC)** Additional aircrew members performing duties on the flight deck will be considered other Flight Deck Crew. Aircrew members occupying or transiting the cargo compartment will be considered Cabin/Cargo Area Crew. Tanker Boom Operators occupying the Boom Pod/ARO station will be considered Other Flight Deck Crew. Supplemental oxygen requirements for additional aircrew members will be IAW AFMAN 11-2MDSV3. **(T-2)**

Table 3.2. Oxygen Requirements for Pressurized Aircraft According to Aircraft Altitude.

	Pilot(s) ¹	Cockpit Crew ²	Other Flight Deck Crew	Cabin / Cargo Area Crew	Pax
10,000 feet to FL 250	R	R	R	A	N/A
Above FL 250 to FL 350	One I / One R	R	R	A	A
Above FL 350 to FL 410 (two pilots at controls)	I	R	R	A	A
Above FL 350 to FL 410 (one pilot at controls)	I	I	R	A	A
Above FL 410 to FL 450	One O / One I ³	I	R	A	A
Above FL 450 to FL 500	One O / One I ³	I	I	A	A
Above FL 500 to FL 600	G	G	G	G	G
Above FL 500	S	S	S	S	S
Note 1: Single-pilot aircraft must follow the most restrictive guidance in this table. Note 2: Cockpit crew is defined as those crew positions with access to flight controls or responsibility for flight engineer panel, communication, or navigation systems. Note 3: Replace “One O / One I” with “I” for aircraft with Automatic Emergency Descent Mode operated in accordance with MAJCOM guidance.					
LEGEND					
A – Oxygen available. Carry or place portable oxygen units or extra oxygen outlets with masks throughout the cabin/cargo area so that any person has quick access to oxygen should a loss of pressurization occur.					
R – Oxygen readily available. A functioning system and mask shall be located within arm’s reach, and the regulator must be set to 100 percent and ON (when regulator is adjustable).					
I – Oxygen immediately available. Must wear helmets with an oxygen mask attached to one side, or have an available, approved quick-don style mask properly adjusted and positioned. Set regulators to 100 percent and ON.					
O – Oxygen mask ON. Regulator ON and normal.					
G – Wear a partial pressure suit. Suit must provide 70mm Hg of assisted positive pressure breathing for altitude (pressure breathing for altitude system/get-me-down scenario).					
S – Wear a pressure suit. Suit must provide a total pressure (atmospheric plus suit differential) of at least 141 mm Hg to the head and neck with adequate body coverage to prevent edema and embolism.					

3.21.4. For Loss of Cabin Pressure pilots should initiate an immediate descent to the lowest practical altitude, preferably below 18,000 feet MSL. Do not allow cabin altitude to remain above FL250 unless occupants are wearing functional pressure suits. If any occupant lacks functioning oxygen equipment, descend to an altitude of 13,000 feet MSL or less (terrain or fuel requirements permitting) and comply with [paragraph 3.21.1](#).

3.21.5. If cabin altitude exceeds 18,000 feet MSL following the unintended loss of cabin pressure, aircrew and passengers must be evaluated by a flight surgeon or other aviation medical authority prior to further flight. **(T-2)** If cabin altitude cannot be determined, use the aircraft altitude at the time of the event. Report a loss of cabin pressurization in accordance with AFMAN 91-223.

3.21.6. If any occupant exhibits decompression sickness symptoms, descend as soon as practicable and land at the nearest suitable installation where medical assistance can be obtained. Individuals suspected of decompression sickness shall be administered and remain on 100% oxygen (using tight-fitting mask or equivalent) until evaluated by an aviation medical authority. Decompression sickness may occur up to 12 hours after landing. Aircrew will not fly after a decompression sickness event without specific authorization from a flight surgeon. **(T-1)**

3.21.7. If anyone on the aircraft experiences hypoxia symptoms, descend immediately to the lowest practical altitude and land at a suitable location to obtain medical assistance. Aircrew will not fly after a hypoxia event without specific authorization from a flight surgeon. **(T-1)**

3.21.8. Without functional pressure suits, maintain a cabin altitude below FL250 and adhere to the time limits in **Table 3.3** (not applicable for U2 operations). **(T-2) Exception:** AFSOC aircraft and special operations C-17 aircrews conducting MAJCOM/A3 approved high altitude airdrop missions (above FL250). For high altitude airdrop missions, use the oxygen requirements in AFMAN 11-409, *High Altitude Airdrop Mission Support Capability Procedures*. If the aircraft lands between missions and the time on the ground equals or exceeds the time spent at or above a cabin altitude of FL210, the time of allowable duration can be reset to the maximum.

3.21.9. **(Added-AMC)** The maximum operating altitude for Emergency Passenger Oxygen System (EPOS) is 41,000 feet. Aircraft equipped with EPOS are limited to flying at FL410 or below when any occupant relies on EPOS to meet emergency oxygen requirements.

Table 3.3. Cabin Altitude Time Limits (Decompression Sickness Prevention).

Time (minutes)	Cabin Altitude (feet MSL)
0	At or Above FL 250
45	24,000 – 24,999
70	23,000 – 23,999
120	22,000 – 22,999
200	21,000 – 21,999

3.22. Aircraft Lighting. [14 CFR Part 91.209] Aircrew will operate aircraft lighting according to the following guidance or host-nation rules and theater SPINS **(T-1)**:

3.22.1. Between sunset and sunrise, turn on position lights when operating an aircraft, when towing an aircraft (unless clearly illuminated by an outside source), and when parking an aircraft in an area likely to create a hazard (unless clearly illuminated by an outside source). **(T-0) Exception:** Aircraft that do not have power available before start shall turn them on as soon as power is available. **(T-0)** Wing commanders will establish required procedures and lighting for towing unpowered aircraft between sunset and sunrise. **(T-2)**

3.22.2. Turn on anti-collision or strobe lights prior to engine start and do not turn them off until after engine shutdown. **(T-0) Exception:** Aircraft that do not have power available before engine start shall turn anti-collision or strobe lights on as soon as power is available. **(T-2)** **Note:** Flashing lights may be turned off or reduced in intensity if they adversely affect the performance of duties or subject an outside observer to harmful dazzle.

3.22.3. Turn on landing lights after takeoff clearance is received and the aircraft is on the active runway (across the hold line), when commencing takeoff roll at an airport without an operating control tower, or when operating below 10,000 feet MSL and turn off after exiting the active runway. **(T-3) Exception:** PIC may turn off the landing lights whenever safety or mission requirements dictate.

3.22.4. MAJCOMs may authorize reduced or lights-out operations in restricted areas, warning areas, host-nation approved areas, or designated airfields. Designated airfields shall be documented in a letter of agreement. **(T-1)**

3.22.5. MAJCOMs may authorize varying aircraft lighting procedures for formation flights provided the light configuration provides an equivalent level of visual identification as a single aircraft.

3.23. Airfield Lighting. PICs will not conduct operations from a runway unless it is outlined with operable lighting or high-intensity runway reflective markers, unless authorized by the MAJCOM through the MDS-specific Volume 3 or other specific guidance. **(T-2) Note:** Not applicable for helicopters

3.23.1. Covert infrared runway lighting used by qualified aircrew equipped with NVDs meets the intent of lighted landing surface.

3.23.2. PICs are restricted to military airfields or civilian airports with an appropriate letter of agreement during non-contingency operations from unlighted runways, landing zones, or runways with high-intensity runway reflective markers. **(T-2) Note:** Not applicable for helicopters.

3.23.3. In Alaska, areas located north of 60° North latitude, Antarctica, and areas located south of 60° South latitude, aircraft may be operated to unlighted airports during the period of civil twilight.

3.24. Right-of-Way. PIC will take action necessary to avoid collision, regardless of who has the right-of-way. **(T-0)** The yielding aircraft will not pass over, under, abeam, or ahead of the other aircraft unless well clear. **(T-0)** [14 CFR Part 91.113].

3.24.1. Aircraft in distress have the right-of-way over all other air traffic. **(T-0)**

3.24.2. When aircraft of the same category are converging at approximately the same altitude (except head-on or approximately so), the aircraft to the other's right has the right-of-way. **(T-0)** Aircraft of different categories have the right-of-way in the following order of priority: balloons, gliders, aircraft towing or refueling other aircraft, airships, rotary- or fixed-wing aircraft. **(T-0)**

3.24.3. If aircraft are approaching each other head-on or approximately so, each shall alter course to the right. **(T-0)**

3.24.4. An overtaken aircraft has the right-of-way. The overtaking aircraft must alter course to the right. **(T-0)**

3.24.5. An aircraft established on final approach has the right-of-way over other aircraft on the ground or in the air, except when two or more aircraft are approaching to land. In this case, the aircraft at the lower altitude has the right-of-way but it shall not use this advantage to cut in front of or overtake the other. **(T-0)**

3.25. See and Avoid. [14 CFR Part 91.113] When weather conditions permit, regardless of whether an operation is conducted under IFR or VFR, vigilance shall be maintained by each pilot operating an aircraft so as to see and avoid other aircraft. **(T-0)** **Note:** UAS without approved sense and avoid capabilities will, when in territorial airspace, be operated under specific arrangements with appropriate aviation authorities (e.g., DoD-FAA agreement, host nation clearance). **(T-0)** [DoDI 4540.01] In international airspace, all aircraft will utilize approved means of fulfilling the obligation to exercise due regard for other users. **(T-0)**

3.25.1. **(Added-AMC)** Due Regard. [FLIP GP; JO 7110.65AA] The "due regard" or "operational" option obligates the military PIC to separate his/her aircraft from all other air traffic, assure that appropriate monitoring agency assumes responsibility for search and rescue actions (e.g. Kingpin), and operate with other appropriate conditions. When operationally necessary, PICs are authorized to conduct military flight operations with due regard for the safety of navigation of civil traffic in international airspace IAW FLIP *General Planning* (GP). Except for pre-planned missions, PICs will consider such operations in peacetime as a flight rule deviation and will comply with the reporting requirements in [paragraph 1.9](#) **(T-2)** Aircrews (except on weather reconnaissance missions) normally are not tasked to and should not fly in only "due regard" status routings unless coordinated with the appropriate MAJCOM C2 and specifically directed in the mission as fraggd. If operational requirements dictate, in international airspace PICs may exercise the "due regard" option to protect their aircraft. Aircraft will return to normal air traffic services as soon as practical. Refer to FLIP GP for additional guidance on due regard. **Note:** Internationally, the concept of due regard also carries a meaning similar to "see-and-avoid", as a basic assumption for pilot responsibility to avoid other aircraft. In the context of this paragraph, it is intended to refer specifically to operations without Air Traffic Services aiding aircraft separation under Instrument Flight Rules (IFR). Due regard is not applicable to operations within the National Airspace System in U.S. national airspace. MAF aircraft radars are not sufficient to meet the requirements of Due Regard in IMC conditions.

3.26. Adherence to ATC Clearances and Instructions. [14 CFR Part 91.123; AIM 4-4-10; ICAO Doc 4444, *Air Traffic Management*, Chapter 4.5; ICAO Annex 11, *Air Traffic Services*] Include aircraft identification (call sign) in all read backs. Read back ATC clearances and instructions containing altitude assignments, restrictions, vectors, headings, altimeter settings, and runway assignments in the same sequence they are given. Initial read back of a taxi, departure, or landing clearance should include the runway assignment including left, right, or center as applicable. Reading back clearances reduces communication errors that occur when a number is either misheard or incorrect. If the ATC clearance or instructions are unclear, query the controller. **Note:** If unable to meet an ATC altitude restriction, climb or descent, notify ATC.

3.26.1. **(Added-AMC)** One pilot will record and read back all ATC clearances; another aircrew member should monitor and ensure correct read back. **(T-3)**

3.26.2. **(Added-AMC)** At non-towered airports, when departing under an IFR clearance, pilots will read back all Hold For Release instructions and Clearance Void Times. **(T-2)**

3.27. Descent Gradients. Descent gradients in excess of 10 degrees (1,000 feet per nautical mile) in IMC may induce spatial disorientation, may not provide effective radar monitoring, and may, below 15,000 feet above ground level (AGL), substantially reduce obstacle and terrain avoidance reaction time.

3.28. Airspeed Adjustments.

3.28.1. [AIM 4-4-12] ATC issues speed adjustments to pilots of radar-controlled aircraft to achieve or maintain required or desired spacing. Speed adjustments are indicated airspeed expressed in 10 knot increments; speeds may be Mach numbers expressed in 0.01 increments at or above FL 240. Pilots complying with speed adjustments must maintain a speed within +/- 10 knots (0.02 Mach) of the specified speed. **(T-0)**

3.28.2. If ATC determines, before an approach clearance is issued, that it is no longer necessary to apply speed adjustment procedures, they may advise the pilot to “resume normal speed” or “resume published speed.” Normal speed is used to terminate ATC assigned speed adjustments on segments where there are not published speed restrictions. “Resume normal speed” does not cancel published restrictions on instrument procedures and does not relieve the pilot of those speed restrictions.

3.29. Operating Near other Aircraft. Do not allow the aircraft to be flown so close to another that it creates a collision hazard [14 CFR Part 91.111]. **(T-0)** Use 500 feet of separation as an approximate guide except for:

3.29.1. Authorized formation flights.

3.29.2. Emergency situations requiring assistance from another aircraft. If an emergency requires visual checks of an aircraft in distress, exercise extreme care to ensure this action does not increase the overall hazard. The capabilities of the distressed aircraft and the intentions of the crews involved must be considered before operating near another aircraft in flight.

3.29.3. MAJCOM-approved maneuvers in which participants are aware of the nature of the maneuver and qualified to conduct it safely (e.g., interceptor visual identification training).

3.30. Dropping Parachutists, Stores, or Other Objects. Do not allow objects to be dropped except in an emergency or for mission accomplishment. **(T-2)** Report any accidental loss of equipment, aircraft parts, or cargo in accordance with AFMAN 10-206 and AFMAN 91-223.

3.31. Fuel Jettison. Do not jettison fuel except in an emergency or when required for mission accomplishment. **(T-3)** When jettisoning fuel and circumstances permit, provide the appropriate ATC or flight service facility with intentions, altitude, location, and completion time. Report any jettisoning of fuel in accordance with AFMAN 10-206.

3.31.1. **(Added-AMC)** Aircrews should consider burning down fuel versus jettison, unless safety of flight dictates an immediate jettison (as determined by the pilot in command). Except in the case of an emergency, before jettisoning fuel, notify the appropriate ATC or flight service facility of intentions, altitude, and location. If available, the PIC will use designated jettison areas, except when safety of flight would be compromised. **(T-3)**

3.31.2. **(Added-AMC)** For missions tasked by higher-headquarters authority, the tasking C2 agency may authorize fuel jettison when an urgent operational requirement dictates immediate recovery/reconstitution of the aircraft and/or aircrew. The tasking C2 agency may provide fuel jettison instructions in the OPORD, mission directive, SPINS, etc.

3.31.3. **(Added-AMC)** For training missions, the OG/CC may approve fuel jettison when an urgent operational requirement exists to expedite recovery of the aircraft and all alternatives have been exhausted.

3.31.4. **(Added-AMC)** OG/CCs establish jettison areas and procedures to minimize the impact of fuel jettisoning. Ideally, establish jettison areas at altitudes above 20,000 feet above ground level, off published airways, avoiding urban areas, agricultural regions, and water supply sources. Avoid circling descents. Initiate AF Form 813, *Request for Environmental Impact Analysis*, and submit it to the base environmental coordinator.

3.31.5. **(Added-AMC)** All jettisons will be followed up with a detailed report filed by the pilot in command immediately after landing using a MAJCOM-approved form (e.g., AMC Form 97, *AMC In-Flight Emergency and Unusual Occurrence Worksheet*) for unusual occurrence or inflight emergency. **(T-2)** Submit completed form through local base channels and/or unit Operations Group Stan Eval (OGV) to MAJCOM/Stan Eval. Unit OGVs will retain forms for 6 months. Document all pertinent information, including the following items. **(T-2):**

3.31.5.1. **(Added-AMC)** Scheduled Duration.

3.31.5.2. **(Added-AMC)** Actual Duration.

3.31.5.3. **(Added-AMC)** Landing Gross Weight.

3.31.5.4. **(Added-AMC)** Computed Stopping Distance.

3.31.5.5. **(Added-AMC)** Recovery Field.

3.31.5.6. **(Added-AMC)** Runway available.

3.31.5.7. **(Added-AMC)** Jettison Altitude/Location.

3.31.5.8. **(Added-AMC)** Outside Air Temperature.

3.31.5.9. **(Added-AMC)** Wind Direction and Velocity.

3.31.5.10. **(Added-AMC)** Jettison Amount.

3.31.5.11. **(Added-AMC)** Reason for Jettison.

3.32. Radio, Laser, and Other Electromagnetic Emitter Restrictions. Equipment which transmits radio, laser, or other energy will only be operated for the intended purpose and in the authorized manner to prevent unintentional interference, damage, or injury. **(T-1)**

3.33. Communication Equipment. If suitably equipped, at least one aircrew member will monitor at least one emergency frequency at all times as mission and operational conditions permit. **(T-3)** Report distress or emergency locator transmitter (ELT) transmissions to ATC.

3.33.1. **(Added-AMC)** Communications Policy. The Air Force does not give a promise of confidentiality to aircrews regarding their recorded communications. Aircrew members are expected to maintain a high degree of flight deck professionalism and coordination at all times.

3.33.2. **(Added-AMC)** Aircraft Interphone. Primary aircrew members will monitor interphone during critical phases of flight. **(T-3)** Aircrew members will advise the PF (Pilot Flying) before checking off interphone. **(T-3)** As a reminder, appropriate security clearance is required for all members on interphone or within listening distance if classified information is discussed.

3.33.3. **(Added-AMC)** Radios.

3.33.3.1. **(Added-AMC)** The Pilot Monitoring (PM) normally makes all air traffic control (ATC) radio calls.

3.33.3.2. **(Added-AMC)** All aircrew members (if able) will monitor the primary radio unless directed otherwise. **(T-3)** An aircrew member will be designated to monitor C2 frequencies on the inbound and outbound legs. **(T-2)**

3.33.3.2.1. **(Added-AMC)** The pilot operating the radios will notify the aircrew which radio is primary and notify them when the primary radio changes. **(T-3)**

3.33.3.2.2. **(Added-AMC)** Both pilots will monitor UHF and VHF guard emergency frequencies to the maximum extent possible. **(T-2)** **Exception:** Only one aircrew member is required to monitor guard frequencies during tanker or receiver rendezvous and AAR. **(T-3)**

3.33.3.3. **(Added-AMC)** The Federal Communications Commission prohibits the use of unauthorized frequencies for interplane, HAVE QUICK/SATURN, or secure voice radio training.

3.33.3.4. **(Added-AMC)** Aircrews should use navigation charts to identify radio frequency changeover points to minimize the likelihood of prolonged loss of communication (PLOC) with ATC/radio operators.

3.33.3.4.1. **(Added-AMC)** In the event of known or suspected loss of two-way radio capability, aircrews will change their transponder mode 3/A to 7600 and follow the communications failure procedures published in the FIH. **(T-0)** Squawking 7600 highlights the loss of two-way radio capability to ATC/radio operators and minimizes the risk of being intercepted. Experience shows aircrews often hear transmissions from other aircraft, but not the associated ground ATC exchanges. Therefore, it is recommended that in all cases of suspected loss of contact with ATC, aircrews attempt to use other aircraft to relay messages to ATC controllers.

3.33.3.4.2. **(Added-AMC)** Aircrews experiencing a PLOC event should complete an ASAP report detailing the incident. The PLOC questionnaire in AMC ePubs (All Global) should be used as a template. Alternately, completed questionnaire may be e-mailed to AMC.A37V@us.af.mil.

3.34. Navigation Equipment.

3.34.1. Aircrew will ensure approved primary means of navigation is operational and monitor navigation system integrity (e.g., GPS, VOR, TAC) [14 CFR Part 91.225]. **(T-0)**

3.34.1. **(AMC)** Communication, Navigation, and Surveillance (CNS) equipment will be operated IAW applicable Flight Manual guidance, AFMAN 11-2MDSV3, and/or MDS 3-3. **(T-2)**

3.34.2. The PIC will not navigate using a TACAN unless valid azimuth and range information are available (e.g., a TACAN broadcasting range with no valid azimuth or a TACAN broadcasting azimuth with no valid range must be considered unusable). **(T-0)**

3.35. Transponder Operations. [14 CFR Part 91.215] Transponders may be operated in different modes: Mode 3A/C, Mode 5, Mode S (ELS and EHS) and “ADS-B Out.” **Figure 3.1** summarizes the emissions for each mode. Transponders should be operated in the mode with the lowest emissions required for mission execution or airspace requirements.

3.35.1. Aircrew will generally operate the Mode 3A/C transponder in accordance with ATC instructions, host nation procedures, theater SPINS, or MAJCOM guidance. **(T-0)**

3.35.1.1. Mode 3A/C only operations (e.g., Mode S OFF and ADS-B OFF, or not Mode S/ADS-B equipped) are approved in the NAS and airspace surrounding U.S. territories with no additional permission or coordination.

3.35.1.2. Mode 3A/C only operations are approved outside the NAS and airspace surrounding U.S. territories under any of the following conditions:

3.35.1.2.1. Airspace rules do not explicitly require U.S. military aircraft to have Mode S and ADS-B for access.

3.35.1.2.2. Mode 3A/C only operations has been coordinated via flight plan.

3.35.1.2.3. Mode 3A/C only operations has been coordinated through respective airspace authority.

3.35.2. Aircrew will operate Mode S, ADS-B, and Mode 5 transponders in accordance with theater SPINS and MAJCOM directives. **(T-1)** Mode S flight identification is not required unless operating Controller Pilot Data Link Communications (CPDLC). **Note:** When the flight plan call sign is less than seven characters, place blank spaces at the end.

3.35.2. **(AMC)** Aircrews will ensure that they have an operable Mode 5 when required for mission accomplishment (i.e., when “safe passage” procedures are implemented). **(T-2)** When required for mission accomplishment, aircrews will carry COMSEC equipment and documents required to operate the Mode 5. **(T-2)** Aircrews will comply with the guidance contained in AFMAN 17-1302-O, *Communications Security (COMSEC) Operations*, and DoDM5200.01_AFMAN 16-1404, *Information Security Program*, publications. **(T-2)** The unit COMSEC responsible officer can provide access to FOUO pubs.

3.35.2.1. Safe and operationally effective use of Mode S and ADS-B requires strict Mode S code protocols during both planning and execution. **Note:** When broadcasting Mode S and/or ADS-B, live aircraft position and flight history can be tracked through commercial flight tracking websites or via readily available, low cost commercial off-the-shelf tracking technology.

3.35.2.1. **(AMC)** Mode 5 Ground Checks. Aircrews will conduct an operational ground test of the Mode 5 (ground test assets permitting) before deployment overseas, or as specified in the OPORD or contingency/exercise tasking. **(T-2)** Aircrew should attempt to fix an inoperable Mode 5 before takeoff but should not delay takeoff nor cancel a mission for an inoperable Mode 5 unless transiting an area where safe passage procedures are implemented.

3.35.2.2. If Mode S, ADS-B, or Mode S and ADS-B are selected ON, PICs must ensure that the correct and authorized Mode S code is loaded in the aircraft avionics and/or transponder prior to flight. **(T-1)** Comply with the following to ensure Mode S and/or ADS-B is operating in a mode compatible with air traffic control systems:

3.35.2.2. **(AMC)** Mode 5 Flight Checks. Conduct an in-flight check of the Mode 5 on all missions departing the CONUS for overseas locations. **(T-2)** Aircrews can request the Mode 5 interrogation check through NORAD on UHF 364.2.

3.35.2.2.1. Only use T.O. assigned Mode S codes or AF/A3 authorized Mode S codes from the DoD assigned Mode S code block. **(T-1)**

3.35.2.2.2. Do not use a Mode S code from another Foreign State's Mode S code registry, or other Mode S code unassigned by ICAO, FAA, or DoD. **(T-1)**

3.35.2.2.3. No Mode S address shall be in operational use on more than one aircraft at any one time. **(T-1)**

3.35.2.2.4. Mode S addresses composed of all ZEROS's or all ONES's shall not be assigned to an aircraft for use in flight. **(T-1)** These codes are only authorized for maintenance ground testing. **(T-1)**

3.35.2.2.5. Mode S codes shall not be changed in flight. **(T-1)**

3.35.2.3. **(Added-AMC)** Mode 5 Inoperative. Aircraft with inoperable Mode 5 will continue to their intended destinations. **(T-3)** Repairs will be accomplished at the first destination where equipment, parts, and maintenance technicians are available. **(T-3)** In theaters where safe passage is implemented, aircraft will follow procedures for inoperable Mode 5 as directed in the applicable Special Instructions (SPINs), Airspace Control Order, or Air Tasking Order. **(T-2)**

3.35.2.4. **(Added-AMC)** Ground and in-flight checks of the Mode 5, when conducted, are mandatory maintenance debrief items. Crews will annotate successful and unsuccessful interrogation of the Mode 5 on all aircraft forms (AFTO 781A, *Maintenance Discrepancy and Work Document*). **(T-3)**

3.35.3. Aircrew will operate with the transponder in the altitude reporting mode at all airports any time the aircraft is positioned on any portion of a controlled movement area or as directed by the airfield guidance. **(T-0)**


3.35.4. Aircraft will squawk 2000 in the absence of any ATC directions or regional air navigation agreements [ICAO Doc 8168 Volume 1, *Aircraft Operations – Flight Procedures*]. **(T-0)**

3.35.5. [NAS Only] VFR aircraft normally squawk either 1200 or an ATC-assigned flight following code (including Slow Speed Low Altitude Training Route [SR]) [AIM 4-1-20].

3.35.6. [NAS Only] Aircraft operating VFR or IFR in restricted areas, warning areas, or on a VFR military training route (VR) will squawk 4000 unless another code has been assigned by ATC [FAA JO 7110.65, *Flight Services*]. **(T-0)**

3.35.7. [NAS Only] Aircraft operating in or near the Washington DC Special Flight Rules Area or Flight Restricted Zone must refer to the appropriate publication for transponder procedures to prevent intercept. **(T-0)**

Figure 3.1. Transponder Emission Summary.

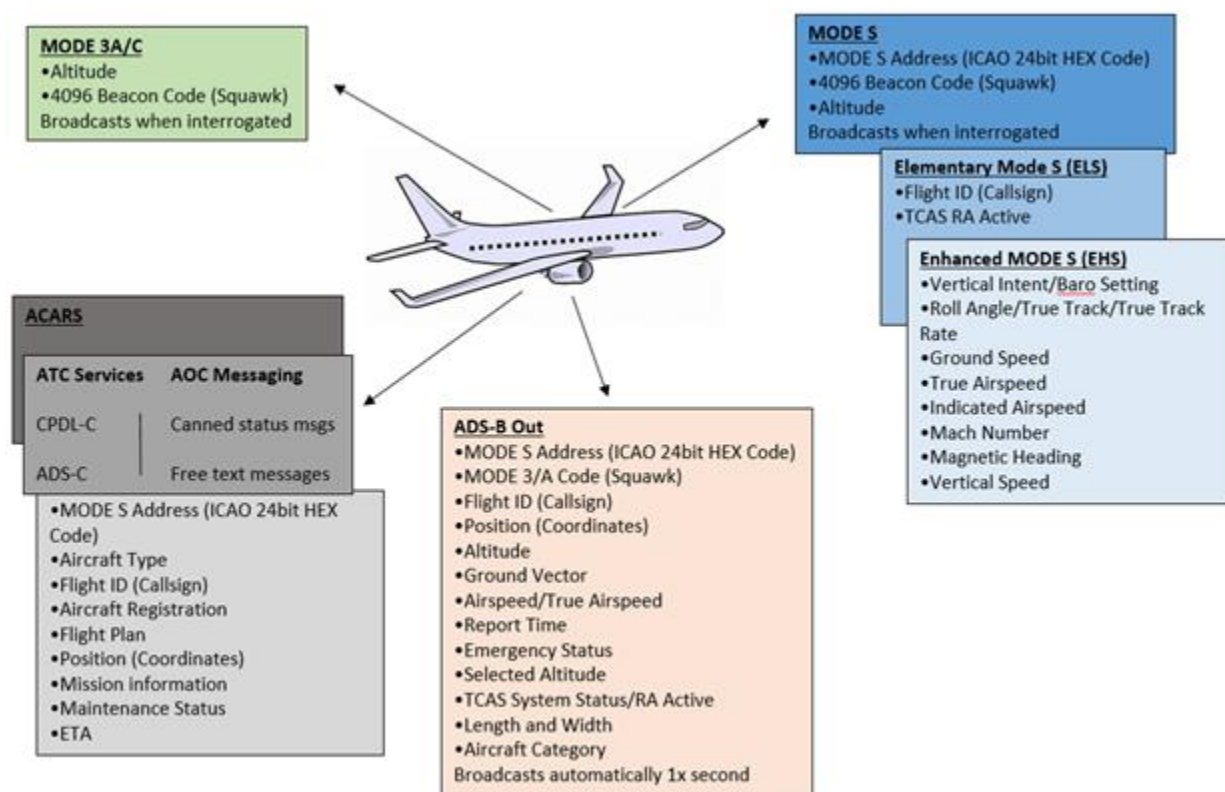

3.36. Automatic Dependent Surveillance – Broadcast (ADS-B) Operations. [14 CFR Part 91.225; 14 CFR 91.227; AC 20-165; AC 20-172; AIM 4-5-7] “ADS-B Out” refers to an aircraft broadcasting its position and other information. “ADS-B In” refers to an aircraft with installed equipment compliant with DO-260, *Minimum Operational Performance Standards for 1090 MHz Extended Squitter Automatic Dependent Surveillance – Broadcast (ADS-B) and Traffic Information Services – Broadcast*, DO-282, *Minimum Operational Performance Standards for Universal Access Transceiver (UAT) ADS-B*, and airworthiness approval, receiving the broadcasts and messages from the ADS-B network. **Note:** A portable ADS-B receiver may be used for situational awareness and provides similar information as “ADS-B In,” however it does not make an aircraft “ADS-B In” equipped.

3.36.1. Pilots should refer to the FLIP AP series and ICAO State AIPs for “ADS-B Out” requirements outside the NAS. **Note:** Arrangements with foreign governments or other entities may address military aircraft accommodations regarding “ADS-B Out” and similar expectations. Crews should be aware that alternate routing may be provided.

3.36.2. Request approval through the appropriate command and control channels, if not ADS-B equipped or missions that require “ADS-B Out” Off operations.

3.36.2.1. Consult the FCG for country specific requirements.

3.36.2.2. Some international agreements afford U.S. military aircraft guarantees of access and accommodation.

3.36.3. [NAS Only] “ADS-B Out” requirements apply to the airspace defined in 14 CFR Part 91.225 regardless of whether the operation is conducted under VFR or IFR. The DoD has accommodations for this requirement:

3.36.3.1. [NAS Only] **“ADS-B Out” Non-equipped Aircraft.** In accordance with FAA Accommodation Memorandum, non-equipped ADS-B aircraft, in accordance with [paragraph 3.36.3.3](#), are authorized to operate in airspace areas where “ADS-B Out” is required until 31 December 2024 unless superseded, rescinded, or extended. **Note:** This authorization does not relieve DoD-contracted and civil operators from the requirement to equip pursuant to 14 CFR 91.227 with “ADS-B Out” if they are operating in ADS-B airspace while conducting operations not on behalf of the DoD.

3.36.3.2. [NAS Only] **“ADS-B Out” Equipped Aircraft.** In accordance with FAA accommodation memorandum dated 16 September 2019, aircraft equipped with “ADS-B Out,” in accordance with [paragraph 3.36.3.3](#), are authorized to turn “ADS-B Out” OFF as determined by MAJCOM. If an aircraft is operating with “ADS-B Out” OFF, the pilot is required to operate either Mode 3A/C or Mode S. **(T-0) Exception:** Operations granted an FAA exemption to [paragraph 3.35.1](#).

3.36.3.3. [NAS Only] Any of the following aircraft are authorized to use the accommodations above:

3.36.3.3.1. Aircraft owned and operated by DoD.

3.36.3.3.2. DoD-contracted aircraft that have been given public aircraft status by DoD when conducting operations on behalf of the DoD.

3.36.3.3.3. Civil aircraft when operating on behalf of the DoD.

3.36.3.3.4. Foreign State aircraft conducting operations in U.S. airspace, pursuant to an agreement or arrangement with DoD.

3.37. TCAS Operations. If operating with the TCAS on, select the TCAS mode that provides both traffic advisories (TAs) and resolution advisories (RAs), in accordance with the aircraft manual, formation flight requirements, MAJCOM guidance, mission requirements, theater SPINS, or host-nation agreements [14 CFR Part 91.223].

3.37.1. Pilots will respond to all RAs regardless of ATC instructions, right-of-way rules, cloud clearance requirements, or other VFR or IFR flight rules, as directed by TCAS unless doing so would jeopardize the safe operation of the aircraft (e.g., descent into obstacles). **(T-1)**

3.37.1.1. Do not deviate from an assigned ATC clearance based solely on traffic advisory information. **(T-1)** Attempt to attain visual contact and maintain safe separation.

3.37.1.2. In the event of a resolution advisory (RA), alter the flight path only to the extent necessary to comply with the RA. **(T-1)**

3.37.1.3. After deviating from an ATC clearance in response to an RA, notify ATC of the deviation as soon as practicable and promptly return to the current ATC clearance when the traffic conflict is resolved or obtain a new clearance. **(T-0)**

3.37.2. [AC 120-55] To preclude unnecessary transponder interrogations and possible interference with ground radar surveillance systems, do not activate TCAS (“TA-Only” or “TA/RA”) until taking the active runway for departure. Following landing and clearing the runway, de-select TCAS from “TA-Only” or “TA/RA.”

3.38. Communication, Navigation, and Surveillance Equipment Malfunctions. When operating in controlled airspace under IFR, report as soon as practicable to ATC the malfunction of navigational, air-to-ground communications, or surveillance capability in accordance with the Flight Information Handbook [14 CFR Part 91.187]. **(T-0)**

3.39. Terrain Awareness and Warning Systems (TAWS). Aircrew will comply with appropriate aircraft flight manual procedures and MAJCOM guidance upon receipt of a Ground Proximity Warning System (GPWS), TAWS, Enhanced GPWS (EGPWS), or Ground Collision Avoidance System (GCAS) warning. During visual meteorological conditions (VMC) flight, terrain warnings do not need to be followed if the pilot can verify the warning is false by visual contact with terrain or obstacles.

3.40. Carry-On Equipment. Carry-on communication, navigation, and surveillance equipment may be used as authorized by the MAJCOM.

3.41. Formation Flights (Including Air Refueling). [14 CFR Part 91.111, FAA JO 7610.4] Accomplish formation flights only as authorized by the MAJCOM. Formation leads will brief formation flight operations to all participating aircraft. **(T-0)** Formation flights may operate in RVSM airspace if all participating aircraft are RVSM compliant or approved by ATC [14 CFR Part 91.706]. **(T-0)**

3.41. (AMC) Formation Flights (Including Air Refueling). Air refueling operations should be conducted IAW ATP 3.3.4.2 (to include US Standards Related Document), [Chapter 27](#), and MDS-specific guidance.

3.41.1. Transponder Operations.

3.41.1.1. Only one aircraft (normally the lead) of a standard formation should operate the transponder in accordance with [paragraph 3.35](#) [FAA JO 7110.65].

3.41.1.2. [FAA JO 7610.4] Unless otherwise directed, all aircraft within a non-standard formation will squawk an ATC assigned Mode 3A/C beacon code until established within the assigned altitude block. **(T-0)** Unless otherwise directed, receivers will not squawk when less than 3 nautical miles (NM) from the tanker. **(T-1)**

3.41.1.3. Unless otherwise directed, when aircraft interval exceeds 3 NM, both the formation lead and last aircraft will squawk the assigned Mode 3A/C beacon code. **(T-1)**

3.41.1.4. If equipped, other formation elements should use “ATC Off” mode in accordance with [paragraph 3.41.1.1](#) and [paragraph 3.41.1.2](#). This mode disables squawks, Mode S air-to-ground transmissions, and ADS-B-Out squitters, but maintains Mode S air-to-air transmissions (which are used by TCAS). If not equipped with “ATC off,” other formation elements should disable squawks, Mode S, and “ADS-B-Out” in accordance with [paragraph 3.41.1.1](#) and [paragraph 3.41.1.2](#).

3.41.2. TCAS Operations.

3.41.2.1. Formation leads (and last aircraft, when formation length exceeds 3 NM) will operate in traffic advisory mode unless otherwise required by ATC, host-nation agreement or specified in the MDS-specific guidance. **(T-0)** If operating in “ATC Off” mode, formation elements should also operate in “TA-Only” mode. If not operating in “ATC Off” mode, TCAS will not be available if Mode S is disabled and can be operated in standby.

3.41.2.2. During refueling operations, the tanker aircraft will operate in traffic advisory mode. **(T-0)** If the receiving aircraft is TCAS equipped, it can operate in traffic advisory mode if using “ATC Off,” otherwise TCAS can be operated in standby.

3.41.3. Non-standard formation flights may be conducted when approved by ATC, operating under VFR in VMC, operating within an authorized altitude reservation (ALTRV), operating under the provisions of a letter of agreement, or operating in airspace specifically designated for a special activity.

3.41.4. **(Added-AMC)** Formation Inter-Fly.

3.41.4.1. **(Added-AMC)** Any inter-fly involving AMC aircraft being conducted OCONUS must notify the AOR-owning authority (USAFE, PACAF, etc.) in addition to the MAJCOM approval process outlined in this supplement. **(T-2) Exception:** Aerial refueling operations and USAF tanker cell departures.

3.41.4.2. **(Added-AMC)** Formation briefings will be accomplished prior to flight. The formation briefing will cover, at a minimum: inter-plane communication procedures, minimum spacing parameters, planned altitudes/airspeeds/maneuvers, inadvertent weather penetration procedures, and formation breakout procedures. **(T-3)** Mission planners should consider the differences in aircraft performance, capabilities, operating procedures, and user requirements in order to anticipate and mitigate potential incompatibilities, align expectations, and coordinate actions to ensure safe mission accomplishment. Local area briefings and cross-MDS and/or cross-unit safety observers are recommended to enhance flight safety.

3.41.4.3. **(Added-AMC)** Formation Inter-Fly Approval.

3.41.4.3.1. **(Added-AMC)** Similar or Dissimilar Formation Inter-Fly between USAF aircraft. Comply with MDS-specific guidance and AFMAN 11-214, *Air Operations Rules & Procedures*. Unless dictated otherwise by mission type and regulation, the approval authority for formation flights with other AMC aircraft is the owning OG/CCs. MAJCOM/A3 does not require notification. An MOU will be signed by all OG/CCs, or the next highest authority involved. **(T-3)**

3.41.4.3.2. **(Added-AMC)** Similar or Dissimilar Formation Inter-Fly with Other U.S. Military Aircraft. Comply with MDS-specific guidance and AFMAN 11-214, *Air Operations Rules & Procedures*, and NATO ATP-3.3.4.2, *Air to Air Refueling*. Unless dictated otherwise by mission type and regulation, the approval authority for formation flights with other U.S. military aircraft is the owning OG/CCs (or equivalent). Units planning formation flights with other U.S. military aircraft will notify MAJCOM/A3 prior to the planned flight(s). **(T-2)** An inter-fly agreement will be signed by all OG/CCs (or equivalent) or higher authority involved. **(T-3)**

3.41.4.3.3. **(Added-AMC)** Similar or Dissimilar Formation Inter-Fly with Foreign Military Aircraft. Comply with MDS-specific guidance and AFMAN 11-214. Unless dictated otherwise by mission type and regulation, the approval authority for formation flights with foreign military aircraft is MAJCOM/A3. Units planning formation flights with foreign military aircraft will request approval from MAJCOM/A3 prior to the planned flight(s). **(T-2)** An MOU will be signed by all OG/CCs (or equivalent) or higher authority involved. **(T-2)**

3.42. Aerobatics. [FAA Pilot/Controller Glossary, ICAO Annex 2] Aerobatic flight means an intentional maneuver involving an abrupt change in an aircraft's attitude, an abnormal attitude, or abnormal acceleration, not necessary for normal flight.

3.42.1. If conducting aerobatic flight, pilots will operate within coordinated special use airspace, temporary flight restriction (TFR) if authorized, Aerobatic Training Area, ATC-Assigned Airspace (ATCAA), or if not operating in these areas pilots will operate in accordance with [paragraph 3.42.2](#). **(T-0)** Pilots of aircraft deployed or based at overseas locations will operate in accordance with applicable host-nation agreements. **(T-0)** If the aircraft operating requirements (e.g., altitude requirements, maximum airspeeds) dictated in the host-nation agreement are less restrictive than USAF guidance, the most restrictive guidance shall be used. **(T-1)**

3.42.2. [14 CFR Part 91.303] Unless satisfying conditions outlined in [paragraph 3.42.1](#), pilots shall not operate an aircraft in aerobatic flight under any of the following circumstances:

3.42.2.1. Over any congested area of a city, town, or settlement. **(T-0)**

3.42.2.2. Over an open air assembly of persons. **(T-0)**

3.42.2.3. Within the lateral boundaries of the surface areas of Class B, Class C, Class D, or Class E airspace designated for an airport. **(T-0)**

3.42.2.4. Within 4 nautical miles of the center line of any Federal airway. **(T-0)**

3.42.2.5. Below an altitude of 1,500 feet above the surface. **(T-0)**

3.42.2.6. When flight visibility is less than 3 statute miles. **(T-0)**

3.43. Air Combat Tactics. Air combat tactics and air-to-ground tactics which involve aerobatic type maneuvering must be performed in special use airspace, ATCAA, military training routes (MTRs), or host-nation approved airspace in accordance with the guidelines in AFI 11-214, *Air Operations Rules and Procedures*. Aircraft deployed or based at overseas locations will operate in accordance with applicable host-nation agreements. **(T-0)** If the aircraft operating requirements (e.g., altitude requirements, maximum airspeeds, dropping of objects) dictated in the host-nation agreement are less restrictive than USAF guidance, the most restrictive guidance shall be used. **(T-1)**

3.44. Temporary Flight Restriction (TFR) Airspace. [14 CFR Part 91.137, 14 CFR Part 91.138, 14 CFR Part 91.145] Do not operate within a TFR without authorization. **(T-0)**

3.45. Operating at Non-towered Airports. [AIM 4-1-9, AIM 4-3-3] Use the runway favored by the winds unless safety, air traffic considerations, or mission accomplishment makes another option more suitable. All common traffic advisory frequency and flight service station (FSS) calls will be in accordance with the AIM. **(T-0)** UAS operations are prohibited at uncontrolled fields when other traffic is present. **(T-2)**

3.46. Simulated Instrument Flight. [14 CFR Part 91.109] For non-instrument qualified pilots, a safety observer who is able to clear outside at all times should accompany the flight either as an aircrew member or in a chase aircraft. If a chase aircraft is used, maintain continuous visual contact and two-way communications between aircraft. A safety observer is defined as a current and qualified instrument pilot or a fighter weapons systems operator (or other MAJCOM-designated aircrew member) with access to a set of flight controls.

3.46.1. MAJCOMs must approve the use of vision restricting devices and provide specific approval for use during takeoffs and landings. Do not use a vision restricting device without a safety observer. **(T-2)** Maintain at least 2,000 feet of obstruction clearance when using vision restricting devices if the safety observer is in a chase aircraft, not qualified as a pilot, or does not have full view of the flight instruments and access to flight controls. **(T-2)**

3.46.2. When not on an IFR flight plan, the aircraft must be equipped with a functional two-way radio and have the airport environment in sight when established on the final segment of an approach. **(T-1)**

3.47. Simulated Emergency Flight. Terminate simulated emergency training if an actual emergency occurs.

3.47.1. MAJCOMs must provide guidance when an instructor pilot or flight examiner does not have immediate access to the aircraft controls.

3.47.2. Passengers will not be onboard without MAJCOM and PIC authorization.

3.47.3. Single-pilot aircraft require day VMC (not applicable for UAS). **(T-2)**

3.47.4. Multi-pilot aircraft in day IMC require weather conditions at or above published circling minimums for the approach to be flown (not applicable for UAS). **(T-2)**

3.47.5. Multi-pilot aircraft at night require weather conditions at or above 1,000 foot ceiling and 2 statute miles (SM) visibility or circling minimums, whichever is higher (not applicable for UAS) **(T-2)**

3.47.6. At controlled fields where Simulated Flameout, Forced Landing, or Emergency Landing Patterns (SFO/ELP) maneuvers are conducted, the facility air traffic manager shall issue a letter of agreement with the appropriate military authority and adjacent facilities as required. Follow letter of agreement guidance found in FAA Joint Order (FAA JO) 7610.4. **(T-0)**

3.47.7. **(Added-AMC)** Simulated emergencies may be practiced only during training, evaluation, or currency flights when an instructor or evaluator is in one of the pilot seats. **(T-2)**
Exceptions:

3.47.7.1. **(Added-AMC)** Air refueling breakaway procedures do not require an instructor or evaluator pilot to occupy a pilot seat.

3.47.7.2. **(Added-AMC)** Unless otherwise restricted by AFMAN 11-2MDSV3 guidance, IP (Instructor Pilot) candidates in a pilot seat and under the supervision of an EP not in a pilot seat may practice simulated emergency procedures during initial and/or requalification evaluations to IP.

3.47.7.3. **(Added-AMC)** Simulated emergency training specific and applicable to AE aircrews only does not require an instructor or evaluator pilot to occupy a pilot seat.

3.47.7.4. **(Added-AMC)** KC-135 manual gear and flap extensions do not require an instructor or evaluator pilot to occupy a pilot seat.

3.47.8. **(Added-AMC)** Simulated Engine Failure Limitations:

3.47.8.1. **(Added-AMC)** Do not practice actual engine shutdowns unless authorized by AFMAN 11-2MDSV3 guidance. **(T-3)**

3.47.8.2. **(Added-AMC)** Units with a co-located, same-type, simulator will not conduct simulated engine failures in the aircraft unless authorized by AFMAN 11-2MDSV3 guidance. **(T-3)**

3.47.9. **(Added-AMC)** The PIC or IP will alert all aircrew members prior to practicing emergency procedures. **(T-3)**

3.47.10. **(Added-AMC)** Simulated emergency procedures (other than breakaway procedures) are prohibited during AAR. **Exception:** N/A for Flying Training Units and Weapons Schools when conducted under an approved training syllabus. **(T-2)**

3.48. Vertical-Lift Operations. For this manual, tilt-rotor aircraft in vertical-flight mode will follow helicopter guidance. **(T-1)** MAJCOMs will provide guidance on determining phase-of-flight for aircraft capable of transitioning to and transitioning from vertical flight.

3.49. (Added-AMC) Check Flights. Functional Check Flights (FCFs), Acceptance Check Flights (ACFs) and Operational Check Flights (OCFs), will be accomplished IAW T.O. 1-1-300, *Maintenance Operational Checks and Check Flights*; DAFI 21-101, T.O. 1C-MDS-6, *Aircraft Scheduled Inspections and Maintenance Requirements*, and T.O. 1C-MDS-6CF-1, *Acceptance and/or Functional Check Procedures Manual*. **(T-2)** Aircrew should only perform tasks or functions contained in specific Technical Order guidance. If requested to perform a non-standard function, PICs should contact their OG/CC to see if an FCF applies.

3.49.1. **(Added-AMC)** Check Flight Restrictions. See T.O. 1-1-300 and DAFI 21-101.

3.49.2. **(Added-AMC)** The OG/CC is responsible for the wing check flight program, and should publish additional guidance in local supplements to this instruction. The OG/CC may authorize a partial FCF to check only those systems disturbed by maintenance, an inspection or modification.

3.49.3. **(Added-AMC)** Check Flight Aircrew.

3.49.3.1. **(Added-AMC)** The OG/CC will only certify highly experienced instructors as check flight aircrew and will determine aircrew complement after a thorough ORM assessment specific to each FCF/ACF flight. **(T-2) Exception:** The OG/CC, or deployed equivalent, may authorize temporary waivers to FCF crew experience requirements for aircrew certification when operationally necessary. Permanent waivers require MAJCOM/A3 approval.

3.49.3.2. **(Added-AMC)** Aircrew members will accomplish required prerequisite/continuation flight equipment and survival training IAW AFMAN 11-301V1, AFMAN 11-202V1, and AFI 16-1301, *Survival, Evasion, Resistance, and Escape (SERE) Program*, prior to performing FCF/ACF in-flight checks on non-airworthy aircraft, as identified in T.O. 1-1-300, para 4.1.. **(T-2)** The aircraft will have applicable aircrew flight equipment (i.e., parachutes, survival vests, flight helmets, minimum survival equipment, etc.) installed on the aircraft IAW AFMAN 11-301V2 or AFMAN 11-2MDSV3 series publications. **(T-2)**

3.49.4. **(Added-AMC)** Check Flight Location. Check flights should be conducted within the designated check flight airspace of the base from which the flight was launched except when the flight must be conducted under specific conditions, not compatible with local conditions and area restrictions. The decision to approve a combined FCF/ACF and ferry flight is the responsibility of the MAJCOM/A3.

3.49.5. **(Added-AMC)** Check Flight Weather Conditions. Ideally, conduct FCF/ACFs in daylight, VMC. OG/CCs may authorize an FCF/ACF flight under a combination of VMC and IMC. Begin the flight in VMC. If the aircraft and all systems are operating properly, the crew may proceed IFR through cloud cover to “VFR on Top” for the altitude phase of the flight. OG/CCs may authorize OCF flights under Day IMC or Night VMC IAW T.O. 1-1-300 limitations.

3.49.6. **(Added-AMC)** If a malfunction occurs during a check flight, the MXG/CC may subsequently release the aircraft for flight providing the malfunction is not related to the condition generating the check flight, and the original condition operationally checked good.

3.49.7. **(Added-AMC)** High-Speed Taxi Checks. Only FCF/ACF crews will perform high-speed taxi checks. **(T-3)** To limit brake/tire wear, the aircraft should be prepared with the minimum fuel necessary to accomplish the check (ensure fuel on board will permit a safe return to base should the aircraft unexpectedly become airborne) and turn on the anti-skid system. The PIC will ensure the calculation of takeoff data for the highest speed planned and ensure runway available allows sufficient stopping distance for existing conditions without exceeding normal brake energy limits. **(T-2)**

3.50. (Added-AMC) Tactical Training. AMC aircrews are authorized to fly tactical operations for training.

3.51. (Added-AMC) Aircraft or Aircrew Inter-Fly. Aircraft or aircrew inter-fly is a temporary arrangement between OG/CCs or equivalent to permit the exchange or substitution of aircrew members and/or aircraft between mobility units to accomplish flying missions (refer to DAFMAN 11-401_AMCSUP). Normally, inter-fly should be limited to specific operations, exercises, or special circumstances. However, it may be used for events of longer duration such as unit conversion to another MDS. Participating aircrews will use guidelines established by the lead command or as specified in the OPLAN or CONOPS. **(T-2) Exception:** AE aircrew members are exempt from inter-fly requirements. Conduct inter-fly operations as follows:

3.51.1. **(Added-AMC)** “Gained” aircrew members will follow operational procedures established by the “Owning” command for the MDS. **(T-2)** The Mission Commander (MC) or PIC will brief MAJCOM-specific items, as required. **(T-2)**

3.51.2. **(Added-AMC)** Each affected OG/CC who commits resources (personnel or aircraft) must concur with inter-fly proposal. **(T-3) Exception:** For 618 AOC-controlled missions, AMC or AMC-tasked (AMC OPCON) aircrew are authorized to fly an AMC OPCON aircraft from another unit/wing (i.e., aircraft inter-fly). For unit-equipped ARC missions, home station OG/CC approval is still required prior to authorizing. This exception does not apply to aircrew inter-fly (mixed crews) or aircraft formation inter-fly.

3.51.3. **(Added-AMC)** Aircrew members will be current and qualified in the MDS, as well as unique systems or configuration required to fly the aircraft/mission unless under the direct supervision of an instructor during critical phases of flight. **(T-2)**

3.51.4. **(Added-AMC)** MDS Conversion Training. Units may request inter-fly agreement for duration of their conversion. OG/CCs will forward inter-fly requests to individual OG/CCs for approval. **(T-3)** Requests will include as a minimum a list of affected units, duration of agreement, and purpose. **(T-3)** For formation inter-fly, see [paragraph 3.41.3](#).

3.52. (Added-AMC) Alertness Management and Fatigue Mitigation. Medical Treatment Facility/Chief of Aerospace Medicine will establish policy for implementation of a local Fatigue Countermeasures (CM) Program and ensure compliance with its provisions in coordination with wing safety. **(T-2)** Medical Treatment Facility/Chief of Aerospace Medicine will provide clinical oversight, guidance and materials for fatigue CM education and mitigation. **(T-2)**

3.52.1. **(Added-AMC)** OG/CCs will ensure Unit ORM programs include use of the basic fatigue countermeasures found in the Aviation Operational Risk Management (AvORM) worksheet or a MAJCOM-approved substitute worksheet that takes into account fatigue countermeasures. **(T-2)**

3.52.1.1. **(Added-AMC)** The primary fatigue CM available to aircrew members is appropriate management of their sleep/rest cycles. Secondary CM include smart scheduling procedures aimed at managing those cycles, strategic inflight and/or ground napping techniques, and proper diet and exercise. Medication or supplements should be used only as a last resort.

3.52.1.2. **(Added-AMC)** No-Go Pill. An additional fatigue CM tool available to aircrew is the No-Go Pill. The occasional use of a No-Go Pill by AMC aircrew to improve sleep quality and/or adjust circadian rhythm sleep/wake cycles is voluntary. Each individual aircrew member will, with the aid of their home station flight doctor, determine how/if to implement the use of No-Go Pills as a fatigue CM. **(T-3)**

3.52.1.3. **(Added-AMC)** The following directives concerning the use of No-Go Pills are as important and unbreakable as the restriction for alcohol consumption:

3.52.1.3.1. **(Added-AMC)** Aircrew members on flight orders will not use No-Go Pills in flight. **(T-2)**

3.52.1.3.2. **(Added-AMC)** Aircrew members will complete ground testing for any No-Go Pill they wish to use for operational purposes. **(T-2)** Successful ground testing of a particular No-Go Pill establishes clearance to use it operationally. During ground testing, aircrew members are DNIF on an DD Form 2992, *Medical Recommendation for Flying or Special Operational Duty*, for the minimum 'DNIF' periods prescribed by the local flight doctor. After successfully completing ground testing or declaring declination of testing, the local flight doctor will completely document this in the member electronic health record. **(T-2)**

3.52.1.3.3. **(Added-AMC)** Aircrew members may obtain No-Go Pills from any USAF or other DoD authorized flight doctor while at home station or off-station while TDY/deployed once ground testing has been validated.

3.52.1.3.4. **(Added-AMC)** In no case will an individual perform aircrew duties (including travel time to work) while under the effects of No-Go Pills. Individuals will use the mission report or legal for alert time to determine the latest time to take a No-Go Pill. **(T-2)** The following are the minimum 'DNIF' periods (no DD Form 2992 required) after consuming a No-Go Pill. **(T-2):**

3.52.1.3.4.1. **(Added-AMC)** Sonata (Zaleplon) – 4 hours minimum 'DNIF'

3.52.1.3.4.2. **(Added-AMC)** Ambien (Zolpidem) – 6 hours minimum 'DNIF'

3.52.1.3.4.3. **(Added-AMC)** Restoril (Temazepam, Class IV Controlled Substance) – 12 hours minimum 'DNIF'

3.52.1.3.4.4. **(Added-AMC)** No-Go medications can affect individuals very differently. To comply with the "no aircrew duties while under the effects" restriction, it is the responsibility of each individual aircrew member to be aware of their own minimum (if exceeding those listed above) 'DNIF' period for any No-Go Pill they use, based on their ground trial results and/or previous experiences.

3.52.1.3.5. **(Added-AMC)** The AMC's worldwide mobility mission makes accountability for this program challenging; therefore, the following are aircrew member responsibilities:

3.52.1.3.5.1. **(Added-AMC)** Aircrew members will not operate heavy equipment during the minimum 'DNIF' period for each No-Go Pill outlined in [paragraph 3.52.1.3.4.](#) **(T-3)**

3.52.1.3.5.2. **(Added-AMC)** Aircrew members will not take No-Go Pills within 12 hours of consuming alcohol, as their combined use unpredictably increases the effects of both. **(T-3)**

3.52.1.3.5.3. **(Added-AMC)** Aircrew members will limit use of Ambien (Zolpidem) and Restoril (Temazepam) to a maximum of seven consecutive days and no more than 20 days in a 60-day period. **(T-2)**

3.52.1.3.5.4. **(Added-AMC)** Aircrew members will limit use of Sonata (Zaleplon) to a maximum of 10 consecutive days and no more than 28 days in a 60-day period. **(T-2)**

3.52.1.3.5.5. **(Added-AMC)** If an aircrew member uses Sonata in combination with either of the other types of No-Go Pills, the seven consecutive days and 20 days in a 60-day period restrictions apply (overrides the 10 consecutive days and 28 days in a 60-day period for Sonata).

3.52.1.3.5.6. **(Added-AMC)** Aircrew members may consume more than one No-Go Pill in a 24-hour period, if operationally necessary. A second No-Go Pill of the same or different type will not be consumed while in the minimum 'DNIF' period for the previous one. **(T-2)**

3.52.1.3.5.7. **(Added-AMC)** Aircrew members on Personnel Reliability Program (PRP) or Presidential Support Program (PSP) status will follow PRP/PSP notification procedures if prescribed No-Go Pills. **(T-2)**

3.53. (Added-AMC) Alcoholic Beverages. Dispensing of alcoholic beverages is IAW DAFI 34-107, *Alcoholic Beverage Program*.

Chapter 4

MISSION PLANNING

4.1. General. [FAA Pilot/Controller Glossary] It is important not to confuse or use terms inappropriately. Flight conditions do not always correspond to the type of flight plan filed.

4.1.1. Instrument flight rules (IFR) are a set of rules governing the conduct of instrument flight. [NAS Only] This is a term used by pilots and controllers to indicate type of flight plan. The term “IFR” is also used in the United States to indicate weather conditions that are less than minimum VFR requirements.

4.1.2. Instrument meteorological conditions (IMC) are weather conditions expressed in terms of visibility, distance from clouds, and ceilings less than the minima specified for visual meteorological conditions.

4.1.3. Visual flight rules (VFR) govern the procedures for conducting flight under visual conditions. [NAS Only] The term “VFR” is also used in the United States to indicate weather conditions that are equal to or greater than minimum VFR requirements. In addition, it is used by pilots and controllers to indicate type of flight plan.

4.1.4. Visual meteorological conditions (VMC) are weather conditions expressed in terms of visibility, distance from clouds, and ceilings equal to or better than specified minima.

4.2. Flight Authorization. Flights in USAF aircraft will be authorized and documented in accordance with DAFMAN 11-401 and MAJCOM guidance. **(T-1)**

4.2.1. **(Added-AMC)** Flight attendants (FA) and communications system operators (CSOs) may fly as primary aircrew members on designated mission and be placed on the Flight Authorizations. They fall under the authority of the PIC, or MC (if assigned), throughout the mission. An egress briefing will be given to the FAs/CSOs prior to the first mission leg. **(T-3)** FA/CSOs may fly in flight suits or civilian attire as mission requirements and locations dictate. Additionally, FAs may also fly in FA uniforms.

4.2.2. **(Added-AMC)** Flight Release. Review the AFTO 781 Series aircraft forms before applying power to the aircraft or operating aircraft systems. Verify preflight (PR)/thru-flight (TH) currencies on the 781H. If not specified in the MDS-specific -6 T.O., a preflight inspection is valid for 72 hours from the time of documented completion. A thru-flight inspection will be accomplished when the scheduled ground time between flights exceeds 12 hours; thru-flight inspections have no expiration. An Exceptional or Conditional Release must be signed before flight. **(T-2)** A maintenance officer, maintenance superintendent, or authorized civilian normally signs the Exceptional or Conditional release. If one of these individuals is not available, the PIC may sign the Exceptional release. Ensure that the AIR card is aboard the aircraft.

4.2.3. **(Added-AMC)** One-Time Flights. An aircraft may be released for a one-time flight with a condition that might be hazardous for continued use, provided the aircraft is airworthy for one flight to another station. Refer to T.O. 00-20-1, *Aerospace Equipment Maintenance Inspection, Documentation, Policies, and Procedures*, and AFI 21-101_AMCSUP, *Aircraft and Equipment Maintenance Management*, Table 11.1, Item 3, for downgrade authority and procedures. Although a one-time flight may be authorized by MDS-specific guidance, a maintenance exceptional release (clearing the Red X) will still be required. Coordinate the maintenance release and mission requirements with the controlling agency. The PIC's concurrence is required before the aircraft can be flown.

4.2.4. **(Added-AMC)** Authority to Clear a Red X. If a situation is encountered where an aircraft is on a Red X, and qualified maintenance personnel are not available to clear it, the PIC or Primary Flight Engineer may seek authorization to clear it from the home station MXG/CC or designated representative IAW T.O. 00-20-1. **Exception:** The PIC or Primary Flight Engineer may clear Red Xs for engine covers, pitot covers, and gear pins when qualified maintenance personnel are not available, unless prohibited by the home station MXG/CC or OG/CC. Other aircrew members are not authorized to clear a Red X.

4.3. Pilot in Command. The PIC must be current and qualified in the aircraft to be flown or under the supervision of a current and qualified instructor pilot (to include supervision from a formation position). **(T-0)** If any portion of the flight will be conducted in IMC or under IFR, the PIC must hold a current instrument qualification. **(T-0) Exception:** Student pilots enrolled in Undergraduate Flying Training courses, Introduction to Fighter Fundamentals, and Pilot Instructor Training may act as PIC for syllabus-directed solo flights. These flights will be flown in accordance with FAA JO 7610.4. **(T-0)**

4.3.1. **(Added-AMC)** For all flights, SQ/CCs (or their designated representative) will designate an aircraft commander (AC), instructor pilot (IP), or evaluator pilot (EP) as the PIC (to include an AC upgrade candidate on an Operational Mission Evaluation) on the flight authorization, IAW DAFMAN 11-401, *Aviation Management*, and applicable supplements. **(T-2)** An unqualified pilot will not be designated as PIC. **(T-2)** A non-mission ready (NMR) pilot may be designated as PIC, provided the delinquent events causing the NMR status are not performed on that flight (or the portion of that flight for which the NMR pilot is designated as PIC). **(T-2)**

4.4. Approval Authority. The flight authorization will designate the PIC. **(T-1)** The designated PIC is responsible for the safety of the aircraft, the formation, and its occupants.

4.5. Flight Plans. File a flight plan in accordance with FLIP *General Planning* or MAJCOM guidance. **(T-0)** If unable to file on the ground, once airborne, file a flight plan as soon as practicable. Mission requirements drive selection of flight rules (IFR, VFR, or composite).

4.5.1. Pilots operating in international airspace will file an international flight plan unless MAJCOM or contingency guidance specifies otherwise. **(T-2)**

4.5.2. The PIC will list passengers on a DD Form 2131, *Passenger Manifest*, or a MAJCOM-approved form. **(T-2)** File the manifest and crew list with the flight plan, the passenger service facility, or other responsible agency. **(T-2)** Notify command and control prior to departure if there is a passenger manifest (or crew list) change. **(T-2)** When able, process any changes with the original processing facility or a responsible agency.

4.5.2. (AMC) The PIC and designated aircrew representative are responsible for ensuring all passengers are properly manifested. PIC will be briefed on total number of passengers. (T-3)

4.5.3. The PIC may make changes to the original filed flight plan without re-filing provided the change does not penetrate an air defense identification zone (ADIZ), the controlling ATC agency approves the change for an IFR flight, or the changes comply with applicable host-nation rules.

4.5.4. [NAS Only] When landing at a non-towered civilian airfield or part-time-towered airports when the control tower is not operating, the pilot is responsible for ensuring that flight plans are closed either by contacting a FSS, the originating airfield management, or through an ATC facility [14 CFR Part 91.153 and 14 CFR Part 91.169]. (T-0)

4.5.5. By filing a flight plan, the PIC certifies:

4.5.5.1. The flight was authorized in accordance with DAFMAN 11-401;

4.5.5.2. Compliance with [paragraph 4.6.](#);

4.5.5.3. The flight plan has been reviewed for completeness and accuracy;

4.5.5.4. The flight complies with ADIZ restrictions and special use airspace or MTR scheduling and coordination procedures specified in FLIP and NOTAMs.

4.6. Mission Planning Requirements.

4.6.1. The PIC must obtain current and relevant information including but not limited to:

4.6.1.1. Weather observations and forecasts. (T-0)

4.6.1.2. NOTAMs, to include special use airspace and TFRs. (T-0)

4.6.1.3. Airfield Suitability and Restrictions Report and Global Decision Support System (GDSS) information if required by MAJCOM.

4.6.1.3.1. Requested amendments to information included in the GDSS airfield database must be submitted in writing with rationale to AMC Airfield Help Desk Airfield.Helpdesk@us.af.mil (DSN 312-779-3112 / Comm 618-229-3495). Requested amendments by email must include the name and contact information of the military or aviation official vouching for the accuracy of the information.

4.6.1.3.1. (AMC) Aircrews and planning agencies will review the GDSS Airfield Detail (Giant Report) before all off-station operations. (T-2) Aircrews will comply with the GDSS Airfield Detail (Giant Report) for suitability restrictions, updates to airfield operability, weight bearing capacity, and FTIP reviews. (T-2) For further information, reference the Suitability Policies and Procedures section of the ASRR document, located in GDSS or AMC ePubs.

4.6.1.3.2. Aircrew feedback for locations with Suitability Code 1 (flyability check required) or Miscellaneous Code F (landing/taxi obstacles) is highly encouraged since feedback is a prerequisite to lifting a “Day only due to unknown airfield obstructions” restriction.

- 4.6.1.3.2. **(AMC)** For AMC and AMC-tasked missions, TERPS (AMC/A3AT) is the OPR for questions regarding Suitability Code 1 (flyability check), whereas AMC Airfield Suitability (AMC/A3AS) is the OPR for all questions, airfield feedback, amendments and waiver requests pertaining to airfield suitability codes, airfield pavement condition, weight bearing capacity, or day-only restrictions. Contact the AMC Airfield Help Desk at DSN 779-3112; Comm 618-229-3112. For flyability feedback, questions or waivers based upon FTIP review, contact the AMC TERPS office at DSN 779-3958. For AMC and AMC-tasked missions, AMC/A3-10 is the waiver authority for restrictions in the ASRR publication, GDSS Airfield Detail (Giant Report), unless specifically delegated in AFMAN 11-2MDS Vol 3, AMCI 11-208, *Mobility Air Forces Management*, or AMCI 11-211, *Destination Airfield Suitability Analysis*. AMC/A3V coordinates on waivers involving aircraft operating limitations (runway/taxiway width/length, etc.). For non-AMC missions, MAJCOM/A3 is the waiver authority. The PIC is responsible for waiver compliance.
- 4.6.1.4. FLIP, to include appropriate navigational and plotting charts with current vertical obstructions. **(T-0)**
- 4.6.1.4. **(AMC)** Obtain terrain charts for unfamiliar destinations if available.
- 4.6.1.5. Fuel requirements. **(T-0)**
- 4.6.1.6. Bird advisories and hazard information. **(T-2)**
- 4.6.1.7. Special Departure Procedure (SDP) if authorized by MAJCOM.
- 4.6.1.7. **(AMC)** Special Departure Procedures (SDP) are authorized for MAF aircrew who have completed MDS-specific training in their use. See [paragraph 5.31](#).
- 4.6.1.8. As applicable: Satellite-Based Augmentation System (SBAS) coverage and NOTAMs, and air traffic management Service Availability (e.g., ADS-B services). **(T-0)**
- 4.6.1.9. Applicable MAJCOM/combatant command (CCMD) guidance (e.g., flight crew information files [FCIFs], flight crew bulletins [FCBs], theater SPINS, air tasking order [ATO], airspace control order [ACO], operational tasking data link [OPTASKLINK], classified supplements).
- 4.6.1.9.1. **(Added-AMC)** Aircrew members will review FCIF, Volume 1, before all missions or ground aircrew duties, and update the FCIF currency record with the latest FCIF item number, date, and aircrew member's initials. **(T-3)**
- 4.6.1.9.2. **(Added-AMC)** Electronic signatures (using MAJCOM/A3 approved system/application) may be used for FCIF update/sign-off.
- 4.6.1.9.3. **(Added-AMC)** Aircrew members delinquent in FCIF review or joining a mission enroute will receive an FCIF update from a primary aircrew member on the mission. **(T-3)**
- 4.6.1.9.4. **(Added-AMC)** Aircrew members not assigned or attached to the unit operating a mission will certify FCIF review by entering the last FCIF number and their initials beside their name on the file copy of the flight authorization or file copy of their crew orders. **(T-3)** This applies to all aircrew members if the electronic system is not working at show time.

- 4.6.1.9.5. **(Added-AMC)** Items in the FCB, if used, may include local procedures and policies concerning equipment and personnel generally not found in any other publications.
- 4.6.1.10. **(Added-AMC)** Computer Flight Plan (CFP). CFPs are the official sources of performance, navigation, and climatic data, including enroute wind information. CFPs should be used to the maximum extent practical. Aircrews may manually compute flight plans. If stand-alone computer-based plans are used, each mission segment should utilize best wind data available. Use only MAJCOM-validated CFP systems.
- 4.6.1.10.1. **(Added-AMC)** The PIC has final responsibility for flight plan accuracy and diplomatic clearance compliance. PICs will confirm all required fuel planning factors are included (e.g. alternate, island destination, thunderstorm avoidance, icing, hold-down, etc.) and properly calculated in the AOC-provided or self-generated CFP. **(T-2)** Carrying excess fuel on a sortie imposes a cost-to-carry penalty of approximately 3%. Pass any flight plan discrepancies to the appropriate C2 flight planning office. On flight-managed sorties, PICs will promptly notify the flight manager (FM) of any flight plan discrepancies to ensure the correct route of flight is filed with ATC. **(T-2)** Identify inaccurate CFP winds to 618 AOC Flight Plans (618 AOC/MODZF) if the average wind for a route segment exceeds either 30° error in direction or 25 knots in speed. **(T-2)**
- 4.6.1.11. **(Added-AMC)** OCONUS Planning. Before transiting areas outside the CONUS, aircrews will review and obtain applicable theater-specific information necessary to successfully operate there to include: **(T-2)**
- 4.6.1.11.1. **(Added-AMC)** Review tasking, itinerary, and altitude reservation (ALTRV) requirements.
- 4.6.1.11.2. **(Added-AMC)** Review applicable OPORD, SPINS, Virtual Risk Assessment Database, Country Risk Assessment, and FLIP. Obtain and carry this information as required.
- 4.6.1.11.3. **(Added-AMC)** Review the online FCG at <https://www.fcg.pentagon.mil> for areas of operation (to include classified portion). Obtain necessary diplomatic clearances where required.
- 4.6.1.11.4. **(Added-AMC)** Obtain worldwide FLIP and sufficient communications security (COMSEC) materials for the duration of the mission.
- 4.6.1.11.5. **(Added-AMC)** Ensure physiological training, annual physical, immunizations, and flight evaluations will remain current for all aircrew members throughout the TDY period.
- 4.6.1.11.6. **(Added-AMC)** Ensure visas have been received, if required.
- 4.6.2. Comply with international procedures in FLIP *General Planning*, FLIP *Area Planning*, AIP, and the FCG. **(T-0)** Observe applicable host-nation procedures via terms of clearance. **(T-0)** [DoDI 4540.01] Outside the NAS, observe ICAO guidance when practical and compatible with the mission. Be prepared to address any potential freedom of navigation issues, consistent with FLIP *General Planning*, Chapter 8. **(T-0)** Report any suspected customs, agriculture, or immigration violations to host nation authorities. **(T-0)**

4.6.2. **(AMC)** For locations not covered by the U.S. NOTAM systems, the GDSS, IAW AFMAN 11-230, *Instrument Procedures*, will specify an alternate method of alerting aircrews to ascertain any infrastructure or IFP changes.

4.6.3. **(Added-AMC)** Personal Requirements. Refer to current Unit Deployment Manager guidance for applicable deployment requirements.

4.6.3.1. **(Added-AMC)** Passport. Aircrew members will carry a valid passport on all missions outside the US. **(T-3) Exception:** Unit commanders may authorize newly assigned personnel who have applied for, but not yet received a passport, to act as aircrew members on missions not scheduled to transit locations where passports are required. **Exception:** OCONUS units may determine which missions require passports IAW theater SPINs, SOFAs and Foreign Clearance Guide, etc.

4.6.3.2. **(Added-AMC)** Identification Tags. Aircrew members are required to carry two identification tags on all flights IAW DAFI 36-3802, *Force Support Readiness Programs*.

4.6.3.3. **(Added-AMC)** AF Form 1199, *Air Force Entry Control Card* (Line Badge).

4.7. Civil, Military, and Joint-Use Airports.

4.7.1. MAJCOMs may authorize filing to or landing at civil airfields. Use of civil facilities not governed by agreement or law may result in landing and facility fees. Since U.S. policy may not allow the payment of certain fees to foreign authorities, to include landing fees, aircrew must consult DoDD 4500.54E, *DoD Foreign Clearance Program*, and the Foreign Clearance Guide. **(T-0)**

4.7.2. “P-coded” Civil Airports (as listed in the IFR Supplement). Aircrew may file to or land USAF aircraft at U.S. civil public airports when:

4.7.2.1. In an emergency;

4.7.2.2. Flying a helicopter or C-coded aircraft (e.g., C-130, C-12, C-40);

4.7.2.3. Necessary in the recovery of active air defense interceptor aircraft;

4.7.2.4. An alternate is required and no other suitable airport is available;

4.7.2.5. The wing commander or higher authority approves the flight and the airport manager grants permission in advance; or,

4.7.2.6. A U.S. Government tenant unit (e.g., ANG, U.S. Coast Guard) is listed for the airport of intended landing and airport facilities or ground support equipment can support the aircraft concerned.

4.7.3. Aircrew may file to and land at U.S. military and Joint- Use (e.g., MIL/CIV) fields. Flying unit commanders must approve fixed-wing aircraft operations from other than established landing surfaces (e.g., highways, pastures).

4.7.4. Ensure off-station training achieves valid training requirements while presenting a positive view of the USAF and avoids the appearance of government waste or abuse.

4.7.5. Flying units will coordinate with respective ATC agencies and civil airport authorities before conducting volume training at civil airports or within airways. **(T-0)**

4.8. UAS Airfields and Operations.

4.8.1. Except for divert or emergency situations, MAJCOMs shall approve all airfields authorized for use by UAS. Operations may require an approved certificate of authorization and appropriate letter of agreement between the employing unit, ATC, and airfield management.

4.8.2. For operations outside special use airspace (or when required within), the mission tasking authority shall coordinate through AF/A3O to obtain a certificate of authorization or waiver from the FAA. **(T-0)** Before submitting, verify the certificate of authorization complies with current FAA requirements at <https://www.faa.gov/uas/>.

4.9. Aviation Into-Plane Reimbursement Card (AIR Card®) Responsibilities. Aircrew will use the government AIR Card® in accordance with AFI 11-253, *Managing Purchases of Aviation Fuel and Ground Services*. Further information, including documentation procedures and updated lists of contract fixed-base operators (FBO), is available at <http://www.aircardsys.com/>.

4.9. (AMC) Aviation Into-Plane Reimbursement Card (AIR Card®) Responsibilities. See [paragraph 24.7](#) for more information on POL documentation.

4.10. Weather Information.

4.10.1. Aircrew will use the following prioritized list of authorized weather sources **(T-1)**:

4.10.1. **(AMC)** The PIC will obtain a briefing on current weather, trends, and forecast for the proposed route, destination, and alternates. **(T-2)** Verbal weather briefings are authorized for local flights. Face-to-face briefings are not required. The PIC will ensure primary aircrew members are briefed on appropriate weather conditions before departure. **(T-3)**

4.10.1.1. MAJCOM-approved weather source (e.g., home or local installation operational support squadron Weather Flight, MAJCOM-designated centralized briefing facility (or equivalent), commercial websites, flight planning services). **Note:** MAJCOMs will provide guidance on use of non-DoD weather sources.

4.10.1.1. **(AMC)** Approved/Designated Weather Sources.

4.10.1.1.1. **(Added-AMC)** Aircrews flying flight-managed sorties will use the weather briefing provided with the Integrated Flight Management (IFM) aircrew departure papers. **(T-2)** Local weather flights/agencies may update weather data, but aircrews, working through their flight manager/dispatcher, will use AOC weather operations (or the designated weather support unit supporting the theater C2 agency) to obtain further updates and as the final arbiter for official weather reports and forecasts. **(T-2)**

4.10.1.1.2. **(Added-AMC)** Commercially dispatched aircraft will use weather provided by contract dispatcher. **(T-3)**

4.10.1.1.3. **(Added-AMC)** Aircrews flying non-flight-managed missions will obtain a weather briefing provided by the home station weather team or as directed by MAJCOM-specific policy. **(T-2)** AMC-gained ANG/AFRC MAF units without collocated weather support will use 618 AOC weather operations as their designated weather provider for non-IFM sorties. **(T-3)** In this context, “AMC-gained” refers to those units that would be gained by AMC if activated. If the designated provider is not available, aircrew may use the Air Force Weather Bridging Environmental Intelligence for Responsive Operational Support Portal (AFW-BIFROST) portal (<https://bifrost.afweather.mil/>) or EFB ForeFlight® to request briefings or self-brief as permitted by MAJCOM policy.

4.10.1.1.4. **(Added-AMC)** If the foregoing options are unavailable, obtain necessary weather information from sources in paragraph 4.10.1.2 through 4.10.1.6.

4.10.1.2. Regional Operational Weather Squadron (OWS).

4.10.1.3. Other DoD military weather sources (e.g., U.S. Navy weather facilities).

4.10.1.4. Other U.S. Government (USG) weather facilities or services (e.g., National Weather Service, FAA).

4.10.1.5. Foreign civil or military weather service (use only when DoD military resources or USG services are unavailable in outside the continental U.S. [OCONUS] locations).

4.10.1.6. **(Added-AMC)** If the sources above are not available, obtain weather through any means available prior to commencing the mission.

4.10.2. Runway Visual Range (RVR) reports apply to all takeoffs, landings, and straight-in approaches to the runway and take precedence over any other visibility report for that runway. Aircrew will use the static RVR when available. **(T-2)** If a variable RVR report is received, aircrew will apply the lowest reported value. **(T-2)**

4.10.2.1. [14 CFR Part 91.175] Except for Category II or Category III minimums, if RVR minimums for takeoff or landing are prescribed on an instrument approach procedure but RVR is not reported for the runway of intended operation, the RVR minimum shall be converted to ground visibility in accordance with Table 4.1. **(T-0)** This converted visibility is now the minimum visibility for takeoff or landing on that runway. **(T-0)** When converting RVR values, do not interpolate; use the next higher RVR value. **(T-0)**

4.10.2.2. If RVR is unavailable, use prevailing visibility.

Table 4.1. RVR to Prevailing Visibility Conversion.

RVR (feet)	Visibility (statute miles)
1,600	1/4
2,400	1/2
3,200	5/8
4,000	3/4
4,500	7/8
5,000	1
6,000	1 1/4

4.11. Notices To Airmen (NOTAMs). [AIM 5-1-3; AFI 11-208, *Department of Defense Notice to Airmen (NOTAM) System*; FAA Order 7930.2, *Notices to Airmen (NOTAM)*; ICAO Annex 15, *Aeronautical Information Services*] The NOTAM system distributes time-critical aeronautical information. NOTAMs typically include information of a temporary nature or not sufficiently known in advance to permit publication on aeronautical charts or in other operational publications. Obtain NOTAMs from the DoD Aeronautical Information Portal (DAIP) website at <https://www.daip.jcs.mil/daip/mobile/index>. **(T-2)**

4.11.1. If the airfield is not covered by DAIP, a plain language notice in red font is displayed advising the user of that fact. In this case, contact the airfield manager or associated FSS directly for NOTAM information.

4.11.1.1. If unavailable, obtain NOTAMs by contacting one of the installations listed in FLIP or the nearest Aeronautical Information Service. **(T-2)**

4.11.1.2. If using non-USG products or databases, obtain the associated NOTAMs, alerts, notices, and advisories from the respective country, agency, or commercial entity. **(T-2)** See AFI 11-208, *Department of Defense Notice to Airmen (NOTAM) System* for more information.

4.11.1.2. **(AMC)** Reference the Foreign Clearance Guide for additional information and/or contact the US Office of Defense Cooperation or Defense Air Attaché Office.

4.11.2. Abbreviations are explained in the FIH.

4.11.3. Special interest NOTAMs for VFR flight in the NAS:

4.11.3.1. Tethered balloons are depicted as restricted areas on IFR en route low-altitude charts and FAA sectional charts.

4.11.3.2. Glider and parachute operations are depicted with symbols on FAA sectional charts. Operations may be announced via NOTAM or listed in the en route supplements.

4.11.4. **(Added-AMC)** Commercially dispatched aircraft may use NOTAMs provided by contract dispatcher.

4.12. Critical Distance Measuring Equipment (DME) NOTAMs. [FAA Aeronautical Information Services] A critical DME is a DME facility that, when not available, results in navigation service which is not sufficient for DME/DME/IRU operations along a specific route or procedure. The required performance assumes an aircraft's navigation system meets the minimum standard for DME/DME area navigation systems or the minimum standard for DME/DME/IRU area navigation systems. Critical DME facilities are identified on the appropriate instrument procedure. Pilots of DME/DME/IRU-equipped aircraft should check NOTAMs to verify the operation of critical DME facilities. The current FAA list of critical DME facilities may be found at https://www.faa.gov/air_traffic/flight_info/aeronav/criticaldme/.

4.13. Performance-Based Navigation (PBN). [FAA AC 90-100, FAA AC-90-105, FAA AC 90-108] The PIC will not execute PBN operations (airspace, routes, and procedures) without operational approval. **(T-0)** The PIC will comply with MAJCOM guidance, performance requirements, and specifications appropriate for the airspace, routes, and procedures to be flown [ICAO Doc 9613]. **(T-0) Exception:** Non-equipped aircraft with exemptions or special procedures.

4.13.1. The PIC will retrieve all NAVAIDs, navigational fixes, and PBN instrument procedures from a current navigation database. [AC 90-100]. **(T-0) Note:** MAJCOMs may publish guidance for operations with an expired navigation database.

4.13.1. **(AMC)** In the event the aircraft's navigation database expires during enroute operations, the PIC must request approval from the mission execution authority to proceed. **(T-2)** To verify outdated data against updated data for potential discrepancies along intended route of flight, all waypoint data not retrieved from a current database will be verified from a current source (FLIP, NAT message, etc.) for each waypoint entered. **(T-2)** Additional requirements are found in AFMAN 11-2MDSV3.

4.13.1.1. **(Added-AMC)** Aircrews will make an aircraft forms entry when a database is expired. **(T-2)** Aircrews will compare their scheduled return times with the expiration of the loaded navigation database prior to departure from home station. **(T-2)** If the scheduled return time exceeds the expiration of the database and unable to obtain the next cycle of the database, refer to AFMAN 11-2MDSV3 or MEL guidance for an expired database.

4.13.2. MAJCOMs may approve the use of other RNAV systems (e.g., not "suitable" as defined in AC 90-108) to enhance IFR navigation on conventional routes and procedures. Underlying conventional NAVAIDs must be tuned and monitored. **(T-0)**

4.13.3. Before flight, confirm the availability of the PBN capability for the intended airspace, route, and procedure **(T-0)** MAJCOMS will publish MDS-specific information for use of Receiver Autonomous Integrity Monitoring (RAIM) prediction procedures.

4.13.4. If planning to use a Global Navigation Satellite System (GNSS) for navigation, the PIC will conduct a predictive RAIM check prior to departing. **(T-1) Exception:** If TSO-C145/C-146 equipment is used to satisfy the RNAV requirement, then SBAS equipped aircraft do not need to perform a predictive RAIM check if SBAS coverage is confirmed to be available along the entire route of flight (e.g., aircraft equipped with a Wide Area Augmentation System (WAAS)-enabled GPS). **Note:** MAJCOMS may authorize use of civil (e.g., Standard Positioning Service (SPS)) RAIM prediction services if a Precise Position Service (PPS) RAIM prediction tool is not available.

4.13.5. If a specified RNP level cannot be achieved, revise the route or delay PBN operations until the appropriate RNP level can be assured. **(T-0)** Advise ATC if an equipment failure or other malfunction results in the loss of aircraft capability to continue PBN operations. **(T-0)**

4.13.5. **(AMC)** Loss of Navigation Capability. Aircrews must ensure they are following proper navigation crosscheck procedures to maintain airspace situational awareness. Immediately report malfunctions or any loss of navigation capability that degrades centerline accuracy to the controlling Air Route Traffic Control Center (ARTCC) or controlling agency. Refer to flight manual, FLIP, NAT Doc 007 and appropriate publications for procedures and system malfunctions regarding navigation performance and vertical separation in RVSM.

4.13.6. Ensure planned waypoints and procedures are included in the current onboard navigation database prior to flight. **(T-0)**

4.13.6. **(AMC)** Navigational Database Errors. If an error is discovered in a Digital Aeronautical Flight Information File (DAFIF) database, aircrew will immediately report it to the base System Support Representative. **(T-3)** The System Support Representative acts as a filter by determining if the issue is a DAFIF, Flight Management System (FMS), or an Advanced Workflow Engine error and reports it to the appropriate agency. When away from home station, error information may be relayed via OGV or Squadron Stan/Eval by any means available (e-mail, SATCOM, DSN, etc.).

4.13.7. Crosscheck the cleared flight plan against current FLIP, the navigation system textual display, and aircraft map display (if applicable). **(T-0)** Include confirmation of waypoint sequence, reasonability of track angles and distances, altitude or speed constraints, and identification of fly-by or fly-over waypoints. **(T-1)** Do not execute any procedure for which there is doubt about validity of the navigation database or publications. **(T-0)**

4.13.7. **(AMC)** FMS/FMC Data Entry. The following procedure will be used anytime flight plan waypoints are entered into the FMS and will be followed, regardless of method of entry (PCMCIA card, CPDLC, AOC Datalink, manual entry, etc.): **(T-2)**

4.13.7.1. **(Added-AMC)** One pilot will load the FMS waypoints as depicted on the DD Form 1801, or as cleared by ATC.

4.13.7.2. **(Added-AMC)** The other pilot will verify the route (latitudes/longitudes and distances to the max extent possible) was entered correctly either through use of FLIP products or CFP.

4.13.7.3. **(Added-AMC)** Both pilots should visually check that any RNAV departure, arrival, or approach is accurately depicted on a moving map.

4.13.8. Do not modify database waypoints using latitude/longitude or place/bearing or insert user-defined waypoints on performance-based routes or procedures except to change altitude or airspeed to assist in complying with an ATC instruction. **(T-0)** Systems which allow additional waypoints on the track may be used.

4.13.9. The PIC will monitor a lateral deviation display (e.g., course deviation indicator (CDI)) for course errors. **(T-0)** **Exception:** systems capable of onboard performance monitoring and alerting.

4.13.10. [NAS Only] Radar monitoring is required on all unpublished (random) RNAV routes. **(T-0)** Refer to FLIP *General Planning*.

4.13.11. If ATC issues a heading assignment taking the aircraft off a procedure, the PIC should not modify the flight plan in the system until:

4.13.11.1. A clearance is received to rejoin the procedure; or

4.13.11.2. The controller confirms a new route clearance.

4.13.12. Pilots will not file a flight plan nor accept a clearance that requires navigating direct to a navigational fix unless the primary navigation equipment onboard the aircraft is certified for the appropriate RNAV capability. **(T-0)** Pilots of aircraft without the appropriate RNAV capability will reply with “unable” when given a clearance to proceed direct to a fix. **(T-0)** ATC may provide radar vectors or an alternate routing under these circumstances.

4.13.13. Suitable RNAV systems may be used as a substitute means of navigation or an alternate means of navigation on conventional routes and procedures. Comply with MAJCOM RNAV guidance **(T-1)**. Comply with host-nation RNAV guidance and oceanic RNAV procedures. **(T-0)**

4.13.13.1. Substitute means of navigation refers to using a suitable RNAV system in lieu of out-of-service conventional NAVAIDS or non-installed or non-operable avionics.

4.13.13.2. Alternate means of navigation refers to using a suitable RNAV system in lieu of operational conventional NAVAIDS without monitoring those NAVAIDS. **Note:** Use of a suitable RNAV system as a means to navigate on a final approach segment of an instrument approach procedure based on a VOR, TACAN, or NDB signal, is allowable. The underlying NAVAID must be operational and the NAVAID monitored for final segment course alignment.

4.13.13.3. The following allowances described apply even when a facility is identified as required on a procedure (e.g., “ADF or DME REQUIRED”). Suitable RNAV systems may be used in the following ways:

4.13.13.3.1. Determine aircraft position relative to a distance from a conventional NAVAID.

4.13.13.3.2. Navigate to or from a conventional NAVAID.

4.13.13.3.3. Hold over a conventional NAVAID or DME navigational fix.

4.13.13.3.4. Fly an arc based on DME.

4.13.13.4. The following uses are prohibited:

4.13.13.4.1. Substituting for a NAVAID providing lateral course guidance during the final approach segment of a VOR/TACAN/NDB approach. **(T-1) Exception:** MAJCOMs may seek operational approval to allow RNAV lateral course guidance on the final approach segment in lieu of an out of service NAVAID.

4.13.13.4.2. Lateral navigation on localizer based courses (including localizer back-course guidance) without referencing the raw localizer data. **(T-0)**

4.13.13.4.3. Navigation with DME/DME/IRU systems (without GNSS/WAAS input) unless specifically authorized by NOTAM or FAA guidance for a specific procedure. **(T-0)**

4.13.13.4.4. Use of a procedure identified as “NA” (Not Authorized) without exception by a NOTAM. **(T-0)**

4.14. Aeronautical Information and Publications. MAJCOM training is required for use of non-USG publications to include foreign host nation or commercially produced products. **(T-1)** Do not use aeronautical information that is out of date, incomplete, illegible, contains unfamiliar procedures, or is published in a language other than English. **(T-2)**

4.14.1. Use of electronic equivalent and digital products which do not maintain the original size, scale, format, or color may be authorized by the MAJCOM. **Note:** Paper publications and documents are not required if replicated by electronic means.

4.14.2. Follow MAJCOM or MDS-specific guidance for required publications to be available in the aircraft or accessible to UAS operators (e.g., navigation charts, FIH). **(T-1)**

4.14.2. **(AMC)** MAJCOM/A3V and the AFMC Flight Manual Manager are the checklist insert approval authorities. POCs send checklist inserts to MAJCOM/A3V, who in turn coordinates with AFMC for approval. OGVs will approve local in-flight guides and inserts not affecting T.O. guidance and procedures. **(T-2)**

4.14.2.1. **(Added-AMC)** A checklist is not considered complete until all items have been accomplished. Momentary hesitations for coordination items, ATC interruptions and deviations specified in the flight manual, etc., are authorized. Notes amplifying checklist procedures or limitations may be added to the checklists in pencil. Currency of Notes is an aircrew member’s responsibility. Abbreviated checklist items that do not apply to the unit’s aircraft or mission may be lined out in pencil.

4.14.3. Obtain navigation, terrain, and obstacle databases through MAJCOM-authorized processes. Review aeronautical navigation database NOTAMS prior to flight. **(T-2)**

4.14.3. **(AMC)** Prior to home station departure, PICs will ensure the correct, current aircraft navigation database is loaded or will be carried, as appropriate. **(T-2)** While enroute, maintenance personnel or trained aircrew will load navigation database updates.

4.14.4. Digital Products.

4.14.4.1. Acquire National Geospatial-Intelligence Agency (NGA) digital products via NGA’s aeronautical dissemination website at <https://aerodata.nga.mil/AeroDownload/>.

4.14.4.2. Acquire FAA digital products via the FAA’s Digital Products website at https://www.faa.gov/air_traffic/flight_info/aeronav/digital_products/.

4.14.4.3. Acquire Jeppesen® digital products via Jeppesen® Military Chart Service (JMCS) at <https://ww2.jeppesen.com/> and login through the eLink Portal. Register for JMCS via <https://ww2.jeppesen.com/military-echarts-registration/>.

4.14.4.4. Acquire other commercial digital products via commercial publisher-specific sites.

4.15. IFR Flight. Do not depart IFR unless the weather conditions at the destination, from 1 hour before to 1 hour after the estimated time of arrival (ETA), is forecast to be at or above the lowest compatible published approach minimums. **(T-1) Note:** Temporary (TEMPO) conditions may be below compatible published approach minimums. **Exception:** MAJCOMs may authorize filing to a destination with weather below the lowest compatible published approach minimums after publishing supplemental recovery procedures. Reference [Attachment 7](#) for the IFR Filing and Weather Decision Tree.

4.15. (AMC) IFR Flight. MAF aircraft will fly under IFR to the maximum extent practical. Pilots will fly under IFR if operating aircraft at night unless the mission cannot be flown under IFR. **(T-2)**

4.15.1. [Helicopter only] Reduce visibility by one-half, but no lower than one-quarter statute mile prevailing visibility or 1,200 feet RVR. **(T-0) Note:** Not Authorized (NA) for “Copter” Procedures.

4.15.2. For a straight-in or sidestep approach, the forecast weather must meet required visibility minimums. **(T-1)**

4.15.3. For a circling approach, the forecast weather must meet both the ceiling and prevailing visibility minimums. **(T-1)**

4.15.4. **(Added-AMC)** MAF aircraft may be filed to destinations with weather below the lowest compatible approach minimums if two alternates are filed (see [paragraph 4.16.7.](#)).

4.16. IFR Alternate. File an alternate airfield when:

4.16.1. A compatible instrument approach procedure is not available at the destination airfield. **(T-0)** [14 CFR Part 91.169]; or,

4.16.2. Weather forecasts indicate, from 1 hour before to 1 hour after the estimated time of arrival at the destination airfield, including TEMPO conditions, are less than indicated below. **Note:** Alternate requirement may be cancelled en route if weather conditions improve at destination to exceed these requirements:

4.16.2.1. A ceiling of 2,000 feet above the airfield elevation and a visibility of 3 statute miles [14 CFR Part 91.169]. **(T-0)**

4.16.2.2. [Helicopter only] A ceiling of 1,000 feet (or 400 feet above the lowest compatible approach minimums, whichever is higher) and a visibility of 2 statute miles [14 CFR Part 91.169]. **(T-0)**

4.16.2.3. Forecast crosswinds are outside aircraft limitations. **(T-3)**

4.16.2.3. **(AMC)** Use worst case forecast winds (intermittent or prevailing) corrected for Runway Condition Reading (RCR).

4.16.3. MAJCOMs may authorize holding for a specified time in lieu of filing an alternate airfield for isolated destinations. MAJCOMs will define isolated destinations and prescribe weather criteria, fuel, and recovery procedures. The PIC will determine a point of no return that is the last possible diversion point to an en route divert airfield **(T-2)**

4.16.3.1. **(Added-AMC)** When filing to a remote or island destination, aircrews may use 1+15 holding fuel in lieu of an alternate (see [paragraph 4.20.3.3](#)). A remote or island destination is defined as any airport at a geographic location offering no suitable alternate (civil or military) within 2 hours flying time. The forecast weather at the remote or island destination must meet all the following criteria:

4.16.3.2. **(Added-AMC)** The prevailing surface winds, corrected for RCR, must be within limits at ETA and forecast to remain so for 2 hours thereafter. **(T-2)**

4.16.3.3. **(Added-AMC)** The prevailing ceiling and visibility must be equal to or greater than published minimums for an available non-precision approach, for ETA plus 2 hours. **(T-2) Exception:** If a precision approach is available, the ceiling or visibility may be intermittently below non-precision approach minimums excluding Airport Surveillance Radar (ASR), but not below precision approach minimums (for ETA plus 2 hours).

4.16.4. For selection of an alternate: Do not depart IFR unless the prevailing weather at the alternate, from 1 hour before to 1 hour after the estimated time of arrival, including TEMPO conditions (except those caused by thunderstorms, rain showers, or snow showers), is forecast to be at or above:

4.16.4.1. A ceiling of 1000 feet, or 500 feet above the lowest compatible approach minimums, whichever is higher; and a visibility of 2 statute miles or 1 statute mile above the lowest compatible approach minimums, whichever is higher. **(T-1)**

4.16.4.2. [Helicopter only] A ceiling of at least 200 feet above, and a visibility of at least 1 statute mile above the lowest compatible approach minimums [14 CFR Part 91.169]. **(T-0)**

4.16.4.3. If there is not a compatible instrument procedure published or available at the alternate, the weather forecast, from 1 hour before to 1 hour after the estimated time of arrival, including TEMPO conditions, must permit a descent from the minimum en route altitude, approach and landing under basic VFR [14 CFR Part 91.169]. **(T-0) Note: Paragraph 4.16.5** does not apply when utilizing this option.

4.16.4.4. Refer to [paragraph 4.17](#) when planning to use a GNSS-based approach at an alternate.

4.16.4.5. **(Added-AMC)** Choose alternates that best meet mission requirements and conserve fuel; they should not be within the same terminal area, if terminal forecasts are marginal. Select alternates that are not restricted by FLIP, FCG, or diplomatic clearances, and are compatible with the mission load and performance characteristics of the aircraft. The PIC retains final authority in the choice of alternates; however, the alternate selected by support agencies should normally be used if they meet the above criteria and the aircraft has already been serviced. **Note:** For those missions flight managed by the 618 AOC, Flight Managers will provide a route of flight to the primary alternate if greater than 75 miles from the destination. **(T-2)** This route of flight is only for providing an accurate fuel plan and is not part of the route of flight filed with ATC.

4.16.5. Do not select an airport as an alternate if any of the conditions below exist. **Note:** Conditions below are listed throughout multiple sources (e.g., terminal procedures publication, NOTAMs, IFR Supplement).

4.16.5.1. All compatible approaches require an unmonitored NAVAID. (T-1)

4.16.5.2. The airfield does not report weather observations. (T-1)

4.16.5.3. Alternate not authorized (▲NA) on all compatible approaches. (T-1)

4.16.5.4. Any note disqualifying the airfield or all compatible approaches in the “▲IFR Alternate Minimums” section. (T-1)

4.16.6. (Added-AMC) Other Conditions Requiring an Alternate:

4.16.6.1. (Added-AMC) Departure or destination airport is outside the CONUS. (T-2)
Exception: OCONUS departures to CONUS destination locations, or intra-theater flights not exceeding three hours. **Note:** If the OCONUS to CONUS exception is utilized, the aircrew must update weather three hours prior to landing to verify expected conditions. (T-2)

4.16.6.2. (Added-AMC) Flights into airfields where fuel availability is unknown or aircraft are experiencing extended fueling delays or MOG/ATC issues are requiring aircraft to hold for extended periods. (T-2)

4.16.6.3. (Added-AMC) For mission legs that require air refueling, receiver aircraft designate an enroute alternate in the event air refueling cannot occur. (T-2)

4.16.7. (Added-AMC) File two alternates when filing to a destination where (based on the lowest compatible approach):

4.16.7.1. (Added-AMC) The forecast visibility (intermittent or prevailing) is less than published for the available precision approach. (T-2)

4.16.7.2. (Added-AMC) The forecast ceiling OR visibility (intermittent or prevailing) is less than published for all other approaches. (T-2) **Note:** For approaches with no published ceiling requirement (for example Jeppesen® approaches), the minimum required ceiling is computed by taking the published Height Above Airport (HAA) or Height Above Touchdown (HAT) and rounding it up to the nearest one hundred feet (or as determined by MAJCOM TERPs review). For example, a Jeppesen® VOR approach with a published HAA of 642 feet would require a forecasted ceiling of 700 feet.

4.16.7.3. (Added-AMC) Two alternates will also be filed if the destination is under forecast or known severe icing or severe turbulence conditions for the forecast arrival time window. (T-2) **Exception:** Not applicable for remote or island destinations.

4.17. PBN Alternate Airfield Considerations. [AC 90-108; AIM 1-1-17] Aircraft SBAS equipment affects the suitability of some alternates. **Note:** Using GNSS as a substitute means of navigation (e.g., using GNSS equipment as a substitute means of navigation for an out-of-service VOR on an ILS missed approach procedure) is, for flight planning purposes, a GNSS-based instrument approach.

4.17.1. **SBAS-Equipped Aircraft.** [AIM 1-1-18] Pilots operating SBAS receivers may file to a destination and required alternate airfield with only GNSS-based instrument approaches.

4.17.2. RNAV Approach Capable Aircraft (Non SBAS-Equipped with FDE). [AIM 1-2-3] Pilots operating GNSS navigation systems with fault detection and exclusion (FDE) capability may file using a GNSS-based instrument approach at either the destination or the required alternate airfield, but not both. **Note:** If utilizing this provision, pilots must perform a preflight RAIM prediction at the airfield where the RNAV (GPS) or RNAV (GNSS) approach is planned, have proper knowledge, required training, and approval to conduct a GNSS-based instrument approach.

4.17.3. RNAV Approach Capable Aircraft (Non SBAS-Equipped without FDE). Pilots operating GNSS navigation systems without FDE must file to a required alternate airfield with an available instrument approach procedure that does not require the use of GNSS. **(T-1)**

4.17.4. (Added-AMC) Departure and Enroute Alternates. If conventional approaches are not available at an airfield, but GNSS approaches are and P-RAIM accomplished, flight managers and aircrews may designate an airfield as an enroute alternate (e.g., LSAF/FSAF, ETOPS, Air Refueling).

4.17.4.1. (Added-AMC) SBAS-Equipped Aircraft. Pilots and flight managers may file based on a GNSS-based instrument approach at enroute alternates (e.g., LSAF/FSAF, ETOPS, Air Refueling), provided no conventional approaches are available.

4.17.4.2. (Added-AMC) Non SBAS-Equipped Aircraft with FDE. Pilots and flight managers may file based on a GNSS-based instrument approach at enroute alternates (e.g., LSAF/FSAF, ETOPS, Air Refueling), provided no conventional approaches are available.

4.18. IFR Alternate Minimums. [DoD Publication Product Specifications] Some civil and foreign approaches may have alternate minimums (**Figure 4.1**) or alternate not authorized “ANA” (**Figure 4.2**) in the remarks.

4.18.1. The alternate minimums symbol informs pilots that the alternate weather minimums for an airfield are non-standard. Air Force pilots are not required to comply with the weather minimums listed in the IFR ALTERNATE MINIMUMS section of the Terminal Procedures Publication. **Note:** There may be other requirements that do apply to Air Force pilots. Therefore, pilots must review the IFR ALTERNATE MINIMUMS for pertinent information (e.g., “NA when local weather not available,” “NA when control tower closed”). **(T-0)**

Figure 4.1. IFR Alternate Minimums Symbol.



4.18.2. The alternate not authorized “ANA” symbol informs pilots that the specific approach cannot be used to qualify the field as an alternate due to an unmonitored NAVAID or the lack of a weather reporting service.

Figure 4.2. Alternate Not Authorized Symbol.



4.19. VFR Flight. Do not operate under VFR when unable to maintain the flight visibility or cloud clearances listed in [Table 12.1](#) or [Table 12.2](#) [14 CFR Part 91.155]. **(T-0)**

4.19.1. Do not operate under VFR within the lateral boundaries of controlled airspace designated to the surface for an airport when the ceiling is less than 1,000 feet. **(T-0)**
Exception: [Paragraph 4.19.4](#).

4.19.2. When conditions (e.g., weather, airspace) prevent completing the mission under VFR, alter route to maintain VFR, obtain an IFR clearance, or land at a suitable location. **(T-0)**

4.19.3. When conducting tactical operations, fly under VFR unless compliance with VFR degrades mission accomplishment. **(T-3)**

4.19.4. [Helicopter only] MAJCOMs may authorize helicopter special VFR (SVFR) operations in accordance with 14 CFR Part 91.157 or applicable host nation guidance. Reference [paragraph 4.43](#).

4.19.5. VFR flight plans are not automatically closed upon landing. Pilots must ensure a VFR flight plan is closed to prevent unnecessary search and rescue operations. [AIM 5-1-14] **(T-0)**

4.20. Fuel Requirements. The PIC will ensure sufficient fuel is available onboard the aircraft to safely conduct the flight. **(T-0)**

4.20.1. Before takeoff or immediately after in-flight refueling, the aircraft must have enough usable fuel to complete the flight:

4.20.1.1. To a final landing, either at the destination airport or alternate airport (if required), plus fuel reserves **(T-0)**; or,

4.20.1.2. Between air refueling control points and then to land at the destination (or a recovery base, if refueling is not successful), plus fuel reserves. **(T-2)**

4.20.2. When an alternate airport is required, fuel required for an approach and missed approach at the intended destination must be included in the total flight plan fuel if visibility-only weather criteria is used at the destination. **(T-1)** Fuel required for a missed approach is not required if both ceiling and visibility criteria are used. **(T-1)**

4.20.3. Ensure the aircraft is carrying enough usable fuel on each flight to increase the total planned flight time between refueling points by 10 percent (up to a maximum of 45 minutes for fixed-wing or 30 minutes for helicopters) or 20 minutes, whichever is greater. **(T-1)** Compute fuel reserves using MAJCOM-defined fuel consumption rates for normal cruising speeds or the following:

4.20.3. **(AMC)** Fuel Reserve, Contingency Fuel and Holding Fuel. Plan a 45-minute fuel reserve at destination or alternate (when an alternate is required.) For all missions, also plan 15 minutes of contingency fuel, using destination gross weights. Contingency fuel is not considered reserve fuel and may be consumed at any point during the sortie. Contingency fuel will be included in the initial Required Ramp Fuel Load calculation. **(T-2)** **Exception:** Local training missions are not required to carry contingency fuel. If contingency fuel is carried on local training missions, it will not exceed 15 minutes. **(T-3)**

4.20.3.1. For turbine-powered aircraft use fuel consumption rates that provide best endurance at 10,000 feet MSL. **(T-2)**

4.20.3.1. **(AMC)** Reserve fuel and contingency fuel will be computed using consumption rates providing maximum endurance at 10,000 feet MSL at destination gross weight. **(T-3)** If an alternate is required, compute using weight at the alternate destination.

4.20.3.2. For reciprocating engine aircraft and helicopters, use fuel consumption rates for normal cruising altitudes. **(T-2)**

4.20.3.3. If the MAJCOM authorizes holding (instead of an alternate airport) for a remote or island destination, do not consider the prescribed holding time as part of the total planned flight time or fuel reserves. **(T-2)**

4.20.3.3. **(AMC)** For remote or island destinations, holding in lieu of an alternate airport is authorized. In such situations, plan 2+15 hours of fuel (1+15 holding in lieu of an alternate, 0+45 reserve, and 0+15 contingency) computed for maximum endurance at 20,000 feet.

4.20.3.4. **(Added-AMC)** MAF Automated Flight Planning Service (MAFPS) will calculate and display 0+45 hours HOLDING/RESERVE and 0+15 CONTINGENCY. **(T-2)** For remote or island destinations, MAFPS will also calculate 1+15 holding fuel and will then display 2+00 HOLDING/RESERVE and 0+15 CONTINGENCY. **(T-2)**

4.20.4. In the absence of MDS-specific guidance, multi-engine aircraft without the ability to in-flight refuel, operating for extended periods over large bodies of water or desolate land areas shall calculate an Equal Time Point (ETP) to a suitable alternate for that mission leg. Contingency fuel requirements shall also be planned (e.g., engine-out depressurized flight from an ETP to a suitable landing site). **(T-2)**

4.20.4. **(AMC)** Equal Time Point (ETP). ETP calculations are required on portions of routes when the total time between the Last Suitable Airfield (LSAF) and the First Suitable Airfield (FSAF) is 3 hours or more. **(T-2)** This hour requirement was derived from the minimum flight time on a trans-Atlantic flight. LSAF and FSAF locations used for the ETP must meet applicable destination alternate requirements. **(T-2)** LSAF and FSAF selected for ETPs calculated in MAFPS are authorized for use in-flight.

4.20.4.1. **(Added-AMC)** MAFPS ETP. LSAF and FSAF airports should be close to the coast out and coast in waypoints to reduce the need for additional fuel.

4.20.4.2. **(Added-AMC)** Multiple ETP and LSAF/FSAF sets may be in a single flight plan. ACFP selects ETP as the point on the route of flight where the time to travel either to the LSAF or FSAF is equivalent, within a 3-minute tolerance. ACFP ETP calculations use wind data, great circle distances, and cruise descent times from the ETP to LSAF and ETP to FSAF. If the FSAF is not on the flight plan course, ACFP will use a point 90 degrees perpendicular from the LSAF and/or the FSAF to the flight plan course to determine the total distance between LSAF and FSAF. Crews can verify the MAFPS ETP calculations using the formulas in [Table 4.5](#).

4.20.5. **(Added-AMC)** Depressurization Fuel. Additional fuel may be required to allow for a loss of cabin pressurization at any point along the planned route, an emergency descent and continued flight to the nearest suitable emergency airfield. When required, the PIC will ensure depressurization fuel is calculated per the following guidance. **(T-2)**

4.20.5.1. **(Added-AMC)** Determine the point furthest from recovery to a suitable emergency airfield. Examine the intended route of flight (using aeronautical charts, plotting charts, flight plan). This may be at the ETP, or at another point along the planned route of flight.

4.20.5.2. **(Added-AMC)** Determine the depressurization transit altitude. Terrain and obstructions permitting, depressurization fuel requirements will be planned for recovery at 18,000' MSL for aircraft with an operable passenger supplemental oxygen system, and 10,000' MSL for all other aircraft (or per Aircraft Flight Manual guidance). **(T-2)** However, actual altitude flown to recovery airfield may be higher, crew oxygen quantity (duration) permitting.

4.20.5.3. **(Added-AMC)** Plan fuel required to transit to a recovery location at optimal cruise speed for the depressurization transit altitude. Plan to land at the recovery location with 0+30 minutes reserve fuel calculated using consumption rates providing maximum endurance at 10,000 feet MSL at recovery location gross weight. Add fuel, if required. Depressurization fuel calculated in MAFPS meets these requirements and is authorized for use in-flight. If additional fuel is required from the ETP, MAFPS automatically adds it to the DEPRESS line in the fuel summary.

4.20.6. **(Added-AMC)** Additional Fuel Planning Considerations. Hold Down/Early Descent, Mission Index, and Fuel Tankering guidance can be found in the Flight Planning Fuel Policy Letter (located in AMC EPubs-All_Global).

4.20.6.1. **(Added-AMC)** In order to optimize fuel efficiency, aircraft loads should be planned to achieve optimal zero fuel percent of Mean Aerodynamic Chord as defined in appropriate MDS guidance.

4.20.6.2. **(Added-AMC)** For fuel conservation, minimize use of aircraft Auxiliary Power Units. Aircrew will utilize Aerospace Ground Equipment (AGE) to the maximum extent possible consistent with T.O. guidance and mission requirements. **(T-3)** AGE will include electrical power and heating/cooling units as applicable. Normal Auxiliary Power Units procedures apply for engine start/shutdown operations and when specifically required to accomplish pre-/postflight checklist items. **(T-3)**

4.21. Preflight Briefings.

4.21.1. [14 CFR Part 91.519] Prior to flight, ensure each aircrew member and passenger is briefed on items affecting safety or mission completion. **(T-0)**

4.21.2. At a minimum, preflight briefings will include all of the following:

4.21.2.1. Emergency signals and procedures. **(T-0)**

4.21.2.2. Passenger flight equipment and systems usage information to include the location and use of emergency exits, parachutes, oxygen, communications systems, and survival equipment. **(T-0)**

4.21.2.3. Safety precautions and restrictions to include foreign object damage (FOD) hazards and electronic device prohibitions. **(T-1)**

4.21.2.3.1. **(Added-AMC)** FOD Hazards. Aircrew members will not wear wigs, hairpieces, rings of any material, ornaments, or earrings in the aircraft or on the flight line. **(T-2) Exception:** Aircrew members may wear plain elastic hair fasteners and/or pins, clips, or barrettes providing they do not interfere with the wearing of headsets, or the donning of oxygen equipment. They will be accounted for before and after flight. **(T-3)**

4.21.2.4. All handles and switches accessible to passengers and unqualified aircrew affecting aircraft configuration, ejection seat controls, and safety of flight. **Note:** These items will be identified during ground operations. **(T-1)**

4.21.3. **(Added-AMC)** Pilot in Command Pre-Departure Briefing. PICs will cover all applicable items of the pre-departure mission briefing, including MAJCOM, NAF, and unit special interest items (SIIs), ORM levels, CRM/TEM issues and associated threat mitigation strategies. Brief aircrew members on the specific mission details if not previously accomplished. Use a MAJCOM Stan/Eval approved briefing guide. The PIC will contact the local C2 agency to confirm mission requirements. **(T-3)** The PIC and controlling agency jointly share responsibility to identify special briefing requirements. Briefings may include buffer zone, electronic warfare activities, SAFE PASSAGE, EMI, diplomatic clearance, hazardous cargo, anti-hijacking procedures, operations and safety supplements to flight manuals, and OPORD procedure.

4.21.4. **(Added-AMC)** Specialized Briefing. Use specialized briefings to detail operating procedures or SIIs peculiar to various crew positions, and to answer questions relating to those specialties. Specialized briefings review formation tactics and procedures, AAR information, and technical instructions for specialized equipment operations. All aircrew members should attend each briefing. **Exception:** Aircrew members may be excused from specialized briefings for preflight duties, however the PIC will back brief all appropriate items. **(T-3)** Use a MAJCOM Stan/Eval approved specialized briefing guide. Additional guidance is found in AFMAN 11-2MDSV3.

4.21.5. **(Added-AMC)** Pilot in Command Enroute Briefing. In the enroute system, the PIC will ensure an aircrew briefing is conducted prior to engine start on the first sortie of the day. **(T-2)** As a minimum, brief aircrew members on specific mission details for that day's sortie(s), ORM levels, CRM/TEM issues and associated threat mitigation strategies. **(T-2)**

4.21.6. **(Added-AMC)** Takeoff Briefing. For all takeoffs, the PF will brief the expected actions during abnormal takeoff situations including the rejected takeoff decision criteria and expected callouts and roles of respective aircrew members. **(T-2)**

4.21.7. **(Added-AMC)** Aircrew Intelligence Briefing. For OCONUS missions, aircrew will receive an intelligence briefing that will emphasize terrorist, enemy, and friendly political and military development in the area in which they will be flying. **(T-2)** Timely intelligence updates should be obtained prior to entering a specific area of operations (AOR). In theater, aircrews should receive intelligence updates on initial arrival at a forward operating location or enroute stop, and thereafter when significant developments occur. Information of possible intelligence value should be reported to the local intelligence office as soon as practical to ensure timely dissemination of mission reports.

4.21.8. **(Added-AMC)** Buffer Zone. Prior to operating an aircraft within, or adjacent to, an established buffer zone, the PIC will ensure primary aircrew members are briefed on current buffer zone procedures outlined in appropriate directives. **(T-2)**

4.21.9. **(Added-AMC)** Peacetime and Wartime SAFE PASSAGE Procedures. Pilots will be familiar with procedures for peacetime and wartime safe passage of friendly military aircraft. **(T-2)**

4.21.10. **(Added-AMC)** Integrated Flight Management Briefing. PICs will thoroughly review the aircrew departure papers provided for IFM sorties. **(T-2)** When time and circumstances permit, the PIC, or designated representative, will contact the flight manager to discuss the plan before signing the flight plan. **(T-2)** Contact is mandatory if there are discrepancies with the departure papers or to resolve any questions.

4.21.11. **(Added-AMC)** Training/Evaluation Briefing. Before all training or evaluation missions, instructors or flight examiners will brief the crew on requirements and objectives for each student or examinee. **(T-2)**

4.21.12. **(Added-AMC)** NVG Briefing Requirements. For missions conducting NVG operations, crews will review and coordinate NVG failure procedures for all phases of the mission, to include actions for smoke and fumes in the aircraft. **(T-2)** Any aircrew member who experiences NVG problems will inform the rest of the crew. **(T-2)** If unable to regain the use of NVGs, the PIC should consider crew experience, mission priority, and intel, tactics and threat briefings in determining if the mission can be completed safely. During cargo compartment emergencies, aircrews should return to normal lighting until the emergency is resolved.

4.21.13. **(Added-AMC)** Debriefing. All PICs will use the MAF Debriefing Guide (located in EPubs> All_Global) upon sortie/sim completion. **(T-2)** This guide supersedes individual MDS debrief guides; however, current MDS-specific debrief guides tailored for specific mission variables, e.g., tactics, formation, airdrop, etc., may still be used to augment the MAF Debrief Guide. On instructional sorties, instructors will review and evaluate overall training performed. Each student or aircrew member should understand thoroughly what training has been accomplished. Ensure all training is documented. **(T-2)**

4.22. Aircraft Category. [ICAO Doc 8168 Volume 1] Aircraft approach category is equal to the stall speed (V_{so}) multiplied by 1.3 or stall speed (V_{slg}) multiplied by 1.23 in the landing configuration at the maximum certificated landing mass. If both V_{so} and V_{slg} are available, the higher resulting speed is used (**Table 4.2.**). Use the minima corresponding to the category determined during aircraft certification or higher.

4.22.1. If it is necessary to maneuver at a speed exceeding the upper limit of the speed range for an aircraft category, pilots must use the minimums for the higher category unless otherwise authorized by AFI or MAJCOM directive. **(T-2)** MAJCOMs will publish procedures to ensure that aircraft do not exceed protected airspace if allowing aircraft to fly an instrument approach using a lower category.

4.22.2. ICAO Procedures for Air Navigations Services-Aircraft Operations (PANS-OPS) criteria establish maximum speeds by aircraft category for departures (**Table 5.5**), holding (**Table 13.1**), circling (**Table 18.3**), all approach segments (**Table 15.2**), and missed approach (**Table 19.1**).

Table 4.2. Aircraft Category.

Category	Speed Range in Knots Indicated Airspeed
A	Less than 91 knots
B	91 knots – 120 knots
C	121 knots – 140 knots
D	141 knots – 165 knots
E	166 knots or more
H	Helicopters
Note: Helicopters may use CAT A minima.	

4.23. Automation Management. Pilots should be proficient at operating all levels of automation available on the aircraft. The level of automation used at any time should be that most appropriate for the circumstances to enhance safety and passenger comfort.

4.23. (AMC) Automation Management. Refer to [paragraph 29.4](#) of this supplement for detailed guidance on Automation Management.

4.23.1. The lowest level of automation (i.e., “hand flying”) may be necessary until an inflight situation is resolved when an immediate change of aircraft path is required (e.g., escape or avoidance maneuvers, unusual attitude recovery). Regaining aircraft control should never be delayed to maintain a specific level of automation.

4.23.2. Proper execution of flight guidance panel inputs should be verified by checking that the resulting flight mode annunciations correctly correspond to the commanded inputs. Pilots should continually scan control, performance, and navigation instruments to ensure that the aircraft performs as expected in all modes of flight.

4.24. Transitioning Airspace Classes. When operating under IFR, transition from one type of airspace to another is generally transparent to the pilot. The IFR clearance is clearance to enter each type of airspace as it is encountered. Typically, specific clearances are not issued.

4.24.1. When operating under VFR, it is up to the pilot to determine the airspace type, operating rules, equipment requirements, and comply accordingly. Under VFR, transitions from one type of airspace to another are not transparent to the pilot, and in some cases, require a specific clearance.

4.24.2. [AIM 3-2-4] Two-way radio contact means the pilot is talking to ATC but may or may not have a clearance. An aircraft is considered in two-way radio contact if a controller responds to a radio call with, “[call sign] standby.” **Note:** If a controller responds with “Aircraft calling approach, standby” then two-way radio contact has not been established.

4.25. VFR Flight in Controlled Airspace. [AIM 3-2] In the NAS, ATC provides traffic advisories to all aircraft as the controller’s work situation permits. Safety alerts (terrain, obstruction, aircraft conflict, Mode C intruder) are mandatory services and provided to all aircraft.

4.26. IFR Flight in Uncontrolled Airspace. [ICAO Annex 11; AIM 3-3-3] IFR operations are permitted in uncontrolled airspace. All normal IFR equipment requirements and rules apply to include minimum altitude and flight level. While operating in VMC, pilots are solely responsible to see and avoid other traffic, terrain, and obstacles. ATC only provides separation between aircraft in controlled airspace. Therefore, caution should be exercised when operating in IMC under IFR in uncontrolled airspace.

4.27. Airspace and Airspace Classification. [AIM Chapter 3; ICAO Annex 11; FAA-H-8083-15, Chapter 1] Pilots should be familiar with the operational requirements for the airspace in which they operate ([Figure 4.3](#) and [Figure 4.4](#)). **Note:** Failure of equipment required for a specific airspace may render the aircraft unable to remain in that airspace.

Figure 4.3. NAS Airspace Classification.

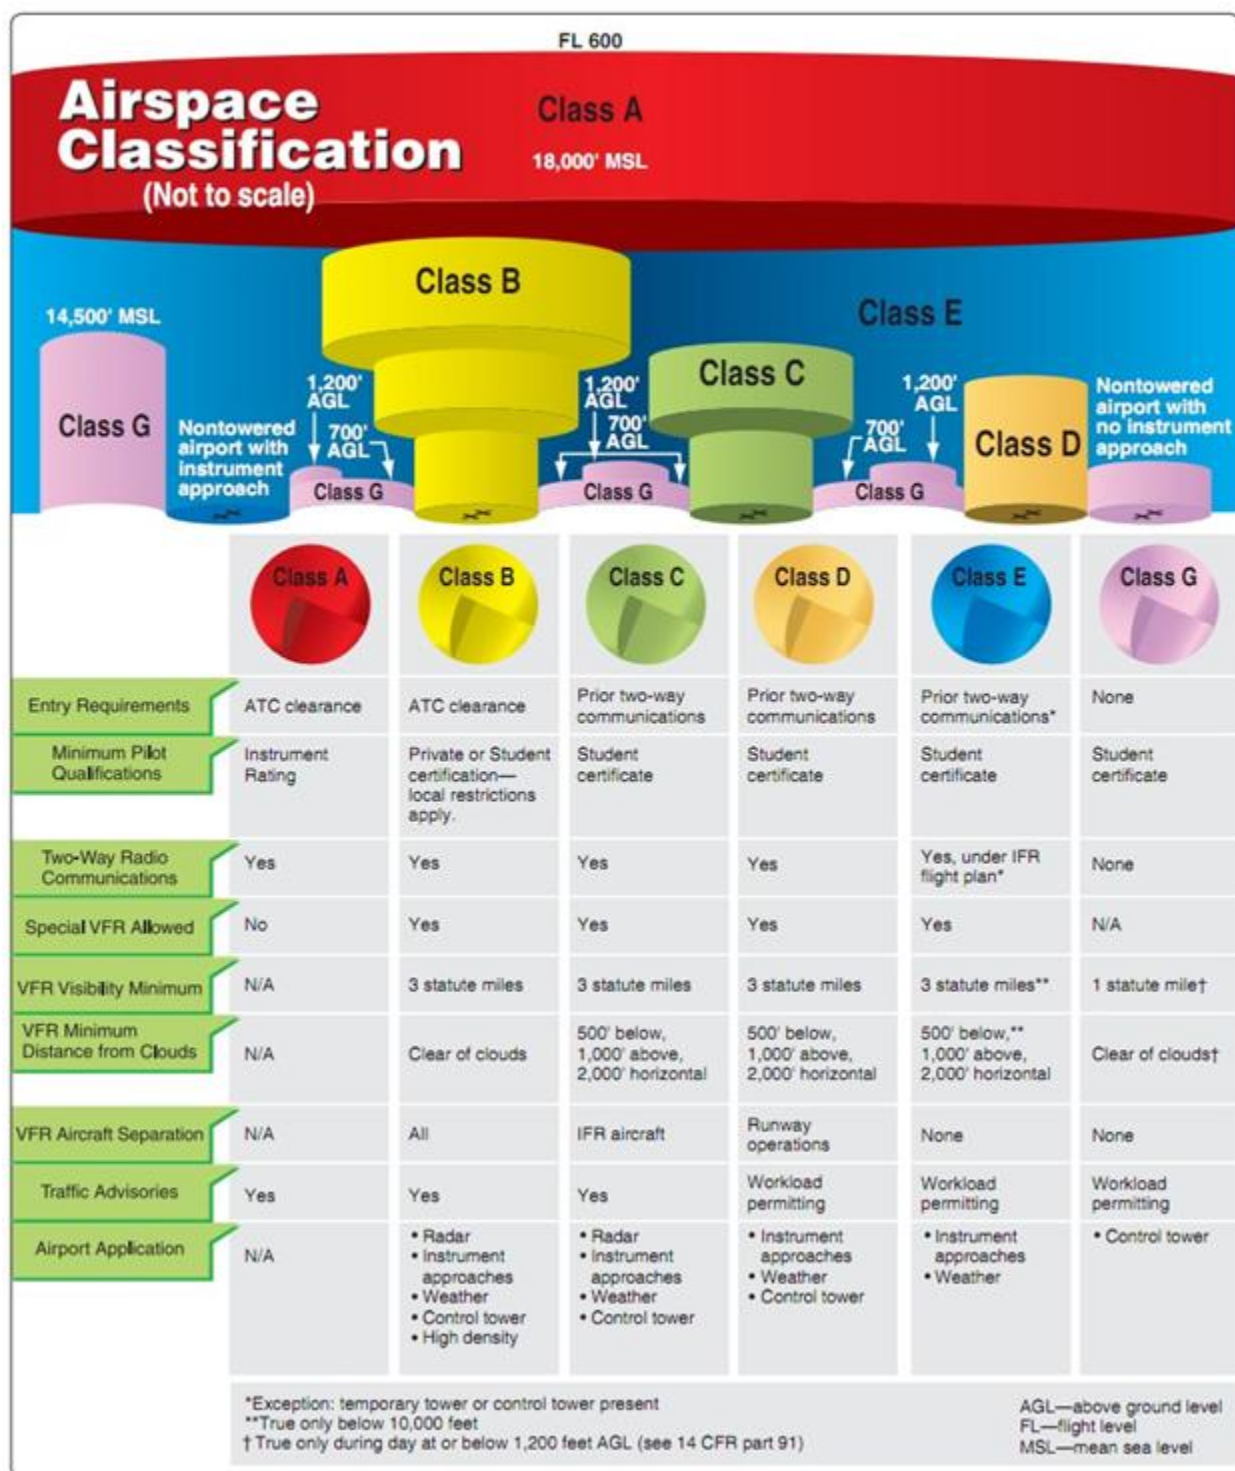


Figure 4.4. ICAO Airspace Classification.

Class	Type of flight	Separation provided	Service provided	Speed limitation*	Radio communication requirement	Subject to an ATC clearance
A	IFR only	All aircraft	Air traffic control service	Not applicable	Continuous two-way	Yes
B	IFR	All aircraft	Air traffic control service	Not applicable	Continuous two-way	Yes
	VFR	All aircraft	Air traffic control service	Not applicable	Continuous two-way	Yes
C	IFR	IFR from IFR IFR from VFR	Air traffic control service	Not applicable	Continuous two-way	Yes
	VFR	VFR from IFR	1) Air traffic control service for separation from IFR; 2) VFR/VFR traffic information (and traffic avoidance advice on request)	250 kt IAS below 3 050 m (10 000 ft) AMSL	Continuous two-way	Yes
D	IFR	IFR from IFR	Air traffic control service, traffic information about VFR flights (and traffic avoidance advice on request)	250 kt IAS below 3 050 m (10 000 ft) AMSL	Continuous two-way	Yes
	VFR	Nil	IFR/VFR and VFR/VFR traffic information (and traffic avoidance advice on request)	250 kt IAS below 3 050 m (10 000 ft) AMSL	Continuous two-way	Yes
E	IFR	IFR from IFR	Air traffic control service and, as far as practical, traffic information about VFR flights	250 kt IAS below 3 050 m (10 000 ft) AMSL	Continuous two-way	Yes
	VFR	Nil	Traffic information as far as practical	250 kt IAS below 3 050 m (10 000 ft) AMSL	No	No
F	IFR	IFR from IFR as far as practical	Air traffic advisory service; flight information service	250 kt IAS below 3 050 m (10 000 ft) AMSL	Continuous two-way	No
	VFR	Nil	Flight information service	250 kt IAS below 3 050 m (10 000 ft) AMSL	No	No
G	IFR	Nil	Flight information service	250 kt IAS below 3 050 m (10 000 ft) AMSL	Continuous two-way	No
	VFR	Nil	Flight information service	250 kt IAS below 3 050 m (10 000 ft) AMSL	No	No

* When the height of the transition altitude is lower than 3 050 m (10 000 ft) AMSL, FL 100 should be used in lieu of 10 000 ft.

4.27.1. Pilots will apply the operating rules associated with the more restrictive airspace designation when overlapping airspace designations exist. **(T-0)**

4.27.2. Pilots will not plan to transit airspace without the required minimum equipment unless authorized by ATC. **(T-0)**

4.27.3. [FAA JO 7110.65; FAA Pilot/Controller Glossary] In a non-radar environment, ATC does not have a radio detection device to provide information on range, azimuth and elevation of objects. ATC relies on information relayed from flight crews to determine the actual geographic position and altitude (e.g., voice position reports, data link). **Note:** Aircraft in controlled airspace can be in a non-radar environment.

- 4.27.4. Radar service may be provided in a radar environment. **Note:** An aircraft can be VFR and not in two-way radio contact with ATC and still be operating in a radar environment.
- 4.27.5. Controlled airspace is a generic term that covers the different classifications of airspace (Classes A through E) and defined dimensions within which ATC service is provided in accordance with the airspace classification.
- 4.27.6. Uncontrolled airspace is a term that covers all airspace (Classes F through G) not designated as controlled airspace. **Note:** Class F airspace is not used in the NAS.
- 4.27.7. Prohibited areas are airspace of defined dimensions, above the land areas or territorial waters of a State, within which aircraft flight is prohibited [ICAO Annex 2; AIM 3-4-2].
- 4.27.8. Restricted areas are airspace of defined dimensions, above the land areas or territorial waters of a State, within which aircraft flight is restricted in accordance with certain specified conditions [ICAO Annex 2; AIM 3-4-3].
- 4.27.9. Danger areas or [NAS Only] warning areas are airspace of defined dimensions within which activities dangerous to aircraft flight may exist at specified times [ICAO Annex 2].
- 4.27.10. [AIM 3-4] [NAS Only] Special use airspace includes prohibited, restricted, and warning areas. **Note:** Prohibited and restricted areas are regulatory special use airspace; military operations areas, warning areas, controlled firing areas, and national security areas (NSA) are non-regulatory special use airspace.
- 4.27.11. [NAS Only] The FAA may impose TFRs for many reasons (e.g., imminent hazards, disaster relief) [14 CFR Part 91; AIM 3-5-3]. The current list of TFRs may be found at <http://tfr.faa.gov/>.
- 4.27.12. [NAS Only] MTRs allow the military to train in a wide range of airborne tactics. MTRs may be either IFR MTRs (IR) or VFR MTRs (VR) [AIM 3-5-2; FLIP AP/1B].
- 4.27.12.1. [FLIP AP/1B] Unlike IRs and VRs, SRs are not part of the MTR system and therefore have no directive guidance in the AIM or FAA JO 7610.4, *Special Operations*.
- 4.27.12.2. Slow Routes are low-level routes at or below 1,500 feet above ground level (AGL) and are published in AP/1B. Flight above 1,500 feet AGL does not meet the criteria of the SR system.
- 4.27.13. [NAS Only] Tabulations of parachute jump areas in the United States are contained in the FAA *Chart Supplement U.S.* [AIM 3-5-4].
- 4.27.14. [AIM 5-6] The ADIZ is special designated airspace of defined dimensions within which aircraft are required to comply with special identification and reporting procedures additional to those related to ATS provisions. **Note:** Pilots will adhere to ADIZ procedures unless approved for a specific mission exception. **(T-0)**
- 4.27.15. [NAS Only] Certain areas are prescribed special air traffic rules areas and pilots must adhere to Title 14, Code of Federal Regulations, Part 93, *Special Air Traffic Rules*, Current Edition, unless otherwise authorized by ATC [AIM 3-5-7; 14 CFR Part 93; FAA JO 7210.3, *Facility Operation and Administration*]. **(T-0)**

4.28. Reduced Vertical Separation Minimum (RVSM). [14 CFR Part 91 Appendix G, ICAO Doc 4444] Within RVSM airspace, ATC separates aircraft by a minimum of 1,000 feet vertically between FL290 and FL410 inclusive. RVSM airspace is special certification airspace; MAJCOMs will ensure aircrew are trained, aircraft are certified, and are granted operational approval for RVSM airspace. **Note:** Formation flights are non-RVSM if any aircraft in the formation is non-RVSM.

4.29. Procedures for Accommodation of Non-RVSM Aircraft in RVSM Airspace. [AIM 4-6-10; 14 CFR Part 91.180; 14 CFR Part 91 Appendix G, ICAO Doc 4444] If the aircraft is not certified and operationally approved for RVSM operations, the aircraft is referred to as a “non-RVSM” aircraft. **Note:** Failure of equipment required for RVSM airspace may make an aircraft non-RVSM.

4.29.1. Non-RVSM aircraft are handled on a workload permitting basis. The vertical separation standard applied between non-RVSM aircraft and all other aircraft is 2,000 feet.

4.29.2. Pilots will inform controllers of the lack of RVSM approval. **(T-0)**

4.29.3. The transponder must be operational to fly in RVSM airspace. **(T-0)**

4.29.4. [AIM 4-6-11] Aircraft requesting a climb to and descent from FL above RVSM airspace without intermediate level off must:

4.29.4.1. Be capable of a continuous climb or descent and not need to level off at an intermediate altitude for any operational consideration **(T-0)**; and

4.29.4.2. Be capable of climbing and descending at the normal rate for the aircraft. **(T-0)**

4.30. Level Off Operating Practices. Operational experience, monitoring studies, and pilot or controller reports have shown incompatibilities between TCAS and ATC systems.

4.30.1. When safe, practical, and in accordance with aircraft flight manual operating procedures, pilots should limit vertical speed to 1,500 feet per minute or less when within 1,000 feet of assigned altitudes. This should reduce unnecessary RAs and is in line with AIM and ICAO guidance.

4.30.2. Aircraft leveling off at 1,000 feet above or below level conflicting traffic may result in RAs being issued to the level aircraft. These RAs are triggered because the climbing or descending aircraft maintains high vertical speeds when approaching the cleared altitude or flight level. The collision logic contains algorithms that recognize this encounter geometry and delays the issuance of a traffic advisory to the level aircraft by up to 5 seconds to allow TCAS to detect the initiation of the level off maneuver by the intruder.

4.31. Air Traffic Services (ATS). [ICAO Annex 11, Chapter 2]

4.31.1. ATC service is provided to prevent collisions between aircraft or between aircraft and obstructions within the maneuvering area, and expediting and maintaining an orderly flow of traffic; it is divided into three parts:

4.31.1.1. Area control service provides ATC services for controlled flights.

4.31.1.2. Approach control service provides ATC services for those parts of controlled flights associated with arrival or departure.

4.31.1.3. Aerodrome control service provides ATC services for airfield traffic except those under approach control service.

4.31.2. Flight information service provides advice and information useful for the safe and efficient conduct of flights.

4.31.3. Alerting service notifies appropriate organizations regarding aircraft in need of search and rescue aid and assist such organizations as required.

4.32. Emergency Frequencies. Emergency frequencies are 121.5 megahertz (MHz) and 243.0 MHz. These frequencies are to be used when not in radio contact with ATC and aircrew need to make emergency contact or to contact ATC when no other means are available.

4.32. (AMC) Emergency Frequencies. Aircrews must monitor both VHF and UHF Emergency Frequencies (“Guard”) to the maximum extent possible during aircraft operation. **(T-3)**

4.33. Flight Service Station (FSS). [FAA Pilot/Controller Glossary] A FSS is an air traffic facility which provides preflight briefings, flight plan processing, en route flight advisories, search and rescue services, and assistance to lost aircraft and aircraft in emergency situations. A FSS may also relay ATC clearances, process NOTAMS, broadcast aviation weather and aeronautical information, and advise U.S. Customs and Immigration of trans-border flights. In Alaska, a FSS may provide airfield advisory services.

4.33.1. [FAA General Aviation Pilot’s Guide to Preflight Weather Planning, Weather Self-Briefings, and Weather Decision Making] A FSS may be reached by phone at 1-800-WX-BRIEF or by radio on frequencies published on FAA sectionals and en route charts. **Note:** When dialing the standard number, 1-800-WX-BRIEF from a cell phone, this number connects to the FSS associated with the cell phone area code, not necessarily the nearest FSS. If using a cell phone outside its calling area, check the *Chart Supplement U.S.* to find the specific telephone number for the nearest FSS.

4.33.2. [FAA JO 7110.10; FAA Pilot/Controller Glossary] A FSS may be equipped with remote communication outlets and can transmit and receive on more than one frequency at more than one location. Broadcast “any radio” with aircraft call sign and the nearest NAVAID to ensure FSS personnel use the correct transmitter.

4.34. Local Airport Advisory. [AIM 3-5-1] Local airport advisory service is available only in Alaska and is operated within 10 statute miles of an airfield where a FSS is at the airfield.

4.34.1. The FSS automatically provides “final guard” during periods of fast-changing weather as part of the service from the time the aircraft reports “on final” or “taking the active runway” until the aircraft reports “on the ground” or “airborne.”

4.34.2. “Final guard” is a value-added wind and altimeter monitoring service which provides an automatic wind and altimeter check during active weather situations when the pilot reports “on final” or “taking the active runway.”

4.35. Remote Airport Information Service. [AIM 3-5-1] Remote airport information service is provided in support of short-term special events like small to medium fly-ins.

4.36. VFR Radar Assistance. [FAA JO 7110.10] ATC may provide vectoring services to VFR aircraft. ATC may have limited vectoring capability for weather avoidance, but the responsibility to remain in VMC rests with the pilot.

4.37. VFR Flight Following. [FAA JO 7110.10] Flight following services are provided if requested by the pilot and ATC workload and equipment capability permits. ATC should provide separation from IFR traffic and participating VFR traffic. The ultimate responsibility for traffic separation still rests with the pilot while participating in flight following.

4.38. VFR Cruising Altitudes and Flight Levels. [ICAO Annex 2, Chapter 4] Except where otherwise indicated in ATC clearances or specified by the appropriate ATS authority, VFR flights in level cruising flight operated above 3,000 feet AGL or higher as specified by the appropriate ATS authority will be conducted at a cruising level appropriate to the track as specified in **Table 4.3. (T-1)**

Table 4.3. VFR Cruising Altitudes and Flight Levels.

From 000 degrees to 179 degrees magnetic		From 180 degrees to 359 degrees magnetic	
Altitude (Feet)	Flight Level	Altitude (Feet)	Flight Level
3500	FL035	4500	FL045
5500	FL055	6500	FL065
7500	FL075	8500	FL085
9500	FL095	10500	FL105
11500	FL115	12500	FL125
13500	FL135	14500	FL145
15500	FL155	16500	FL165
17500	FL175	18500	FL185
19500	FL195	20500	FL205
21500	FL215	22500	FL225
23500	FL235	24500	FL245
25500	FL255	26500	FL265
27500	FL275	28500	FL285
VFR Cruising Altitudes and Flight Levels (non-RVSM airspace only)			
30000	FL300	32000	FL320
34000	FL340	36000	FL360
38000	FL380	40000	FL400
etc.	etc.	etc.	etc.

Notes:

- 1) VFR flights will not be operated above FL200 or at transonic and supersonic speeds unless authorized by the appropriate ATS authority [ICAO Annex 2, Chapter 4]. **(T-1)**
- 2) [NAS Only] Pilots will maintain the altitude or flight level assigned by ATC when operating VFR above 18,000 MSL [14 CFR Part 91.159]. **(T-0)**

4.39. Composite Flight Plan (IFR/VFR Flights). [AIM 5-1-7] Procedures for filing a composite flight plan are in FLIP *General Planning* Chapter 4.

4.39.1. Prior to transitioning to the IFR segment, maintain VMC and contact the nearest FSS and request an IFR clearance. Once cleared by ATC to operate IFR, either request ATC “close VFR flight plan” or cancel the VFR portion with a FSS. Ensure the VFR flight plan is closed to prevent unnecessary search and rescue operations.

4.39.2. Cancel IFR with ATC and contact a FSS to activate the VFR portion of the flight plan.

4.40. [ICAO] Transitioning IFR to VFR. [ICAO Doc 4444] Pilots must specifically request “cancelling my IFR flight” and any changes to the current flight plan. **(T-1)** ATC should respond with “IFR flight cancelled at (time).”

4.41. VFR Helicopter Operations. Helicopters should avoid the flow of fixed wing aircraft traffic patterns, unless able to maintain a compatible speed.

4.42. VFR-on-top. [AIM 4-4-8] A pilot on an IFR flight plan in VMC may request VFR-on-top in lieu of an assigned altitude. This permits a pilot to select an altitude or FL of their choice (subject to ATC restriction). When operating in VMC with ATC authorization to “maintain VFR-on-top, maintain VFR conditions” pilots must:

4.42.1. Fly at the appropriate VFR altitude. **(T-0)**

4.42.2. Comply with VFR visibility and distance from cloud criteria. **(T-0)**

4.42.3. Comply with IFR as applicable to the flight (e.g., minimum IFR altitudes, radio communications, course to be flown, adherence to ATC clearances). **(T-0)**

4.43. Special VFR. [ICAO Doc 4444, Chapter 7; AIM 4-4-6] Special VFR allow aircraft to operate under VFR when meteorological conditions are less than those required for VFR flight in Class B, C, D, or E airspace. Helicopters may request SVFR, where applicable, when the weather is below that required for the given airspace but above MDS-specific weather requirements.

4.44. Defense VFR (DVFR). [14 CFR Part 99 *Security Control of Air Traffic*; AIM 5-6-4] Allows aircraft to operate under VFR in the ADIZ.

4.44.1. Two-way radio communications must be maintained and aircraft must have an operable transponder unless specifically cleared by ATC. **(T-0)**

4.44.2. If unable to maintain two-way radio communication, the pilot may proceed in accordance with the original DVFR flight plan or land as soon as practicable. The pilot must report radio failure to an appropriate aeronautical facility as soon as possible. **(T-0)**

4.44.3. DVFR flight plans must contain the time and point of ADIZ penetration and the aircraft must depart within five minutes of the estimated departure time. **(T-0)**

4.44.4. No pilot may deviate from an ATC clearance or the filed DVFR flight plan unless that pilot notifies an appropriate aeronautical facility before deviating. **(T-0)**

4.44.5. In controlled airspace, pilots must make the required position report. **(T-0)**

4.44.6. In uncontrolled airspace, pilots must:

4.44.6.1. Report the time, position, and altitude at which the aircraft passed the last reporting point before entering the ADIZ and the ETA over the next appropriate reporting point along the route. **(T-0)**

4.44.6.2. If there is not an appropriate reporting point along the route, the pilot reports at least 15 minutes before entering the ADIZ, the estimated time, position and altitude at which the aircraft will enter the ADIZ. **(T-0)**

4.44.6.3. If the departure airfield is within ADIZ or so close to the ADIZ boundary that it prevents the pilot from complying with the previous paragraphs, then the pilot must report immediately after departure, the time of departure, the altitude, and the ETA over the first reporting point along the route. (T-0)

4.45. Inadvertent Flight into IMC While Operating Under VFR. Anticipate IMC and alter route of flight to maintain VMC unless safety dictates otherwise. If unable to maintain VMC, immediately transition to instruments, coordinate an IFR clearance, and cancel the VFR flight plan.

4.46. [NAS Only] Declared Distances. [AIM 4-3-6] Declared distances are marked on instrument approach plates (IAP) or airfield diagrams with an “inverse D” symbol (Figure 4.5.). Declared distances for a runway represent the maximum distances available and suitable for meeting takeoff and landing distance performance requirements (Figure 4.6 and Figure 4.7.). These distances are determined in accordance with FAA runway design standards. A declared distance program has four defined distances:

4.46.1. Takeoff run available (TORA) is the runway length declared available and suitable for the ground run of an airplane taking off. The TORA is typically the physical length of the runway, but it may be shorter than the runway length if necessary to satisfy runway design standards.

4.46.2. Takeoff distance available (TODA) is the takeoff run available plus the length of any remaining runway or clearway beyond the far end of the takeoff run available. The TODA is the distance declared available for satisfying takeoff distance requirements for aircraft where certification, operating rules, and available performance data allow for the consideration of a clearway in takeoff performance calculations. **Note:** Pilots will not use TODA for takeoff performance calculations without specific MAJCOM authorization and training. (T-1)

4.46.3. Accelerate-stop distance available (ASDA) is the runway plus stopway length declared available and suitable for the acceleration and deceleration of an airplane aborting a takeoff. The ASDA may be longer than the physical length of the runway when a stopway has been designated available by the airfield operator, or it may be shorter than the physical length of the runway if necessary to use a portion of the runway to satisfy runway design standards.

4.46.4. Landing distance available (LDA) is the runway length declared available and suitable for a landing airplane. The LDA may be less than the physical length of the runway or the length of the runway remaining beyond a displaced threshold if necessary to satisfy runway design standards; for example, where the airfield operator uses a portion of the runway to achieve the runway safety area requirement.

Figure 4.5. [NAS Only] Declared Distance Symbol.



4.46.5. Operations are not bound by declared distances as long as the takeoff and landing performance calculations fall within the published distances. An aircraft is not prohibited from operating beyond a declared distance during takeoff, landing, or taxi provided the runway surface is appropriately marked as usable.

4.46.6. Declared distances are not designed with consideration for touch-and-go operations. MAJCOMs will establish procedures for touch-and-go operations.

4.46.6. (AMC) In the absence of MDS-specific guidance, touch-and-go operations are authorized at airfields limited by declared distances if calculated takeoff and landing data is less than or equal to the most restrictive declared distance restrictions present (i.e., takeoff run available, accelerate-stop distance available, or landing distance available). Takeoff and landing data must be calculated using landing distance available runway length, current or projected aircraft weight, and current or forecast weather conditions at all airfields of intended use. (T-3)

Figure 4.6. [NAS Only] Declared Distances.

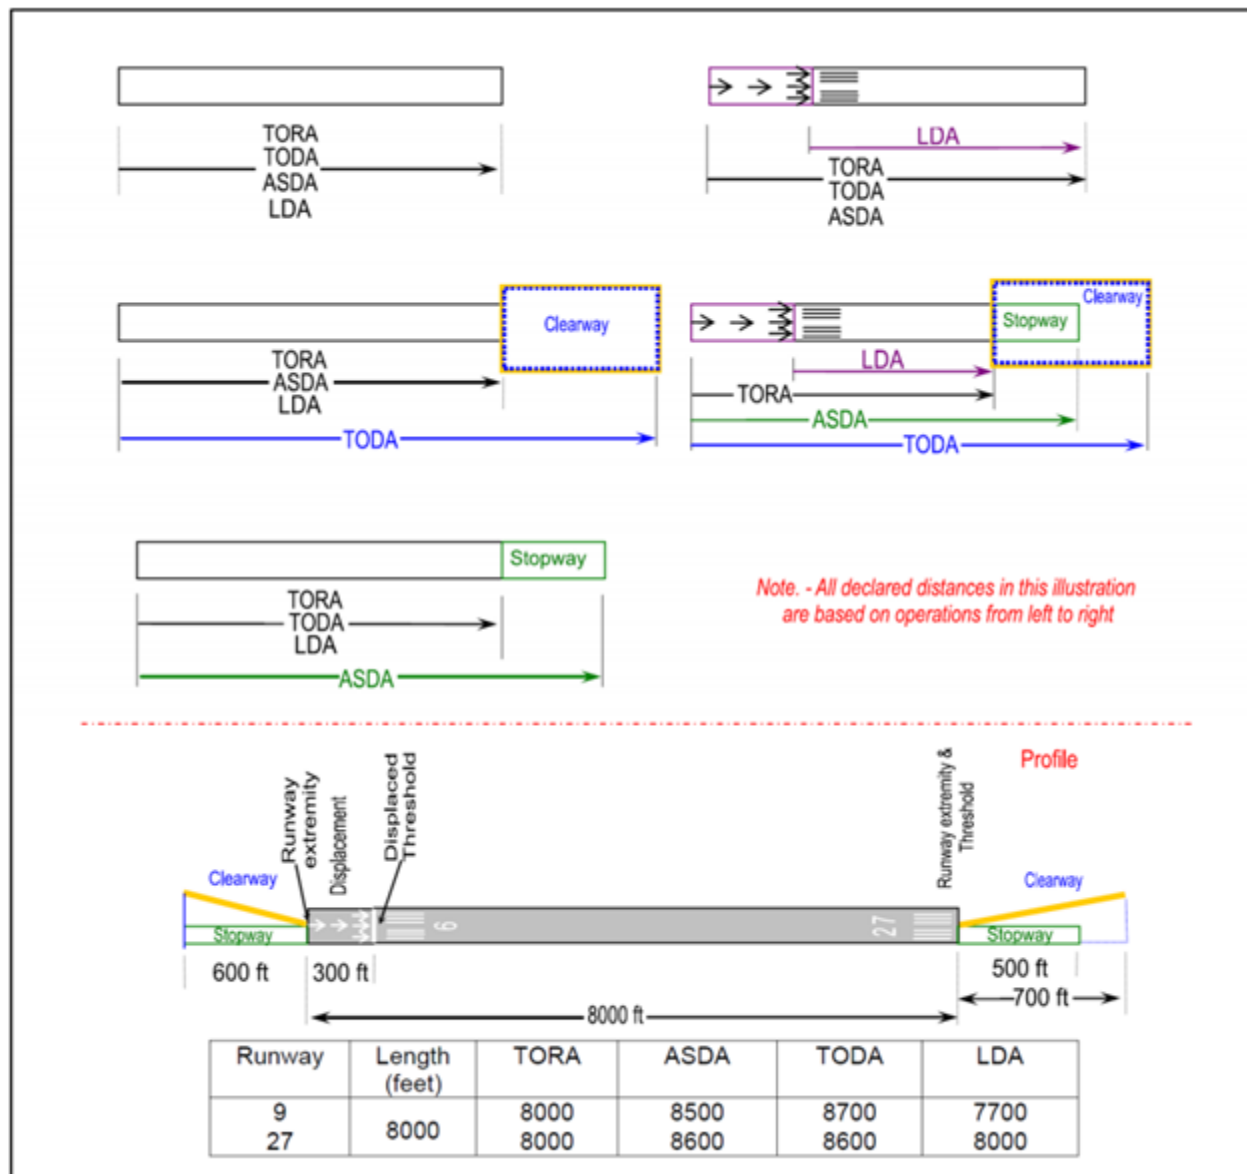
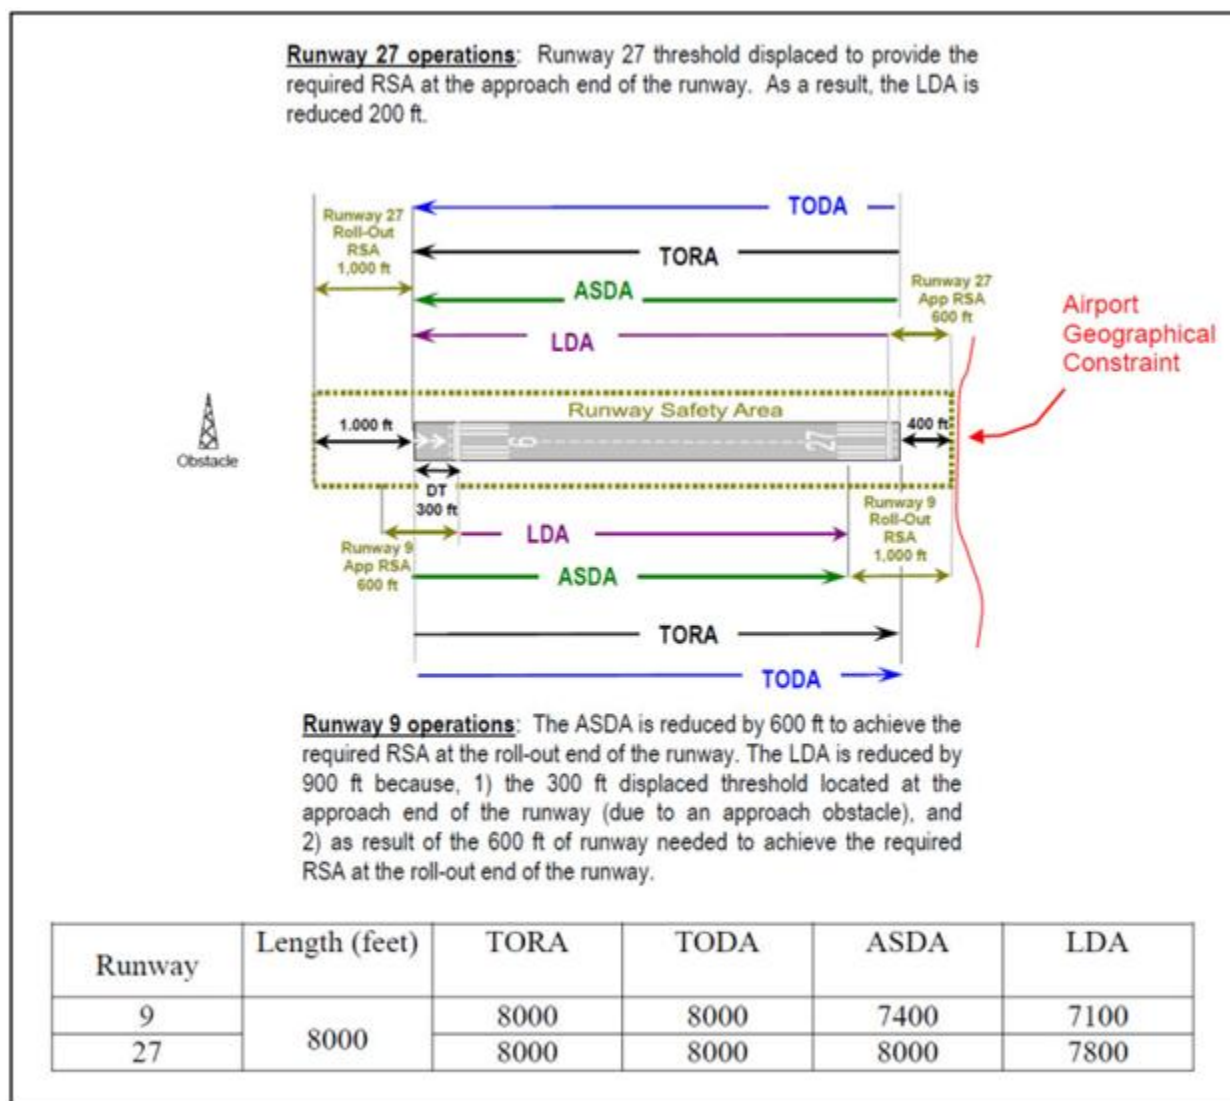


Figure 4.7. Effects of a Geographical Constraint on Runway Declared Distances.

**NOTE—**

A runway's RSA begins a set distance prior to the threshold and will extend a set distance beyond the end of the runway depending on the runway's design criteria. If these required lengths cannot be achieved, the ASDA and/or LDA will be reduced as necessary to obtain the required lengths to the extent practicable.

4.47. Altimeter Settings. [AIM 7-2; FAA-H-8083-16; ICAO Doc 8168 Volume 1] The units of measure for altimeter settings are hectopascals (hPa), millibars (mb), inches of mercury (in Hg), and millimeters of mercury (mm Hg). **Note:** Hectopascals and millibars may be used interchangeably.

4.47.1. Many sensitive altimeters can display two different barometric scales in the Kollsman window of the altimeter. Use the proper scale to set the altimeter setting. For aircraft that have only one type of altimeter scale, or for areas where the altimeter setting is not converted by aircraft systems, the FIH section D contains the appropriate conversion table.

4.47.2. In some areas, controllers use shorthand to issue an altimeter setting, which can cause confusion for crews. For example, “992” could mean “29.92 in Hg” or “992 mb.” Always confirm the correct units of measure when setting the altimeter.


4.47.3. The types of altimeter settings are QNH, QNE, and QFE (Figure 4.8). Refer to ICAO State AIPs and the FLIP AP series for altimeter setting procedures and units used for each ICAO State from which a pilot operates. [NAS Only] QNH is used exclusively for altimeter settings.

4.47.4. QNH indicates aircraft height in MSL. **Note:** All DoD design criteria are based upon QNH altimeter settings but may provide QFE altitudes in parenthesis.

4.47.5. QNE indicates aircraft height above an imaginary plane called the “standard datum plane” (e.g., FL0). The altimeter setting at FL0 is 29.92 in Hg or 1013.25 mb.

4.47.6. QFE indicates aircraft height in AGL. The altimeter should indicate zero on the ground with the proper QFE set.

Figure 4.8. Types of Altimeter Settings.

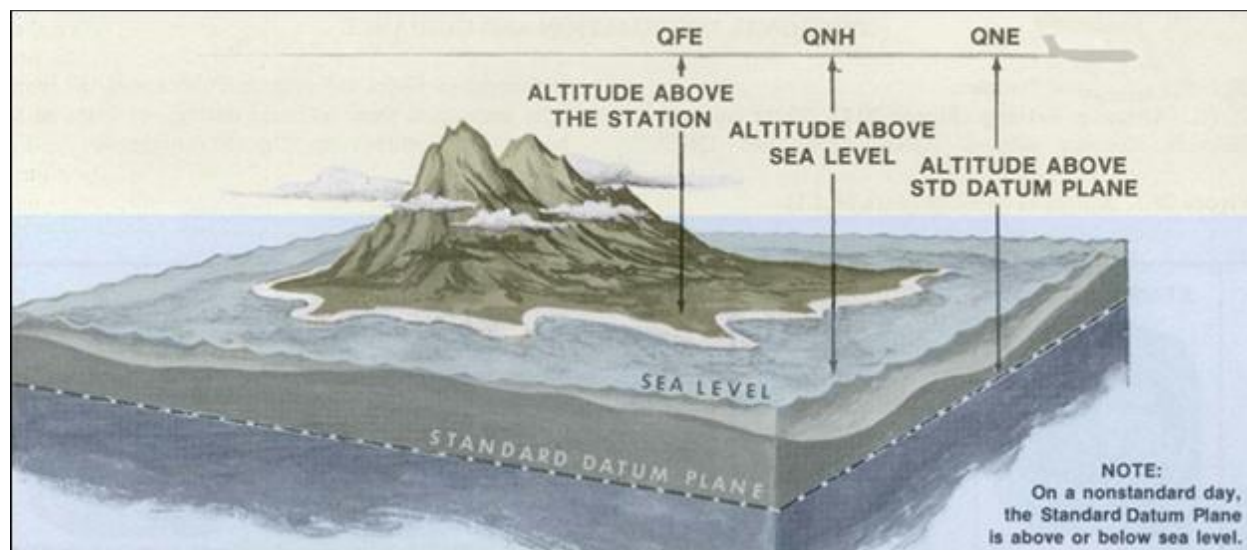

4.47.7. Transition altitude (TA) is the altitude near an airfield at or below which the vertical position of an aircraft is determined from an altimeter set to QNH or QFE as appropriate. TA is normally specified for each airfield by the ICAO State in which the airfield exists. TA should not normally be below 3,000 feet height above airfield (HAA) and is published on the appropriate charts. **Note:** [NAS Only] The TA is always 18,000 feet.

4.47.8. Transition level (TLv) is the lowest FL available for use above the TA. TLv is usually passed to the aircraft during the approach or landing clearance. The TLv may be published or available via automatic terminal information service (ATIS). Half FLs may be used (e.g., FL45). **Note:** [NAS Only] The TLv is FL180 unless the QNH altimeter setting is less than 29.92 in Hg; refer to the FIH section B for further information.

4.47.9. The transition layer is that area between the TA and TLv. Aircraft are not normally assigned altitudes within the transition layer.

4.48. Altimeter Use in Flight. The vertical position of an aircraft at or below TA is expressed in altitude (QNH or QFE as appropriate). Vertical position at or above the TLv is expressed in terms of FL (QNE).

4.48.1. When passing through the transition layer, vertical position is expressed in terms of FL (QNE) when climbing and in terms of altitudes or height (QNH or QFE as appropriate) when descending.

4.48.2. After an approach clearance has been issued and the descent to land is commenced, the vertical positioning of an aircraft above the TLv may be by reference to altitude (QNH or QFE as appropriate) provided that level flight above the transition altitude is not indicated or anticipated. This is intended for turbo jet aircraft where an uninterrupted descent from high altitude is desired and for airfields equipped to reference altitudes throughout the descent.

4.48.3. Set QNE when climbing through or operating above the TA. Set the reported QNH or QFE, as appropriate, when descending through or operating below the TLv.

4.48.4. Pilots may be required to fly altitudes or FLs in meters and use an altimeter setting other than inches of mercury QNH. For example, altitude in meters, using a QFE altimeter setting in mbar. **Note:** Misapplication of conversions in these areas can cause a mid-air collision or collision with the ground.

4.48.5. When operating at non-towered or austere locations, use all means available to obtain a local altimeter setting prior to departure. Some non-towered airfields have automated weather reporting capability that includes altimeter setting.

4.48.5.1. At certain locations it may be possible to obtain a nearby altimeter setting. However, use caution as bodies of water, terrain, or meteorological phenomena can cause significant local differences in altimeter settings over a short distance.

4.48.5.2. If no other means are available to obtain a local altimeter setting, set the airfield elevation in the altimeter.


4.49. Flight in Extreme Barometric Pressures. [AIM 7-2-2] If unable to display proper altimeter setting (e.g., barometric pressure is lower than 28.00 or higher than 31.00 inches of mercury), refer to AIM for procedures. The Operations Group Commander is the approval authority to launch flight operations in areas with extreme barometric pressures.

4.50. Flight in Colder Than International Standard Atmosphere (ISA) Temperatures. Pressure altimeters are calibrated to indicate true altitude under ISA conditions. Any deviation from ISA results in an erroneous reading on the altimeter. The altimeter error becomes extremely important when considering obstacle clearances in temperatures lower than standard since the aircraft's true altitude is lower than the figure indicated by the altimeter. The error is proportional to the difference between actual and ISA temperature and the height of the aircraft above the altimeter setting source. Height above altimeter setting source is the altitude AGL at the airfield where the altimeter source is located. The amount of error is approximately 4 feet per thousand feet for each degree Celsius of difference from ISA.

4.50.1. [ICAO] Minimum vectoring altitudes include a correction for cold temperatures; refer to the applicable AIP for exceptions. Mountainous areas are defined as an area of changing terrain where the changes of terrain elevation exceed 3,000 feet within 10 nautical miles.

4.50.2. [NAS Only] Radar minimum vectoring altitudes are not corrected for cold temperatures. Mountainous areas are in accordance with 14 CFR Part 95.11, *IFR Altitudes* (Figure 4.9.).

Figure 4.9. NAS Designated Mountainous Areas.

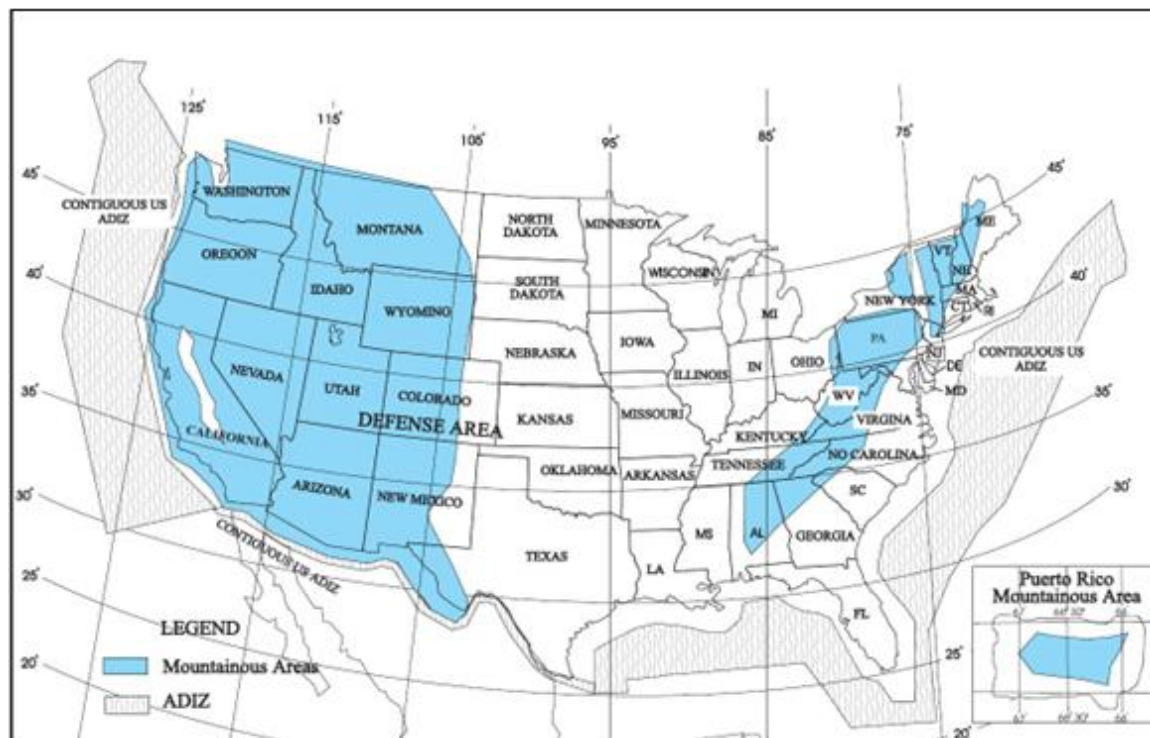

4.51. Cold Weather Altimeter Corrections. [14 CFR Part 97, *Cold Temperature Airports (CTA)*; FAA Notices to Airmen; AIM 7-3] The PIC shall apply cold weather temperature corrections utilizing the temperature correction chart in the FIH to IAPs in accordance with Table 4.4 and in the following situations (T-1):

4.51.1. When departing from an aerodrome with a temperature of 32°F/0°C or less, aircrew will temperature correct all altitudes (including the 400 feet. above departure end of runway (DER)) to a temperature corrected minimum safe altitude. (T-1)

4.51.2. Do not apply a temperature correction to an ATC-assigned altitude. (T-0) Radar vectoring altitudes assigned by ATC may or may not be temperature compensated and should be queried or refused if obstacle clearance is in doubt.

4.51.3. When flying over mountainous terrain when outside air temperature is colder than ISA minus 10° C, and aircraft unable to display true altitude, apply cold weather corrections to altitudes that are used to avoid terrain. (T-1)

4.51.4. MAJCOMs may authorize the use of automated means (e.g., flight management system (FMS)-derived, EFB application, or other resources) to temperature correct altitudes. **Note:** Some FMS systems temperature compensate for hot temperatures, this feature should not be used.

4.51.4. (AMC) Use of approved applications on the EFB (i.e., NGA Aero) is authorized for automated means for calculating temperature correction. The use of FMS-derived temperature corrections are authorized when approved in the aircraft flight manual or AFMAN 11-2MDSV3. (T-3)

4.51.5. Pilots must advise ATC of the corrected altitude when applying altitude corrections on any approach segment with the exception of the final segment. (T-1)

4.51.6. Pilots must not make an altimeter change to accomplish an altitude correction. (T-1)

4.51.7. (Added-AMC) During low-level flights at locations where temperatures are 0° C or below, aircrews will adjust MSAs, ESA, night enroute, and NVG enroute altitudes IAW the Temperature Correction Chart and notify the controlling agency of the correction. (T-2)

Table 4.4. Cold Weather Altitude Corrections.

		Instrument Approach Plate (IAP)		
		Typical IAP	IAP in Mountainous Terrain	IAP has procedure turn or intermediate approach altitude ≥ 3,000ft above altimeter setting source
Altimeter Setting Source Temperature	32°F to -21°F (0°C to -29°C)	Correct all altitudes inside FAF or below 1,000 feet AGL	Correct all altitudes on the IAP	
	At or Below -22°F (-30°C)			
	At or Below Published ❄️ Snowflake Temp			
Note: IAP includes minimum sector altitudes, missed approach altitudes, emergency safe altitude, minimum safe altitude, and distance measuring equipment arcs.				


Table 4.5. (Added-AMC) MAFPS Equal Time Point Formula.

TIME in hours (ETP to FSAF) = Distance (LSAF to FSAF) ÷ ((WF2 - WF1) + 2TAS)
DISTANCE (ETP to FSAF) = TIME (ETP to FSAF) x GS (second half)
Note: Wind Factor (WF) is a positive tailwind component or a negative headwind component computed between suitable airfields in the original direction of flight. WF may be computed by comparing average ground speed (GS) to true airspeed (TAS) (i.e., GS-TAS=WF). WF1 is the wind factor for the first half of the route. WF2 is the wind factor for the second half of the route.

4.52. Calculating Cold Temperature Corrections. The table in the FIH is linear and allows for interpolation to determine the required altimeter correction.


4.52.1. For example, assume KNID TACAN runway (RWY) 32, a CAT C aircraft, and -20° Celsius (**Figure 4.10**). All altitudes on the approach plate need to be corrected since an intermediate approach altitude is greater than or equal to 3,000 feet above the altimeter setting source. (5300' MSL-2241' MSL=3059' MSL at JEBUR)

Figure 4.10. Temperature Correction Example, KNID, TACAN RWY 32.

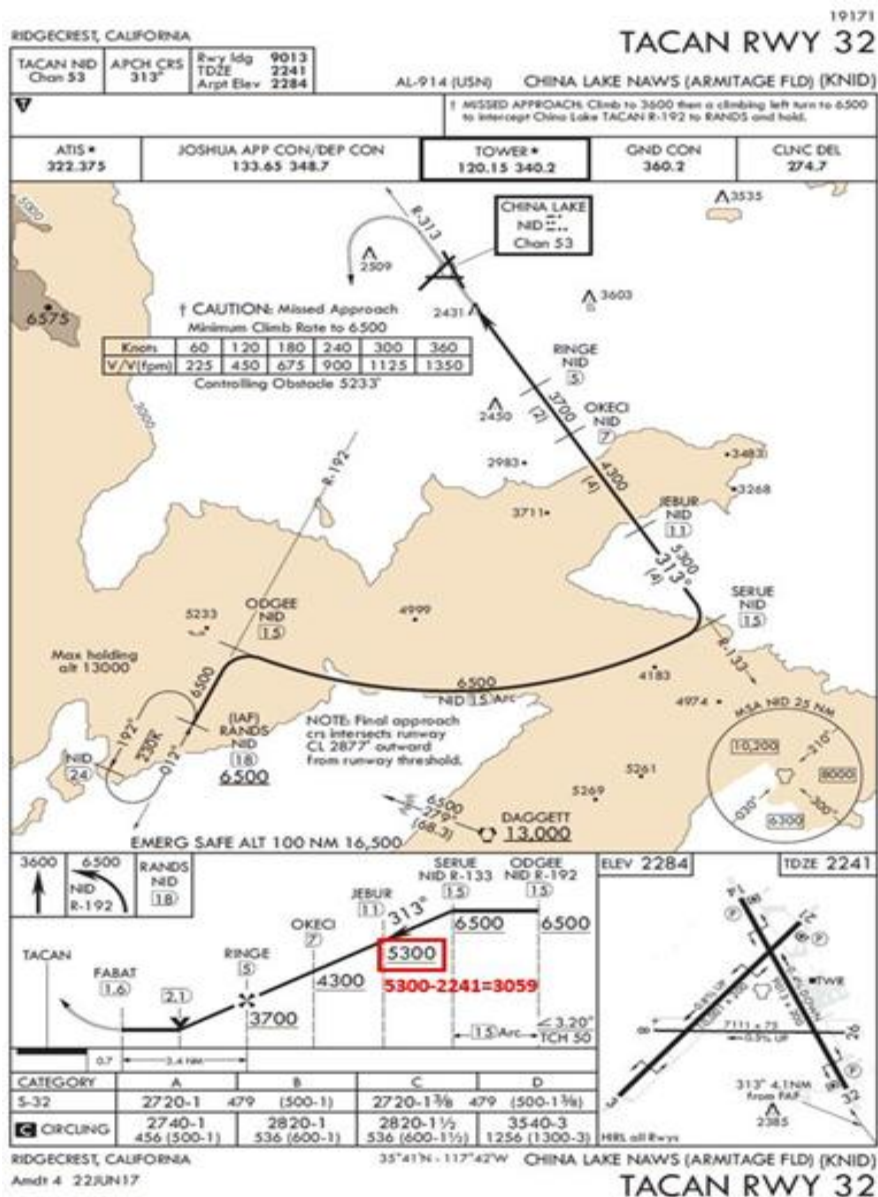


4.52.2. To calculate the altitude correction for the initial approach fix (IAF) RANDS, determine the height above touchdown (HAT) at the IAF. In this example, the HAT at the IAF is 4259 feet ($6500 - 2241 = 4259$). From the temperature correction chart, the altitude correction is $(570 + 50) + 6500 = 7120$ MSL. Altitude correction is normally rounded up to the nearest 10. Follow the same calculation procedures for all altitudes on the approach plate (Figure 4.11.).

Figure 4.11. Example Temperature Correction.

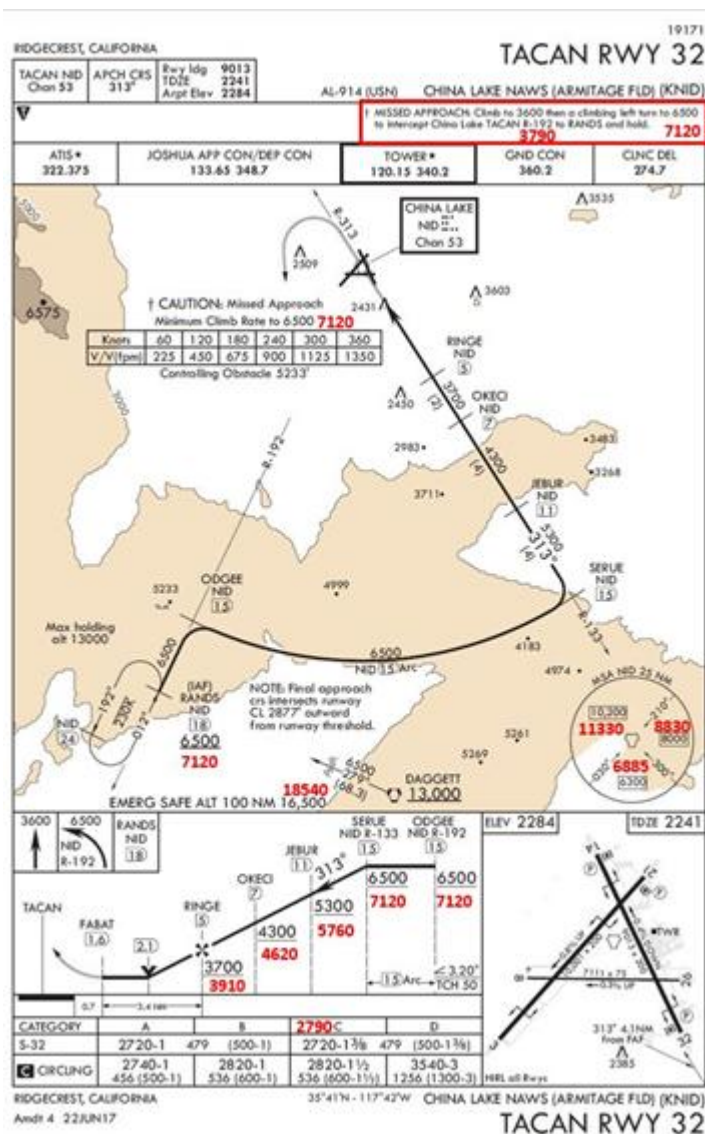

4.52.3. Calculate cold weather temperature corrections for remote altimeter settings using the following method: Follow the remote altimeter setting guidance published on the approach plate. Use the field elevation from the altimeter setting source. Subtract the remote altimeter source field elevation from the approach altitude to get the height above the altimeter setting source. Determine the temperature corrections in accordance with paragraphs 4.52.1 and 4.52.2. Using KATW ILS or LOC RWY 3 (Figure 4.12 and Figure 4.13) and -20° Celsius, the first step is to apply the remote altimeter setting published guidance. In this example, add

Figure 4.12. KATW ILS or LOC RWY 3.

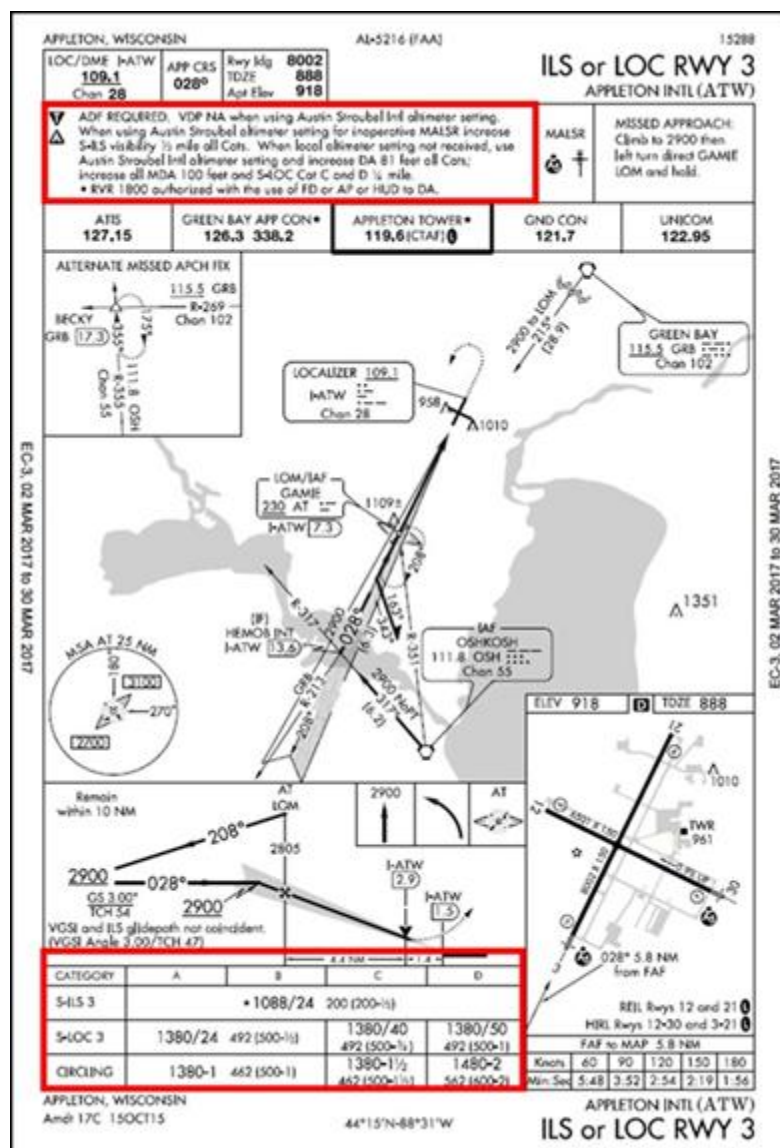

ADF REQUIRED. VDP NA when using Austin Straubel Intl altimeter setting. When using Austin Straubel altimeter setting for inoperative MALS increase S-ILS visibility 1/2 mile all Cats. When local altimeter setting not received, use Austin Straubel Intl altimeter setting and increase DA 81 feet all Cats; increase all MDA 100 feet and S-LOC Cat C and D 1/2 mile.

- RVR 1800 authorized with the use of FD or AP or HUD to DA.

CATEGORY	A	B	C	D
S-ILS 3	1169 • 1088/24	200 (200-1/2)	1474'	
S-LOC 3	1380/24	492 (500-1/2)	1380/40 492 (500-1/2)	1380/50 492 (500-1/2)
CIRCLING	1380-1	462 (500-1)	1380-1 1/2 462 (500-1/2)	1480-2 562 (600-2)

Knots	FAF to MAP 5.8 NM				
	60	90	120	150	180
Min. Std	5.48	3.52	2.54	2.19	1.56

APPLETON, WISCONSIN
Ambr 17B 10FEB11

APPLETON/OUTAGAMIE COUNTY RGNI (ATW)
44°15'N-88°31'W

ILS or LOC RWY 3

KGRB Austin Straubel International Airport
Green Bay, Wisconsin, USA

FAA Identifier: GRB

Lat/Long: 44-29-04.7000N / 088-07-47.0000W
44-29.078333N / 088-07.783333W
44.4846389 / -88.1297222
(estimated)

→ Elevation: 695 ft. / 211.8 m (surveyed)
Variation: 02W (1985)
From city: 7 miles SW of GREEN BAY, WI

Figure 4.14. Snowflake Icon.



Chapter 5

DEPARTURE

5.1. General. Planning a safe departure normally consists of three steps: selecting a valid departure method, determining the required climb gradient, and ensuring performance meets or exceeds that climb gradient. Reference AIM 5-2-9, FAA-H-8083-15, and ICAO Doc 8168 Volume 1 for more detailed explanations and examples of departure procedures. Reference [Attachment 8](#) for the Departure Decision Tree.

5.2. Weather. Do not take off when existing weather is below the lowest compatible approach minimums. **(T-2) Exception:** MAJCOMs may publish alternative takeoff minimums and recovery procedures when takeoff weather is lower than published lowest compatible approach minimums. In all cases, takeoff visibility must be 600 RVR (180 meters) or greater. **(T-1) Note:** MAJCOMs will publish MDS-specific weather minimums for UAS with automatic takeoff and landing capabilities.

5.2. (AMC) Weather. MAF aircraft may depart when takeoff weather is below approach minimums (ceiling or visibility), but a departure alternate is required. **(T-2)**

5.2.1. **(Added-AMC)** Standard Takeoff Minimums. Unless higher ceiling and/or visibility are prescribed for the selected IFR departure method (as published in FLIP  or as prescribed by MAJCOM-Certified or Special Departure Procedure), MAF crews will use the alternative IFR takeoff minimums in [Table 5.6](#) as standard, or as authorized by AFMAN 11-2MDSV3. **(T-2)**

5.2.2. **(Added-AMC)** Departure Alternates. A departure alternate is required if weather at the departure airport is below the lowest landing minimums for a suitable approach (ceiling or visibility, or crosswinds). **(T-2)** If planning an ILS approach, Cat I minimums will be used. **(T-2)**

5.2.2.1. **(Added-AMC)** Suitability of Departure Alternates. When a departure alternate is required, the aircraft must be capable of maintaining the MEA or minimum obstruction clearance altitude (MOCA), whichever is higher, to the alternate using OEI performance criteria. **(T-2)** A suitable departure alternate airfield must meet one of the following conditions. **(T-2):**

5.2.2.1.1. **(Added-AMC)** For an alternate within 30 minutes flying time, the existing weather is equal to or better than the published approach minimums and forecast to remain so until 1 hour after takeoff, but in no case forecast to be lower than 200-1/2 (RVR 2400), or;

5.2.2.1.2. **(Added-AMC)** For an alternate within one hour flying time for two engine aircraft or two hours flying time for aircraft with three or more engines, the existing weather is at least 500-1 above the lowest compatible published approach minimums, but not less than 600-2 for a precision approach or 800-2 for a non-precision approach, and forecast to remain so for 1 hour after ETA at the alternate.

5.3. Hazardous Weather. Do not take off where thunderstorms or other hazardous conditions are producing hail, strong winds, gust fronts, heavy rain, lightning, wind shear, or microbursts unless the runway and flight path are clear of hazards. **(T-3)**

5.3. (AMC) Hazardous Weather. Do not accomplish approaches or departures when thunderstorms or other hazardous conditions are producing hail, strong winds, gust fronts, heavy rain, lightning, wind shear, or microbursts at the airport, or are forecast or observed to be moving in the direction of the route of flight (to include the planned missed approach corridor, if applicable). **(T-2)**

5.3.1. **(Added-AMC)** In order to minimize exposure to thunderstorm hazards when approaching or departing an airport in an area where thunderstorms are occurring or are forecast aircrews should:

5.3.1.1. **(Added-AMC)** Attempt to maintain VMC.

5.3.1.2. **(Added-AMC)** Maintain at least 5NMs separation from heavy rain showers.

5.3.1.3. **(Added-AMC)** Avoid areas of high lightning potential, i.e., clouds within plus or minus 5,000 feet of the freezing level or plus or minus 8°C of the freezing level.

5.4. Freezing and Frozen Precipitation or Weather. Do not take off with ice, snow, frost, or other contamination adhering to the wings, control surfaces, propellers, engine inlets, or other critical surfaces of the aircraft, unless authorized by the aircraft flight manual. **(T-1)**

5.4. (AMC) Freezing and Frozen Precipitation or Weather. Do not take off under conditions of freezing rain. **(T-2)** Do not takeoff under conditions of freezing drizzle except when aircraft has been properly de-iced/anti-iced IAW flight manual procedures. **(T-2)**

5.5. Aircraft Ground Deicing. Aircrew will use the FAA aircraft ground deicing holdover times tables in conjunction with AF T.O. 42C-1-2, *Anti-Icing, De-Icing and Defrosting of Parked Aircraft*, MDS-specific Volume 3, and aircraft flight manual guidance. **(T-0)** The FAA ground deicing holdover times tables from the FAA web site is located at: https://www.faa.gov/other_visit/aviation_industry/airline_operators/airline_safety/deicing/.

Note: To clarify ground crew technical order requirements, the FAA ground deicing holdover times are the approved “AFFSA/A3OF Holdover Tables.”

5.5. (AMC) Aircraft Ground Deicing. Freezing precipitation, snow, freezing fog, or temperatures near 0°C, may cause ice or frost to accumulate on aircraft surfaces. When an aircraft requires de-icing/anti-icing prior to takeoff, refer to the following:

5.5.1. **(Added-AMC)** Aircrews will only use de-ice and anti-ice fluids listed in their respective flight manual. **(T-2)** Aircrews will be familiar with, and follow all restrictions in their associated flight manual with respect to, anti-ice/de-ice procedures and holdover times. **(T-2)**

5.5.2. **(Added-AMC)** MIL-A-8243 Type I and Type II de-icing fluids provide little anti-icing benefit, and therefore do not have holdover times. As a guide, for approved anti-icing fluids, the holdover time begins when anti-icing fluid is first applied. The PIC will use time, temperature, and dilution of mixture to determine when times are exceeded and ensure a re-application if required. **(T-2)**

5.5.3. **(Added-AMC)** In all cases of de-icing/anti-icing, PICs will ensure a visual inspection of the aircraft is completed within 5 minutes of departure. **(T-2)**

5.5.4. **(Added-AMC)** Ice Pellets. Tests show that ice pellets generally remain in the frozen state imbedded in Type IV anti-icing fluid, and are not absorbed by the fluid in the same manner as other forms of freezing/frozen precipitation. These embedded ice pellets are generally not readily detectable by the human eye during pre-takeoff contamination check procedures. Using current guidelines for determining anti-icing fluid failure, the presence of a contaminant not absorbed by the fluid (remaining embedded) would be an indication that the fluid has failed.

5.6. VFR Communication.

5.6.1. [14 CFR Part 91.123] Pilots departing VFR must comply with ATC instructions when participating in radar services or flight following. **(T-0)**

5.6.2. It is important when departing from non-towered airfields for pilots to be vigilant for other aircraft both on the ground and in the air as well as other hazards to aircraft. When ready to depart, utilize the airfield Common Traffic Advisory Frequency (CTAF) or Universal Communication (UNICOM) frequency to announce aircraft location, departure runway, intentions, and direction of flight after departure.

5.6.3. Radio contact with ATC may not always be possible on the ground. In those instances, aircrew may either activate the VFR flight plan or obtain an IFR release through a ground communications relay station or with a FSS via telephone or radio once airborne.

5.7. VFR Departure. Pilots must “see and avoid” obstacles and terrain during VFR departures.

5.7. (AMC) VFR Departures. VFR departures are authorized when the aircraft cannot depart using one of the IFR departure methods, when operational requirements dictate (i.e., tactical necessity), or when most of the sortie is planned as a VFR flight. VFR flight requires detailed planning to ensure obstacles and terrain are avoided and airspace rules are complied with.

5.7.1. **(Added-AMC)** The minimum VFR climb performance for departures is determined by ensuring all the following conditions are met:

5.7.1.1. **(Added-AMC)** All-engine climb capability ensures obstacle avoidance along the departure route. **(T-2)**

5.7.1.2. **(Added-AMC)** One Engine Inoperative (OEI) climb capability must ensure the VFR departure or emergency return route provides obstacle avoidance. **(T-2)**

5.7.1.3. **(Added-AMC)** If unable to comply with any of the above conditions and unable to “see and avoid” obstacles and terrain safely, download cargo/fuel or delay until conditions can be met. **(T-2)**

5.8. IFR Climb Performance. Ensure the aircraft can meet or exceed the standard IFR departure climb gradient of 3.3% (200 feet per nautical mile) or the published climb gradient, whichever is higher, with all engines operating to the en route structure or an altitude at or above the minimum IFR altitude (MIA) within the en route structure. **(T-1)**

5.8.1. IFR Turns after Takeoff. The minimum turn altitude after takeoff is 400 feet above the DER elevation, unless required by a published procedure or ATC. **(T-0)**

5.8.2. Published or ATC climb gradients do not account for low close-in obstacles. Therefore, low close-in obstacle clearance is not assured when complying with IFR climb gradients. Ensure the aircraft can vertically or laterally clear applicable published low close-in obstacles along the planned ground track. **(T-0)**

5.8.3. For multi-engine fixed-wing aircraft, PICs must plan a contingency procedure to account for one engine inoperative on takeoff. Acceptable contingency procedures include any of the following:

5.8.3.1. Meet the published climb gradient or 200 feet per nautical mile (whichever is higher) with one engine inoperative.

5.8.3.2. Plan to use a Special Departure Procedure (SDP).

5.8.3.3. Ensure weather is above non-standard takeoff minimums to visually clear all obstacles vertically or laterally.

5.8.3.4. If no other departure methods are available, and the mission justifies the increased risk, the PIC may, after extensive preflight planning, reduce up to 48 feet per nautical mile from the required climb gradient.

5.8.4. **(Added-AMC)** Some SIDs still retain “ATC” climb gradients or have climb gradients that are established to meet a published altitude restriction that is not required for obstacle clearance or procedure design criteria. If crews are unable to meet the published “ATC” climb gradient AEO, they must obtain ATC approval prior to flying the procedure. Some ATC-required altitude restrictions published at a fix do not have an associated climb gradient published with that restriction. Pilots are expected to determine if the crossing altitudes can be met.

5.9. IFR Departure Methods. Pilots will fly all departure procedures as published. **(T-0)** Pilots will depart IFR using the methods listed below:

5.9.1. Diverse Departure (See [paragraph 5.15](#)). **(T-0)**

5.9.2. [ICAO] Omnidirectional Departure (See [paragraph 5.16](#)). **(T-0)**

5.9.3. Obstacle Departure Procedure (ODP).

5.9.3.1. Non-Standard Takeoff Minimums (See [paragraph 5.17](#).);

5.9.3.2. Specific Routing (See [paragraph 5.18](#).);

5.9.3.3. Visual Climb Over Airport (VCOA) (See [paragraph 5.19](#).);

5.9.3.4. Reduced Takeoff Runway Length (RTRL) Procedure (See [paragraph 5.20](#).); or

5.9.3.5. Any combination of the above (See [paragraph 5.21](#).).

5.9.4. Diverse Vector Area (DVA) (See [paragraph 5.22](#)). **(T-0)**

5.9.5. Specific ATC Departure Instructions (See [paragraph 5.23](#)). **(T-0)**

5.9.6. Standard Instrument Departure (SID). **Note:** Pilots will notify ATC (or other traffic) when planning to depart via an ODP. **(T-0)** (See [paragraph 5.24](#).).

5.9.7. MAJCOM-Certified Procedure (See [paragraph 5.30](#).).

5.10. IFR DER Crossing Restrictions. [ICAO Doc 8168 Volume 2, *Construction of Visual & Instrument Flight Procedures*, Part I, Section 3, Chapter 2]

5.10.1. See **Table 5.1** for standard IFR DER crossing restrictions. Pilots under IFR must plan to cross the DER at or above these restrictions unless otherwise published or MAJCOM-directed procedures direct otherwise (e.g., SDPs.). **(T-0)**

Table 5.1. IFR DER Crossing Restrictions (Unless Published Otherwise).

Design Criteria	DER Crossing Restriction
TERPS	0 feet
ICAO (PANS-OPS) / NATO (MIPS)	16 feet
NAS (Hardened Rwy $\geq$ 6000ft)	0 feet
NAS (Unhardened Rwy & Rwy < 6000ft)	0 – 35 feet
Note: Hardened runways are defined in the IFR Supplement Legend as ASP, BRI, CON, COP, PEM, PER. Reference paragraph 10.3 and Figure 10.1 for how to identify instrument procedure design criteria.	

5.10.2. [FAA Order 8260.3, *United States Standard for Terminal Instrument Procedures*] The departure climb gradient begins at 0 feet above the DER elevation under current U.S. Terminal instrument procedures (TERPS) criteria; however, some procedures developed under older U.S. TERPS criteria for unhardened runways and runways shorter than 6,000 feet still have an unpublished DER crossing restriction of 35 feet.

5.10.2.1. For FAA and United States Army (USA) hardened runways greater than or equal to 6,000 feet, USAF, and United States Navy (USN) departure climb gradients begin at 0 feet above the DER elevation unless published otherwise.

5.10.2.2. FAA and United States Army (USA) departure climb gradients for unhardened runways and runways less than 6,000 feet begin between 0 feet and 35 feet above the DER elevation. There is no consistent method for a pilot to determine the required DER crossing restriction for these FAA or USA departure procedures.

5.10.2.3. Unless specified otherwise, the required obstacle clearance for all departures, including diverse departures, is based on the pilot crossing the DER in accordance with **Table 5.1** or at least 35 feet above the DER elevation, climbing to 400 feet above the DER elevation before making the initial turn, and maintaining a minimum climb gradient of 200 feet per nautical mile, unless required to level off by a crossing restriction, until the minimum IFR altitude.

5.10.2.4. If in doubt, cross the DER at least 35 feet above the DER elevation, or if a 35 foot restriction limits mission capability, contact the MAJCOM TERPS office for the actual DER crossing restriction.

5.11. ICAO Departure Speeds. ICAO design criteria is based on the maximum departure airspeeds in **Table 5.2**. **Note:** If exceeding these speeds, there is no guarantee of obstacle clearance.

Table 5.2. ICAO Maximum Allowable Departure Speeds.

Aircraft Category	Max Indicated Airspeed (knots)
A	120
B	165
C	265
D	290
E	300
H	90

5.12. IFR Departure Procedures. Airfields with IFR departure procedures designed to assist pilots in avoiding obstacles during the climb to the minimum en route altitude (MEA), or airfields that have civil IFR takeoff minimums other than standard, are listed in the “IFR TAKEOFF MINIMUMS, OBSTACLE DEPARTURE PROCEDURES, AND DIVERSE VECTOR AREAS (RADAR VECTORS)” of the terminal procedures publication, commonly called the “Trouble T” section.

5.12.1. The “Trouble T” symbol on all published instrument procedures for an airfield notifies pilots that departure procedures exist ([Figure 5.1](#)).


Figure 5.1. “Trouble T” Symbol.

5.12.2. Takeoff minimums and departure procedures apply to all runways unless otherwise stated. An entry may also be listed that contains only takeoff obstacle notes. Altitudes, unless otherwise indicated, are minimum MSL altitudes.

5.12.3. IFR departure procedures specifically designed for obstacle avoidance are referred to as obstacle departure procedures (ODP) and are textually described in the “Trouble T” section of the terminal procedures publication or published separately as a graphic procedure. Pilots may recognize graphic ODPs by the term “(OBSTACLE)” included in the procedure title (e.g., “TETON THREE DEPARTURE (OBSTACLE)”). **Note:** Aircraft may not be vectored off an ODP, or issued an altitude lower than the published altitude on an ODP, until at or above the Minimum Vectoring Altitude (MVA)/minimum IFR altitude, at which time the ODP is canceled.

5.13. Takeoff Obstacle Notes. Obstacles within 3 statute miles of the DER identified during the diverse departure obstacle assessment that require a climb gradient greater than 200 feet per nautical mile are published under “TAKE-OFF OBSTACLE NOTES” in the “Trouble T” section ([Figure 5.2](#)). The purpose of this section is to identify the obstacles and alert the pilot to the height and location of the obstacles so they can be seen and avoided.

5.14. Low Close-in Obstacles. Obstacles that require a climb gradient greater than 200 feet per nautical mile for a very short distance, only until the aircraft is 200 feet above the DER, are referred to as “low, close-in obstacles.”

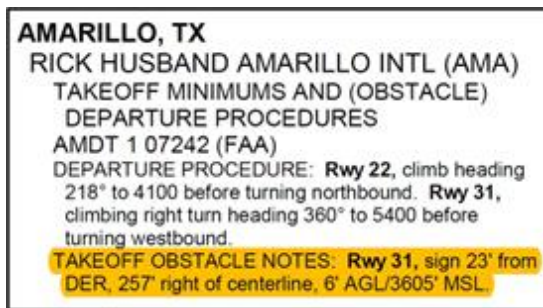Figure 5.2. Low Close-in Obstacles.

5.15. Diverse Departure. [FAA Order 8260.46] An instrument procedure specialist conducts a diverse departure assessment to determine if an obstacle penetrates the 40:1 obstacle identification surface (OIS). The 40:1 OIS is equivalent to 152 feet per nautical mile; an additional 48 feet per nautical mile or more of required obstacle clearance is added to the 40:1 OIS, making the standard IFR departure climb gradient 200 feet per nautical mile.

5.15.1. A diverse departure is an acceptable IFR departure method for a runway if no obstacles, other than low close-in obstacles, penetrate the 40:1 OIS. ATC does not specifically clear pilots for a diverse departure nor can pilots file it on a flight plan.

5.15.2. Pilots will not fly a diverse departure if that runway has a standalone graphic ODP or a published ODP listed in the “Trouble T” section of the terminal procedures publication. **(T-0)** ODP in this case is defined as: non-standard climb gradient, non-standard weather minimums, or a departure procedure (**Figure 5.4.**). **Note:** Low close-in obstacles alone do not constitute an ODP.

5.15.3. The diverse departure obstacle assessment area is limited to 25 nautical miles from the airfield in non-mountainous terrain and 46 nautical miles in designated mountainous areas (**Figure 5.3.**). Beyond this distance, the pilot is responsible for obstacle clearance if not operating on a published route, below the MEA or minimum obstruction clearance altitude (MOCA) of a published route, or below an ATC-assigned altitude. Pilots should check terrain and obstacle information for areas surrounding the immediate terminal area when planning any instrument departure.

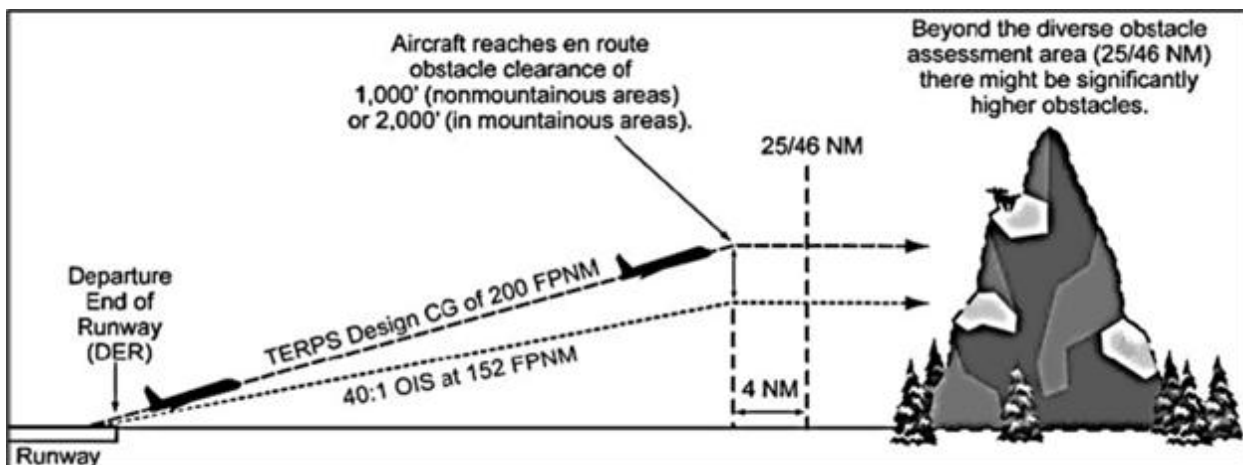
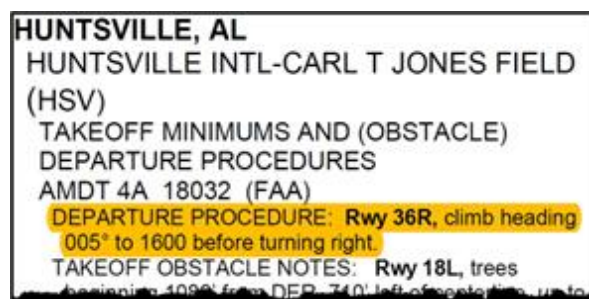
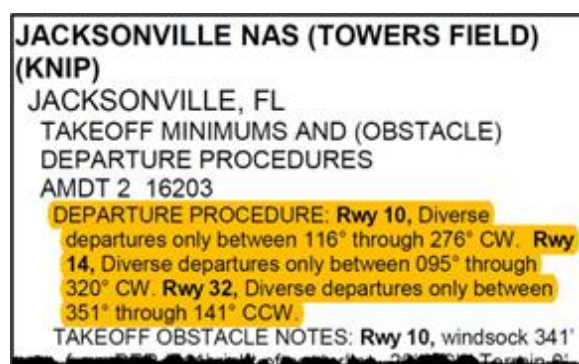
Figure 5.3. Diverse Departure Obstacle Assessment.

Figure 5.4. Diverse Departure Not Authorized (Runway 36R).

5.15.4. Sector diverse departures only allow for diverse departures within specific sector requirements (**Figure 5.5.**).

Figure 5.5. Sector Diverse Departure.

5.16. ICAO Omnidirectional Departure. [ICAO Doc 8168 Volume 1, Part I, Section 3, Chapter 3] The omnidirectional departure is a departure procedure without any track guidance provided or available (**Figure 5.6.**). It is similar to the FAA's diverse departure with a very important difference: the omnidirectional departure may be published even with OIS penetrations. The omnidirectional departure may only be flown when specifically published. The instrument procedure specialist may design the omnidirectional departure procedure using any combination of the following:

5.16.1. Departure restrictions are not published when obstacles do not penetrate the 40:1 OIS and an additional 246 feet of required obstacle clearance exists. Pilots may turn in any direction upon reaching 400 feet above DER elevation.


5.16.2. The procedure specifies a 200 foot per nautical mile climb to an altitude at which omnidirectional turns may be made when obstacles preclude turns at 400 feet.

5.16.3. The procedure may define a minimum climb gradient of more than 200 feet per nautical mile to a specified altitude before turns are permitted.

5.16.4. The procedure may identify sectors for which either a minimum climb gradient or a minimum turn altitude is specified (e.g., "Climb straight ahead to 2,000 feet before commencing a turn to the east/sector 0 degrees to 179 degrees and climb to 1,800 feet before commencing a turn to the west/sector 180 degrees to 359 degrees").

5.16.5. Pilots must maintain at least the standard IFR climb gradient from the altitude at which turns in any direction are allowed until reaching a minimum IFR altitude. **(T-0)**

Figure 5.6. Omnidirectional Departure.

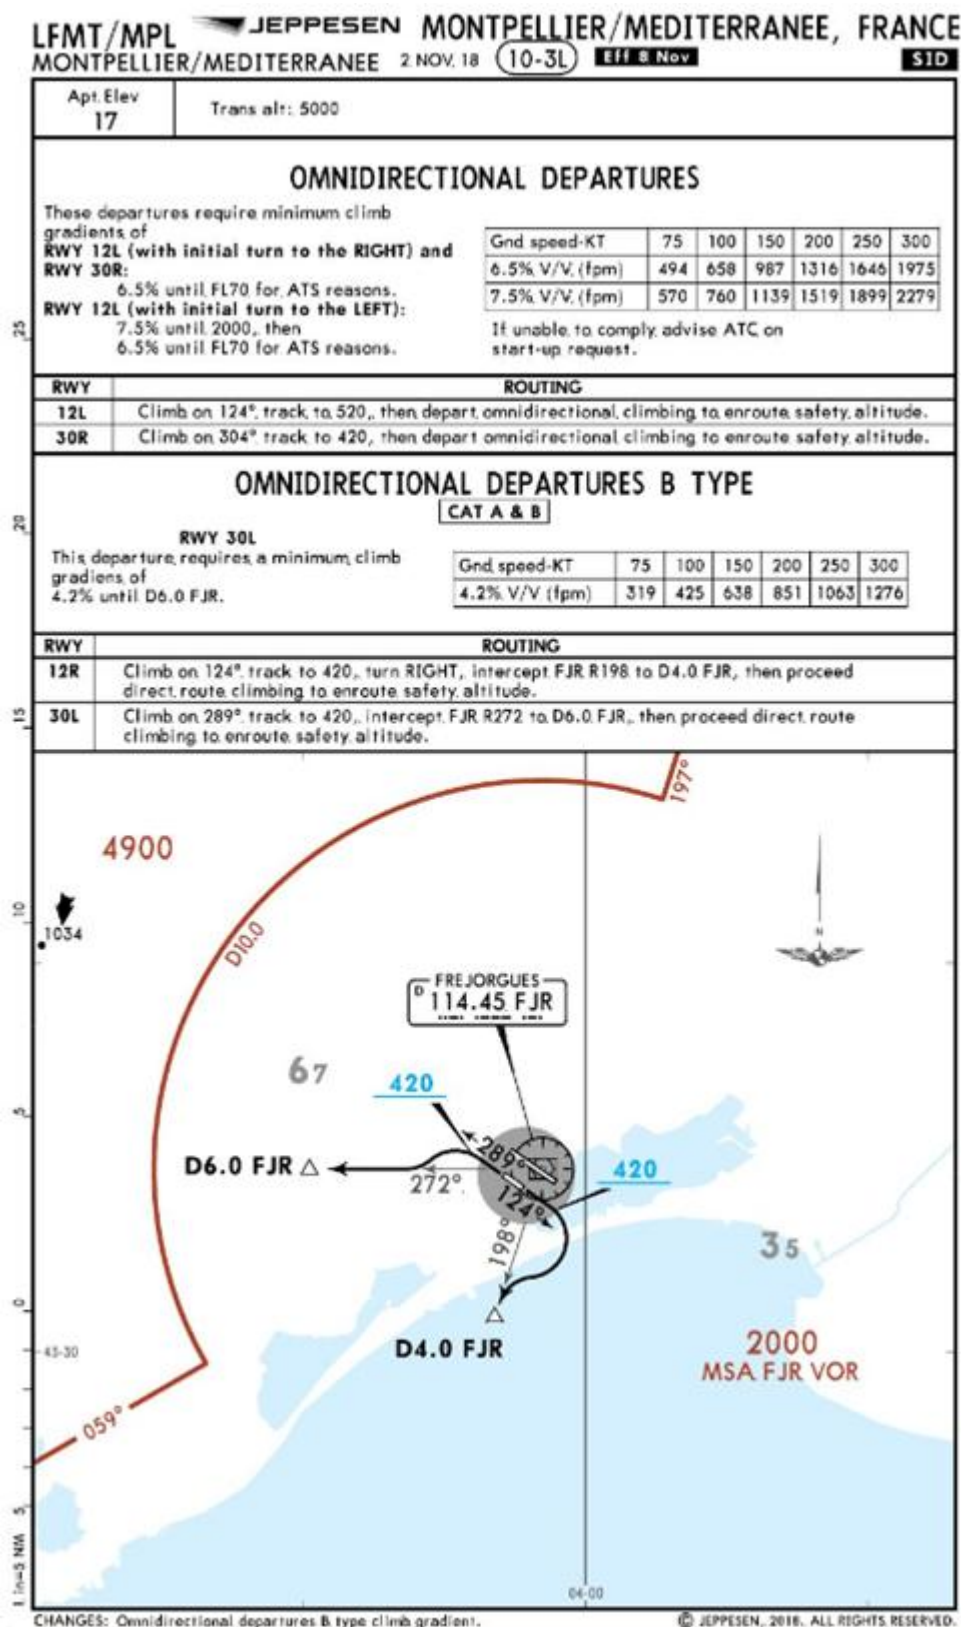

5.17. Non-standard IFR Takeoff Minimums. Non-standard IFR takeoff minimums are provided for pilots to “see and avoid” obstacles during departure when obstacles penetrate the 40:1 OIS within 3 statute miles from the DER (Figure 5.7 and Figure 5.8). Weather must be equal to or better than the published ceiling and visibility to depart using non-standard IFR takeoff minimums and climb at 200 feet/NM or higher if published. **Note:** The standard or published climb gradient does not provide vertical clearance from the controlling obstacle.

Figure 5.7. IFR Takeoff Minimums – Non-standard Example 1.

ANDREWS, SC ROBERT F. SWINE (PHH) TAKEOFF MINIMUMS AND (OBSTACLE) DEPARTURE PROCEDURES ORIG 02276 (FAA) TAKEOFF MINIMUMS: Rwy 18, 300-1. Rwy 36, 400-1.

Figure 5.8. IFR Takeoff Minimums – Non-standard Example 2.

RUIDOSO, NM SIERRA BLANCA RGNL (SRR) TAKEOFF MINIMUMS AND (OBSTACLE) DEPARTURE PROCEDURES ORIG 89124 (FAA) TAKEOFF MINIMUMS: Rwys 6,24, 5200-3 or std. with a min. climb of 420' per NM to 12100'. DEPARTURE PROCEDURE: Rwy 6 , climb at 385' per NM to 9100' direct CEP NDB, continue climb in holding pattern (*hold E, left turns, 273° inbound) to cross CEP NDB at or above the MEA for direction of flight. *Do not exceed 230 kts in holding pattern. Rwy 24 , immediate climbing left turn to 9100' direct CEP NDB, continue climb in holding pattern (*hold E, left turns, 273° inbound) to cross CEP NDB at or above the MEA for direction of flight. *Do not exceed 230 kts in holding pattern.

5.17.1. A minimum climb gradient is published when obstacles penetrate the 40:1 OIS beyond 3 statute miles from the DER. Some non-standard takeoff weather minima list a specific climb gradient that may be used with “standard” weather minima or alternate procedures for a standard climb gradient ([Figure 5.9](#)).

Figure 5.9. IFR Takeoff Minimums – “Or Standard.”

CLARKSVILLE, TN OUTLAW FIELD (CKV) TAKEOFF MINIMUMS AND (OBSTACLE) DEPARTURE PROCEDURES AMDT 2 06271 (FAA) TAKEOFF MINIMUMS: Rwy 35, 300-1 or std. w/ min. climb of 240' per NM to 800. Alternatively, with standard takeoff minimums and a normal 200'/NM climb gradient, takeoff must occur no later than 1900' prior to DER.

5.17.2. Occasionally, IFR takeoff minimums are published that are specific to a certain category of aircraft ([Figure 5.10](#)). Pilots will use the aircraft approach category from the aircraft flight manual for procedures that specify an aircraft category. **(T-0)**

Figure 5.10. IFR Takeoff Minimums – Specific Aircraft Category.

GALLUP, NM
GALLUP MUNI (GUP)
TAKEOFF MINIMUMS AND (OBSTACLE)
DEPARTURE PROCEDURES
AMDT 2 94230 (FAA)
TAKEOFF MINIMUMS: Rwy 6 , CAT A,B 1300-2 or std. with a min. climb of 300' per NM until passing 8000. CAT C,D 1600-3 or std. with a min. climb of 320' per NM until passing 8500. Rwy 24 , 700-2 or std. with a min. climb of 370' per NM until passing 8000.

5.18. Specific Routing. The instrument procedure designer may publish specific routing to avoid obstacles under the “DEPARTURE PROCEDURE” section of the ODP (Figure 5.11).

Figure 5.11. Specific Routing.

LA JUNTA, CO
LA JUNTA MUNI (LHX)
TAKEOFF MINIMUMS AND (OBSTACLE)
DEPARTURE PROCEDURES
AMDT 3A 16091 (FAA)
DEPARTURE PROCEDURE: Rwy 8 , climb via heading 080°. Rwy 12 , climb via heading 120°. Rwy 26 , turn left heading 160°. Rwy 30 , turn left heading 140°. All aircraft , intercept LAA R-238 (V210) to LAA VOR/DME. When at or above 8000 proceed on course.

5.19. Visual Climb Over Airport (VCOA). A VCOA procedure is a departure option for an IFR aircraft, operating in VMC equal to or greater than the specified visibility and ceiling, to visually conduct climbing turns over the airfield to the published “climb-to” altitude. Upon reaching this altitude, the aircraft may proceed with the instrument portion of the departure.

5.19.1. MAJCOMs may authorize the use of VCOA procedures. Pilots will remain within the published visibility distance, will not exceed this radius from the center of the airfield while climbing to the specified altitude, and will visually identify the obstacles throughout the climb. **(T-1)** Pilots should attempt to remain as close as practicable to the center of the airfield while conducting the visual portion of a VCOA. **Note:** When the VCOA visibility is published as 5 SM, remaining within the published visibility distance does not guarantee the aircraft is within the TERPS Visual Climb Area.

5.19.1. **(AMC)** VCOA procedures are authorized for use by MAF aircrews.

5.19.2. Pilots are responsible to advise ATC as early as possible of the intent to fly the VCOA procedure prior to departure.

5.19.3. Pilots are prohibited from constructing their own VCOA. **(T-0)**


5.19.4. Do not fly a VCOA at night. **(T-1) Exception:** MAJCOMs may authorize night VCOA operations with NVDs. MAJCOMs will develop and provide aircrew training prior to night VCOA operations.

5.19.5. VCOA procedures do not guarantee an obstacle-free flight path during the visual portion of the maneuver. After reaching the published climb-to altitude, pilots must ensure the aircraft can meet or exceed the standard or published climb-gradient. **(T-0)**

5.19.6. [FAA Order 8260.3] Procedure designers construct a visual climb area around the airport reference point to develop VCOA procedures. The visual climb area is a circle computed by adding a radius value and the distance from the airport reference point to the most distant runway end (**Figure 5.12.**). The VCOA ceiling is a minimum of 250 feet above the highest obstacle within the visual climb area.

5.19.7. Procedural obstacle clearance is provided after the aircraft reaches the published climb-to altitude within the VCA. The TERPS VCA radius will not be known to pilots.

Figure 5.12. Visual Climb Area.

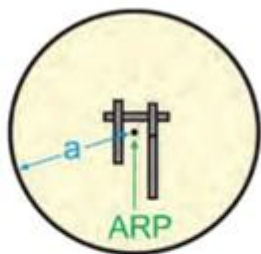

$a = R1$ (table 14-4-1) plus the distance from ARP to most distant **DER**

5.19.8. VCOA procedures are normally published as a textual ODP; however a VCOA may appear as a note on a graphical ODP.

5.19.8.1. A VCOA procedure has a published non-standard ceiling and visibility directly associated with the words “for VCOA” in the “TAKEOFF MINIMUMS” section of the ODP (**Figure 5.13.**). It also includes the instructions “obtain ATC approval for VCOA when requesting IFR clearance” and “climb in visual conditions” to cross a specified airfield, NAVAID, or fix at or above a specified altitude before proceeding on course in the “VCOA” section of the ODP.

Figure 5.13. VCOA Format.

CEDAR CITY, UT
CEDAR CITY RGNL (CDC)
TAKEOFF MINIMUMS AND (OBSTACLE)
DEPARTURE PROCEDURES
AMDT 3A 17229 (FAA)
 TAKEOFF MINIMUMS: **Rwy 8, 4200-3 for VCOA** **Rwy 20**, std. w/min. climb of 290' per NM to 7300 or 4200-3 for VCOA. **Rwy 26**, std. w/min. climb of 255' per NM to 7000 or 4200-3 for VCOA.
 DEPARTURE PROCEDURE: **Rwys 2, 8**, climbing left turn direct EHK VOR/DME, thence... **Rwys 20, 26**, climbing right turn direct EHK VOR/DME, thence...
 ...continue climb on EHK VOR/DME R-278 until reaching the MEA/MCA for direction of flight.
VCOA: Rwys 8, 20, 26, obtain ATC approval for VCOA when requesting IFR clearance. Climb in visual conditions to cross Cedar City Rgnl airport at or above 9700, then proceed on EHK VOR/DME R-180 direct EHK VOR/DME, then on EHK VOR/DME R-278 until reaching the MEA/MCA for direction of flight.

5.19.8.2. A VCOA procedure published under old standards that is not updated has a published non-standard ceiling and visibility directly associated with the words “for climb in visual conditions” in the “TAKEOFF MINIMUMS” section of the ODP (Figure 5.14). It also includes the instructions “for climb in visual conditions” to cross a specified airfield, NAVAID, or fix at or above a specified altitude before proceeding on course in the “DEPARTURE PROCEDURE” section of the ODP.

Figure 5.14. Legacy VCOA Format.

BULLHEAD CITY, AZ
LAUGHLIN/BULLHEAD INTL (IFP)
TAKEOFF MINIMUMS AND (OBSTACLE)
DEPARTURE PROCEDURES
AMDT 1 09183 (FAA)
TAKEOFF MINIMUMS: Rwy 16, std. w/ a min. climb of
370' per NM to 1800, or 1700-3 for climb in visual
conditions. Rwy 34, std. w/ a min. climb of 495' per
NM to 5500, or 1700-3 for climb in visual conditions.
DEPARTURE PROCEDURE: Rwy 16, climb via
heading 164° and EED VORTAC R-334 to EED
VORTAC, or for climb in visual conditions: cross
Laughlin/Bullhead Intl airport at or above 2300, then
continue climbing via heading 155° and EED VORTAC
R-335 to EED VORTAC. Rwy 34, climb via heading
344° to 1800, then climbing right turn direct EED
VORTAC, or for climb in visual conditions: cross
Laughlin/Bullhead Intl airport at or above 2300, then
continue climbing via heading 155° and EED VORTAC
R-335 to EED VORTAC. All Aircraft climb in EED
VORTAC holding pattern (East, right turn, 257°
inbound) to cross EED VORTAC at or above MEA for
direction of flight before proceeding on course.

5.19.8.3. Some VCOA procedures may not conform to either format listed above. Contact the MAJCOM TERPS office to determine if a VCOA is authorized (Figure 5.15.).

Figure 5.15. Non-Conforming VCOA Format.

AMEDEE AAF (KAHC),
HERLONG, CA. Amdt 1, 09239
Rwy 8, 26: 4000-3 for climb in visual conditions.
Rwy 8, 26: Cross Amedee AAF at or above 7900
before proceeding on course.

5.20. Reduced Takeoff Runway Length Procedure (RTRL). If all obstacles penetrate the OIS by 35 feet or less, the instrument procedure specialist may artificially limit the takeoff runway length available to achieve a standard climb gradient of 200 feet per nautical mile (Figure 5.16.). An RTRL procedure requires the aircraft to lift off the runway at or prior to a specified distance from the DER. In the example below, subtract the value in the RTRL procedure from the usable runway length to determine the reduced runway length. If the reduced length is equal to or greater than the aircraft’s calculated ground run, the procedure may be flown using a standard climb gradient of 200 feet per nautical mile.

Figure 5.16. RTRL Procedure.

ANTIGO, WI
 LANGLADE COUNTY (AIG)
 TAKEOFF MINIMUMS AND (OBSTACLE)
 DEPARTURE PROCEDURES
 AMDT 1 13206 (FAA)
 TAKEOFF MINIMUMS: **Rwy 9**, 300-2¼ or std. w/min.
 climb gradient of 215' per NM to 1900, or alternatively,
 with standard takeoff minimums and a normal 200' per
 NM climb gradient, takeoff must occur no later than
 1700' prior to DER.

5.21. Combination of Methods. The instrument procedure specialist may use a combination of the previously described methods to construct an ODP. In [Figure 5.17](#), the pilot has to comply with required climb gradient in the “TAKEOFF MINIMUMS” and the routing in the “DEPARTURE PROCEDURE,” or request the VCOA, for runways 6, 16, and 24; an IFR departure from runway 34 is not allowed.

Figure 5.17. Combination of Methods.

ROANOKE, VA
 ROANOKE-BLACKSBURG RGNL/
 WOODRUM FIELD (ROA)
 TAKEOFF MINIMUMS AND (OBSTACLE)
 DEPARTURE PROCEDURES
 AMDT 11 15344 (FAA)
 TAKEOFF MINIMUMS: **Rwy 6**, std. w/ min. climb of
 585' per NM to 3000, or 2600-3 for climb in visual
 conditions. **Rwy 16**, std. w/ min. climb of 340' per NM
 to 3000, or 2600-3 for climb in visual conditions. **Rwy**
24, std. w/ min. climb of 242' per NM to 2800, or 2600-
 3 for climb in visual conditions. **Rwy 34**, NA-
 Obstacles.
 DEPARTURE PROCEDURE: **Rwy 6**, climb on heading
 058° to 3200 before proceeding on course. **Rwy 16**,
 climb on heading 156° to 3000 before proceeding on
 course. **Rwy 24**, climb on heading 238° and on I-SZK
 LDA localizer west course to 4200 to DIXXY INT/I-SZK
 15.25 DME before proceeding on course.
 VISUAL CLIMB: Obtain ATC approval for VCOA when
 requesting IFR clearance. Climb in visual conditions to
 cross Roanoke-Blacksburg Rgnl/Woodrum Field at or
 above 3600 before proceeding on course.

5.22. Diverse Vector Area (DVA). [FAA-H-8083-16] A DVA may be created to allow radar vectors to be used in lieu of an ODP at some locations where an ODP has been established. DVA information states that headings are as assigned by ATC and climb gradients, when applicable, may be published immediately following the specified departure procedure ([Figure 5.18](#)). DVAs have been assessed for departures which do not follow a specific ground track. **Note:** DoD locations are not required to publish DVA information in the terminal procedures publication.

5.22.1. Pilots will determine if a DVA is published and if the aircraft is capable of meeting the published climb gradient. **(T-0)** Pilots will advise ATC when requesting the IFR clearance, or as soon as possible, if unable to meet the DVA climb gradient. **(T-0)**

5.22.2. DVAs require the standard IFR departure climb gradient unless a higher than standard IFR climb gradient is published with the DVA under “DIVERSE VECTOR AREA (RADAR VECTORS)” **Note:** DoD airfields are not required to publish a DVA or associated climb gradient but controllers are required to provide the climb gradient if it is higher than standard when issuing a clearance to fly the DVA.

5.22.3. IFR departure climb gradients published under the “TAKEOFF MINIMUMS” or “DEPARTURE PROCEDURE” in the “Trouble T” section of the terminal procedures publication do not apply to DVAs. However, low close-in obstacles must always be accounted for in takeoff planning.

5.22.4. [AIM 5-2-9] Use of a DVA is valid only when aircraft are permitted to climb uninterrupted from the departure runway to the MVA/MIA (or higher). ATC will not assign an altitude below the MVA/MIA within a DVA.

Figure 5.18. Diverse Vector Area.



5.23. Specific ATC Departure Instructions. [FAA JO 7110.65]

5.23.1. Specific ATC departure instructions include a heading and an altitude. **Note:** These instructions are not considered radar vectors.

5.23.2. Do not apply wind drift corrections. **(T-1)**

5.23.3. [ICAO] [ICAO Doc 8168 Volume 1, Part I, Section 3, Chapter 1] Pilots should not accept radar vectors during departure unless:

5.23.3.1. They are above the minimum altitude(s)/height(s) required to maintain obstacle clearance in the event of engine failure. This relates to engine failure between V1 and minimum sector altitude or the end of the contingency procedure as appropriate; or

5.23.3.2. The departure route is non-critical with respect to obstacle clearance.

5.23.4. **(NAS and OCONUS Military Fields)** USAF pilots must verify the ATC departure instructions are consistent with a published departure procedure (SID or ODP) or with a published DVA [JO 7110.65]. **(T-0)** If the departure instructions are not consistent with a published departure procedure or DVA, USAF pilots must fly the ODP prior to the ATC departure instructions. **(T-0)** Query the controller and inform them of the intent to fly the ODP prior to the departure instructions. **Exception:** Pilots may accept inconsistent departure instructions and assume visual terrain clearance responsibility (see-and-avoid) in VMC to a minimum IFR altitude.

5.24. Standard Instrument Departure (SID). A SID is a departure procedure established at certain airfields to simplify clearance delivery procedures and assist in meeting environmental, capacity, and ATC requirements. SIDs may be requested by specific ATC facilities, military services, or other users to enhance operations. SIDs also provide protection from obstacles; however, they are not ODPs and may not be flown unless approved by ATC.

5.24.1. A heavy black line on the graphic version depicts a SID route; thin black lines on the graphic version show transition routings.

5.24.2. If a higher than standard climb gradient is required, it is published on the SID.


5.24.3. Expect an ATC clearance containing a SID at locations where one is published. If unable to fly a SID, include “NO SID” in the remarks section of the flight plan or contact ATC as soon as possible.

5.24.4. SIDs may include altitude restrictions necessary for ATC. The “top altitude” is the charted “maintain” altitude contained in the procedure description or assigned by ATC (Figure 5.19).

5.24.5. Pilots will not fly a SID without ATC clearance. **(T-0)**

5.24.6. [AIM 5-2-9] Do not exceed a speed restriction published on a SID until passing the associated waypoint. **(T-0)**

Figure 5.19. Civil SID with Top Altitude.

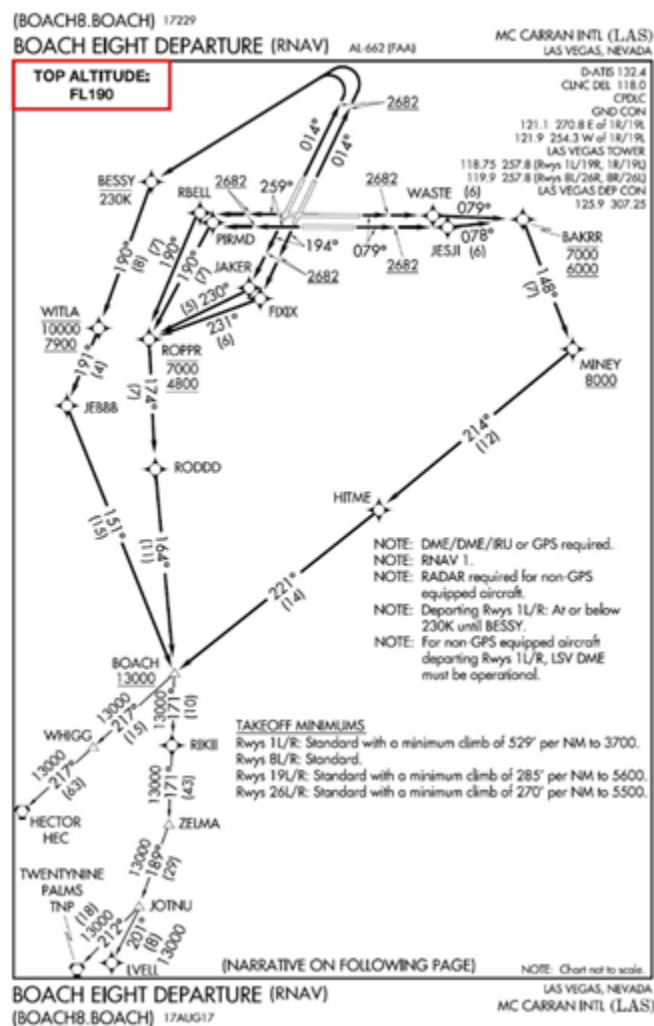

5.25. SID Clearances. The filed or expected altitude is not relevant and has no bearing on the SID unless communications are lost between the pilot and ATC. Airspeed restrictions always remain in effect even on amended clearances unless the controller explicitly cancels or amends the speed restrictions. The pilot may consider the SID cancelled unless the controller adds “expect to resume SID” if radar vectored or cleared off an assigned SID. **Note:** ATC cannot waive the 250 knots below 10,000 feet speed restriction at any time within the NAS [14 CFR Part 91.117].

5.25.1. [AIM Section 2] In the NAS:

5.25.1.1. SID phraseology is in accordance with [Table 5.3](#).

5.25.1.2. If ATC issues a new altitude restriction, all previously issued altitude restrictions are cancelled, including those published on the SID. Comply with all speed restrictions and lateral path requirements published on the SID unless cancelled by ATC. **(T-1)**

5.25.1.3. Inform ATC upon initial contact of the altitude leaving and any assigned restrictions not published on the procedure if cleared to “climb via SID.”

5.25.1.4. ATC issues a “climb via SID” clearance if ATC reinstates the SID after issuing vectors to an aircraft. Comply with lateral navigation, vertical navigation, and speed restrictions unless otherwise directed by ATC.

5.25.1.5. Aircraft instructed to resume a SID that contains speed or altitude restrictions are issued all applicable restrictions or advised to comply with published restrictions.

Table 5.3. NAS SID Phraseology.

ATC Instruction	Explanation
“Cleared Boach Six departure”	- Follow the lateral profile of the SID
“Cleared Boach Six departure, climb and maintain eleven thousand.”	- Follow the lateral profile of the SID
“Cleared Boach Six departure, climb via SID.”	- Follow the lateral profile of the SID - Comply with altitude restrictions while climbing to the SID top altitude
“Cleared Boach Six departure, climb via SID except maintain eleven thousand.”	- Follow the lateral profile of the SID - Comply with altitude restrictions while climbing to the assigned altitude; stop climb at the assigned altitude until issued further clearance by ATC
“Cleared Boach Six departure, climb via SID except cross WITLA at nine thousand.”	- Follow the lateral profile of the SID - Comply with altitude restrictions while climbing to cross the waypoint at the assigned altitude - Fly the remainder of the SID as published
Note: Always comply with speed restrictions or ATC-issued speed control instructions, as applicable. (T-0)	

5.25.2. [ICAO Doc 4444] [ICAO] ATC clearances issued to aircraft on a SID include if remaining speed or level restrictions are to be followed or cancelled; standard clearance phraseology is shown in **Table 5.4**.

5.25.2.1. If there are no remaining published level or speed restrictions on the SID, the phrase “climb to *[level]*” should be used.

5.25.2.2. When subsequent speed restrictions are issued, and if the cleared level is unchanged, the phrase “climb via SID to *[level]*” should be omitted.


5.25.2.3. When a departing aircraft is cleared to proceed direct to a published waypoint on the SID, the speed and level restrictions associated with the bypassed waypoints are cancelled. All remaining published speed and restrictions remain applicable.

Table 5.4. ICAO SID Phraseology.

ATC Instruction	Explanation
CLIMB VIA SID TO <i>(level)</i>	- Climb to the cleared level and comply with published level restrictions - Follow the lateral profile of the SID
CLIMB VIA SID TO <i>(level)</i> , CANCEL LEVEL RESTRICTION(S)	- Climb to the cleared level, published level restrictions are cancelled - Follow lateral profile of the SID
CLIMB VIA SID TO <i>(level)</i> , CANCEL LEVEL RESTRICTION(S) AT <i>(point(s))</i>	- Climb to the cleared level, published level restriction(s) at the specified point(s) are cancelled - Follow the lateral profile of the SID
CLIMB VIA SID TO <i>(level)</i> , CANCEL SPEED RESTRICTION(S)	- Climb to the cleared level and comply with published level restrictions - Follow lateral profile of the SID - Published speed restrictions and ATC-issued speed control instructions are cancelled
CLIMB VIA SID TO <i>(level)</i> , CANCEL SPEED RESTRICTION(S) AT <i>point(s)</i>	- Climb to the cleared level and comply with published level restrictions - Follow the lateral profile of the SID - Published speed restrictions are cancelled at the specified point(s)
CLIMB UNRESTRICTED TO <i>(level)</i> or CLIMB TO <i>(level)</i> , CANCEL LEVEL AND SPEED RESTRICTION(S)	- Climb to the cleared level, published level restrictions are cancelled - Follow the lateral profile of the SID - Published speed restrictions and ATC-issued speed control instructions are cancelled
Note: Comply with published speed restrictions or ATC-issued speed control instructions.	

5.26. Military SID. Military SIDs within the NAS may have some obstacles charted to scale and provide a table with climb rate information ([Figure 5.20](#)). Obstacle clearance climb rates may be denoted with an asterisk (*) while ATC climb rates may be denoted with a dagger (†). Pilots should assume a climb rate is an obstacle clearance climb rate if only one climb rate is given. The climb rates published are given in vertical velocities for specific groundspeeds.

Figure 5.20. Military SID.

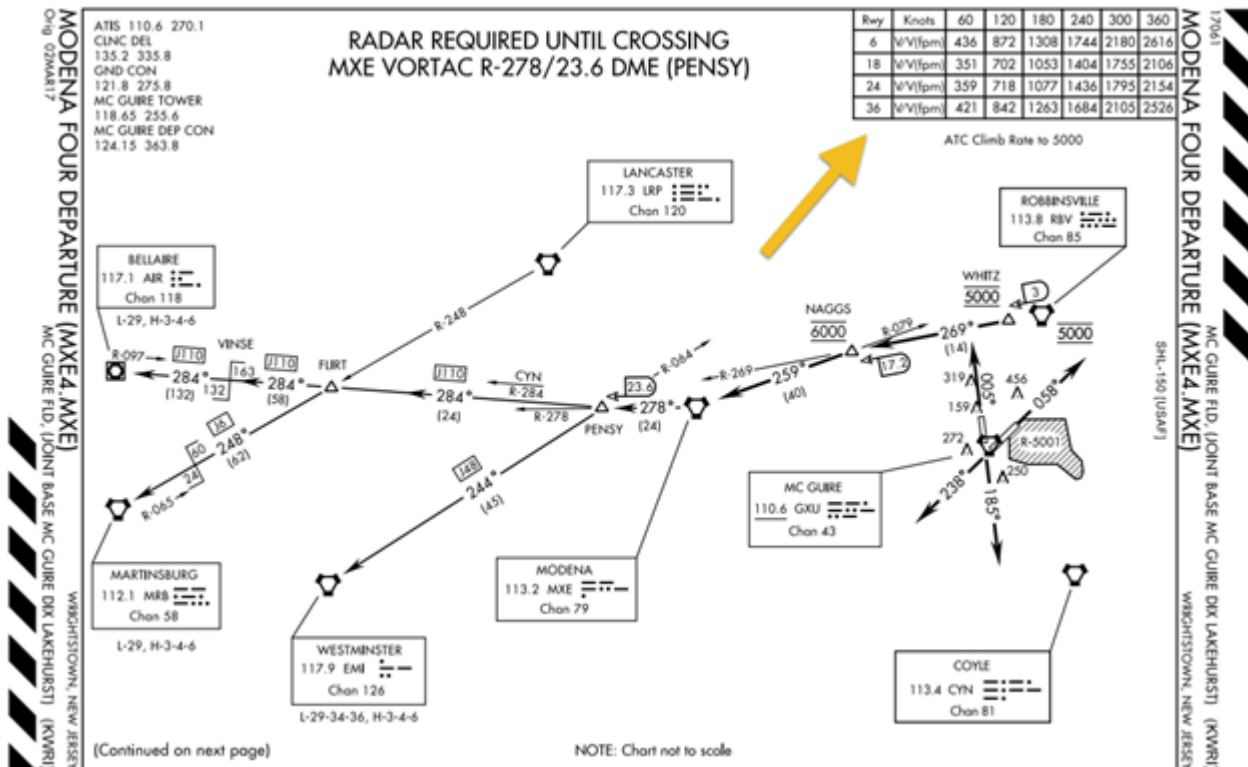

5.27. Civil SID. Obstacle climb gradients higher than the standard IFR departure climb gradient are published directly on a civil SID (Figure 5.21). U.S. Army SIDs are produced by the FAA within the NAS and should be treated as civil SIDs. Civil SIDs may list takeoff obstacle notes (e.g., low close-in obstacles) textually, but do not depict any obstacles graphically. **Note:** The FAA is removing takeoff obstacle notes from civil SIDs; eventually, takeoff obstacles may be found only in the “Trouble T” section of the terminal procedures publication.

O'HARE THREE DEPARTURE

TOP ALTITUDE:
5000

SPECIAL INSTRUCTIONS: For appropriate departure control frequency, see graphic. Use frequency depicted within sector where first navaid/fix for your route is located (sectors indicated by dashed lines; frequencies in dashed box within).

CHICAGO DEP CON WEST
126.625 307.2

IOWA CITY
116.2 IOW
Chan 109
N41°31.14'
W91°36.79'
L-28, H-5

NOONNY
N42°02.80'
W88°48.51'
L-28, H-5

POLO
111.2 PLL
Chan 49
N41°57.94'
W89°31.45'
L-28

DUPAGE
108.4 DPA
Chan 21
N41°53.42'
W88°21.01'
L-28

MYKIE
N42°09.80'
W88°48.51'
L-28, H-5

SIMMIN
N41°58.84'
W88°52.71'
L-28

PEKUE
N41°47.79'
W88°48.51'
L-28, H-5

QUINN
N41°54.80'
W88°48.51'
L-28, H-5

BACEN
N41°24.40'
W88°01.78'
L-28, H-5

ACITO
N41°23.92'
W88°11.00'
L-28, H-5

ROBERTS
116.8 RBS
Chan 115
N40°34.90'-W88°09.86'
L-27, H-5

CHICAGO O'HARE INTL (ORD)
113.9 ORD
Chan 86
N41°59.26'
W87°54.29'

PMPKN
N42°18.55'
W87°56.03'
L-28, H-5

RAYNR
N42°18.66'
W87°49.55'
L-28, H-5

PETTY
N42°49.64'
W87°38.04'
L-28

ALL DME Equipped Aircraft Cross 4000

ALL DME Equipped Aircraft Cross 3000

CHICAGO DEP CON EAST/NORTH
125.0 337.4

EBAKE
N42°16.76'
W87°03.80'
L-28

DUFEE
N42°06.75'
W87°03.80'
L-28

MOBLE
N41°56.73'
W87°03.80'
L-28

GIPPER
115.4 GJ
Chan 101
N41°46.12'-W86°19.11'
L-28, H-5-10

KEELER
116.6 ELX
Chan 113
N42°08.66'
W86°07.36'
L-28, H-5-10

NOTE: All turbo-jet departures in all directions, maintain 250K until advised by ATC.

NOTE: RADAR required.
NOTE: Chart not to scale.

TAKEOFF MINIMUMS:
Rwys 4L/R, 9L/R, 10L/C/R, 15, 22L/R: Standard.
Rwy 27L: Standard with minimum climb of 220' per NM to 900, or alternatively, with standard takeoff minimums and a normal 200' per NM climb gradient, takeoff must occur no later than 1500' prior to DER.
Rwy 27R: Standard with minimum climb of 220' per NM to 1800'.
Rwy 28C: Standard with minimum climb of 220' per NM to 1700'.
Rwy 28L: Standard with minimum climb of 235' per NM to 1000, or alternatively, with standard takeoff minimums and a normal 200' per NM climb gradient, takeoff must occur no later than 1900' prior to DER.
Rwy 28R: Standard with minimum climb of 225' per NM to 1700'.
Rwy 33: Standard with minimum climb of 240' per NM to 1700'.

(NARRATIVE ON FOLLOWING PAGE)

CHICAGO O'HARE INTL (ORD)

CHICAGO O'HARE INTL (ORD)

AL-166 (FAA)

ORD3, ORD1, 17341

O'HARE THREE DEPARTURE

ORD3, ORD1, 17341

Table 5.5. ICAO Maximum Speeds for “Turning Departures.”


Airplane Category	Maximum Speed (knots)
A	120
B	165
C	265
D	290
E	300
H	90

Table 5.6. (Added-AMC) MAF Standard IFR Takeoff Minimums.

Mission	Visibility	Remarks
Operational	RVR 1000 (300m)	Takeoff below RVR 1600 requires: - Two operating RVR with minimum 1000 (300m) on both - Runway centerline lighting is operational
All others	RVR 1600 (500m)	Required on all operating RVR readouts
Notes: 1. At or above RVR 1600 only touchdown RVR is controlling. 2. Mid-point RVR may be substituted for inoperable rollout RVR 3. If no RVR is available or prescribed, reported vis must be 1/2 SM (800 meters) or greater		

5.29. Vector SID. Vector SIDs are established where ATC provides radar navigation guidance to a filed route, assigned route, or to a fix depicted on the SID. Typically, a vector SID depicts only area NAVAIDs or fixes with simple departure instructions ([Figure 5.22](#)). A vector SID may also include initial ATC instructions such as a heading, direction of turn, and altitude. **Note:** The heavy black line on a vector SID depicts runway heading and not a desired ground track.

Figure 5.22. Radar Vector SID.

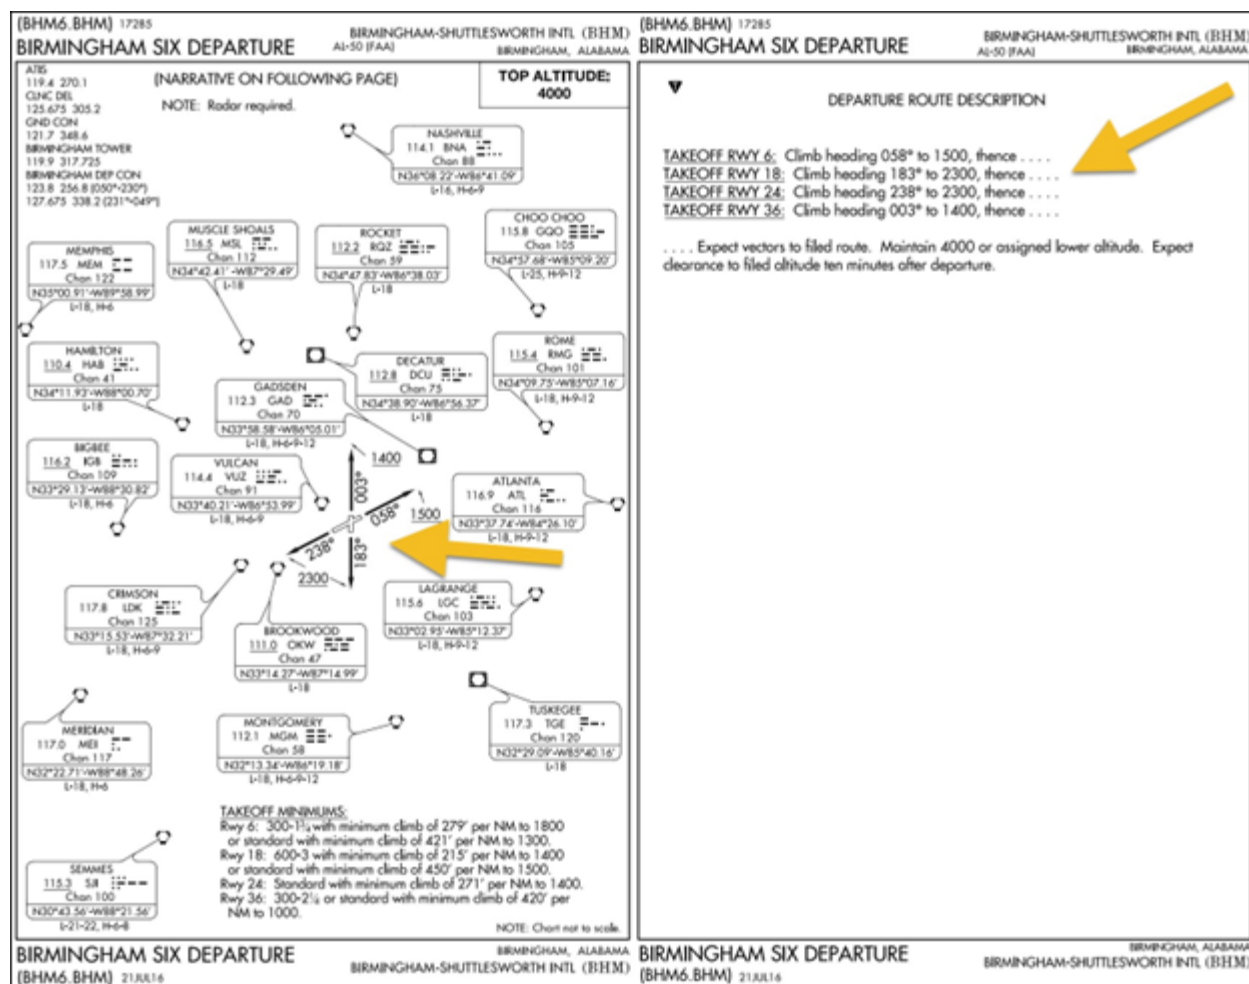

5.30. MAJCOM-Certified Departure. In restricted areas or during contingency operations, MAJCOMs may develop and authorize departure procedures (MAJCOM-certified procedures). These procedures are for specific aircraft at specific locations in accordance with AFMAN 11-230, *Instrument Procedures*. Aircrew will complete MAJCOM-specific training before using such procedures. (T-1)

5.31. Special Departure Procedure (SDP). SDPs are aircraft-specific commercially designed and published procedures that require MAJCOM training and certification before use. SDPs can be useful for multi-engine aircraft by allowing an increased takeoff gross weight while providing escape routing in the event the aircraft loses thrust on takeoff. Notice how the SDP routing differs from the ODP routing (Figure 5.23 and Figure 5.24.).

5.31. (AMC) Special Departure Procedure (SDP). SDP is a generic term to describe an escape procedure designed to allow a safe takeoff for multi-engine aircraft when One Engine Inoperative (OEI) climb rate would not otherwise meet the TERPS minimum climb gradient requirement. Although aircrew cannot file or receive a specific clearance for an SDP as a departure method, it may be used to satisfy OEI obstacle avoidance requirements. SDPs may come from multiple commercial sources authorized IAW MDS-specific guidance. Aircrew will not use any graphical representation of an SDP that does not match its source. (T-2)

Figure 5.23. Albuquerque ODP (Runway 8).



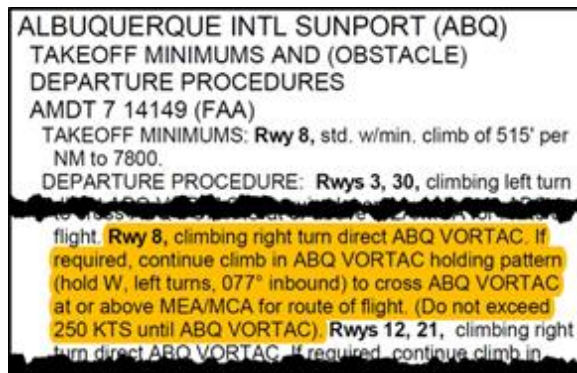


Figure 5.24. Albuquerque SDP (Runway 8).

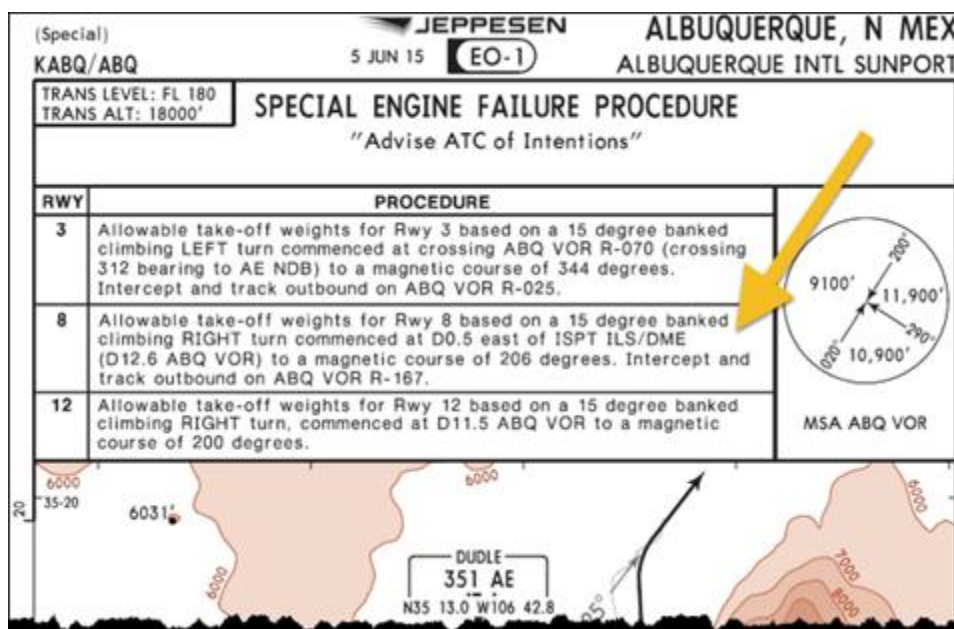

5.32. RNAV Departures. [FAA Order 8260.46, *Departure Procedure Program*; AIM 5-1-16; AIM 5-5-16] RNAV departures may be RNAV 1 or RNP 1 (Figure 5.25). The default specification is RNAV 1; RNP 1 is used when a departure contains a radius-to-fix (RF) leg or for DME/DME/IRU aircraft use when radar monitoring is not desired. **Note:** The required specification, equipment sensor limitations, and any critical DME facilities are annotated clearly on the procedure.

Figure 5.25. RNAV Departure Procedures.

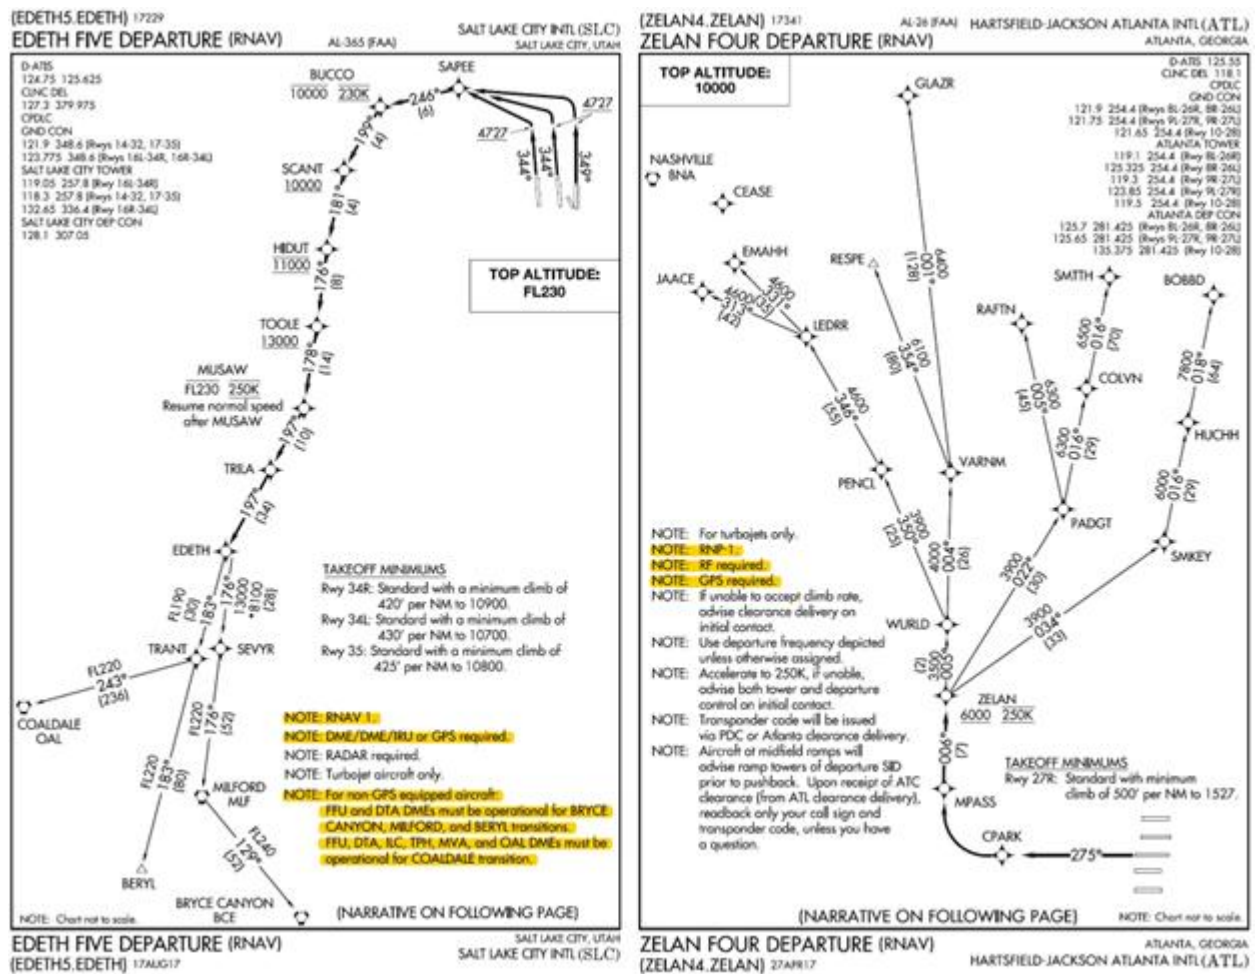

Chapter 6


PERFORMANCE-BASED NAVIGATION

6.1. General. [ICAO Doc 9613; AC 90-105; AIM 1-2-2] The performance-based navigation (PBN) concept specifies that aircraft area navigation and required navigation performance (RNP) system performance requirements be defined in terms of the accuracy, integrity, continuity and functionality needed for operations in a defined airspace (**Figure 6.1.**). It represents a shift from sensor-based navigation (e.g., the navigation source, such as TACAN, is specified) to performance-based navigation (e.g., the required performance level is specified).

6.1.1. Two fundamental aspects of any PBN operation are the requirements set out in the appropriate navigation specification and the NAVAID infrastructure (both ground-based and space-based) allowing the system to operate.

6.1.2. Navigation specifications identify the choice of sensors and equipment that may be used to meet performance requirements. These navigation specifications are defined at a sufficient level of detail to facilitate global harmonization by providing specific implementation guidance.

Figure 6.1. Progression from Sensor-based to Performance-based Navigation.

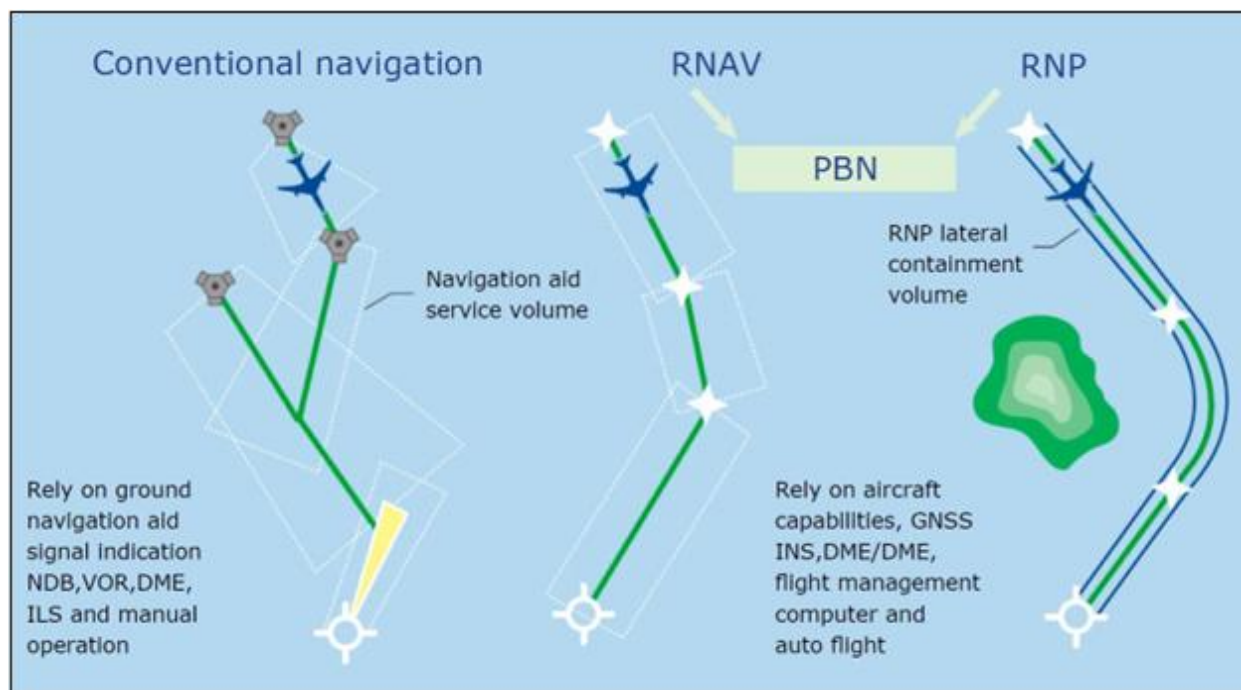

6.2. Area Navigation (RNAV) Operations and RNP Operations. [AIM 1-2-1 through AIM 1-2-4; AIM 5-1-16; AIM 5-5-16] MAJCOMs will provide aircrew training, ensure aircraft certification, and grant operational approval for RNAV operations and RNP operations.

6.3. PBN Context. PBN is one of several enablers of an airspace concept. Communications, ATS surveillance, and air traffic management are also essential elements of an airspace concept.

6.3.1. PBN relies on area navigation and includes the following three components:

6.3.1.1. The NAVAID infrastructure.

6.3.1.2. The navigation specification.

6.3.1.3. The navigation application.

6.3.2. The navigation application results from applying the NAVAID infrastructure and navigation specification to routes and instrument procedures within an airspace concept.

6.4. Fundamental PBN Concepts. The following concepts are fundamental to a solid understanding of PBN:

6.4.1. RNAV specification – a navigation specification based on area navigation that does not include the requirement for on-board performance monitoring and alerting, designated by the prefix “RNAV” (e.g., RNAV 5, RNAV 1).

6.4.2. RNP specification – a navigation specification based on area navigation that includes the requirement for on-board performance monitoring and alerting, designated by the prefix “RNP” (e.g., RNP 4, RNP 0.3).

6.5. Navigation Functional Requirements. Both RNAV specifications and RNP specifications include requirements for certain navigation functionalities. More sophisticated navigation specifications include the requirement for navigation databases and the capability to execute database procedures. At the basic level, these functional requirements may include:

6.5.1. Continuous indication of aircraft position relative to track displayed to the pilot flying on a navigation display situated in the primary field of view;

6.5.2. Display of distance and bearing to the active TO waypoint;


6.5.3. Display of ground speed or time to the active TO waypoint;

6.5.4. Navigation data storage function; and

6.5.5. Failure indication of the RNAV system or RNP system, including the sensors.

6.6. Designation of RNAV Specifications and RNP Specifications. “RNP X” designates an RNP specification (e.g., RNP 4); “RNAV X” designates an RNAV specification (e.g., RNAV 1). A prefix is used without a suffix where a navigation specification covers various phases of flight and permits different lateral navigation (LNAV) accuracy during various flight phases (e.g., A-RNP) (Figure 6.2). **Note:** “RNP APCH” and “RNP AR APCH” are the designations for approaches that use RNP specifications. See [paragraph 6.6.1](#).

Figure 6.2. Navigation Specification Designations.

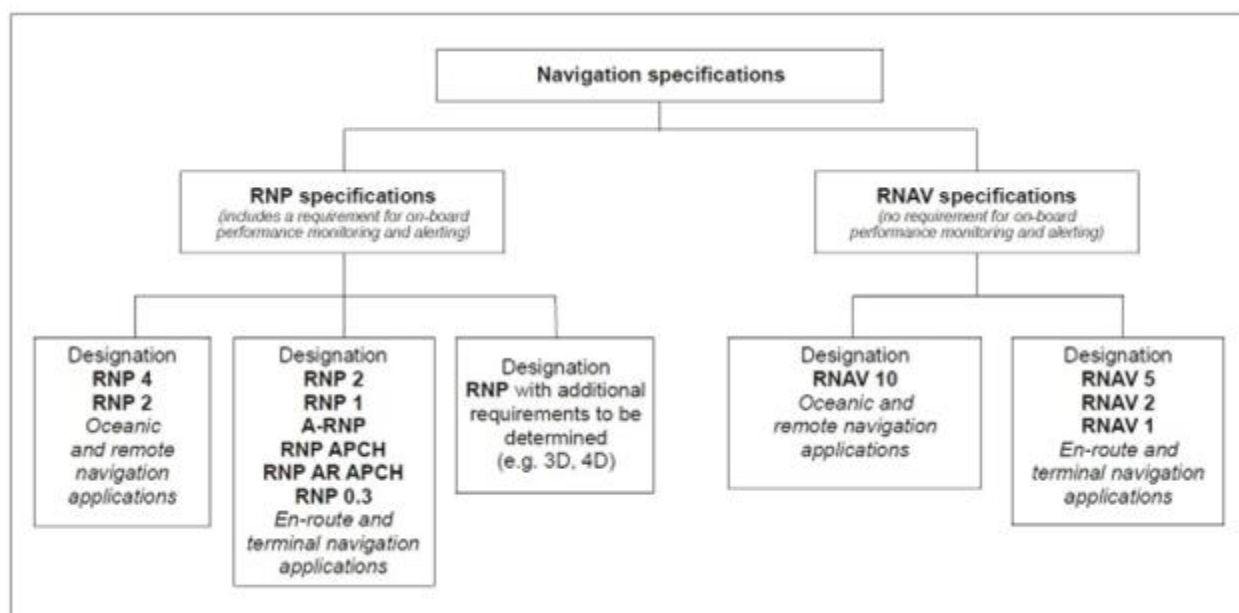


6.6.1. For RNAV designations and RNP designations, the “X” refers to the LNAV accuracy, or total system error (TSE), in nautical miles, expected to be achieved at least 95% of the flight time by the aircraft operating within the airspace, route, or procedure (**Figure 6.3**). TSE is composed of:

6.6.1.1. **Path definition error (PDE).** PDE is the difference between the defined path on a navigation system and the desired path at a specific point. PDE is considered negligible due to the database integrity process.

6.6.1.2. **Flight technical error (FTE).** FTE is the accuracy with which the aircraft is controlled as measured by the indicated aircraft position with respect to the indicated command or desired position. This functions as a combination of aircraft performance and the aircrew flying. It does not include pilot errors.

6.6.1.3. **Navigation system error (NSE).** NSE is the difference between true position and estimated position. NSE is contained through integrity monitoring within the system itself. The NSE is largely independent of the aircraft on which the system is installed. **Note:** In sensor-based navigation, the NSE and PDE were built into the design; therefore, aircrew focused on resolving FTE only. In contrast to sensor-based navigation, PBN can now specifically target the NSE.

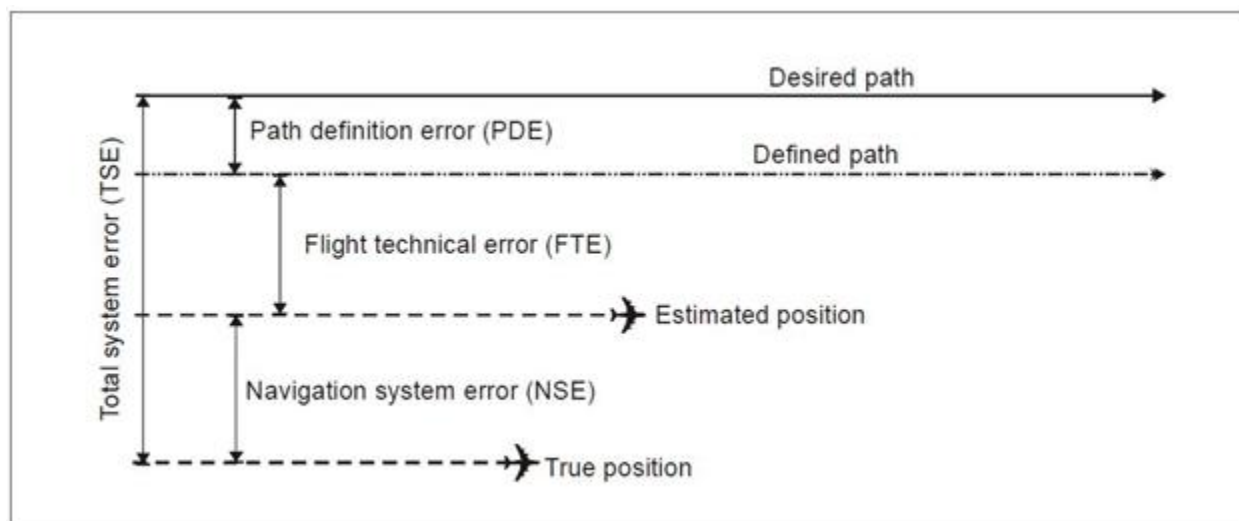Figure 6.3. Lateral Navigation Errors.

6.6.2. Approach navigation specifications cover all segments of the instrument approach. RNP specifications are designated using RNP as a prefix and an abbreviated textual suffix (e.g., RNP APCH or RNP AR APCH). **Note:** Conventional approaches with PBN segments may include RNAV specifications or RNP specifications specific to defined segments of the approach.

6.6.2.1. ICAO is currently working to harmonize the naming convention for PBN IAPs. The ICAO RNP APCH navigation specification is currently identified by “RNAV (GNSS) RWY XX.” In the future, this specification will be identified by “RNP RWY XX.” The ICAO RNP AR APCH navigation specification is currently identified by “RNAV (RNP) RWY XX.” In the future, this specification will be identified by “RNP RWY XX (AR).”

6.6.2.2. [NAS Only] “RNAV (GPS)” is equivalent to the ICAO designation “RNP APCH.”


6.6.2.3. [NAS Only] “RNAV (RNP)” is equivalent to the ICAO designation “RNP AR APCH.”

6.7. RNAV Designations and RNP Designations. In cases where navigation accuracy is used as part of the designation of a navigation specification, it is only one of the functional and performance requirements included in a navigation specification ([Figure 6.4.](#)).

6.7.1. Functional and performance requirements are defined for each navigation specification; therefore, an aircraft approved for an RNP specification is not automatically approved for all RNAV specifications.

6.7.2. Similarly, an aircraft approved for an RNAV specification or RNP specification having a stringent accuracy requirement (e.g., RNP 0.3) is not automatically approved for a navigation specification having a less stringent accuracy requirement (e.g., RNP 1, RNP 4).

6.7.3. It may seem logical, for example, that an aircraft approved for RNP 1 be automatically approved for RNP 4; however, this is not the case. Aircraft approved to the more stringent accuracy requirements may not necessarily meet some of the functional requirements of the navigation specification having a less stringent accuracy requirement.

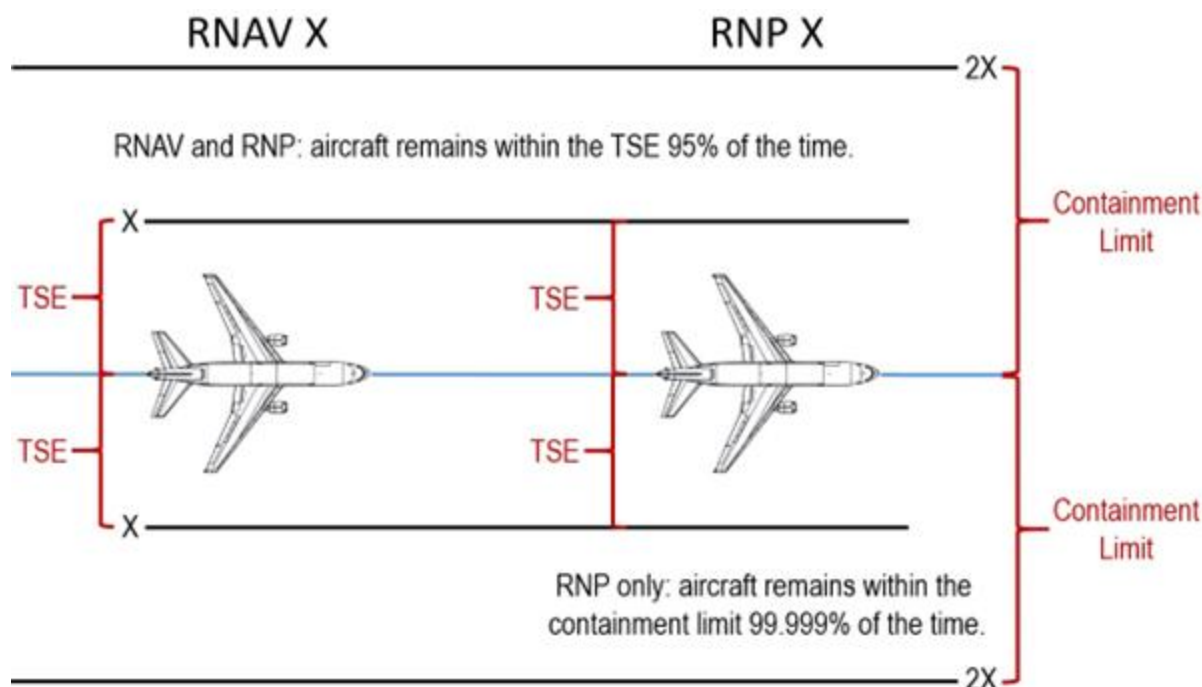Figure 6.4. RNAV Designations vs RNP Designations.

6.8. On-board Performance Monitoring and Alerting. On-board performance monitoring and alerting is the main element that determines if the navigation system complies with the necessary safety level associated with an RNP application (versus an RNAV application). Additionally, it determines if the navigation system relates to lateral and longitudinal navigation performance. Finally, it determines if the navigation system allows the aircrew to detect that the navigation system is not achieving or cannot guarantee the navigation performance required with 10^{-5} integrity (e.g., less than a 0.001% chance).

6.8.1. RNP systems provide improvements on the integrity of operations; this may permit closer route spacing and can provide sufficient integrity to allow only RNP systems to be used for navigation in a specific airspace. The use of RNP systems may therefore offer significant safety, operational, and efficiency benefits over RNAV systems.

6.8.2. Both RNAV systems and RNP systems are required to meet an accuracy requirement 95% of the time (e.g., with a 95% confidence). Normally, RNAV systems do not include on-board performance monitoring and alerting; aircrew will monitor a lateral deviation display (e.g., CDI) for course errors. **(T-0)**

6.8.3. RNP systems are required to alert the aircrew if the accuracy requirement is not met or the probability that lateral TSE exceeds $2X$ is greater than 10^{-5} (e.g., the performance monitoring and alerting requirement contains the aircraft within $2X$ at a 99.999% level of confidence). Compliance with the performance monitoring and alerting requirement does not imply automatic monitoring of FTE. Therefore, the on-board monitoring and alerting function should consist of at least an NSE monitoring and alerting algorithm and a lateral deviation display enabling the crew to monitor the FTE.

Chapter 7


PERFORMANCE-BASED COMMUNICATION AND SURVEILLANCE

7.1. General. [ICAO Doc 9869, *Performance-based Communication and Surveillance (PBCS) Manual*; AC 90-117] The performance-based communication and surveillance (PBCS) concept provides objective operational criteria to evaluate different and emerging communication and surveillance technologies intended for evolving air traffic management (ATM) operations.

7.2. PBCS Operations. MAJCOMs will train aircrews, certify aircraft PBCS systems, and grant operational approval prior to use for PBCS operations. **Note:** This requirement does not prohibit aircrews from operating in airspace where PBCS is implemented; however, such aircraft would not be eligible for reduced separation minima requiring PBCS capability (e.g., North Atlantic High Level Airspace).

7.3. PBCS Context. The PBCS concept is aligned with that of PBN (Figure 7.1). While the PBN concept applies RNAV specifications and RNP specifications to the navigation element, the PBCS concept applies required communication performance (RCP) and required surveillance performance (RSP) specifications to communication and surveillance elements, respectively. Each RCP or RSP specification includes allocated criteria among the components of the communication and surveillance systems involved.


Figure 7.1. Performance-based ATM Model.

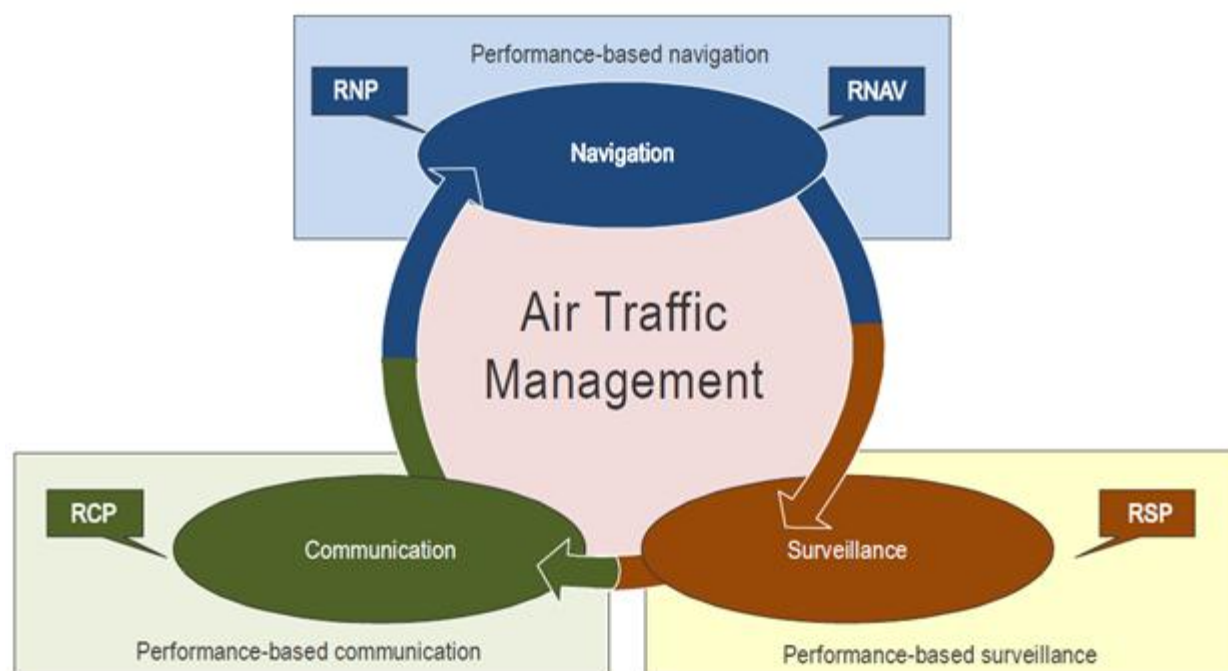

7.4. RCP Specifications. An RCP specification represents operational parameters for the complete communication transaction. "RCP X" designates an RCP specification and makes RCP expiration time clear to airspace planners, aircraft manufacturers, and operators (e.g., RCP 240). RCP specifications are applied to achieve required communication performance and may support specific aircraft separation minima.

7.5. Actual Communication Performance (ACP). ACP is the combined uplink and downlink performance of ground systems, communication service, and aircraft systems (**Figure 7.2.**). ACP is an indicator of the operational performance of a communication system which includes human and technical components.

Figure 7.2. Actual Communications Performance (ACP).

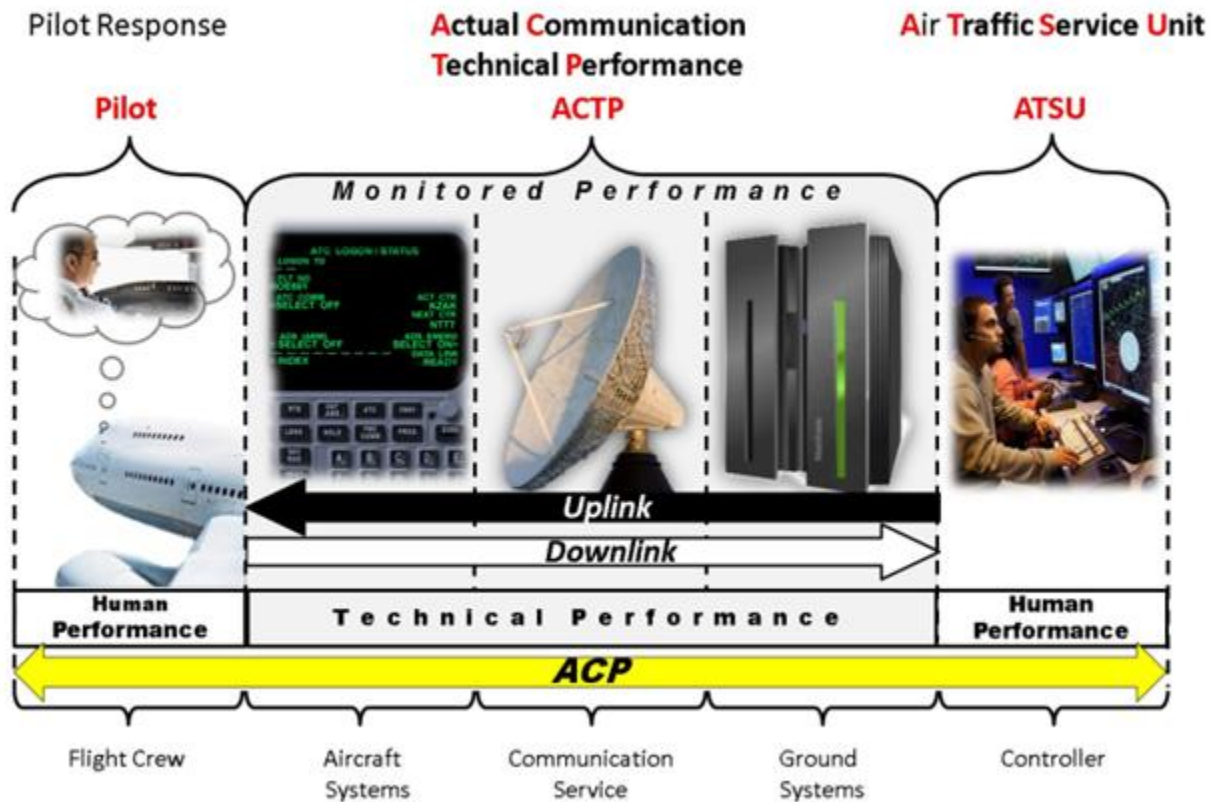

7.6. RSP Specifications. An RSP specification represents operational parameters for the complete surveillance transaction. “RSP X” designates an RSP specification and makes RSP overdue delivery time clear to airspace planners, aircraft manufacturers, and operators (e.g., RSP 180). RSP specifications are applied to airspace based on specific objectives (e.g., the surveillance performance required to support specific separation minima).

Chapter 8

GROUND-BASED NAVIGATION AIDS

8.1. General. Various NAVAIDs are in use today, each serving a specific purpose. This chapter builds on the concepts introduced in FAA handbooks and manuals.

8.1.1. Refer to AIM 1-1-1 through AIM 1-1-20 for basic NAVAID information.

8.1.2. Additional detailed information may be found in FAA-H-8083-15, FAA-H-8083-16, and FAA-H-8083-25.

8.2. Reporting Malfunctions. [AIM 1-1-13] Pilots should notify ATC of any NAVAID malfunction or deteriorating performance.

8.3. Using Ground-based NAVAIDs.

8.3.1. Tune the desired frequency or channel.

8.3.2. Identify the NAVAID via aural (Morse code) or visual (alphanumeric) signal.

8.3.3. Monitor the station identification (either aural or visual) to ensure the transmission of a reliable signal.

8.3.3.1. Removal of station identification warns pilots that the facility is officially off the air for tune-up or repairs and may be unreliable even though signals are received.

8.3.3.2. There is a direct correlation between the strength of an NDB identifier and the strength and reliability of its signal; there are no off flags to indicate loss of signal. Therefore, monitor the NDB for the entire procedure when procedures require an NDB.

8.3.4. Select proper position for the navigation system switches.

8.3.5. Display the desired information on the navigation instruments.

8.3.6. Check the appropriate instrument indicators for proper operation.

8.4. VOR Minimum Operational Network (MON). [AIM 1-1-3] The FAA plans to remove selected VORs from service as flight procedures and the en route structure are gradually being replaced with PBN procedures.

8.4.1. PBN procedures are primarily reliant on GNSS. Aircraft equipped with DME/DME systems may continue flying PBN procedures during a GNSS disruption.

8.4.2. The FAA plans to retain a limited network of VORs for aircraft not equipped with a DME/DME system; the MON provides basic navigation service for these aircraft if GNSS becomes unavailable. During a GNSS disruption, the MON enables aircraft to navigate through the affected area or to a safe landing at an airfield without reliance on GNSS.

8.4.3. Navigation using the MON may not be as efficient as the new PBN route structure; however, use of the MON should provide nearly continuous VOR signal coverage at 5,000 feet above ground level (AGL) across the NAS, outside of the western U.S. mountainous area.

8.5. TACAN. A TACAN consists of a rotating antenna for transmitting azimuth information and a receiver-transmitter for transmitting range information. Aircrew will not navigate using a TACAN unless valid azimuth and range information are available (e.g., a TACAN broadcasting range with no valid azimuth or a TACAN broadcasting azimuth with no valid range must be considered unusable). **(T-0)**

8.5.1. Like the VOR, the receipt of a TACAN signal is dependent on the line-of-sight principle. Therefore, aircraft altitude, distance from station, terrain and obstructions are principal factors that affect TACAN signals.

8.5.2. The TACAN may also have an “X” or “Y” setting. Pilots may assume the TACAN is set to “X” unless the letter “Y” appears in parenthesis after the TACAN frequency.

8.5.3. The ground equipment responsible for providing DME is only capable of responding to 100 simultaneous interrogations before saturation occurs. TACANs are designed to disregard weaker signals when more than 100 DME interrogations are received.

8.6. Instrument Landing System (ILS). [ICAO Annex 10 Volume 1, *Radio Navigation Aids*] ICAO PANS-OPS criteria defines the standard service volume for a localizer (LOC) as 25 nautical miles within 10 degrees of the front course centerline, 17 nautical miles between 10 degrees and 35 degrees of the front course centerline, and 10 nautical miles outside of 35 degrees from the front course centerline.

8.6.1. Where topographical features dictate, or operational requirements permit, this service volume may be reduced to 18 nautical miles within the 10-degree sector and 10 nautical miles for the remainder of the coverage when alternative navigation means provide satisfactory coverage within the intermediate approach area.

8.6.2. [NAS Only] FAA criteria defines the standard service volume for a localizer in accordance with the reduced localizer service volume of 18 nautical miles within the 10-degree sector and 10 nautical miles for the remainder of the coverage [AIM 1-1-9].

8.7. Localizer (LOC). [ICAO Annex 10 Volume 1] The ICAO abbreviation for a localizer facility on an instrument procedure is “LLZ”; however, the abbreviation “LOC” may also be used. ICAO PANS-OPS criteria require localizer final approach track alignment within 5 degrees of runway centerline; U.S. TERPS criteria requires localizer final approach track within 3 degrees of runway centerline.

8.7.1. A localizer offset more than 5 degrees from runway centerline is considered an instrument guidance system.

8.7.2. [NAS Only] A localizer offset more than 3 degrees from runway centerline is considered a localizer type directional aid (LDA) [FAA Order 6750.24E, *Instrument Landing System and Ancillary Electronic Component Configuration and Performance Requirements*].

Chapter 9

SPACE-BASED NAVIGATION AIDS

9.1. General. [ICAO Doc 9849, *Global Navigation Satellite System*; AIM 1-1-18] The term GNSS refers to any satellite constellation that provides positioning, navigation, and timing services. Theoretically, a GNSS receiver can calculate its three-dimensional position by knowing its range from three satellites if the receiver clock is perfectly synchronized with the satellite clocks. In practice, the GNSS receiver calculates the “pseudo-range” to at least four satellites and their positions to calculate the clock offset via the pseudo-range of the fourth satellite.

9.1.1. There are only two fully operational GNSS constellations providing global services: the U.S. global positioning system (GPS) and the Russian Federation *globalnaya navigazionnaya sputnikovaya sistema* (GLONASS).

9.1.1.1. The European Union (EU) Galileo constellation currently has 26 total satellites and 22 operational satellites in orbit.

9.1.1.2. The Chinese BeiDou navigation satellite system (BDS) constellation currently has 35 total satellites and 30 operational satellites in orbit.

9.1.2. GNSS constellations are not necessarily interoperable; therefore, GNSS receivers require specific hardware to receive, decode, and use services from each constellation.

9.1.3. GNSS navigation is referenced to the World Geodetic System 1984 (WGS-84) coordinate system. GNSS-based navigation should only be used where the ICAO State conforms to WGS-84 or equivalent systems.

9.2. Reporting Malfunctions. [AIM 1-1-13] Pilots should notify ATC of any GNSS malfunction or deteriorating performance. Additionally, GNSS problems should be reported via the FAA’s *GPS Anomaly Reporting Form* at http://www.faa.gov/air_traffic/nas/gps_reports/.

9.3. Global Positioning System (GPS). The USAF operates GPS for the U.S. Government. In 2007, the U.S. Government re-committed to providing GPS signals on a continuous worldwide basis in support of international civil aviation. The nominal GPS space segment is comprised of 24 operational satellites in orbit.

9.3.1. The GPS navigation message contains three major components. The first contains the GPS date and time, the satellite’s status, and an indication of its health. The second contains orbital information that allows the receiver to calculate the position of the satellite. The third, called the almanac, provides the locations and pseudo-random noise codes of all the satellites, which allows the receiver to determine which satellites are in view. **Note:** The pseudo-random noise code is used to identify GPS satellites in the U.S. NOTAM system and many GPS receivers.

9.3.2. GPS status information is also available from the United States Coast Guard navigation information service: (703) 313-5907 or <http://www.navcen.uscg.gov/>. Additionally, satellite status is available through the NOTAM system via the DoD Aeronautical Information Portal (DAIP) <https://www.daip.jcs.mil/daip/mobile/index>. Pilots may retrieve GPS and WAAS NOTAMs by selecting “GPS/WAAS” under “Advanced Search” after logging in to DAIP.

9.4. *Globalnaya Navigazionnaya Sputnikovaya Sistema (GLONASS).* The Ministry of Defense of the Russian Federation operates GLONASS. The nominal GLONASS space segment consists of 24 operational satellites and several spares. A navigation message transmitted from each satellite consists of satellite coordinates, velocity and acceleration vector components, satellite health information, and corrections to GLONASS system time. The navigation message provides information regarding the status of the transmitting satellite along with information on the remainder of the constellation.

9.5. Aircraft-based Augmentation System (ABAS). ABAS is an avionics implementation that processes core constellation signals with information available on board the aircraft. Many ICAO States have taken advantage of GPS with ABAS to improve service without incurring any expenditure on infrastructure.

9.5.1. There are two general classes of integrity monitoring: RAIM, which uses GNSS information exclusively; and aircraft autonomous integrity monitoring, which also uses information from additional on-board sensors such as inertial reference units (IRU).

9.5.2. ABAS provides integrity monitoring using redundant range measurements to support fault detection (FD) or FDE. The purpose of FD is to detect a potential position error caused by a satellite exceeding its tolerances. Upon detection, the GNSS navigation function is lost. Avionics with FDE identify and exclude the faulty satellite, thereby allowing GNSS navigation to continue without interruption, provided that sufficient healthy satellites with good geometry remain in view.

9.6. RAIM. [ICAO Doc 9849; AIM 1-1-17] RAIM is a form of ABAS. RAIM requires at least five satellites with good geometry to detect a faulty signal and alert the aircrew; FDE requires six. The availability of RAIM and FDE is slightly lower for mid-latitude operations and slightly higher for equatorial and high-latitude operations due to the nature of core constellation orbits. The requirement for redundant signals means that navigation guidance with RAIM may not be available 100% of the time.

9.6.1. A barometric altimeter may be used to provide an additional measurement that reduces the number of satellites in view required by one for RAIM and FDE. Barometric aiding can also help to increase RAIM and FDE availability when there are enough visible satellites, but their geometry is not adequate to support the integrity function. **Note:** Barometric aiding is different from the Barometric-vertical navigation (Baro-VNAV) function used to support some non-precision approaches with vertical guidance.

9.6.2. There are two types of RAIM alert: when there is poor satellite geometry, during which the ability to detect a failed satellite is lost, and when the RAIM algorithm detects a satellite fault, which results in the loss of GNSS navigation capability unless the receiver includes FDE.

9.6.3. Some ICAO States have approved the use of GNSS as the only navigation service in domestic airspace and in oceanic and remote areas; the avionics require FDE in these cases. Under such approvals, aircraft may require dual systems and pilots may be required to perform preflight predictions to make certain that enough satellites will be in view to support service throughout the flight.

9.6.4. Predictive RAIM information for the NAS may be obtained by contacting an FAA flight service station or visiting the FAA RAIM Prediction Tool website at <http://sapt.faa.gov/>. Within Europe, predictive RAIM information may be obtained by visiting the AUGUR GPS RAIM Prediction Tool website at <http://augur.eurocontrol.int/>.

9.7. Satellite-Based Augmentation System (SBAS). SBAS augments core satellite constellations by providing integrity and correction information; some systems also provide additional ranging signals. SBAS reference stations monitor core constellation satellite signals and continuously provide data to master stations. Master stations use these data to assess satellite signal validity and compute corrections to the broadcast orbital information and clock data for each satellite.

9.7.1. The GNSS standards and recommended practices (SARPs) allow for three levels of SBAS capability that provide:

9.7.1.1. Core satellite status and geostationary earth orbit (GEO) satellite ranging;

9.7.1.2. Clock and orbital information corrections; and

9.7.1.3. Clock, orbital information, and ionospheric corrections.

9.7.2. The first two levels support PBN en route through non-precision approach operations; the third level also supports non-precision approach with vertical guidance operations.

9.8. SBAS Avionics. “SBAS receiver” designates GNSS avionics that meet the minimum requirements outlined in ICAO Annex 10 and relevant specifications, such as Technical Standard Order (TSO)-C145e, *Airborne Navigation Sensors Using the Global Positioning System Augmented by The Satellite Based Augmentation System (SBAS)* or TSO-C146e, *Stand-Alone Airborne Navigation Equipment Using The Global Positioning System Augmented By the Satellite Based Augmentation System (SBAS)*.

9.8.1. There are four classes of SBAS avionics that support different performance capabilities. Class I equipment supports en route, terminal, and LNAV approach operations. Class II equipment supports en route, terminal, LNAV/VNAV approach operations, and LNAV approach operations. Class III and IV equipment support en route, terminal, and four approach minima levels: localizer performance with vertical guidance (LPV), localizer performance (LP), LNAV/VNAV, and LNAV.

9.8.2. SBAS avionics are required to annunciate the highest level of service supported by the combination of the SBAS signal integrity level and the receiver certification using the naming conventions on the approach procedure chart lines of minima. SBAS avionics support flying the complete procedure and can operate in a vector-to-final mode.

9.8.3. SBAS avionics may provide advisory vertical guidance when flying NDB or VOR approaches and GNSS non-precision approaches in areas where an SBAS supports this level of service, thus providing the benefits of a stabilized descent. In this case, the aircrew is responsible for complying with all minimum altitudes specified on the approach chart.

9.9. SBAS Coverage and Service Areas. GEO satellite footprints define the coverage area of an SBAS. Within this coverage area, ICAO States can establish service areas where SBAS supports approved operations. Other ICAO States within the coverage area could also establish service areas either by installing integrated reference and monitoring stations in cooperation with the SBAS provider or by approving the use of SBAS signals. An ICAO State that has established an SBAS service area is responsible for the SBAS signals within that service area.

9.9.1. Current SBAS implementations include the U.S. WAAS, European geostationary navigation overlay system (EGNOS), Indian GPS and geo-augmented navigation system (GAGAN), and the Japanese multi-function satellite augmentation system (MSAS).

9.9.1.1. WAAS, EGNOS, and GAGAN augment GPS but not GLONASS; they allow for LPV operations down to 200 feet HAT.

9.9.1.2. MSAS does not currently support LPV operations.

9.9.2. The Russian Federation is currently developing the system for differential corrections and monitoring (SDCM). SDCM is designed to provide corrections and integrity for GPS and GLONASS.

9.9.3. Although SBAS architectures are different, they broadcast an ICAO standard message format on the same frequency; they are interoperable from the aircraft perspective. When SBAS coverage areas overlap, it is possible for an SBAS operator to monitor and broadcast integrity and correction messages for the geostationary earth orbit (GEO) satellites of another SBAS, thus improving availability by adding ranging sources.


9.9.4. SBAS coverage for the NAS may be obtained by visiting the FAA WAAS Performance website at <http://www.nstb.tc.faa.gov/>. SBAS coverage for Europe may be obtained by visiting the EGNOS user support website at https://egnos-user-support.essp-sas.eu/new_egnos_ops/.

9.10. Ground Based Augmentation System (GBAS). A GBAS ground station is located at or near the airfield served. The ground station monitors core constellation signals and broadcasts locally relevant pseudo-range corrections, integrity parameters, and approach definition data to aircraft in the terminal area via a very high frequency (VHF) data broadcast (VDB). GBAS supports CAT I precision approaches; in the future GBAS may support CAT II and III precision approaches. **Note:** Some documents refer to local area augmentation system (LAAS) which is an outdated term for GBAS.

9.10.1. GBAS precision approach service provides lateral and vertical deviation guidance for the final approach segment. The optional GBAS positioning service supports two-dimensional PBN operations in terminal areas.

9.10.2. GBAS can provide multiple approaches to the same runway end with a unique channel number identifying each one. These approaches may have different glidepath angles or displaced thresholds.

9.10.3. The term “GBAS landing system (GLS)” is used in the charting of GBAS approaches, both for the chart title and the GBAS minima line ([Figure 9.1.](#)).

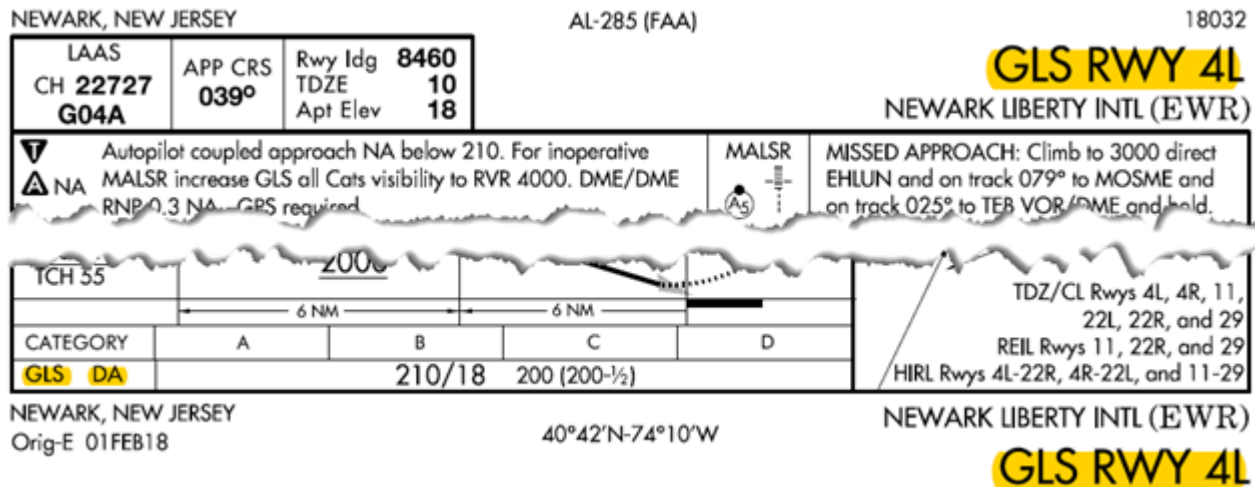Figure 9.1. GBAS Landing System (GLS) Approach.

9.11. GBAS Avionics. The term GBAS receiver designates the GNSS avionics that meet the minimum requirements for a GBAS receiver as outlined in ICAO Annex 10 and relevant specifications.

9.11.1. Like ILS, the GBAS receiver provides lateral and vertical guidance relative to the defined final approach course and glidepath. The receiver selects the VDB frequency and identifies the specific data block that defines the approach.

9.11.2. GBAS avionics standards mimic ILS to simplify the integration of GBAS with existing avionics. Display scaling and deviation outputs are equivalent to ILS to reduce aircrew training requirements. All avionics provide final approach course and glidepath guidance to all configurations of ground stations.

Chapter 10

INSTRUMENT CHARTS

10.1. General. Unless local directives or local FLIP procedures are in place, the geographic location of the aircraft determines which instrument chart procedural criteria aircrew should use. If flying outside of the NAS, apply ICAO procedures unless otherwise published. **Note:** Host nation produced charts may not conform to the approved DoD charting specifications (e.g., missing obstructions, terrain or other foundational information) which may not provide adequate obstruction clearances. The nationality of ATC or the agency that produced a given procedure is not relevant. Reference [Attachment 6](#) for the Flip Decision Tree.

10.1.1. A current copy of the appropriate instrument procedure chart will be available in the aircraft for the departure, destination, and all planned alternates. **(T-3)**

10.1.2. Instrument charts retrieved from MAJCOM-approved FAA or NGA electronic delivery systems are identical to those in the printed terminal procedures publication. Pilots will annotate the effective dates from NGA's aeronautical dissemination website banner on any printed or photocopied NGA instrument procedure. **(T-2) Note:** Comparing amendment numbers or Julian dates on new plates against previously printed plates is not a valid way of determining currency. Information on a plate cannot change without an amendment number or Julian date change.

10.1.3. Refer to the appropriate Terminal Change Notice on the front of the terminal procedures publication to ensure an instrument procedure is current when using NGA-printed products.

10.2. Ground Track. [ICAO Doc 8168 Volume 1, Section 2, Chapter 1] All instrument procedures are based on a ground track. Obstruction clearance assumes that pilots apply appropriate corrections to maintain the published path across the ground.


10.3. Instrument Procedure Design Criteria. [DoD Publication Product Specifications; FAA Order 8260.3] Knowing what design criteria was used to create an instrument procedure is essential to determining protected airspace requirements. Criteria used to develop published instrument procedures are not determined by the physical location of the airfield but by the protected airspace allowances used in the procedure design.

10.3.1. The U.S. Government applies U.S. TERPS design criteria within the United States and its territories in accordance with FAA Order 8260.3. A DoD or FAA designed terminal instrument procedure must pass through a stringent quality control process, culminating in a flight inspection, prior to being published in U.S. Government FLIP. **Note:** Outside the NAS, the USAF may apply U.S., ICAO, or North Atlantic Treaty Organization (NATO) Military Instrument Procedure Standardization (MIPS) design criteria as authorized by AFMAN 11-230, or as directed by the host nation. **(T-0)**

10.3.2. Other ICAO States may use U.S. TERPS, ICAO PANS-OPS, NATO MIPS, their own criteria, or a combination of criteria when designing instrument procedures (e.g., Japan primarily uses ICAO PANS-OPS but publishes different circling area calculations). **Note:** NATO MIPS (e.g., NATO Standard Allied Air Traffic Control Publication (AATCP-1)) lists NATO supplemental procedures to ICAO PANS-OPS for instrument departure and approach procedures.


10.3.3. [DoD FLIP] The design criteria used to develop an instrument procedure is published in the bottom left margin below the amendment number and procedure revision date; pilots may infer that U.S. TERPS design criteria is applied when no criteria is published as it is more restrictive. (Figure 10.1).

Figure 10.1. Instrument Procedure Design Criteria – U.S. Government.

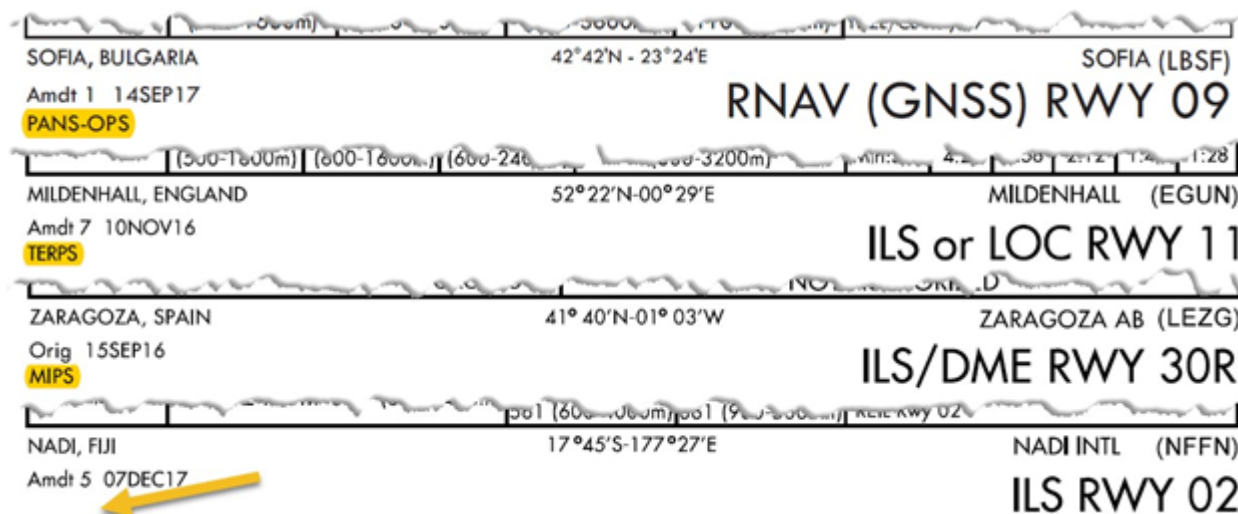

10.3.4. [Jeppesen®] The design criteria used to develop an instrument procedure is published in the bottom left margin of the instrument procedure. If multiple design criteria are used to create the instrument procedure, the difference(s) will be annotated on the approach plate. For example, the approach could be designed in accordance with U.S. TERPS criteria, and the circling criteria based on PANS-OPS criteria (Figure 10.2.).

Figure 10.2. Instrument Procedure Design Criteria – Jeppesen®.

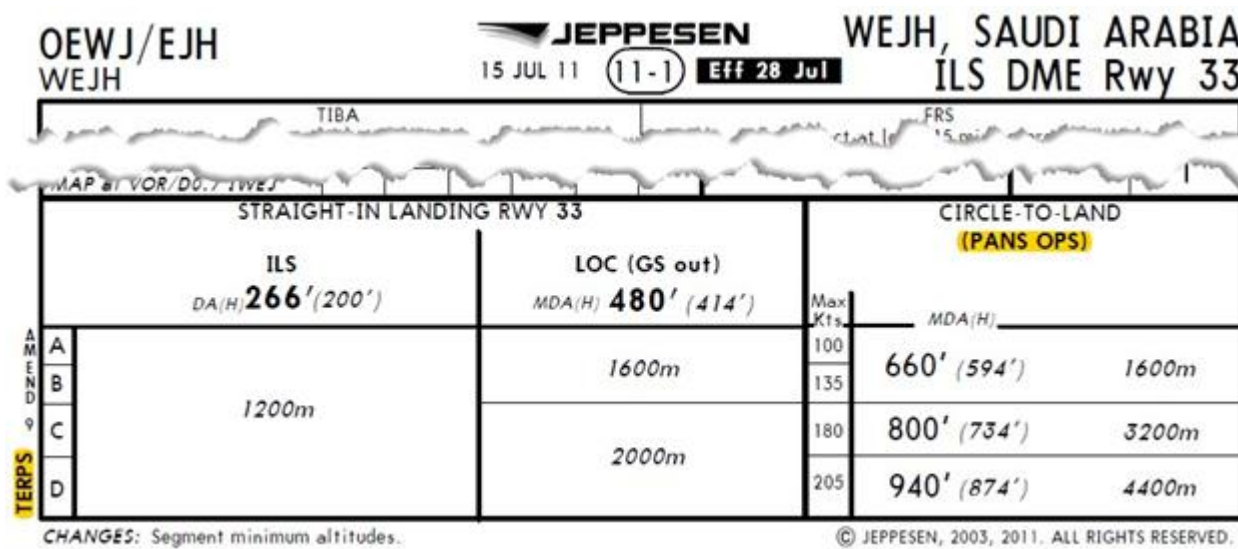


10.4. Waypoints. [FAA-H-8083-16, Chapter 4; ICAO Doc 8168 Volume 1, Part I, Section 4, Chapter 8] Two types of waypoints appear in area navigation procedures: fly-over and fly-by (Figure 10.3.). Fly-over waypoints are indicated by the standard waypoint symbol enclosed in a circle. For a fly-over waypoint, turn anticipation is not allowed. No turn may be accomplished until the aircraft passes over the waypoint. Fly-by waypoints are depicted using the standard waypoint symbol. Turn anticipation is allowed for fly-by waypoints.

10.4.1. A fly-by vertical waypoint is a waypoint for which an aircraft may initiate a vertical rate change and depart the specified vertical path to the active waypoint prior to reaching that waypoint, in order to capture the next vertical path. A fly-over vertical waypoint is a waypoint for which an aircraft remains on the defined vertical path until passing the active waypoint, and may not initiate the necessary vertical rate change to capture the next vertical path until after passing the active waypoint.

10.4.2. Approach waypoints are normally fly-by waypoints; the missed approach waypoint and the missed approach holding waypoint are normally fly-over waypoints. Overlay approach charts and some early stand-alone GPS approach charts may not reflect this convention. The missed approach holding waypoint is normally a fly-over waypoint; however, if it also serves another purpose (e.g., serves as an IAF), it is charted as a fly-by waypoint on the approach plate even though it is a fly-over waypoint for entry into holding.

Figure 10.3. Fly-by versus Fly-over Waypoint.

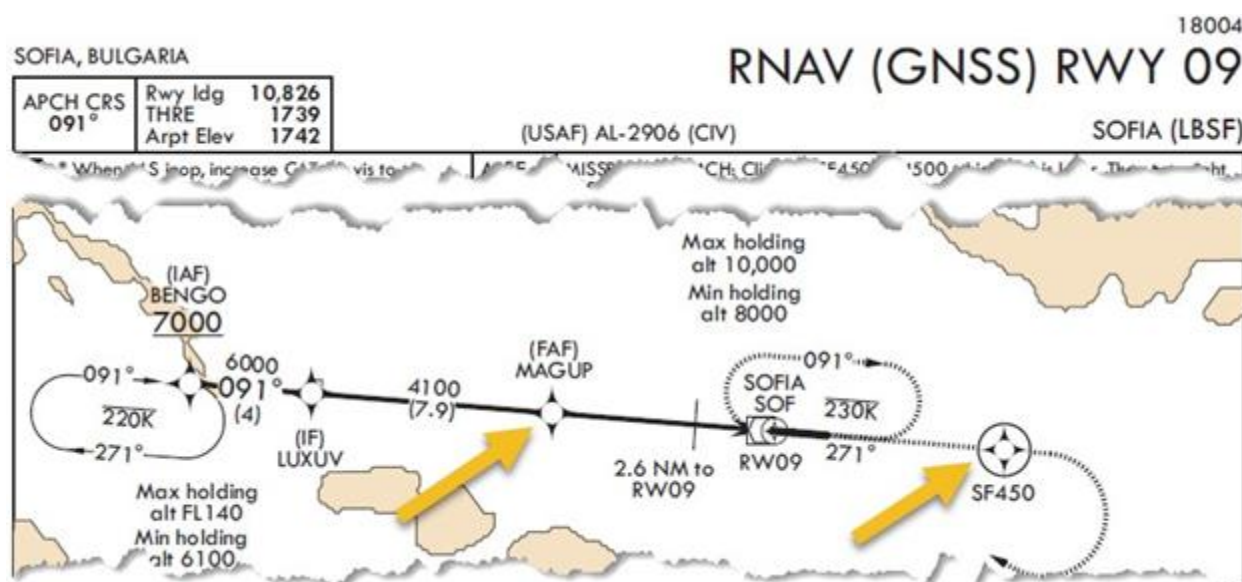

10.5. Radius-to-Fix (RF). [ICAO Doc 9613; AC 90-105] RF legs are intended to be applied where accurate, repeatable, and predictable navigation performance is required in a constant radius turn. Use of RF requires MAJCOM approval. (See Figure 10.4 for examples of procedures using RF legs).

10.5.1. This functionality can be used in any of the following:

10.5.1.1. Initial and intermediate approach segments.

10.5.1.2. Final phase of the missed approach.

10.5.1.3. Standard Instrument Departures (SID).


10.5.1.4. Standard Terminal Arrival Routes (STAR).

10.5.2. ATC should not issue a “Direct-To” clearance to a waypoint beginning an RF leg or a vector to intercept an RF leg. The aircraft flight manual should document limitations if:

10.5.2.1. The aircraft cannot proceed “Direct-To” the initial fix defining an RF leg segment; or

10.5.2.2. The aircraft cannot accept a radar vector to the middle of an RF leg segment for intercepting and completing the RF leg segment from that point while sustaining the desired level of performance.

Figure 10.4. Radius-to-Fix (RF) Legs.

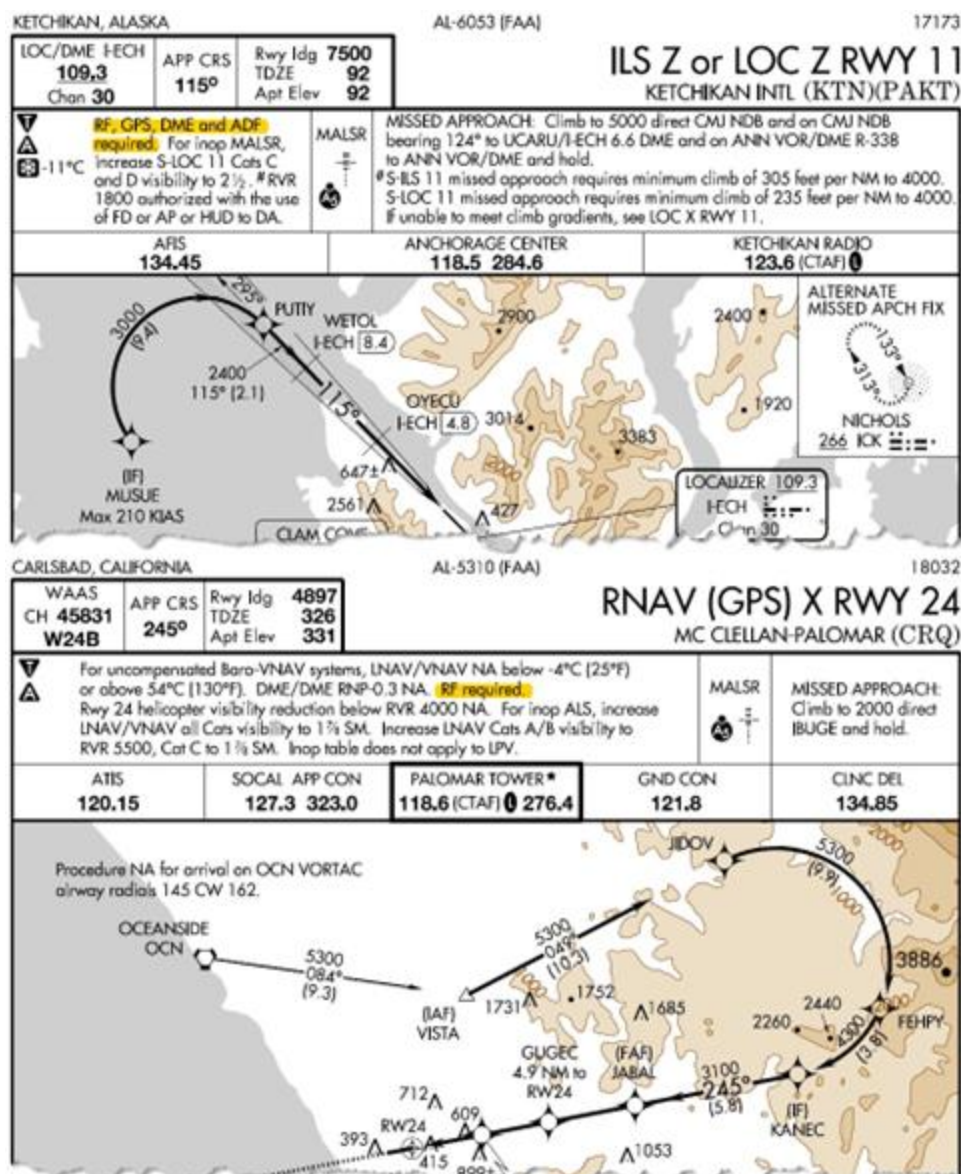

10.5.3. An autopilot or flight director with at least “roll-steering” capability coupled to the RNP system is required. **(T-0)** The autopilot and flight director must operate with suitable accuracy to track the lateral and vertical paths as required by a specific RNP procedure. **(T-0)**

10.5.3.1. An electronic map display depicting the RNP computed path of the selected procedure is required. **(T-0)**

10.5.3.2. The flight management computer, the flight director system, and the autopilot must be capable of commanding and achieving a bank angle up to 25 degrees above 400 feet AGL. **(T-0)**

10.5.4. The flight guidance mode should remain in LNAV when abandoning a procedure while on an RF leg to enable display of deviation and positive course guidance during the RF leg. Crew procedures must be used that assure that the aircraft will respond to the specified flightpath during the RF leg in the event that the aircraft does not provide this capability. **(T-0)**

10.5.5. When a flight is predicated on flying an RNP procedure with an RF leg, the pilot must determine that the installed autopilot or flight director is operational. **(T-0)**

10.5.6. The aircraft must be established on the procedure prior to starting the RF leg. **(T-0)**

10.5.7. The pilot is expected to maintain the centerline of the desired path on RF legs. FTE should be limited to half the navigation accuracy associated with the procedure for normal operations (e.g., 0.5 nautical miles for RNP 1).

10.5.8. The pilot must not exceed maximum airspeeds associated with the RF leg. **(T-0)**

10.5.9. If an aircraft system failure results in the loss of capability to follow an RF turn, the pilot should maintain the current bank and roll out on the charted RF exit course. The pilot should advise ATC as soon as possible of the system failure.

10.6. High Performance Military Aircraft (HPMA) Criteria. [NATO Standard AATCP-1; AFMAN 11-230] HPMA criteria are military unique criteria for instrument procedures that are normally flown by military-type aircraft (e.g., fighter aircraft) serving a specific operational requirement. HPMA criteria introduce a new aircraft category that does not align with existing ICAO aircraft categories. Pilots will not fly HMPA departures or approaches, nor will pilots utilize HPMA lines of minima on an instrument approach without MAJCOM training and approval. **(T-1)**

10.7. Chart Reference Number. [DoD Publication Product Specifications para. 303.] The chart legend number at the top of U.S. Government-developed instrument procedures is preceded by the series “AL” (e.g., low instrument procedure) or “JAL” (e.g., high instrument procedure) and dash followed by the chart reference number and the abbreviated name of the appropriate authority who requested the instrument procedure be published, placed inside parentheses. Brackets indicate the procedure is captured digitally (e.g., AL-000 [USA]; JAL-0000 [USAF]; AL-0000 [USN]; AL-000 [FAA]).

10.7.1. The notation at the top of a DoD-published instrument procedure cannot be used to determine what design criteria was used to develop the procedure; departure end crossing restrictions are not consistently published in Terminal Procedure Publications.

10.7.2. On DoD-published foreign instrument procedures, the chart legend number is preceded by the OPR who requested the procedure publication and followed by the ICAO State authority who developed the procedure in parentheses or brackets (**Figure 10.5.**). These procedures are developed by the ICAO State's procedure development authority and are published in DoD FLIP. The ICAO State identifier may be a 2-letter code (e.g., "IZ"); "CIV" or "MIL" indicates the ICAO State has more than one procedure design authority. DoD-published foreign instrument procedures are verified and validated as safe by a DoD procedure specialist. The DoD procedure specialist assumes responsibility for maintaining the currency and accuracy of the DoD-published procedure until it is removed from the Terminal Procedure Publication.

Figure 10.5. DoD Published Foreign Instrument Procedure.



10.8. Foreign Terminal Instrument Procedure (FTIP). On 7 June 1996 (last updated 2000), the Secretary of Defense issued the “*DoD Instrument Flight Procedures Policy*” memo. The memo required Services to validate any terminal instrument procedures not developed by the FAA or U.S. military authority. The validation ensures instrument procedures meet an acceptable standard prescribed in U.S. TERPS, International Civil Aviation Organization’s Procedures for Air Navigation Services-Aircraft Operations (ICAO PANS-OPS), or North Atlantic Treaty Organization’s Military Instrument Procedures Standardization (NATO MIPS) design criteria. **Note:** Standard Terminal Arrival procedures (STARs) do not require a review.

10.8.1. AFMAN 11-230 outlines USAF and MAJCOM responsibilities, as well as the acceptance and validation review process, including flyability checks and flight inspections.

10.8.2. Foreign instrument procedures published in DoD FLIP have been validated by DoD procedure specialists.

10.8.3. The DoD maintains a “DoD Accepted Host Nation List” (most up to date list located on the FTIP SharePoint® site in **paragraph 10.10.2.**). The USAF refers to countries on the list as *special accredited* and places a very high degree of confidence in the host nation’s flight inspection, instrument flight procedure development, and instrument flight procedure publication practices.

10.8.4. [AFMAN 11-230] FTIP review is not required for Precision Approach Radar (PAR) and Airport Surveillance Radar (ASR) approaches.

10.9. Non-U.S. Government Published Instrument Procedures. For foreign instrument procedures not published in DoD FLIP and the host nation is:

10.9.1. On the DoD Accepted Host Nation List do not require any further validation nor FTIP review. These host nation programs are considered equal to DoD or FAA programs. **Note:** Aircrew must use procedures fully translated in English in accordance with **paragraph 4.14.**

10.9.2. Not on the DoD Accepted Host Nation List, require an FTIP review. These host nation programs produce instrument procedures that may require a full validation (which could include flyability validation) before an FTIP review is approved. The DoD requires a flyability check is accomplished before a procedure can be published in DoD FLIP. Aircrew may be asked to accomplish flyability checks as part of the flyability validation; procedures are outlined in AFMAN 11-230. **Note:** Host nation instrument procedures published in English, in accordance with [paragraph 4.14](#), with a current FTIP review are authorized.

10.9.3. Trained aircrews are authorized to use a host nation product if:

10.9.3.1. The procedure is published in DoD FLIP; or

10.9.3.2. The host nation is on the DoD Accepted Host Nation List and the procedure is published in English in accordance with [paragraph 4.14](#); or

10.9.3.3. The procedure has a current FTIP review.

10.10. FTIP Review Request. FTIP reviews provide notes, corrections, and types of conditions (e.g., day, night) under which a crew has been approved to fly a specific foreign instrument procedure.

10.10.1. MAJCOM/A3 in the grade of O-8 or above (or the first O-8 in the MAJCOM/A3 chain of command) may waive the FTIP review for short-notice, humanitarian, contingency, medical evacuation, “special” access and urgent State Department missions. This waiver authority will not be further delegated. **(T-1)**

10.10.2. Aircrew will verify the procedure to be flown has an FTIP review that is current and valid for the entire mission duration. **(T-2)** Current FTIP reviews and the most up to date DoD Accepted Host Nation List are available on the USAF FTIP SharePoint® site: <https://intelshare.intelink.gov/sites/usafterps/lavouts/15/start.aspx#/SitePages/Home.aspx>

10.10.2.1. Aircrews will request a review (directly through the USAF FTIP SharePoint® site) of the host nation procedure for an expired FTIP review or if no FTIP review is available. **(T-1)** **Note:** Aircrew should request a comparison evaluation if planning on using a commercially-produced product; a comparison evaluation is not included in an FTIP review unless specifically requested.

10.10.2.1.1. [AFMAN 11-230] FTIP Requests for a single approach or departure should be provided to the reviewing MAJCOM at least seven duty days prior to the mission date.

10.10.2.1.2. [AFMAN 11-230] Additional notice time would be required when multiple instrument flight procedures are requested.

10.10.2.2. Aircrew may use any FTIP review that has been finalized and submitted to the SharePoint® site by another MAJCOM or U.S. military service.

10.10.2.3. Aircrew will review all comments on the FTIP review during preflight planning. **(T-1)**

10.11. Comparison Evaluation for Commercially-Produced Products.

10.11.1. MAJCOMs may approve and will provide training to aircrew to fly commercially-produced products. **(T-1)** At a minimum, this training must include the differences in symbology, weather minimums, NOTAM retrieval, and equipment and airspace requirements. **(T-1)**

10.11.1.1. **(Added-AMC)** Aircrew utilizing Jeppesen® products must have completed Jeppesen® training via the Instrument Refresher Course or during an approved Aircrew Training System (ATS) contract course.

10.11.1.2. **(Added-AMC)** Aircrew will ensure Jeppesen® Notices and Alerts are checked prior to flying any instrument procedures while using Jeppesen® products (<https://ww2.jeppesen.com/notices/>). **(T-2)**

10.11.1.3. **(Added-AMC)** Jeppesen® products are created from host nation procedures. It is therefore possible for Jeppesen® products to differ from DoD products constructed for the same procedures. If the host nation is on the DoD Accepted Host Nation list, the Jeppesen® product may be used as published.

10.11.1.4. **(Added-AMC)** Both pilot positions will reference the same product when flying an instrument procedure.

10.11.2. Comparison evaluations are required for commercially produced products. **(T-1)** Comparison evaluations are assessments comparing a host nation produced instrument flight procedure with the corresponding commercially reproduced instrument procedure line-by-line, word-for-word, number-for-number, note-for-note, etc. **Exception:** Jeppesen® products do not require a comparison evaluation but must meet the requirements of [paragraph 10.9.3](#). **Note:** MAJCOM training is required for aircrew to complete a comparison evaluation.

10.12. NGA Electronic – Instrument Procedure Library (E-IPL). The E-IPL is not approved for operational use. **(T-1)** The E-IPL will be a world-wide repository of instrument flight procedures not published in DoD FLIP; it will eventually take the place of the Jeppesen® Military Chart Service (JMCS). Any messages, emails, or newsletters from NGA or other organizations are not authorization for operational use for these products. HQ USAF will send out a separate message authorizing the operational use of the E-IPL.

Chapter 11

WAKE TURBULENCE

11.1. General. Every aircraft generates a wake while in flight. A pair of counter-rotating vortices trailing from the wing tips causes wake turbulence and poses problems to other aircraft. This chapter builds on the concepts introduced in FAA handbooks and manuals. Refer to AIM 7-3 for basic wake turbulence information unless otherwise noted.

11.2. Aircraft Weight Classes.

11.2.1. [ICAO] [ICAO Doc 4444, Chapter 4.9] Wake turbulence separation minima is based on a grouping of aircraft types into categories according to the maximum certificated take-off mass as follows:

11.2.1.1. SUPER (J) – A380-800.

11.2.1.2. HEAVY (H) – all aircraft types of 300,000 pounds or more.

11.2.1.3. MEDIUM (M) – aircraft types less than 300,000 pounds but more than 15,500 pounds.

11.2.1.4. LIGHT (L) – aircraft types of 15,500 pounds or less.

11.2.1.5. Helicopters should be kept well clear of light aircraft when hovering or while air taxiing.

11.2.2. [NAS Only] [FAA Pilot/Controller Glossary] For the purposes of wake turbulence separation minima, ATC classifies aircraft as super, heavy, large, and small as follows:

11.2.2.1. SUPER – The Airbus A-380-800 (A388) and the Antonov An-225 (A225) are classified as super.

11.2.2.2. HEAVY – Aircraft capable of takeoff weights of 300,000 pounds or more whether or not they are operating at this weight during a particular phase of flight.

11.2.2.3. LARGE – Aircraft of more than 41,000 pounds, maximum certificated takeoff weight, up to but not including 300,000 pounds.

11.2.2.4. Small – Aircraft of 41,000 pounds or less maximum certificated takeoff weight.

11.3. [ICAO] Wake Turbulence Separation. [ICAO Doc 4444] Distance-based wake turbulence separation minima in [Table 11.1](#) is applied when:

11.3.1. An aircraft is operating directly behind another aircraft at the same altitude or less than 300 meters (1,000 feet) below; or

11.3.2. Both aircraft are using the same runway, or parallel runways separated by less than 760 meters (2,500 feet); or

11.3.3. An aircraft is crossing behind another aircraft, at the same altitude or less than 300 meters (1,000 feet) below.

Table 11.1. ICAO Distance-based Wake Turbulence Minima.

Preceding Aircraft	Succeeding Aircraft	Minimum Distance-based Wake Turbulence
SUPER	HEAVY	11.1 km/6.0 NM
	MEDIUM	13.0 km/7.0 NM
	LIGHT	14.8 km/8.0 NM
HEAVY	HEAVY	7.4 km/4.0 NM
	MEDIUM	9.3 km/5.0 NM
	LIGHT	11.1 km/6.0 NM
MEDIUM	LIGHT	9.3 km/5.0 NM

11.3.4. Wake turbulence separation is not required for arriving VFR flights landing on the same runway as a preceding landing HEAVY or MEDIUM aircraft and between arriving IFR flights executing visual approach when the aircraft has reported the preceding aircraft in sight and has been instructed to follow and maintain own separation from that aircraft. ATC should issue a caution of possible wake turbulence. The pilot in command is responsible for wake turbulence spacing. Minimum wake turbulence for landing aircraft is in [Table 11.2](#).

Table 11.2. ICAO Time-based Wake Turbulence Minima.

	Landing Behind	Minimum Wake Turbulence (minutes)
MEDIUM	HEAVY	2
LIGHT	HEAVY	3
	MEDIUM	

11.3.5. A minimum separation of 2 minutes is applied between a LIGHT or MEDIUM aircraft taking off behind a HEAVY aircraft or a LIGHT aircraft taking off behind a MEDIUM aircraft when the aircraft are using:

11.3.5.1. The same runway;

11.3.5.2. Parallel runways separated by less than 760 meters (2,500 feet);

11.3.5.3. Crossing runways if the projected flight path of the second aircraft crosses the projected flight path of the first aircraft at the same altitude or less than 300 meters (1,000 feet) below; or

11.3.5.4. Parallel runways separated by 760 meters (2,500 feet) or more if the projected flight path of the second aircraft crosses the projected flight path of the first aircraft at the same altitude or less than 300 meters (1,000 feet) below.

11.3.6. A separation minimum of 3 minutes is applied between a LIGHT or MEDIUM aircraft when taking off behind a HEAVY aircraft or a LIGHT aircraft when taking off behind a MEDIUM aircraft from:

11.3.6.1. An intermediate part of the same runway; or

11.3.6.2. An intermediate part of a parallel runway separated by less than 760 meters (2,500 feet).

11.3.7. A separation minimum of 2 minutes is applied between a LIGHT or MEDIUM aircraft and a HEAVY aircraft and between a LIGHT aircraft and a MEDIUM aircraft when operating on a runway with a displaced landing threshold when:

11.3.7.1. A departing LIGHT or MEDIUM aircraft follows a HEAVY aircraft arrival and a departing LIGHT aircraft follows a MEDIUM aircraft arrival; or

11.3.7.2. An arriving LIGHT or MEDIUM aircraft follows a HEAVY aircraft departure and an arriving LIGHT aircraft follows a MEDIUM aircraft departure if the projected flight paths are expected to cross.


11.3.8. A separation minimum of 2 minutes is applied between a LIGHT or MEDIUM aircraft and a HEAVY aircraft and between a LIGHT aircraft and a MEDIUM aircraft when the heavier aircraft is making a low or missed approach and the lighter aircraft is:

11.3.8.1. Utilizing an opposite-direction runway for take-off; or

11.3.8.2. Landing on the same runway in the opposite direction, or on a parallel opposite-direction runway separated by less than 760 meters (2,500 feet).

11.4. European Wake Vortex Re-categorization (RECAT-EU). [Eurocontrol RECAT-EU] RECAT-EU is a new, much more precise categorization of aircraft than the traditional ICAO wake categories ([Figure 11.1](#)). It aims at safely increasing airfield capacity by redefining wake turbulence categories and their associated separation minima. It divides the current HEAVY and MEDIUM categories into two sub-categories and creates a new SUPER HEAVY category which includes the Airbus A380 and AN-124.

Figure 11.1. RECAT-EU Categories.

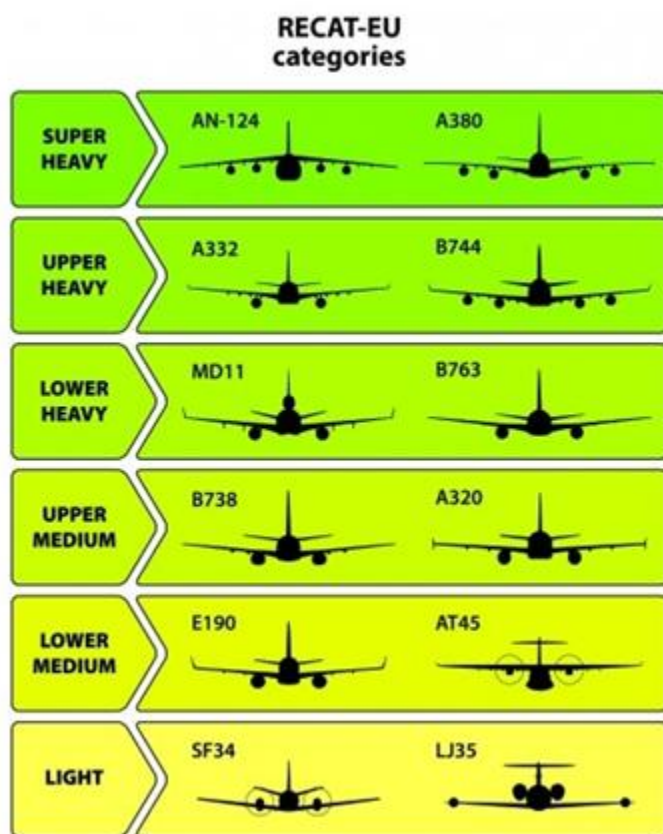

11.4.1. RECAT-EU distanced-based separation minima on approach and departure is shown in [Table 11.3](#).

Table 11.3. RECAT-EU Distance-based Wake Turbulence Minima.

Leader/Follower	SUPER HEAVY	UPPER HEAVY	LOWER HEAVY	UPPER MEDIUM	LOWER MEDIUM	LIGHT
SUPER HEAVY	3	4	5	5	6	8
UPPER HEAVY		3	4	4	5	7
LOWER HEAVY		(*)	3	3	4	6
UPPER MEDIUM						5
LOWER MEDIUM						4
LIGHT						3
Note: Distance in nautical miles. (*) means “minimum radar separation,” set at 2.5 nautical miles, is applicable as per ICAO Doc 4444 provisions.						

11.4.2. RECAT-EU time-based separation minima on departure is shown in [Table 11.4](#).

Table 11.4. RECAT-EU Time-based Wake Turbulence Minima.

Leader/Follower	SUPER HEAVY	UPPER HEAVY	LOWER HEAVY	UPPER MEDIUM	LOWER MEDIUM	LIGHT	
SUPER HEAVY		100	120	140	160	180	
UPPER HEAVY					100	120	140
LOWER HEAVY					80	100	120
UPPER MEDIUM						120	
LOWER MEDIUM						100	
LIGHT						80	
Note: Time in seconds.							

11.5. [NAS Only] Wake Turbulence Separation. [AIM 7-3-9] Controllers are required to apply no less than specified minimum separation to all IFR aircraft, to all VFR aircraft receiving Class B or Class C airspace services when operating behind super or heavy aircraft, and to small aircraft operating behind a C-32 / Boeing 757 (B757).

11.5.1. Separation is applied to aircraft operating directly behind a super or heavy at the same altitude or less than 1,000 feet below, and to small aircraft operating directly behind a B757 at the same altitude or less than 500 feet below:

- 11.5.1.1. Heavy behind super – 6 miles.
- 11.5.1.2. Large behind super – 7 miles.
- 11.5.1.3. Small behind super – 8 miles.
- 11.5.1.4. Heavy behind heavy – 4 miles.
- 11.5.1.5. Small/large behind heavy – 5 miles.
- 11.5.1.6. Small behind B757 – 4 miles.

11.5.2. Separation is provided to small aircraft measured from the time the preceding aircraft is over the landing threshold:

- 11.5.2.1. Small landing behind heavy – 6 miles.
- 11.5.2.2. Small landing behind large, non-B757 – 4 miles.

11.5.3. Appropriate time or distance intervals are provided to departing aircraft when the departure is from the same threshold, a parallel runway separated by less than 2,500 feet with less than 500 feet threshold stagger, or on a crossing runway and projected flight paths cross:

- 11.5.3.1. Three minutes or the appropriate radar separation when takeoff is behind a super aircraft.
- 11.5.3.2. Two minutes or the appropriate radar separation when takeoff is behind a heavy aircraft.
- 11.5.3.3. Two minutes or the appropriate radar separation when a small aircraft takeoff is behind a B757.

11.5.3.4. Controllers may not reduce or waive these intervals.

11.5.4. A 3-minute interval is provided when a small aircraft takeoff is:

11.5.4.1. From an intersection on the same runway (same or opposite direction) behind a departing large aircraft or B757,

11.5.4.2. In the opposite direction on the same runway behind a large aircraft or B757 takeoff, low approach, or missed approach; or

11.5.4.3. This 3-minute interval may be waived upon specific pilot request; it may not be waived behind a B757.

11.5.5. A 4-minute interval is provided for all aircraft taking off behind a super aircraft, and a 3-minute interval is provided for all aircraft taking off behind a heavy aircraft when the operations are as described in [paragraph 11.5.4](#) and are conducted on either the same runway or parallel runways separated by less than 2,500 feet. Controllers may not reduce or waive this interval.

11.5.6. Pilots may request additional separation (e.g., 2 minutes instead of 4 or 5 miles) for wake turbulence avoidance. This request should be made as soon as practicable on the ground control frequency and at least before taxiing onto the runway. **Note:** The pilot-in-command of an aircraft is directly responsible for and is the final authority as to the operation of that aircraft.

11.5.7. Controllers may anticipate separation and need not withhold a takeoff clearance for an aircraft departing behind a large, heavy, or super aircraft if there is reasonable assurance the required separation exists when the departing aircraft starts takeoff roll.

Chapter 12

EN ROUTE NAVIGATION

12.1. Airspace and Airspace Classification.

12.1.1. The PIC is the clearance authority for flight in uncontrolled airspace. **(T-0)**

12.1.2. Controlled Airspace.

12.1.2.1. The PIC is the clearance authority for VFR flight in controlled airspace. Do not cancel IFR until airspace cloud clearances and visibility requirements are met [14 CFR Part 91.155]. **(T-0) Note:** See [Table 12.1](#) or [Table 12.2](#).

12.1.2.2. Pilots shall obtain an ATC clearance before departing under IFR, as soon as practicable after departing under VFR, or before entering controlled airspace [14 CFR Part 91.173]. **(T-0)**

12.1.3. The PIC will apply the operating rules associated with the more restrictive airspace designation when overlapping airspace designations exist. [14 CFR Part 71.9]. **(T-0)**

12.1.4. The PIC will not transit airspace without the required minimum equipment unless authorized by ATC. [14 CFR Part 91.126] **(T-0)**

12.1.5. The PIC will adhere to ADIZ procedures unless approved for a specific mission exception. [14 CFR Part 99] **(T-0)**

12.1.6. [NAS Only] Certain areas are prescribed special air traffic rules (e.g., Luke AFB, Washington, D.C., Grand Canyon) areas and pilots must adhere to 14 CFR Part 93 unless otherwise authorized by ATC [AIM 3-5-7; 14 CFR Part 93; FAA JO 7210.3]. **(T-0)**

12.1.7. MAJCOMs must provide approval and guidance for operations in the North Atlantic High Level Airspace (NAT HLA). Comply with applicable FLIP area planning documents. **(T-0)**

12.1.8. The PIC will not operate in RVSM airspace without functional RVSM equipment. **(T-0) Note:** ATC may authorize non-RVSM aircraft to operate in RVSM airspace on a workload permitting basis. Unless specifically cleared by ATC, comply with applicable FLIP area planning documents. **(T-0)** Notify ATC as soon as possible if required equipment fails after entering RVSM airspace. **(T-0)** [14 CFR Part 91 Appendix G]

12.2. Oceanic and Remote Continental Airspace. [AC 91-70] Procedures for operating in oceanic and remote continental airspace are constantly evolving; pilots should closely monitor for changes in these procedures for any oceanic or remote continental airspace in which they operate. ICAO Doc 10037, *Global Operational Data Link (GOLD) Manual*, provides guidance and information concerning data link operations and is intended to facilitate the uniform application of SARPs contained in numerous ICAO Annexes, ICAO Doc 4444, and ICAO Doc 7030, *Regional Supplementary Procedures*.

12.2.1. North Atlantic Region. NAT Doc 007, *North Atlantic Operations and Airspace Manual*, is intended to serve as guidance for operation in the North Atlantic Region. It is a single source document that references the regulatory material in numerous ICAO Annexes, ICAO Doc 4444, ICAO Doc 7030, ICAO State AIPs, and current NOTAMS. The FAA's North Atlantic Resource Guide for U.S. Operators is updated quarterly and available via the FAA website. It discusses emphasis items, contingency procedures, weather deviation requirements, and flight planning procedures.

12.2.1. **(AMC)** NAT Doc 007 does not have the authority to direct crew actions, hence the use of the word "should" throughout the document. However, where the North Atlantic Operations and Airspace Manual uses "should," crews will interpret this as "will." DoD Area Planning procedures will be followed only if they do not conflict with the North Atlantic Operations and Airspace Manual. **(T-2)**

12.2.2. Pacific Region. The FAA's Pacific Resource Guide for U.S. Operators, is updated quarterly and available via the FAA website. It discusses emphasis items, contingency procedures, weather deviation requirements, and flight planning procedures.

12.2.2. **(AMC)** For Northern Pacific Oceanic airspace, pilots will follow the procedures written in the FAA Pacific Resource guide, Alaska or Pacific Supplement. **(T-2)** DoD Area Planning procedures should be followed only if they do not conflict with these Supplements.

12.2.3. West Atlantic Route System (WATRS), Gulf of Mexico (GoMex), and Caribbean Regions. The FAA's WATRS, GoMex, and Caribbean Resource Guide for U.S. Operators, is updated quarterly and available via the FAA website. It discusses emphasis items, contingency procedures, weather deviation requirements, and flight planning procedures.

12.2.4. Extreme Latitude Navigation. Refer to [Chapter 20](#) for navigation in AMU.

12.2.5. **(Added-AMC)** Oceanic Checklists. For oceanic crossings, aircrew will use only the MAJCOM Stan/Eval MDS-specific checklists posted on the AMC ePubs. **(T-2) Exception:** If an MDS-specific checklist is not posted, aircrew may use the Sample Oceanic Checklist, published via NAT OPS Bulletin (posted on the AMC ePubs under *Airspace and Datalink, NAT-Atlantic-WATRS, NAT Ops Bulletins*). Locally-generated oceanic checklists are prohibited. If using the Sample Oceanic checklist, units may augment with local supplements such as ALTRV, formation, and other unique mission requirements but in no case will they substitute for the checklist. **(T-2)**

12.2.6. **(Added-AMC)** Oceanic Plotting Chart.

12.2.6.1. **(Added-AMC)** Prior to flight, the PIC or designated representative will plot the oceanic portion of the flight on an appropriate chart (e.g., OPC, GNC, Jeppesen®, or digital charting product), to include the Equal Time Point location and coordinates. **(T-2)** Place the following information on the chart: Mission number, Preparer's and PIC's name, Date, Flight plan course depicting reporting points with proper names or coordinates. On AR missions, plot the ARIP, ARCP, exit, and turn points.

12.2.6.1.1. **(Added-AMC)** If a revised clearance is received, aircrew will record and plot the new course on the chart. **(T-2)**

12.2.6.1.2. **(Added-AMC)** Multiple legs on the same chart are permissible when practical.

12.2.7. **(Added-AMC)** Flight Plan Data Entry. Another pilot will verify waypoint data inserted into the FMS/FMC. **(T-2)** Check both the coordinate information and the distances between waypoints against the flight plan. **(T-2)**

12.2.8. **(Added-AMC)** Master Flight Plan. N/A for C-130H/J's, instead, reference Chapter 11 in AFMAN 11-2C-130HV3, *C-130H Operations Procedures*, or Chapter 8 in AFMAN 11-2C-130JV3, *C-130J Operations Procedures*.

12.2.8.1. **(Added-AMC)** Only one CFP (Master) may be used on the flight deck and will be annotated as the Master CFP by writing "MASTER" on top of the cover page. **(T-2)**

12.2.8.2. **(Added-AMC)** For all flights, circle each waypoint number on the Master CFP when the correct coordinates are checked by another aircrew member. **(T-2)**

12.2.8.3. **(Added-AMC)** To help monitor flight progress, after takeoff and when time permits, aircrews will record the actual takeoff time reported by the ACARS on the CFP under the first waypoint's ATA and then record all leg ETAs based on CFP zone times for the entire route of flight **(T-3)** Aircrews should line through and record updated ETAs only when necessary (e.g., the next waypoint during oceanic/non-radar portions of the flight).

12.2.8.4. **(Added-AMC)** Adjacent to the next waypoint, aircrews will record the ETA reported to ATC (this includes estimates automatically reported via ADS). **(T-2)**

12.2.8.5. **(Added-AMC)** For proper CFP symbology, aircrew are encouraged to use consistent symbols on the Master Document. For example, a circled number means the second aircrew member has independently verified the coordinates entered or crosschecked by the first aircrew member. A checkmark may indicate that the track and distances have been confirmed. A diagonal line may indicate that the crew has confirmed the coordinates of the approaching and next waypoint. An X-symbol may indicate having flown overhead the waypoint and all required calls and entries have been made.

12.2.8.5. **(439AW)** After verifying coordinates of next waypoint, draw a slash ("/") through the circled waypoint on the CFP. Cross out ("X") each waypoint after it is overflown.

12.2.8.6. **(Added-AMC)** Aircrews must check all navigation information appearing on the Master CFP against the best available prime source data. **(T-2)** When a re-route is necessary, it is recommended that 618 AOC provide a new Master CFP. For re-routes in flight, aircrews will clearly cross out the old waypoints and enter new waypoints in their place. **(T-2)**

12.2.8.7. **(Added-AMC)** When approved by AMC/A3V, ForeFlight® Active NavLog may be utilized as a Master Document. The appropriate MDS Performance Profile will be utilized, and the route will be verified against the filed/cleared route of flight. If there are discrepancies in fuel requirements between the ForeFlight® Active NavLog and the planned CFP, the planned CFP will be used. **(T-3)**

12.2.9. **(Added-AMC)** Oceanic Clearance. Once an oceanic clearance is received, both pilots will re-verify waypoint data inserted into the Mission Computer. **(T-2)** If a revised clearance is received, after updating the navigation system, Master CFP, and plotting chart, both pilots should conduct independent cross-checks of the new clearance via any acceptable means (e.g., FMS, Computer Flight Planning System (CFPS), or approved navigation app). **(T-2)** The purpose of these checks is to prevent data readback or FMS entry errors, which are the leading contributors to gross navigation errors. **Note:** As oceanic clearances are phased out of the North Atlantic region, crews operating in these areas should still conduct independent cross-checks of assigned routings and any routing changes entered into the onboard navigation system.

12.2.10. **(Added-AMC)** Coast Out / Gross Navigation Accuracy Check. Aircrews will select a coast-out fix prior to entering the Class II segment, perform a gross navigational error check using available NAVAIDS and annotate the position and time on the chart. **(T-2)**

12.2.10.1. **(Added-AMC)** To perform the check, aircrew should select a NAVAID that provides a DME signal (within its standard service volume range) as close to the abeam position from the aircraft as possible. For best results, DME distance should be no closer than the first two digits of the flight level value (e.g., FL310 equals a minimum distance of 31 miles).

12.2.10.2. **(Added-AMC)** The position can be cross-checked by centering the NAVAID CDI course selector so as to center the CDI for a course TO the NAVAID, noting the DME distance and then immediately recording the progress page (or MDS equivalent) course and distance information displayed onto the Master Flight Plan/Document.

12.2.10.3. **(Added-AMC)** Record the NAVAID identifier and time (UTC) of the navigation accuracy check information on the Master Flight Plan. **(T-2)**

12.2.10.4. **(Added-AMC)** If the Noted DME distance and course are not within 4 miles and 4 degrees attempt another navigation accuracy check with another NAVAID. **(T-2)**

12.2.11. **(Added-AMC)** Hourly altimeter checks. Hourly altimeter checks (if required) will be annotated on the master document. **(T-2)**

12.2.12. **(Added-AMC)** Waypoint Passage.

12.2.12.1. **(Added-AMC)** When under radar contact and at intervals of approximately once every hour, aircrews will annotate waypoint crossing time, flight level, and fuel remaining in the appropriate areas of the CFP for the given waypoint; check the temperature deviation and compare the predicted winds to the actual winds aloft; and identify trends to time and fuel remaining (actual vs. planned). **(T-2)**

12.2.12.2. **(Added-AMC)** When not under radar contact, aircrew will annotate waypoint crossing times, flight level and fuel remaining in the appropriate areas of the CFP for the given waypoint, check the magnetic course and temperature deviation, compare the predicted winds to the actual winds aloft, and identify trends to time and fuel remaining (actual vs. planned). **(T-2)**

12.2.13. **(Added-AMC)** Ten Minutes After Waypoint Passage. Approximately 10 minutes after passing each oceanic/Class II waypoint, or every 500 miles, whichever is shorter:

12.2.13.1. **(Added-AMC)** If FMS-equipped, and not otherwise restricted in applicable AFMAN 11-2MDSV3, aircrew use the “Nav Display” method of navigation cross-checking, by:

12.2.13.1.1. **(Added-AMC)** Confirming the aircraft symbol is on the programmed route of the navigation display (at smallest scale).

12.2.13.1.2. **(Added-AMC)** Checking cross-track deviation to confirm there is no significant deviation from the programmed route of flight.

12.2.13.1.3. **(Added-AMC)** Using the steering LRNS, verify the “TO” waypoint is consistent with the current route clearance.

12.2.13.1.4. **(Added-AMC)** Taking corrective action to address any anomalies or unexpected deviations.

12.2.13.1.5. **(Added-AMC)** Verifying the autopilot is in the desired steering mode.

12.2.13.2. **(Added-AMC)** If not FMS-equipped, record and plot the aircraft full Latitude/Longitude position, Flight Level/Altitude, and UTC time on the chart, and ensure compliance with courses and ETA tolerances. **(T-2) Note:** Digital plotting systems do not relieve the pilots’ responsibility to actively verify the actual aircraft’s navigation solution position.

12.3. Minimum Aircraft Altitude.

12.3.1. When flying under VFR, fly altitudes or flight levels as specified in FLIP [14 CFR Part 91.159, ICAO Annex 2]. **(T-0)**

12.3.1.1. [NAS Only] Fly appropriate VFR hemispheric altitudes when higher than 3,000 feet above the surface, unless authorized by ATC. **(T-0) Exception:** USAF aircraft conducting hurricane reconnaissance flights. [FAA Exemption No. 131]

12.3.1.2. [NAS Only] Do not apply these altitudes when turning or holding in a holding pattern of 2 minutes or less. **(T-0)**

12.3.2. [14 CFR Part 91.177, ICAO Annex 2] When flying under IFR, except when necessary for takeoff, landing, or when being vectored by ATC, do not fly lower than:

12.3.2.1. On Airways, no lower than any published minimum for the airway **(T-0)**

12.3.2.2. Off Airways, no lower than:

12.3.2.2.1. The Off Route Obstruction Clearance Altitude (OROCA) **(T-0)**;

12.3.2.2.2. The Off Route Terrain Clearance Altitude (ORTCA) **(T-1)**; or,

12.3.2.2.3. An altitude that provides at least 1,000 feet of clearance above all obstacles within 4 NMs of the course to be flown in non-mountainous terrain, or 2,000 feet in mountainous terrain. **(T-0)**

12.3.3. The PIC will not operate aircraft below an altitude that, should an emergency landing become necessary, creates undue hazard to persons or property. [14 CFR Part 91.119] **(T-0)**
Exception: MAJCOM-approved aerial demonstrations or events or during takeoff or landing.

12.3.4. The PIC will adhere to minimum altitudes published in FLIP for all MTRs and special use airspace (e.g., restricted airspace, military operations areas (MOAs), SR, IFR military training routes (IR), VFR military training routes (VR), and controlled firing areas) [14 CFR Part 73.3]. **(T-0) Exception:** Any aircraft operation within a restricted area which is approved by the using agency and coordinated with the controlling ATC agency may deviate from restrictions listed in paragraphs 12.3.5 through 12.3.7 if they are not compatible with the operation of the aircraft and create the same hazards as the operations for which the restricted area was designated.

12.3.5. The PIC will operate over non-congested areas at an altitude at or above 500 feet AGL except over open water or in sparsely populated areas. **(T-0)** Under such exceptions, do not operate aircraft closer than 500 feet to any person, vessel, vehicle, or structure. **(T-0)** Helicopters in FAA airspace or operating in accordance with host-nation agreements may operate at lower altitudes and in closer proximity if they do not create a hazard to persons or property on the surface. [14 CFR Part 91.119]

12.3.6. The PIC will operate over congested areas (e.g., cities, towns, settlements) or groups of people at an altitude which ensures at least 1,000 feet above the highest obstacle within a 2,000-foot radius. **(T-0)** Helicopters in FAA airspace or operating in accordance with host-nation agreements may operate at lower altitudes and in closer proximity if they do not create a hazard to persons or property on the surface. [14 CFR Part 91.119]

12.3.7. [AIM 7-5-6] The PIC will operate no lower than 2,000 feet AGL (mission permitting) over national parks, monuments, seashores, lakeshores, recreation areas and scenic riverways administered by the National Park Service, national wildlife refuges, big game refuges, game ranges and wildlife ranges administered by the U.S. Fish and Wildlife Service, and wilderness and primitive areas administered by the U.S. Forest Service (not applicable for MTRs, low-altitude tactical navigation areas, and special use airspace). **(T-0)** Specific areas may require higher altitudes (see FLIP and sectional aeronautical charts).

12.3.8. The PIC will not operate within designated disaster areas unless the aircraft is assisting in disaster relief efforts and is authorized by the official in charge of on scene emergency response activities [14 CFR Part 91.137]. **(T-0)** NOTAMs concerning disaster relief area temporary flight restrictions will specify the hazard and operating conditions and limitations. **(T-0)**

12.4. Aircraft Speed. [14 CFR Part 91.117, FAA JO 7610.4, ICAO Annex 2]

12.4.1. Conduct supersonic operations in accordance with DAFMAN 13-201, *Airspace Management*.

12.4.2. The PIC will not exceed 250 knots below 10,000 feet MSL. **(T-0)** Exceeding 250 knots below 10,000 feet MSL is only permitted when in international airspace and the mission requirements dictate, ICAO or host-nation rules permit, or necessary to maintain the minimum safe airspeed as prescribed in the aircraft flight manual. **Note:** If the flight manual airspeed is listed as a range, fly the slowest practicable speed. **Exception:** [NAS Only] MAJCOMs may approve operations:

12.4.2.1. Within restricted areas or MOAs.

12.4.2.2. Within DoD and FAA mutually developed instrument routes or DoD developed visual routes. **Note:** The PIC will not exceed 250 knots on SR routes. **(T-1)**

12.4.2.3. Within unpublished DoD and FAA-designated areas or routes. This provision is intended to accommodate speed requirements, as necessary to accomplish the national defense mission, on an interim basis until the area or route can be published.

12.4.2.4. During large-scale exercises or short-term special missions with appropriate coordination to ensure awareness of the nonparticipating flying public.

12.4.2.5. **(Added-AMC)** In accordance with applicable tech orders, aircraft may exceed 250 KIAS or in-flight minimum maneuver speed below 10,000 feet to safely accomplish formation departure rejoins. Once rejoined, all formation members may exceed 250 KIAS below 10,000 feet only to accommodate the minimum maneuver speed of the heaviest formation member.

12.4.3. [NAS Only] The PIC will not exceed 200 knots at or below 2,500 feet AGL within 4 NM of the primary airport in Class C or Class D airspace unless authorized by ATC or required to maintain the minimum operating airspeed specified in the aircraft T.O. **(T-0)**

12.4.4. [NAS Only] The PIC will not exceed 200 knots in the airspace underlying Class B airspace or in a VFR corridor designated through Class B airspace unless required to maintain the minimum operating airspeed specified in the aircraft T.O. **(T-0)**

12.4.5. Holding speeds are in accordance with FLIP or aircraft flight manual guidance. **(T-0)**

12.5. Hazard Avoidance.

12.5.1. The PIC will not operate in any forecast or actual severe condition (e.g., icing, turbulence, bird watch condition). **(T-3)** **Note:** This includes actual or forecast areas of “moderate to occasional severe” turbulence or “moderate to severe” turbulence [Air Force Handbook (AFH) 11-203V1, *Weather for Aircrews*].

12.5.1.1. **(Added-AMC)** In-Flight Weather Advisories. Significant Meteorological Information (SIGMET) and other Aviation Weather Center in-flight weather advisories are issued for large areas. Contact an appropriate military weather facility or flight service station to determine mission applicability and impact. These advisories are not considered controlling forecasts, but do warrant further investigation. Aircrew will consult with primary weather sources to determine if hazards are forecasted along the route of flight. **(T-2)**

12.5.1.2. **(Added-AMC)** Turbulence. Flight into areas of forecast or reported severe turbulence is prohibited. The PIC is responsible for ensuring all passengers are seated, with seat belts fastened, when areas of light or greater turbulence are encountered or anticipated. **Note:** Serious injury may occur if passengers do not have their seat belts fastened and the aircraft encounters moderate or severe turbulence. **Do not fly into an area of known or forecast moderate or greater mountain wave turbulence.** Refer to AFH 11-203v1 and AFH 11-203v2, *Weather for Aircrews*, for additional information on mountain wave turbulence.

12.5.1.3. **(Added-AMC)** Icing. Flight into areas of forecast or reported severe icing is prohibited. Prolonged operation, such as cruise flight or holding, in areas of moderate icing should be avoided. Freezing drizzle is equivalent to moderate icing and freezing rain is

equivalent to severe icing. **Note:** 557th Weather Wing technical note 557 WW/TN-15/001, Interactive Meteorological Techniques, states that icing potential is dependent upon aircraft type, aircraft design, flight altitude, airspeed, and meteorological factors. When freezing fog is forecast or reported, aircrews will confirm with weather agencies what type (if any) icing is associated with the freezing fog. **(T-2)** Refer to AFH 11-203V1 for additional information on icing hazards.

12.5.2. The PIC will not intentionally fly into a thunderstorm. **(T-1)** Do not fly in IMC near thunderstorms without operable weather radar. **(T-3)**

12.5.2. **(AMC)** Aircrew will be familiar with guidance on thunderstorm hazards and avoidance [AFH 11-203V1, *Weather for Aircrews*; AIM 7-1-26, 7-1-27], as well as aircraft-specific guidance on use of weather radar. **(T-2)**

12.5.2.1. **(Added-AMC)** The use of ground-based radar as a means of thunderstorm avoidance should only be used to assist in departing an inadvertently penetrated area of significant weather. It should never be considered a normal avoidance procedure. When relying exclusively on ground-based radar for weather avoidance, and the ground controller is unable to provide avoidance instructions, attempt to maintain VMC by:

12.5.2.1.1. **(Added-AMC)** Changing routing.

12.5.2.1.2. **(Added-AMC)** Diverting to alternate.

12.5.2.1.3. **(Added-AMC)** Declaring an emergency and requesting priority assistance.

12.5.2.2. **(Added-AMC)** Aircrews should avoid flying in areas of recently dissipated thunderstorms and advected clouds (horizontal movement of clouds caused by wind) downwind of thunderstorms.

12.5.2.3. **(Added-AMC)** In order to minimize exposure to thunderstorm hazards when approaching or departing an airport in an area where thunderstorms are occurring or are forecast:

12.5.2.3.1. **(Added-AMC)** Attempt to maintain VMC.

12.5.2.3.2. **(Added-AMC)** Maintain at least 5NMs separation from heavy rain showers.

12.5.2.3.3. **(Added-AMC)** Avoid areas of high lightning potential, i.e., clouds within plus or minus 5,000 feet of the freezing level or plus or minus 8°C of the freezing level.

12.5.2.4. **(Added-AMC)** Lightning. The following conditions are most conducive to lightning strikes and prolonged flight in them should be avoided:

12.5.2.4.1. **(Added-AMC)** Within 8°C of freezing.

12.5.2.4.2. **(Added-AMC)** In clouds or in any intensity of precipitation or turbulence associated with thunderstorm activity.

12.5.3. The PIC will not operate within 50 NM of known or reported volcanic ash, unless conducting rescue operations. **(T-3)** MAJCOMs may issue guidance on operations including procedures for inadvertent ash encounters and avoidance criteria. Aircrew will consult an authorized weather source for current Volcanic Ash Advisory Center ash cloud information (or significant meteorological information (SIGMET)) **(T-2)** If unable to contact an authorized weather source, consider areas depicted on Volcanic Ash Advisory Center charts (or SIGMETs) as hazardous. The PIC will report encounters with volcanic ash as soon as possible to the controlling agency and aircraft maintenance authorities. **(T-2)** Report volcanic ash encounters to pilot-to-metro service or other weather agencies to ensure rapid dissemination.

12.5.4. Bird Watch Condition is in accordance with AFI 91-202, *The U.S. Air Force Mishap Prevention Program* and FLIP.

12.5.4. **(AMC)** Bird/Wildlife Aircraft Strike Hazard (BASH) Programs. BASH programs are installation-based mishap prevention efforts managed IAW DAFI 91-212, *Bird/Wildlife Aircraft Strake Hazard (BASH) Management Program*.

12.5.4.1. **(Added-AMC)** BASH Phase II. Phase II is established IAW the installation BASH program during historically increased periods of seasonal migratory patterns and local land use activity.

12.5.4.1.1. **(Added-AMC)** Do not schedule takeoffs, landings, or low-levels (within the unit's designated Phase II area) from one hour before to one hour after sunrise and sunset during the Phase II period. **(T-3)** Installations publish significant bird hazards in FLIP Area Planning (AP) and the IFR Supplement along with the associated airfield operating hour restrictions and avoidance instructions. **(T-2)**

12.5.4.1.2. **(Added-AMC)** In the window from one hour before to one hour after sunrise and sunset, during the Phase II period, initial takeoffs and final landings are only allowed when departure and arrival routes will avoid bird activity. **(T-3)** Local IFR/VFR traffic pattern activity is prohibited. **(T-3)**

12.5.4.2. **(Added-AMC)** Aircrew Response to Bird Strikes. Bird strike damage cannot be accurately assessed in flight; only qualified maintenance personnel on the ground can make reliable damage assessments. However, in order to mitigate the risk of heavy-weight landings, divers, and fuel dumping after a suspected/actual bird strike, MAF guidance is IAW the following:

12.5.4.2.1. **(Added-AMC)** Higher Headquarters Missions. Following a bird strike, aircraft commanders will assess the situation using all available resources, and make the decision to land as soon as conditions permit or continue the mission. **(T-2)**

12.5.4.2.2. **(Added-AMC)** Locals, Exercises, JA/AATs, Off-Station Trainers: Assess the situation using all available resources, and should land as soon as conditions permit, or as practical, to have the aircraft inspected by qualified maintenance personnel. Aircraft Commanders may choose to return to home station if within reason (e.g., Local training sorties are more apt to use this option to return to home station in lieu of landing at an off-station transition airfield).

12.5.4.2.3. **(Added-AMC)** In all cases, consideration should be given to the size and number of birds encountered, engine indications, and possible airframe damage. Bird strike damage may result in a more complex airborne emergency.

12.5.4.2.4. **(Added-AMC)** Bird Strike Reporting. Whether the mission is continued or not, if there is a confirmed bird strike the PIC will coordinate with appropriate agencies to ensure the remains are collected, and complete the AFTO Form 781, *ARMS Aircrew/Mission Flight Data Document*. **(T-3)** DAFI 91-212 contains additional guidance on bird strike reporting, which normally includes submitting an AF Form 853, *Wildlife Strike Report*, or online equivalent, and AMC Form 97 to the nearest appropriate C2 location and/or the home station Flight Safety Office or Command Post.

12.5.4.3. **(Added-AMC)** When operating at airfields where no BASH program exists, a PIC has the authority to delay takeoffs and arrivals due to bird condition and will advise the appropriate C2 authority as soon as practicable. **(T-2)**

12.5.4.4. **(Added-AMC)** Bird Avoidance Model/Avian Hazard Advisory system. Aircrews will consider bird migratory patterns during the enroute portion of the mission to help minimize the potential of an in-flight bird strike. **(T-2)** The Bird Avoidance Model on AFSC/SEF website contains BASH information including regionalized Continental United States (CONUS) bird migration patterns, mission planning software overlay, and the latest news. The Avian Hazard Advisory System website is another source for real time bird hazard information. Both sites may be accessed through the AMC aircrew mission planning portal. See DAFI 91-212 for additional information. Information from these sources does not override an airfield's actual reported BWC.

12.6. VFR Flight. Operate VFR in accordance with the weather minimums listed in [Table 12.1](#) or [Table 12.2](#) as applicable [14 CFR Part 91.155]. **(T-0) Note:** Aircrew should be able to control the aircraft by referencing visual cues from a discernible horizon while operating VFR.

12.6.1. Before transition from IFR to VFR, establish appropriate visibility and cloud clearances in accordance with [Table 12.1](#) or [Table 12.2](#). **(T-0) Note:** Due to the potential for language confusion when flying internationally, pilots must specifically request, “cancelling my IFR flight” and any changes to the current flight plan [ICAO Doc 4444]. **(T-1)**

12.6.2. During transition from VFR to IFR, maintain appropriate visibility and cloud clearance requirements to a minimum IFR altitude until receipt of the IFR clearance. **(T-0)**

12.6.3. Do not operate beneath the ceiling under VFR within the lateral boundaries of controlled airspace designated to the surface for an airport when the ceiling is less than 1,000 feet. **(T-0)**

Table 12.1. NAS VFR Cloud Clearance and Visibility Minimums.

FAA Airspace Class	Prevailing or Flight Visibility	Distance from Cloud
Class A	Not Applicable	Not Applicable
Class B	3 SM	Clear of Clouds
Class C and Class D	3 SM	500 feet below, 1,000 feet above, and 2,000 feet horizontal
Class E and G (Fixed-wing) Below 10,000 feet MSL	3 SM	500 feet below, 1,000 feet above, and 2,000 feet horizontal
Class E and G (Fixed-wing) At or above 10,000 feet MSL	5 SM	1,000 feet below, 1,000 feet above, and 1 SM horizontal
Class E (Helicopter) Below 10,000 feet MSL	3 SM	500 feet below, 1,000 feet above, and 2,000 feet horizontal
Class E (Helicopter) At or above 10,000 feet MSL	5 SM	1,000 feet below, 1,000 feet above, and 1 SM horizontal
Class G (Helicopter) At or below 1,200 feet AGL (regardless of MSL)	Day: 1/2 SM Night: 1 SM	Clear of clouds if operated at a speed that allows the pilot adequate opportunity to see any air traffic or obstructions in time to avoid a collision.
Class G (Helicopter) Above 1,200 feet AGL and Below 10,000 feet MSL	Day: 1 SM Night: 3 SM	500 feet below, 1,000 feet above, and 2,000 feet horizontal
Class G (Helicopter) Above 1,200 feet AGL and At or above 10,000 feet MSL	5 SM	1,000 feet below, 1,000 feet above, and 1 SM horizontal
Note: When permitted by MAJCOM and ATC, helicopters, in accordance with SVFR, may operate in lower visibility conditions, if maneuvered at a speed that will give adequate opportunity to observe other traffic or any obstacles in time to avoid a collision.		

Table 12.2. ICAO VFR Cloud Clearance and Visibility Minimums.

ICAO Airspace Class	Flight Visibility	Distance from Cloud
Class A	Not Applicable	Not Applicable
Class B	8 KMs above 10,000 feet MSL 5 KMs below 10,000 feet MSL	Clear of clouds
Class C, D, and E	Same as Class B	1,500 m horizontal 300 m (1,000 feet) vertical
Class F and G (Fixed-wing) Above 900 m (3,000 feet) MSL or above 300 m (1,000 feet) above terrain, whichever is higher	Same as Class B	Same as Class C, D, and E.
Class F and G (Fixed-wing) At and below 900 m (3,000 feet) or 300 m (1,000 feet) above terrain whichever is higher	5 KMs	Same as Class C, D, and E.
Class F (Helicopter) Above 900 m (3,000 feet) or 300 m (1,000 feet) above terrain whichever is higher	8 KMs above 10,000 feet MSL 5 KMs below 10,000 feet MSL	1,500 m horizontal 300 m (1,000 feet) vertical.
Class F and G (Helicopter) At and below 900 m (3,000 feet) or 300 m (1,000 feet) above terrain whichever is higher	5 KMs (See Note)	Clear of cloud and in sight of the surface.
Class G (Helicopter) Above 900 m (3,000 feet) or 300 m (1,000 feet) above terrain whichever is higher	8 KMs above 10,000 feet MSL 5 KMs below 10,000 feet MSL	1,500 m horizontal 300 m (1,000 feet) vertical
Note: When permitted by MAJCOM and ATC, helicopters, in accordance with SVFR, may operate in lower visibility conditions, if maneuvered at a speed that will give adequate opportunity to observe other traffic or any obstacles in time to avoid a collision.		

12.7. Low-Level and VFR Charts. The most commonly used charts for VFR operations are the Joint Operations Graphic (JOG), the Tactical Pilotage Chart (TPC), and Sectional Aeronautical Charts. Sectionals may be preferable for VFR planning because they display critical information that may not be printed on other charts (e.g., airspace boundaries, special use airspace, ATC frequencies).

12.8. Definitions.


12.8.1. [FAA Pilot/Controller Glossary] Dead reckoning is the navigation of an airplane solely by means of computations based on airspeed, course, heading, wind direction, groundspeed, and elapsed time. Most VFR flights are flown in this manner.

12.8.2. True course is the intended horizontal direction of travel over the surface of the earth, expressed as an angle measured clockwise from true north (000 degrees) through 359 degrees.

12.8.3. Magnetic variation is the difference between true north and magnetic north. The magnetic variation is annotated on navigation charts, is different from one position on the earth to another and varies slightly over time.

12.8.4. Magnetic course is true course corrected for magnetic variation. As shown in [Figure 12.1](#), applying 10 degrees east variation to a true course of 65 degrees results in a magnetic course of 55 degrees. **Note:** East variation is subtracted; west variation is added.

Figure 12.1. Applying Magnetic Variation.

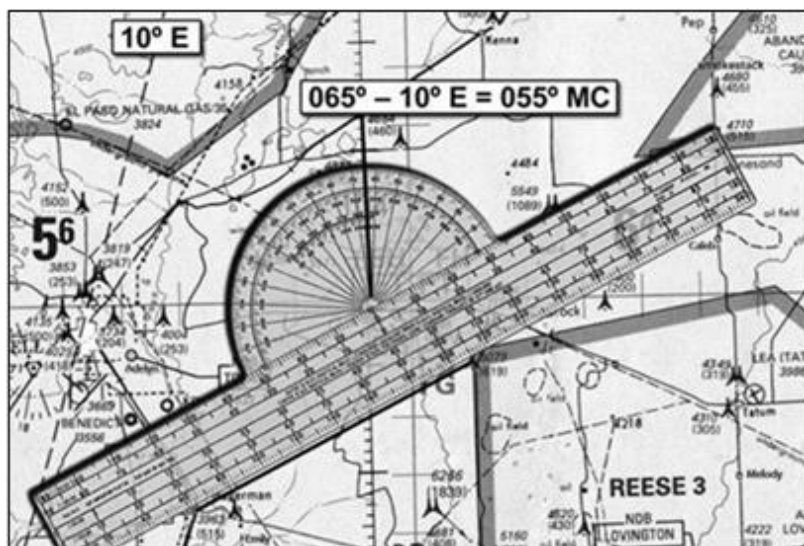

12.8.5. A course line is a line between any two points on the route.

12.8.6. A track is the direction the aircraft moves over the ground. An aircraft's track diverges from the desired course line if the pilot does not correct for wind.

12.8.7. True heading is the horizontal direction in which an aircraft is pointed in relation to true north. The difference between track and true heading is caused by wind and is called drift.

12.8.8. Groundspeed is the speed of the aircraft over the ground. Normally expressed in nautical miles per hour (knots). (Accounts for wind effect on aircraft speed across the ground.)

12.8.9. True airspeed is the speed of an aircraft relative to the air surrounding it. True airspeed and groundspeed are rarely the same as the air mass is usually moving relative to the ground.

12.9. Chart Selection. Select charts that satisfy navigation requirements and provide the desired detail commensurate with planned altitude and speed. Charts with a scale of 1:250,000 or greater detail are desired for low-level operations. Use a larger scale (e.g., 1:50,000 or greater) to locate the objective. Use a prominent ground feature when changing between charts.

12.9.1. The FAA Aeronautical Information Service Office produces Sectional Charts, VFR Terminal Area Charts (TAC), and VFR Helicopter Charts for use during VFR navigation. The charts have effective and expiration dates; not all charts expire on the same date.

12.9.2. The Jet Navigation Chart (JNC) is a worldwide small-scale aeronautical chart series (1:2,000,000). Used for high-altitude, high-speed, long-range navigation and planning.

12.9.3. The Operational Navigation Chart (ONC) is the standard worldwide small-scale aeronautical chart series (1:1,000,000). It contains cartographic data with an aeronautical overprint depicting obstructions, airfields, special use airspace, NAVAIDs, maximum elevation figures, and related data. The ONC is designed for medium altitude high-speed visual and radar navigation.

12.9.4. The Tactical Pilotage Chart (TPC) is the standard worldwide medium-scale aeronautical chart series (1:500,000). TPCs provide essential cartographic data appropriate to scale, and are overprinted with stable aeronautical information such as obstructions, airfields, special use airspace, NAVAIDs, maximum elevation figures, and related data. Overprint depicts obstructions, airfields, special use airspace, NAVAIDs and related data. A military grid is overprinted for joint interoperability. The TPC is designed for very low-altitude through medium-altitude high speed visual and radar navigation.

12.9.5. The Joint Operations Graphic – Air (JOG-A) is the standard DoD medium scale (1:250,000) chart. The JOG-A is a standard series modified for aeronautical use. The JOG-A displays topographic data such as: relief, drainage, vegetation, populated places, cultural features, coastal hydrography, aeronautical overprint depicting obstructions, airfields, special use airspace, NAVAIDs and related data. The JOG-A supports tactical and other air activities including low altitude visual navigation.

12.9.6. The Topographic Line Map (TLM) is a lithographic map that portrays, in greater detail, topographic and cultural information (1:50,000). Relief is shown by contours and spot elevations measured in meters, feet or yards. The map is a true representation of terrain detail. Features are plotted to correct orientation and true location. The map depicts the level of detail required for detailed route and objective area study as well as foot navigation in the case of a survival or evasion situation.

12.9.7. Flight planning software may be able to generate charts with even smaller scales, digital or satellite-acquired images of ground features, and are useful for selecting specific identifiable features like the western edge of a dam.

12.10. Chart Hazards. Aeronautical charts do not depict man-made obstacles less than 200 feet AGL or a change in terrain until it exceeds the chart contour interval. **Exception:** 150 feet for JOG. The worst case would be a 199-foot obstacle on terrain with an elevation just below the next higher contour. For a TPC with a contour interval of 500 feet, this results in an uncharted obstacle existing 699 feet above charted terrain.

12.10.1. The Digital Vertical Obstruction File (DVOF) lists known vertical obstructions worldwide for current navigation charts but does not contain man-made obstacles less than 200 feet. **Note:** Vertical obstruction information is obtained from the most reliable sources available, however, there is no assurance that all required obstructions are in the file or that their locations and heights are correct.

12.10.2. Obstruction change file (OCF) data is used for updating charts. It is produced every 28 day Aeronautical Information Regulation and Control (AIRAC) cycle and contains only changes to obstacles that meet chart specifications. OCF can be found on the Web DVOF site, <https://dvof.geointel.nga.mil/index.cfm> under "Predefined Queries." The OCF Users Guide in the same location. Vector Vertical Obstruction Data continues to be produced as well, and contains all obstacles in our database.

12.10.3. Some charts, such as JOG and TLM in some areas of the world, may depict terrain and obstacle heights in meters instead of feet.

12.10.4. If an uncharted obstacle (e.g., tower, power line) is encountered while flying a route, notify the following list of contacts to ensure future chart editions include the obstacle.

12.10.4.1. For Sectionals, contact the FAA at (800) 638-8972 or email them at Aerochart@faa.gov.

12.10.4.2. For NGA products, call the NGA Aero help desk at 877-817-9134 or email AeroHelp@nga.mil. For critical issues that must be resolved immediately, contact the NGA Operations Center at 877-345-1192.

12.11. Chart Building Requirements. MAJCOMs will publish guidance on required chart information.

12.11.1. All charts will be updated with current Digital Aeronautical Flight Information File (DAFIF)/DVOF and the date of the information will be annotated clearly on the charts. **(T-3)** Charts will be updated with the DVOF at least once a month. **(T-3)**

12.11.2. All charts used for low altitude navigation should be full color. If making color copies, ensure that all colors come through, as some shades of blue and green may not transfer, causing some terrain features or obstacles to be deleted. **Exception:** Squadron commanders may approve the use of black and white copies of original mission planning charts to enhance navigation capabilities on night vision missions; all mission planning and chart annotations must be done on original full color charts prior to making copies.

12.11.3. Electronic charts may be used in lieu of paper charts, as authorized by MAJCOM.

12.11.3.1. **(Added-AMC)** Aircrews are authorized to use electronic charts. All provisions of **paragraph 12.11** must be met.

12.11.4. VFR charts will include at a minimum: course lines, magnetic heading, leg distance, and time for segments flown below 1,000 feet AGL. **(T-3)**

12.11.4.1. Helicopters may fly in an annually surveyed low-level area with current DVOF above 300 feet AGL without the above chart requirements.

12.11.4.2. Helicopters will comply with chart requirements below 300 feet AGL on non-published routes. **(T-3)**

12.11.5. Normally, “radius of turn” procedures are used (route is drawn considering the distance an aircraft covers while it is turning after passing over a turn point) when drawing the chart, but depending on tactics, airspeed and altitude, other options like point to point may be applicable.

12.11.6. Time elapsed marks and distance remaining marks along the course line of each leg aid in dead reckoning.

12.12. Route Development. Select turn points based on a balance between their ease of identification and the tactical situation. Label each turn point with the same identifier used in the flight plan. When a landmark cannot be seen or is not available at a turn point, make the turn at the ETA. Extend the dead reckoning position to the next landmark and fix the position of the aircraft to make sure the desired course and groundspeed are maintained. The desired magnetic course on any given leg corrected for drift is the magnetic heading which parallels the course line. This minimizes departure from the intended track.

12.12.1. Course lines are normally straight segments between points but may be “spaghetti” routing to take advantage of terrain masking. Different tactical situations dictate different transitions from one course to another at turn points.

12.12.2. Checkpoints are landmarks or geographic coordinates on a VFR route used to determine the fix position of the aircraft. Checkpoints should have several related details around and stand out from the background to ensure positive identification. For example, if the checkpoint is a small town, there may be a lake to the north, a road intersection to the south, and a bridge to the east. **Note:** In open areas, any town or road intersection can be used; however, these same features in densely populated areas are difficult to distinguish.

12.12.3. When possible, find a feature on the chart that leads to the turn point. A “funneling feature” forms a visual boundary for, aids in navigating to, and helps in identifying the turn point (e.g., a stream, road, power line, railroad, terrain feature).

12.12.4. Time, distance, and fuel may be annotated in various ways on the chart and may show information for the leg being flown or for the remainder of the route. Ensure that information does not cover up important map features.

12.12.5. The objective area may be a target designated for attack, drop zone, landing zone, photo reconnaissance target, etc.

12.12.6. All charts must have VFR minimum safe altitudes (MSA) and at least one emergency route abort altitude (ERAA). **(T-3)**

12.12.6.1. A VFR MSA is an initial altitude that provides increased clearance from terrain or obstacles when dealing with minor circumstances that do not require an overall route abort. In the absence of more restrictive MAJCOM guidance, compute a VFR MSA for each leg of the route by adding 500 feet to the highest obstruction to flight within 5 nautical miles of route centerline to include the aircraft turn radius. **(T-3)**

12.12.6.2. The ERAA is designed to provide positive IMC terrain clearance during emergency situations that require leaving the low-level structure. Planners may compute several ERAAs for route segments transiting significant terrain differentials, or a single ERAA for the entire low-level route. Pilots will compute an ERAA by adding 1,000 feet (2,000 feet in mountainous terrain) to the elevation of the highest obstruction to flight within 22 nautical miles (5 nautical miles for helicopters or as prescribed by MDS instruction) either side of the entire planned route. **(T-3)** Pilots will compute ERAAs for the route and conspicuously annotate them on the chart. **(T-3)**

12.12.7. Each route should include clearly highlighted emergency divert airfields that may be used if an immediate landing situation occurs on the route.

12.12.8. To enhance scanning while flying the route, pilots will annotate areas where other routes cross the planned route. **(T-3)**

12.13. Route Navigation. Various techniques are used to control arrival time over the objective area. These techniques can be as simple as changing airspeed or more complicated applications of off-route maneuvering. Use caution when departing the planned route of flight, especially at night, to avoid encountering obstacles or flying into known areas of enemy activity when employing off-route time control techniques. If the off-course maneuvering exits the MSA corridor, a new MSA must be computed. **(T-3)** This can be done quickly by adding 500 feet to the charted maximum sector elevation(s) in the off-course maneuvering area.

12.13.1. A landmark often falls right or left of course and the pilot should estimate the distance to it. While the ability to estimate distance from a landmark rests largely in skill and experience, the following methods may be of assistance:

12.13.1.1. Compare the distance to a landmark with the distance between two other points as measured on the chart.

12.13.1.2. Estimate the angle between the aircraft and the reference point on the ground. The distance in nautical miles from the landmark to the aircraft's position over the ground depends on the sighting angle:

12.13.1.2.1. [60 degrees]: horizontal distance = (AGL altitude) x 1.7

12.13.1.2.2. [45 degrees]: horizontal distance = AGL altitude.

12.13.1.2.3. [30 degrees]: horizontal distance = (AGL altitude) x 0.6

12.13.2. Aircraft operating in the low altitude environment may elect to enhance their threat avoidance capabilities by hiding their physical, radar, and heat signatures in the available terrain features. Along the low-level route there may be vegetation or changes in elevation that can hide an aircraft from the enemy. Pilots should attempt to include terrain masking in their pre-flight route study so that off-course maneuvering does not negatively impact time on target control. In some cases however, opportunities to terrain mask are not evident until flying the route. Aggressive clearing and chart reading are essential to ensure that the benefits of terrain masking are not negated by unnecessarily increasing the overall risk factor of the mission.

12.13.3. In low-level flight, pilots should be particularly alert for obstructions. Hills and mountains are easily avoided if the visibility is good, but radio and television towers, which may extend as much as 2,000 feet or more into the air, often from elevated ground, are less conspicuous. Even more dangerous, the guy-wires supporting such towers are virtually invisible. For this reason, pilots should plan to avoid all towers by a horizontal distance equal to at least the AGL height of the tower. If flying at extremely low altitudes, power lines should be crossed at poles or towers as the line a pilot sees may not be the highest one.

12.13.4. Seasonal changes can conceal landmarks or change their appearance. Small lakes and rivers may dry up during the summer. Their outlines may change considerably during the wet season. In many areas, the only indication that a river exists may be the presence of deciduous trees. Snow can cover up almost all the normally used landmarks. When flying in the winter, it is often necessary to rely on more prominent checkpoints, such as river bends, hills, or larger towns. However, due to the size of these checkpoints, course control can be somewhat degraded.

12.13.5. Many times during low-level flight, the only way to read the wind is from indicators on the surface. On water, if downwind, the leeward side of the waves appears choppy (e.g., wind speeds more than 20 knots cause whitecaps on the surface of lakes). If upwind, the windward side of the waves have a smoother appearance. In a similar fashion, the leaves on deciduous trees are lighter on the underside which show to windward. The shiny and normally darker side of the leaves are present on the leeward side of the tree. Smoke and blowing dust also provide an easy indicator of wind direction.

12.14. Chart Reading. Orient the chart so that the course line on the chart is aligned with the intended course of the aircraft and landmarks on the ground appear in the same relative position as the features on the chart.

12.14.1. To navigate accurately, check the expected time on the route segment, select a feature on the chart, and then find it on the ground rather than working from the ground to the chart.

12.14.2. Night navigation comes with certain inherent challenges including hazards due to visual illusions. Lighted reference points tend to look closer than they are at night. Large objects in the background can mask closer obstacles. Darkness adversely affects visual acuity, requiring greater use of peripheral vision. Colored lighting used for chart reading can mask features on the chart. It is critical to understand that contrast can change the way landmarks look at night. Proper use of cockpit lighting and night vision devices enhances night navigation. Use special caution when operating around ridgelines utilizing high moon illumination. Shadowing can make other ridgelines and obstructions extremely difficult to see.

12.14.3. Contours are lines that connect points of equal elevation and are the most common method of showing relief features on a chart. Contour lines are closer together where the slope is steep and farther apart where the slope is gentle. Within the limits of the contour intervals, the height of points and the angle of slope can also be determined from the chart. Contour intervals are determined by the scale of the chart, the amount of relief, and the accuracy of the survey. Contours may be annotated in feet or meters in the chart legend and are frequently labeled with figures of elevation.

12.14.4. A maximum elevation figure is required over all land masses, including areas of unreliable relief, and open water areas containing man-made obstructions (e.g., oil rigs). The maximum elevation figure represents the highest possible elevation of both terrain and vertical obstructions (e.g., towers, trees) in an area bounded by ticked lines. The maximum elevation figure is displayed in feet with large thousands digits and smaller hundreds digits.

12.14.4.1. In areas of unreliable relief, or over water where no known obstructions exceed 200 feet, a note spaced across the area is used ([Figure 12.2](#)).

12.14.4.2. The maximum elevation figure is useful if maneuvering off course. If the position of the aircraft is known, the maximum elevation figure for the grid square the aircraft is in (or going to if transiting grid squares to a higher maximum elevation figure) can be used to calculate a new MSA or ERAA by adding an appropriate amount to the maximum elevation figure.

Figure 12.2. Maximum Elevation Note – Unreliable Relief.

**MAXIMUM ELEVATION FIGURES ARE
BELIEVED NOT TO EXCEED 7600 FEET**

12.15. On-Board Navigation Systems. Although not required for VFR flight in most types of airspace, it is highly recommended that pilots use their on-board navigation systems during flight under VFR when operational requirements allow. This maximizes situational awareness and enhances safety by facilitating the transition to IFR should it become necessary.

12.16. Low-Level Time-to-Impact. At low altitudes, loss of situational awareness can lead to an insidious descent rate; even a minor nose-low attitude can result in terrain impact in a very short time ([Table 12.3](#) and [Table 12.4](#)). With wings level, the time differences based on pitch, altitude, and airspeed are all linear (e.g., cutting the altitude in half or doubling the nose-low pitch angle cuts the time-to-impact in half). Historical data shows that while 90% of low-level operations are straight and level, only 9% of low-level accidents occur during straight and level flight. Conversely, turning and looking accounts for only 5% of low-level flight but 52% of accidents. Clearing for terrain must be a priority while maneuvering at low altitudes.

Table 12.3. Time-to-Impact (seconds) – Wings Level.

Flight Path Angle (1 degree down)					
		Airspeed			
		480 Knots	360 Knots	240 Knots	120 Knots
Altitude	100' AGL	7 seconds	10.5 seconds	14 seconds	28 seconds
	300' AGL	21 seconds	32 seconds	42 seconds	84 seconds
	500' AGL	35 seconds	53 seconds	70 seconds	140 seconds
Flight Path Angle (2 degrees down)					
		Airspeed			
		480 Knots	360 Knots	240 Knots	120 Knots
Altitude	100' AGL	3.5 seconds	5 seconds	7 seconds	14 seconds
	300' AGL	10.5 seconds	16 seconds	21 seconds	42 seconds
	500' AGL	18 seconds	25 seconds	35 seconds	70 seconds

12.16.1. Most low-level accidents occur while the aircraft is in a bank. Even the smallest distraction or inattention to the proximity of terrain while maneuvering the aircraft can result in a loss of situational awareness and a fatal accident. More back pressure is needed to maintain level flight as bank angle increases. The amount of back pressure required to maintain altitude increases dramatically at bank angles greater than 60 degrees; the descent generated by overbanking without holding the required back pressure is significant. At low altitudes this means a very short time-to-impact shows just how little time there is from 500 feet if a pilot holds the back pressure for one bank angle but flies in an overbanked condition. Considering that many aircraft fly low-levels at 300 feet AGL and normally use a 60 degrees bank angle to turn from one course to another (or even higher bank angles during simulated threat avoidance), a 20 degrees overbank error could result in less than 3 seconds time-to-impact.

12.16.2. Helicopters have additional flight characteristics to consider in banked flight. Refer to MDS-specific flight manuals for cautions and warnings specific to banked flight at low altitudes.

Table 12.4. Time-to-Impact (seconds) – Banked.

From 500' AGL	Intended Angle of Bank		
	30 degrees	45 degrees	60 degrees
10 degrees of overbank	16.2 seconds	12.7 seconds	9.9 seconds
15 degrees of overbank	12.9 seconds	10.3 seconds	8.0 seconds
20 degrees of overbank	10.9 seconds	8.8 seconds	6.9 seconds

12.16.3. If flying VFR using dead reckoning and aircraft position is unknown, continue to navigate clock to map to ground and turn on time. A slight off-course condition can be quickly corrected once on a new leg of the course with more prominent ground references. While doing this, climb to a higher altitude (weather permitting), being careful to maintain airspeed to preserve dead reckoning accuracy. This conserves fuel while improving NAVAID and radio reception. Attempt to tune and identify NAVAIDs that can provide positional information and do not delay declaring the condition to ATC.

12.17. Route Abort. Various situations may make abandoning the route necessary (e.g., low fuel, aircraft emergency, bad weather). In most emergency situations, climbing to the ERAA is the best course of action. Flying at the ERAA ensures that the aircraft is clear of obstructions and minimizes hazards to flight while abort procedures are applied. Aborting the route itself does not normally constitute an emergency; consider all factors when deciding how to proceed after the abort.


Chapter 13

HOLDING

13.1. General. Holding is a procedure that delays an aircraft's approach to an airfield or delays an aircraft en route using a navigation fix. The purpose is to keep an aircraft within a specified airspace while providing IFR separation from other controlled traffic. The clearance to hold may be initiated by the controlling agency or may be requested by the pilot. Reference AIM 5-3-8, FAA-H-8083-16 Chapters 2 and 3, and ICAO Doc 8168 Volume 1 Section 6 for more detailed explanations of holding procedures.

13.2. Holding Patterns. The standard holding pattern is a racetrack design consisting of two 180-degree right turns and two straight legs (**Figure 13.1.**). The holding pattern is non-standard when turns are made to the left.

Figure 13.1. Standard Holding Pattern.

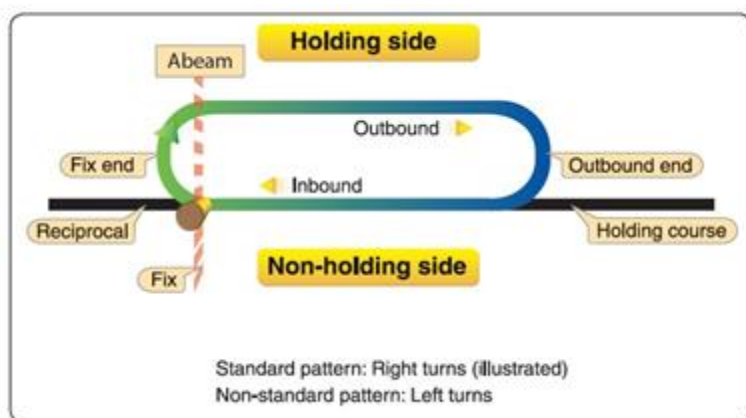

13.2.1. Holding patterns have inbound course guidance provided by a VOR, TACAN, NDB, localizer, or area navigation systems. If NAVAIDs are co-located to define the holding pattern, it is the pilot's option as to which NAVAID to use.

13.2.2. U.S. TERPS design criteria states that the use of TACAN station passage as a fix is not acceptable for holding fixes (regardless of altitude) or high altitude IAFs (those IAFs which are at or above FL180). This restriction is driven by the TACAN fix error involved in station passage. Therefore, if the aircraft is TACAN-only equipped, do not hold directly over a TACAN or collocated VOR/TACAN (VORTAC) facility or plan to use these facilities as high altitude IAFs. TACAN station passage can be used to identify an IAF below FL180 regardless of whether the approach is published as a low or high approach.

13.3. Holding Instructions. ATC should issue complete holding instructions (unless the pattern is charted), an “expect further clearance” time, and best estimate of any additional delay when an aircraft is cleared to a fix other than the destination airfield and delay is expected. The pilot is expected to hold as depicted on the appropriate chart (e.g., on the assigned procedure or route) if the holding pattern is charted and the controller doesn’t issue complete holding instructions ([Figure 13.2.](#)). ATC may omit all holding instructions except the charted holding direction and the statement “as published” when the pattern is charted on the assigned procedure or route being flown (e.g., “Hold north as published”). Query the controller if there is any doubt about the clearance. **Note:** ATC must always issue complete holding instructions when pilots request them.

Figure 13.2. Multiple Holding Patterns at Same Fix.




13.4. Holding Entry. Holding protected airspace is designed based in part on pilot compliance with the three holding pattern entry sectors: parallel, direct, and offset. In the NAS, the offset entry sector is referred to as the teardrop entry sector ([Figure 13.3.](#)).

13.4.1. Holding entry procedures are mandatory outside the NAS. **(T-0)**

13.4.2. [NAS Only] Holding entry techniques using the sector method are recommended.

Figure 13.3. Holding Entry Sectors.

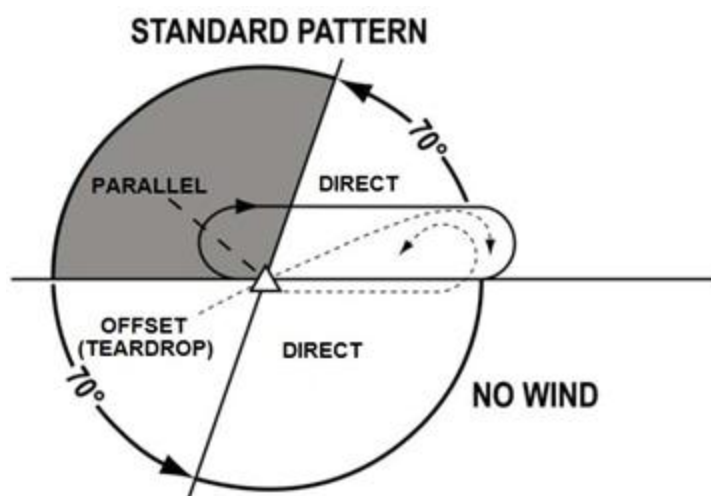

13.5. Holding Bank Angle. Make all turns during entry and while holding at:

13.5.1. 3 degrees per second or 25 degrees bank angle, whichever requires a lesser bank angle.

13.5.2. [NAS Only] 3 degrees per second, 30 degrees bank angle, or 25 degrees bank angle when using a flight director system.

13.6. Maximum Holding Airspeed. Advise ATC immediately if unable to maintain below the maximum holding airspeed (e.g., turbulence, icing, aircraft performance) or if unable to accomplish any part of the holding procedure. When such higher speeds are no longer necessary, operate according to the appropriate published holding speed and notify ATC.

13.6.1. Maximum holding airspeeds are in accordance with **Table 13.1** unless depicted otherwise. Many ICAO States publish their own holding airspeeds. This information should be published in the ICAO State AIP and FLIP AP series. Some holding pattern airspeeds are published on instrument procedures. Maximum holding airspeeds are designed to prevent the aircraft from exceeding protected airspace and have no relation to the holding speed specified in the aircraft flight manual.

13.6.2. Holding patterns may be restricted to a maximum speed. The speed restriction is depicted inside the holding pattern on the chart (**Figure 13.4**). The aircraft should be at or below the maximum airspeed prior to initially crossing the holding fix.

13.6.3. [NAS Only] A maximum airspeed of 310 knots is permitted in climb-in-holding, unless a maximum holding airspeed is published, in which case that maximum airspeed is applicable. The airspeed limitations in 14 CFR Part 91.117 still apply. Refer to **Chapter 15** for more information.

Table 13.1. Maximum Holding Airspeeds.

NAS (1)	Altitude / Level (MSL) (2)	ICAO Normal	ICAO Turbulence (3)	ICAO Helicopter (4)
265	34,000+	0.83 Mach		170
	34,000	265	280 or 0.8 Mach, whichever is less	
	20,000	240	280 or 0.8 Mach, whichever is less	
230	14,000	170 (CAT A/B) 230 (CAT C/D/E)	170 (CAT A/B)	100
200	6,000		280 (CAT C/D/E)	
	MHA			

Notes:

1) NAS Exceptions:

a) USAF Fields: 310

b) Navy Fields: 230

c) COPTER IAP 90

2) The levels shown represent altitudes or corresponding FLs depending upon the altimeter setting in use.

3) Pilots must obtain ATC approval to hold at the speeds reserved for turbulence conditions unless the relevant publications indicate that the holding area can accommodate aircraft flying at these high holding speeds. (T-0).

4) The maximum holding speed for helicopters is 100 knots up to 6,000 feet inclusive and 170 knots above 6000 feet.


Figure 13.4. Maximum Holding Airspeed.

13.7. Holding Length. Holding timing is 1 minute at or below 14,000 feet MSL and 1.5 minutes above 14,000 feet MSL, unless otherwise directed by ATC.

13.7.1. [ICAO Doc 8168 Volume 1] Timing is based on the outbound leg. Outbound timing begins over or abeam the fix, whichever occurs later. If the abeam position cannot be determined, start timing when the turn to the outbound heading is completed. Due allowance should be made in both heading and timing to compensate for the effects of wind to ensure the inbound track is regained before passing the holding fix inbound. In making these corrections, full use should be made of the indications available from the NAVAID and estimated or known wind.

13.7.2. [NAS Only] Timing is based on the inbound leg. The initial outbound leg should be flown for 1 minute or 1.5 minutes (as appropriate). Timing for subsequent outbound legs should be adjusted, as necessary, to achieve proper inbound leg time.

13.7.3. A limiting radial may be published ([Figure 13.5](#)). In cases of holding where the distance from the holding fix to the VOR/DME station is short, a limiting radial may be specified (e.g., airspace conservation is essential). If the limiting radial is reached before the limiting outbound distance, the radial should be followed until a turn inbound is initiated at the limiting outbound distance.

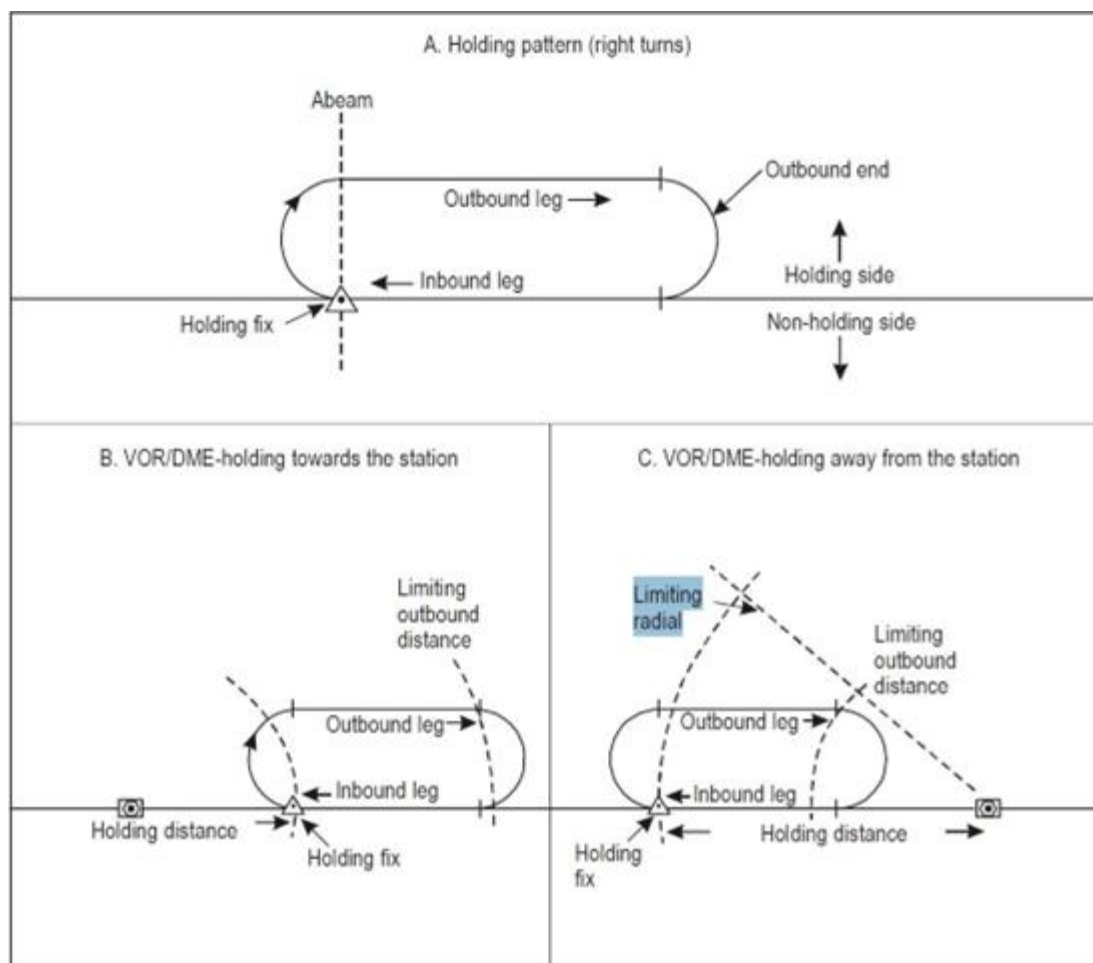Figure 13.5. ICAO Limiting Radial.

13.8. Drift Corrections. After entering the holding pattern, the pilot is expected to compensate for known winds to arrive at an outbound position from which a turn places the aircraft on the inbound holding course. Compensate for wind effect primarily by drift correction on the inbound and outbound legs. When outbound, triple the inbound calculated drift correction (e.g., if correcting left by 8 degrees on the inbound leg, correct right by 24 degrees when on the outbound leg). Triple drift is the only method that allows for a constant angle of bank through inbound and outbound turns. Refer to [Attachment 2](#) for drift calculations.

13.9. Fuel Consideration. Once established in the holding pattern, a fuel calculation should be carried out. Determine how long it is possible to remain in the holding pattern and maintain fuel awareness throughout the holding maneuver.

13.10. Use of Area Navigation Guidance and Holding. RNAV systems, including multi-sensor FMS and stand-alone GNSS receivers may be used to provide lateral guidance when holding. The way holding is implemented in an RNAV system varies between aircraft and RNAV system manufacturers.

Chapter 14

ARRIVAL

14.1. General. Preparation for the arrival and approach begins long before the descent from the en route phase of flight. The en route descent is a transition from the en route structure to the airfield environment. Optimum IFR arrival options include flying directly from the en route structure to an approach gate or IAF, a visual arrival, STAR, or radar vectors.

14.1.1. **(Added-AMC)** Descent Preparation. Prior to the top of descent (TOD), the PIC will identify and discuss mitigation of associated hazards to the penetration, approach, landing, and airfield. **(T-3)** Before descent into unfamiliar areas, pilots will review appropriate terrain charts to increase aircrew situational awareness of obstructions. **(T-3)** To reduce workload and distractions during descent and approach, pilots will make every effort to accomplish briefings and appropriate checklists prior to TOD. **(T-3) Note:** This does not preclude updating or modifying the brief after TOD if necessary. Primary aircrew members will not be involved in duties other than aircraft operation, descent and approach monitoring, and required checklist items from the initial descent point to landing. **(T-3)**

14.2. Weather. Do not begin a descent or commence an approach when the reported weather at the destination airfield is below the lowest compatible approach minimums. **(T-1)**

14.2.1. Use the prevailing visibility or RVR for straight in or sidestep approaches. **(T-1) Note:** The appropriate prevailing visibility or RVR immediately follows the published DA, decision height (DH), or MDA. The numbers in parentheses are for required ceiling and visibility purposes (e.g., calculating required minimums for filing an alternate or circling).

14.2.2. Use the ceiling and visibility in parentheses for a circling approach. **(T-1) Note:** If using a Jeppesen® or other approach plate that does not have the ceiling published, calculate ceiling in accordance with [paragraph 18.14.7](#).

14.2.2.1. **(Added-AMC)** When circling minimums are published, but not by category, circling approach minimums will be as published, but in no case lower than 500-feet and 1 1/2-miles visibility for Category C, and 600-feet and 2-miles visibility for Category D. **(T-2)**

14.2.3. If the reported weather decreases below lowest compatible approach minimums after beginning a descent, receiving radar vectors for an approach, or established on any segment of an approach prior to the missed approach point (MAP), the approach may be continued to the appropriate MAP and a landing may be accomplished if all criteria for landing are met.

14.2.3.1. **(Added-AMC)** Variable visibility/ceiling reports (not forecasts). If variable visibility/ceiling is reported, pilots may use the greatest value reported. For visibility reported as RVR, comply with [paragraph 4.10.2](#) (use the lowest). If it is subsequently determined that weather is below minimums for the approach, comply with [paragraph 14.2.3](#). Do not attempt further approaches until the lowest visibility/ceiling reported is at/above approach minimums. **(T-2)**

14.2.4. Do not fly an approach or land at an airport where thunderstorms or other hazardous conditions are producing hail, strong winds, gust fronts, heavy rain, lightning, wind shear, or microbursts unless the runway and flight path are clear of hazards. **(T-3)**

14.2.4. (AMC) Do not accomplish approaches or departures when thunderstorms or other hazardous conditions are producing hail, strong winds, gust fronts, heavy rain, lightning, wind shear, or microbursts at the airport, or are forecast or observed to be moving in the direction of the route of flight (to include the planned missed approach corridor, if applicable). (T-2)

14.2.4.1. (Added-AMC) In order to minimize exposure to thunderstorm hazards when approaching or departing an airport in an area where thunderstorms are occurring or are forecast aircrews should:

14.2.4.1.1. (Added-AMC) Attempt to maintain VMC.

14.2.4.1.2. (Added-AMC) Maintain at least 5NMs separation from heavy rain showers.

14.2.4.1.3. (Added-AMC) Avoid areas of high lightning potential, i.e., clouds within plus or minus 5,000 feet of the freezing level or plus or minus 8°C of the freezing level.

14.3. Types of Instrument Arrivals. Fly all procedures as published. (T-0)

14.3.1. Fly conventional arrivals using the appropriate conventional NAVAID(s) as the primary means of navigation except when using substitute or alternate means as authorized with approved RNAV equipment. (T-0)

14.3.2. Retrieve PBN procedures in their entirety by procedure name from a current navigation database and compare against approved publications. (T-0)

14.3.3. Fly MAJCOM arrivals as authorized by the MAJCOM.

14.3.4. (Added-AMC) At night or under IMC, fly a precision approach if available. If not available, fly any approved instrument approach, preferably with vertical guidance. At night under VMC, a visual approach may be flown if an approved instrument approach to the landing runway is not available, or if operationally required. **Exceptions:**

14.3.4.1. (Added-AMC) On training/evaluation flights, pilots may fly visual or non-precision approaches or VFR traffic patterns to accomplish required training and evaluations. The pilot monitoring should monitor a precision approach when available and practical to enhance safety.

14.3.4.2. (Added-AMC) For recovery at home station, pilots may elect to fly a visual or non-precision approach or VFR traffic pattern if weather conditions permit.

14.4. VFR Arrival. When arriving at a controlled airfield, contact ATC (approach or tower) and advise them of call sign, position, and intentions. (T-0) ATC allows VFR aircraft to self-navigate to the landing runway when traffic permits.

14.5. Descent Planning. [FAA-H-8083-16, Chapter 3] Planning the descent from cruise is important because of the need to dissipate altitude and airspeed to arrive at the approach gate properly configured. To plan the descent, the pilot needs to know the cruise altitude, approach gate altitude or IAF altitude, descent groundspeed, and descent rate.

14.6. Initial Descent. Before starting descent, review instrument procedures and weather, check heading and attitude systems, and coordinate lost communication procedures, if necessary. If holding is not required, reduce to maneuvering airspeed before reaching the IAF. During the descent, control descent rate and airspeed to comply with any altitude or speed restrictions imposed by ATC.

14.7. ICAO Arrival Routing. Published arrival routing to a course reversal IAF, such as a STAR, feeder route, or arrival airway, is blended into the arrival approach, either by being within the 30 degrees entry sector or a depicted holding pattern entry. Pilots need not request maneuvering airspace to perform an alignment maneuver; such requests may confuse ATC.

14.8. Standard Terminal Arrivals (STARs). [ICAO Doc 8168 Volume 1; AIM 5-4-1] A STAR is a designated IFR arrival route linking a significant point, normally on an ATS route, with a point from which a published instrument approach procedure can be commenced. STARs simplify clearance delivery procedures and facilitate the transition between en route and instrument approach procedures. Pilots should notify ATC if they do not wish to use a STAR by placing “NO STAR” in the remarks section of the flight plan or by the less desirable method of verbally stating the same to ATC.

14.9. Arrival Clearances. Pilots navigating on arrival procedures must maintain last assigned altitude until receiving authorization to descend; comply with all restrictions published during the descent. (T-0)

14.10. Arrival Phraseology.

14.10.1. In the NAS, arrival phraseology is in accordance with [Table 14.1](#).

Table 14.1. NAS Phraseology.

ATC Instruction	Explanation
“Cleared Tyler One arrival.”	- Follow the lateral profile of the arrival - No descent is authorized
“Cleared Tyler One arrival, descend and maintain flight level two four zero.”	- Follow the lateral profile of the arrival - Descend to the cleared altitude and maintain this altitude until cleared for further descent with a newly assigned altitude or “descend via”
“Cleared Tyler One arrival, descend at pilot’s discretion, maintain FL180.”	- Follow the lateral profile of the arrival - Descend at pilot’s discretion to the cleared altitude, maintain this altitude until cleared for further descent with a newly assigned altitude or “descend via”
“Descend via the Tyler One arrival.”	- Follow the lateral profile of the arrival - Descend at pilot’s discretion and comply with published altitude restrictions
“Descend via the Tyler One arrival, except after GRANT maintain nine thousand.”	- Follow the lateral profile of the arrival - Descend at pilot’s discretion and comply with published altitude restrictions until the ATC-assigned “maintain” altitude
“Descend via the Tyler One arrival, except cross SCOTT at nine thousand then maintain six thousand.”	- Follow the lateral profile of the arrival - Descend at pilot’s discretion and comply with published altitude restrictions, cross the point at the ATC-assigned altitude, and then continue the descent to the ATC-assigned “maintain” altitude
“Proceed direct DILLY, cross DILLY at or above flight level two zero zero, then descend via the Tyler One arrival.”	- Proceed direct to the assigned point - Follow the lateral profile of the arrival - Descend at pilot’s discretion to the published or assigned altitude at the ATC-assigned point then comply with published altitude restrictions.
Note: Always comply with speed restrictions or ATC-issued speed control instructions, as applicable. (T-0)	

14.10.2. [ICAO Doc 4444] [ICAO] ATC clearances issued to aircraft on a STAR include if remaining speed or level restrictions are to be followed or cancelled; standard clearance phraseology is shown in [Table 14.2](#).

14.10.2.1. If there are no remaining published level or speed restrictions on the STAR, the phrase “DESCEND TO (*level*)” should be used.

14.10.2.2. When subsequent speed restrictions instructions are issued and if the cleared level is unchanged, the phrase “DESCEND VIA STAR TO (*level*)” should be omitted.

14.10.2.3. When an arriving aircraft is cleared to proceed direct to a published waypoint on the STAR, the speed and level restrictions associated with the bypassed waypoints are cancelled. All remaining published speed and level restrictions remain applicable.


14.10.2.4. ATC instructions to rejoin a STAR after being vectored include the STAR to be rejoined, the cleared level to rejoin the STAR unless advance notification has been provided, and the position to rejoin the STAR.

Table 14.2. ICAO Phraseology.

ATC Instruction	Explanation
“Descend via STAR to <i>(level)</i> ”	- Follow the lateral profile of the STAR - Descend to the cleared level and comply with published level restrictions
Descend via STAR to <i>(level)</i> , cancel level restriction(s)	- Follow the lateral profile of the STAR - Descend to the cleared level and published level restrictions are cancelled
Descend via STAR to <i>(level)</i> , cancel level restriction(s) at <i>(point(s))</i>	- Follow the lateral profile of the STAR - Descend to the cleared level and published level restrictions at the specified point(s) are cancelled
Descend via STAR to <i>(level)</i> , cancel speed restriction(s)	- Follow the lateral profile of the STAR - Descend to the cleared level and comply with published level restrictions - Published speed restrictions and ATC-issued speed control instructions are cancelled
Descend via STAR to <i>(level)</i> , cancel speed restriction(s) at <i>(point(s))</i>	- Follow the lateral profile of the STAR - Descend to the cleared level and comply with published level restrictions - Published speed restrictions are cancelled at the specified point(s)
Descend unrestricted to or descend to <i>(level)</i> , cancel level and speed restrictions	- Follow the lateral profile of the STAR - Descend to the cleared level, published level restrictions are cancelled - Published speed restrictions and ATC-issued speed control instructions are cancelled
Note: Always comply with speed restrictions or ATC-issued speed control instructions, as applicable. (T-0)	

14.11. RNAV Arrivals. [AIM 5-4-1; ICAO Doc 8168 Volume 1; FAA Order 8260.19, *Flight Procedures and Airspace*] RNAV arrivals may be RNAV 1 or RNP 1 (Figure 14.1). The default specification is RNAV 1; RNP 1 is used when an arrival contains an RF leg or is designed for DME/DME/IRU aircraft use when ATC radar surveillance monitoring is not desired. **Note:** The required specification, equipment sensor limitations, and any critical DME facilities are annotated clearly on the procedure.

Figure 14.1. RNAV Arrival.

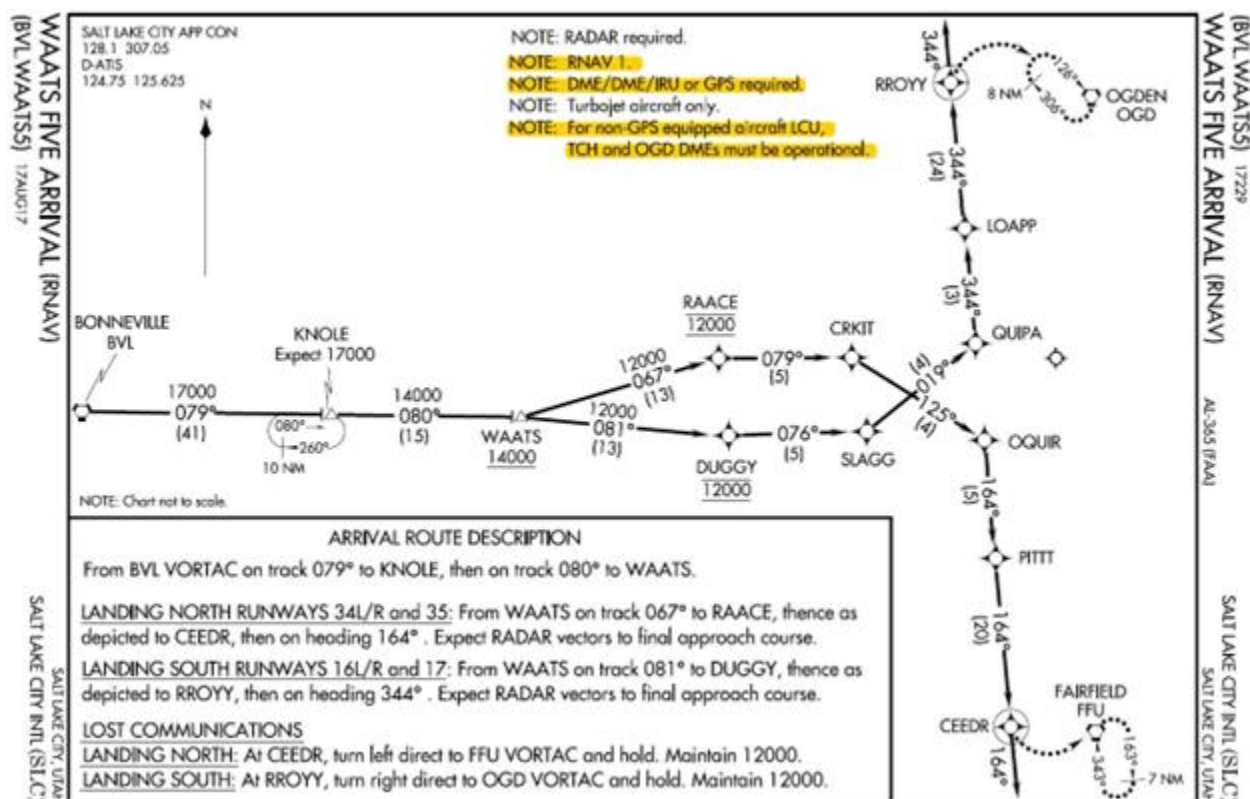

14.12. Anticipated Approach. ATC should provide the type of approach to expect, or if vectors should be expected for a visual approach when landing at airfields with two or more published instrument procedures. This information is broadcast either by a controller or on ATIS. It is not provided when the visibility is three miles or better and the ceiling is at or above the highest initial approach altitude established for any low altitude instrument procedures for the airfield. When making an IFR approach to an airfield not served by a tower or FSS, after ATC advises “change to advisory frequency approved,” the pilot should broadcast their intentions. This should include the type of approach being executed, position, and when over the non-precision approach final approach fix (FAF) inbound or at the precision approach glideslope intercept point. Monitor the appropriate frequency (e.g., UNICOM) for reports from other pilots.

14.13. Terminal Routings. Terminal routings from en route or feeder facilities are considered segments of instrument procedures and normally provide a course, range, and minimum altitude to the IAF. They may take the aircraft to a point other than the IAF if it is operationally advantageous to do so. A low altitude IAF is any fix labeled as an IAF or any procedure turn or hold-in-lieu-of procedure turn (HILPT) fix.

14.13.1. Ranges published along the terminal routing are expressed in nautical miles and not DME. The altitudes published on terminal routing are minimum altitudes and provide the same protection as an airway MEA (e.g., for navigation signal coverage and obstacle clearance).

14.13.2. If cleared for an approach while en route to a holding fix that is not collocated with the IAF, either proceed via the holding fix or request clearance direct to the IAF. If the IAF is located along the route of flight to the holding fix, begin the approach at the IAF. If overflying a transition fix, fly the approach via the terminal routing. If in doubt as to the clearance, query the controller.

14.13.3. When cleared for the approach, maintain the last assigned altitude until established on a segment of a published route or instrument procedure. At that time, the pilot may descend to the minimum altitude associated with that segment of the published routing or instrument approach procedure.

14.14. Terminal Arrival Area (TAA). [AIM 5-4-5, ICAO Doc 8168 Volume 1, Section 1, Chapter 2] The TAA provides a transition from the en route structure to the terminal environment for aircraft equipped with RNAV systems. TAAs are primarily used on RNAV approaches but may be used on instrument procedures when area navigation is the sole means for navigation to the intermediate fix (IF)/IAF.

14.15. Radar Vectors. [AIM 5-4-3] Vectors provide course guidance and expedite traffic to the final approach course of any published instrument procedure or to the traffic pattern for a visual approach.

14.15.1. [ICAO] [ICAO Doc 8168 Volume 1, Section 3, Chapter 1] With GNSS equipment, it may be required to manually select the next waypoint so that the GNSS is correctly using the appropriate database points and associated flight paths.

14.15.2. [ICAO] [ICAO Doc 8168 Volume 1, Section 4, Chapter 2] When terminal area radar is employed, the aircraft is vectored to a fix, or onto the intermediate or final approach track, at a point where the approach may be continued by the pilot referring to the instrument approach chart.

14.15.3. [AIM 5-4-5] Radar Controllers use an MVA chart to provide obstacle clearance while vectoring for an approach.

14.15.4. At all other times, unless specifically requested by the pilot, an aircraft is vectored to intercept the final approach course at least 3 miles from the FAF at a maximum intercept angle of 45 degrees (30 degrees in the NAS).

14.15.5. [FAA-H-8083-16, Chapter 4] Controllers are required to ensure the assigned altitude conforms to the following:

14.15.5.1. At an altitude not above the glideslope or glidepath, nor below the minimum glideslope or glidepath intercept altitude specified on the procedure for a precision approach.

14.15.5.2. At an altitude that allows descent in accordance with the published procedure for a non-precision approach.

14.15.6. Aircraft are normally informed when it is necessary to vector across the final approach course for spacing or other reasons. If approach course crossing is imminent and the pilot has not been informed that the aircraft is being vectored across the final approach course, the pilot should query the controller. Do not turn inbound on the final approach course unless an approach clearance has been issued. Approach clearance is normally issued with the final vector for interception of the final approach course, and the vector enables the aircraft to intercept the final approach course prior to reaching the FAF.

14.15.7. The pilot must maintain the last assigned altitude and heading until established on a segment of a published instrument procedure once approach clearance is received. **(T-0)** Comply with all course and altitude restrictions as depicted on the approach procedure; pilots must not climb above the last assigned altitude to comply with published altitude restrictions unless so instructed by the controlling agency. **(T-0)**

14.16. Operating at Non-towered Airfields. [AIM 4-1-9; AIM 4-3-3] All CTAF and FSS calls will be in accordance with the AIM. **(T-0) Note:** Personnel providing traffic advisories at non-towered airfields are not ATC. Pilots are responsible for their own traffic avoidance, sequencing, and separation. Instrument approaches may not coincide with the ground tracks of the VFR traffic pattern, the instrument approach may not terminate at the active runway, altitudes may not coincide with the prevailing traffic patterns, and not all VFR pilots are familiar with the instrument approach procedures at the airfield.

14.16.1. Aircraft operating on an IFR flight plan, landing at a non-towered airfield are advised to “change to advisory frequency” when ATC communications are no longer required. When directed, pilots should expeditiously change to the CTAF, as the ATC facility may not have runway in use or airfield traffic information.

14.16.2. In addition to required VFR CTAF calls, make position reports at the following locations on the approach:

14.16.2.1. Departing the FAF inbound.

14.16.2.2. Established on the final approach segment or immediately upon being released by ATC.

14.16.2.3. Completion or termination of the approach.

14.16.2.4. Executing the missed approach procedure.

14.16.3. Many VFR pilots operating near the airfield may not be familiar with fix names. Location should be referred to in the simplest terms. For example, use “5 miles south” instead of “ALEXX Intersection.”

Chapter 15

APPROACH

15.1. General. Instrument procedures provide necessary navigation guidance information for alignment with the final approach courses as well as obstruction clearance. An instrument procedure can be flown in one of two ways: as a “full procedure” approach or with the assistance of ATC via radar vectors. Full procedure approaches may be requested by the pilot but are most often used in areas without radar coverage. A full procedure approach also provides the pilot with a means of completing an instrument approach in the event of a communication failure.

15.1.1. Reference AIM 5-4, FAA-H-8083-16 Chapters 4 and 7, and ICAO Doc 8168 Volume 1 Section 4 for more detailed explanations of arrival procedures.

15.1.2. [AIM 5-4-5] A precision approach is an instrument approach based on a navigation system that provides course and glidepath deviation information meeting the precision standards of ICAO Annex 10 (e.g., PAR, ILS, and GLS).

15.1.3. [AIM 5-4-5] An approach with vertical guidance (APV) is an instrument approach based on a navigation system that is not required to meet the precision approach standards of ICAO Annex 10, but provides course and glidepath deviation information (e.g., baro-VNAV, LDA with glideslope, LNAV/VNAV, LPV).

15.1.4. [AIM 5-4-5] A non-precision approach is an instrument approach based on a navigation system which provides course deviation information, but no glidepath deviation information (e.g., VOR, NDB, LNAV). Some approach procedures may provide a vertical descent angle (VDA) as an aid in flying a stabilized approach, without requiring its use to fly the procedure. This does not make the approach an APV procedure, since it must still be flown to an MDA and has not been evaluated with a glidepath.

15.2. Practice Instrument Approaches Under VFR. When authorized by the MAJCOM, PICs will comply with the following:

15.2. (AMC) Practice Instrument Approaches Under VFR. With OG/CC approval, aircrew are authorized to practice instrument approaches under VFR IAW AFMAN 11-2MDSV3 and local guidance.

15.2.1. Maintain VFR cloud clearances and visibilities in accordance with [Table 12.1.](#) or [Table 12.2.](#) (T-0)

15.2.2. Use terminal radar services when available.

15.2.3. Make all position reports in accordance with [paragraph 14.16.2.](#) (T-1)

15.2.4. Receive ATC approval to fly the published missed approach. (T-0)

15.3. Instrument Approaches. Fly all procedures as published. (T-0)

15.3.1. **Conventional and Radar Approaches.** Fly these procedures using the appropriate conventional NAVAID(s) as the primary means of navigation except when using substitute or alternate means as authorized with approved RNAV equipment. (T-0) **Note:** Single-piloted operations on (SA) CAT I ILS approaches are prohibited. (T-0)

15.3.2. **PBN Approaches.** Retrieve PBN procedures in their entirety by procedure name from a current navigation database and compare against approved publications. **(T-0) Note:** MAJCOMs may operationally certify aircrew and aircraft to fly PBN segments on conventional final approaches.

15.3.3. **Self-Contained Approaches.** MAJCOMs will develop and publish design criteria and processing. When unable to develop a procedure in accordance with AFMAN 11-230, see MAJCOM-Certified Procedures [paragraph 15.3.7](#).

15.3.4. **Precision Runway Monitoring (PRM) Approaches.** Pilots will not participate in PRM approaches without MAJCOM training and certification. **(T-0)**

15.3.5. **Simultaneous Offset Instrument Approaches (SOIA).** Pilots will not fly SOIA procedures without MAJCOM training and certification. **(T-1)**

15.3.6. **Authorization Required Procedures.** Pilots will not fly any RNP “AUTHORIZATION REQUIRED,” conventional “SPECIAL AUTHORIZATION,” or any procedure with a note requiring specific authorization without MAJCOM training and operational approval. **(T-1)** MAJCOMs comply with the operational approval process outlined in [paragraph 2.2.25](#). **Note:** Single-piloted operations on (SA) CAT I ILS approaches are prohibited. **(T-0)**

15.3.6. **(AMC) Authorization Required Procedures.** Refer to aircraft-specific AFMAN 11-2MDSV3 guidance on AMC operational approvals for instrument approaches.

15.3.7. **MAJCOM-Certified Procedures.** MAJCOM/A3s may develop and authorize an approach procedure for use by their aircrew in IMC after aircrew complete MAJCOM-specific training **(T-1)** and under any of the following conditions:

15.3.7.1. With appropriate airspace authority approval (e.g., ATC, Airspace Control Order, host-nation agreement).

15.3.7.2. In conjunction with a compatible published instrument approach procedure.

15.3.7.3. In special use airspace.

15.3.7.4. Under VFR.

15.3.8. **Helicopter Procedures.** [AIM 10-1-2, 14 CFR Part 97.3] Apply limitations in accordance with [Table 15.1](#). **(T-0)** Apply any inoperative approach lighting visibility correction before reducing minimums. **(T-0)** Do not reduce the visibility minimums on “COPTER,” Category II, Category III, and circling procedures or if “Visibility Reduction by Helicopters NA” is annotated on the procedure. **(T-0)**

Table 15.1. Helicopter Use of Approach Procedures.

Procedure	Helicopter Visibility Minimums	Helicopter MDA/DA	Maximum Speed Limitations
Conventional (non-Copter)	The greater of: one-half the Category A visibility minimums, or $\frac{1}{4}$ SM visibility, or 1200 RVR	As published for Category A	Initiate the final approach segment at speeds up to the upper limit of the highest Approach Category authorized by the procedure, but must be slowed to no more than 90 knots indicated airspeed (KIAS) at the MAP in order to apply the visibility reduction.
Copter Procedure	As published	As published	90 KIAS when on a published route or track
GPS Copter Procedure	As published	As published	90 KIAS when on a published route or track, EXCEPT 70 KIAS when on the final approach or missed approach segment and, if annotated, in holding. Military procedures are limited to 90 KIAS for all segments.

15.4. Approach Minimums.

15.4.1. Do not descend below the MDA, DA, or DH unless sufficient visual reference with the runway environment has been established and the aircraft is in a position to execute a safe landing. (T-1) See [paragraph 16.7](#) for additional guidance.

15.4.2. Do not descend below 100 feet above the threshold elevation or touchdown zone elevation (TDZE) using the approach lights as a reference unless the red termination bars or the red side row bars are visible and identifiable. (T-1)

15.5. Inoperative Approach Lighting System (ALS). Apply corrections as published in DoD FLIP Inoperative Components Table. (T-0)

15.6. Approach Clearance. [AIM 5-4-5; AIM 5-4-6] The controller issues an approach clearance only after the aircraft is established on a segment of the instrument procedure or the aircraft is assigned an altitude and heading to maintain until established on a segment of the instrument procedure.

15.6.1. [14 CFR Part 91.175(i)] Maintain the last assigned altitude when cleared for the approach until established on a published segment of the instrument approach procedure. (T-0)

Note: Once cleared for the approach, pilots may descend once inside a TAA sector to the minimum altitude depicted unless otherwise instructed by ATC.

15.6.2. Approach clearances cancel any previously assigned airspeed adjustments. Pilots are expected to make their own airspeed adjustments to complete the approach unless the adjustments are restated. Speed adjustments should not be assigned inside the FAF or a point 5 miles from the runway, whichever is closer to the runway. The pilots always retain the prerogative of rejecting a speed adjustment by ATC if the minimum safe airspeed for any operation is greater than the speed adjustment.

15.6.3. [ICAO] When clearance for the approach is issued, ATC expects the pilot to initiate the approach in accordance with the instrument procedure entry criteria.

15.7. Aircraft Speed. The pilot should slow the aircraft in accordance with aircraft flight manual prior to reaching the IAF. A stabilized approach inside the IAF is critical for a successful approach and landing. ICAO maximum speeds are listed in [Table 15.2](#).

Table 15.2. ICAO Maximum Speeds.

Aircraft Category	Range of Speeds for Initial Approach Segment (KIAS)	Range of Speeds for Final Approach Segment (KIAS)	Threshold Speed (KIAS) (1.3 times stall speed)
A	90 to 150 (110*)	70 to 100	< 91
B	120 to 180 (140*)	85 to 130	91 to 120
C	160 to 240	115 to 160	121 to 140
D	185 to 250	130 to 185	141 to 165
E	185 to 250	155 to 230	166 to 210
H	70 to 120**	60 to 90**	Not Applicable
CAT H (PinS)***	70 to 120	60 to 90	Not Applicable

* Maximum speed for reversal and racetrack procedures.

** Maximum speed for reversal and racetrack procedures up to and including 6,000 feet is 100 knots and maximum speed for reversal and racetrack procedures above 6,000 feet is 110 knots.

*** Helicopter “Point-in-space” (PinS) procedures based on basic GNSS may be designed using maximum speeds of 120 knots for initial and intermediate segments and 90 knots on final and missed approach segments, or 90 knots for initial and intermediate segments and 70 knots on final and missed approach segments depending on the operational need.

*([Table 15.2](#) updated to highlight agreement exists between ICAO standards and [Table 4.2](#).)

15.8. Approach Chart Naming Convention. [FAA-H-8083-16; ICAO Doc 8168 Volume 1, Section 4, Chapter 8] Approach charts are identified by their procedure name (based on the NAVAIDs required for the final approach), runway served, and airfield locations.

15.9. Duplicate Procedure Identification. [ICAO Doc 8168 Volume 1, Section 4, Chapter 8] When two or more straight-in approaches with the same type of navigation guidance exists for the same runway a letter or numerical suffix is added to the title of the approach (e.g., VOR Z RWY 20, VOR Y RWY 20). The single letter suffix is used when:

15.9.1. Two or more NAVAIDs of the same type are used to support different approaches to the same runway;

15.9.2. Two or more missed approaches are associated with a common approach, each approach is identified by a single letter suffix;

15.9.3. Different approach procedures using the same navigation type are provided for different aircraft categories; or

15.9.4. Two or more arrivals are used to a common approach and are published on different charts.

15.10. Circling-Only Approach. [FAA-H-8083-16; ICAO Doc 8168 Volume 1, Section 4, Chapter 8] The name of the approach is followed by a single letter starting with the letter “A” when only circling minimums are provided on an instrument approach. The suffix letter is not used again for any procedures at that airfield.

15.11. Equipment Required for an Approach. [ICAO Doc 8168 Volume 1] A slash (/) indicates that more than one type of equipment may be required to execute the final approach (**Figure 15.1.**). Additional equipment may be required to execute the other portions of the procedure (**Figure 15.2.**). All navigation equipment that is required for the execution of the approach procedure and not mentioned in the procedure identification should be identified in the notes on the chart. In general, a note charted on the plan view (e.g., RADAR REQUIRED) indicates equipment that is required to transition from the en route environment to the instrument procedure.

Figure 15.1. Equipment Required for an Approach.


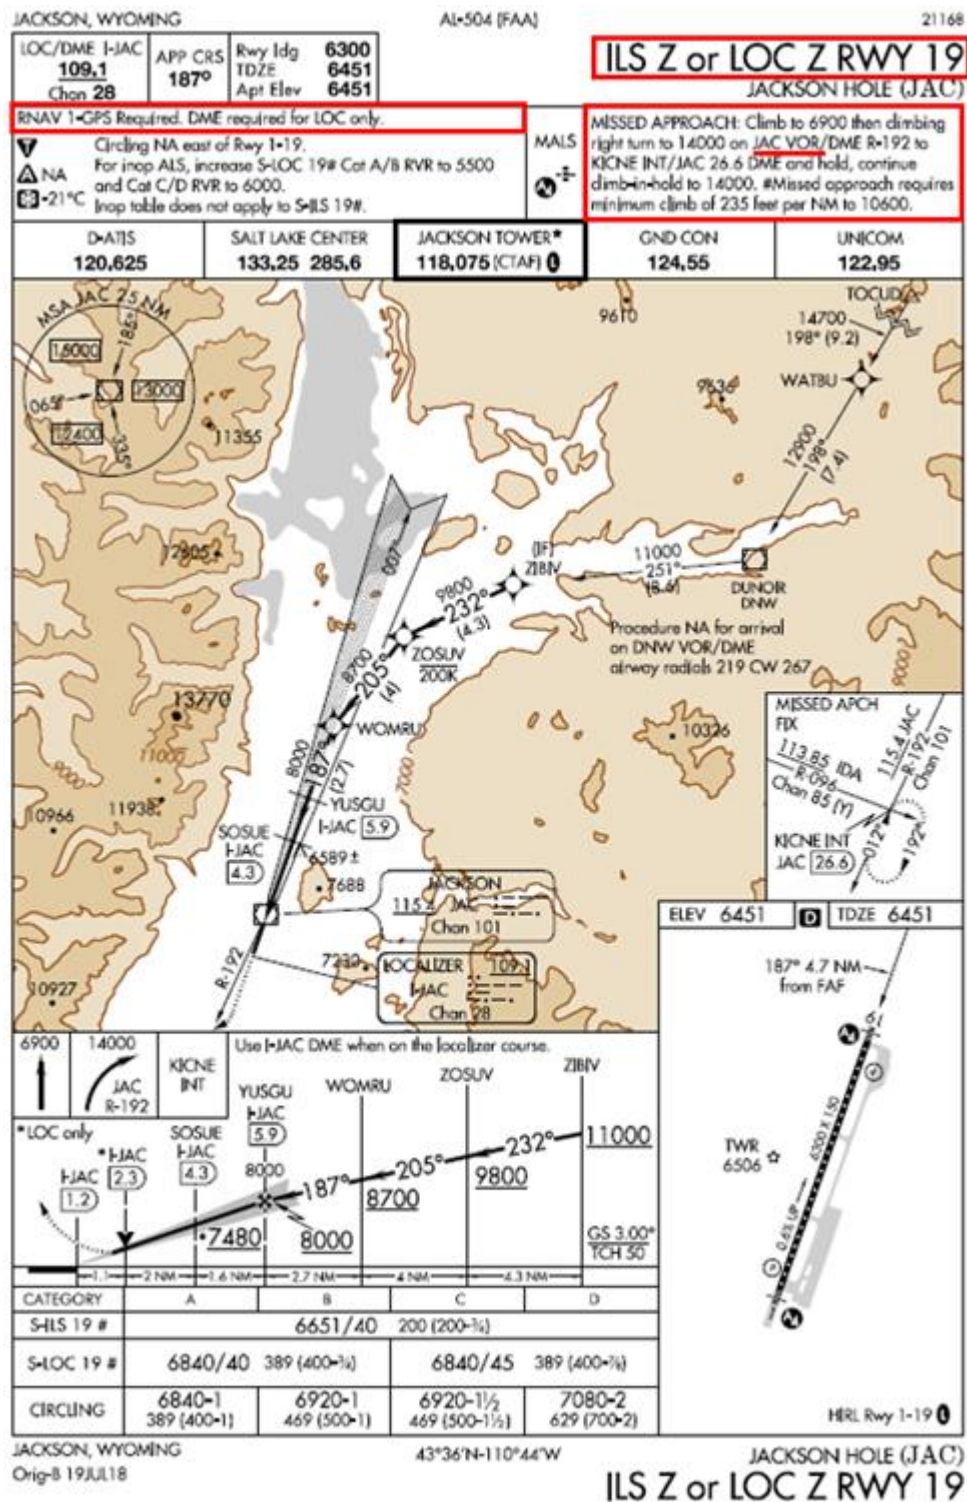


Figure 15.2. Additional Equipment Required for Approach.

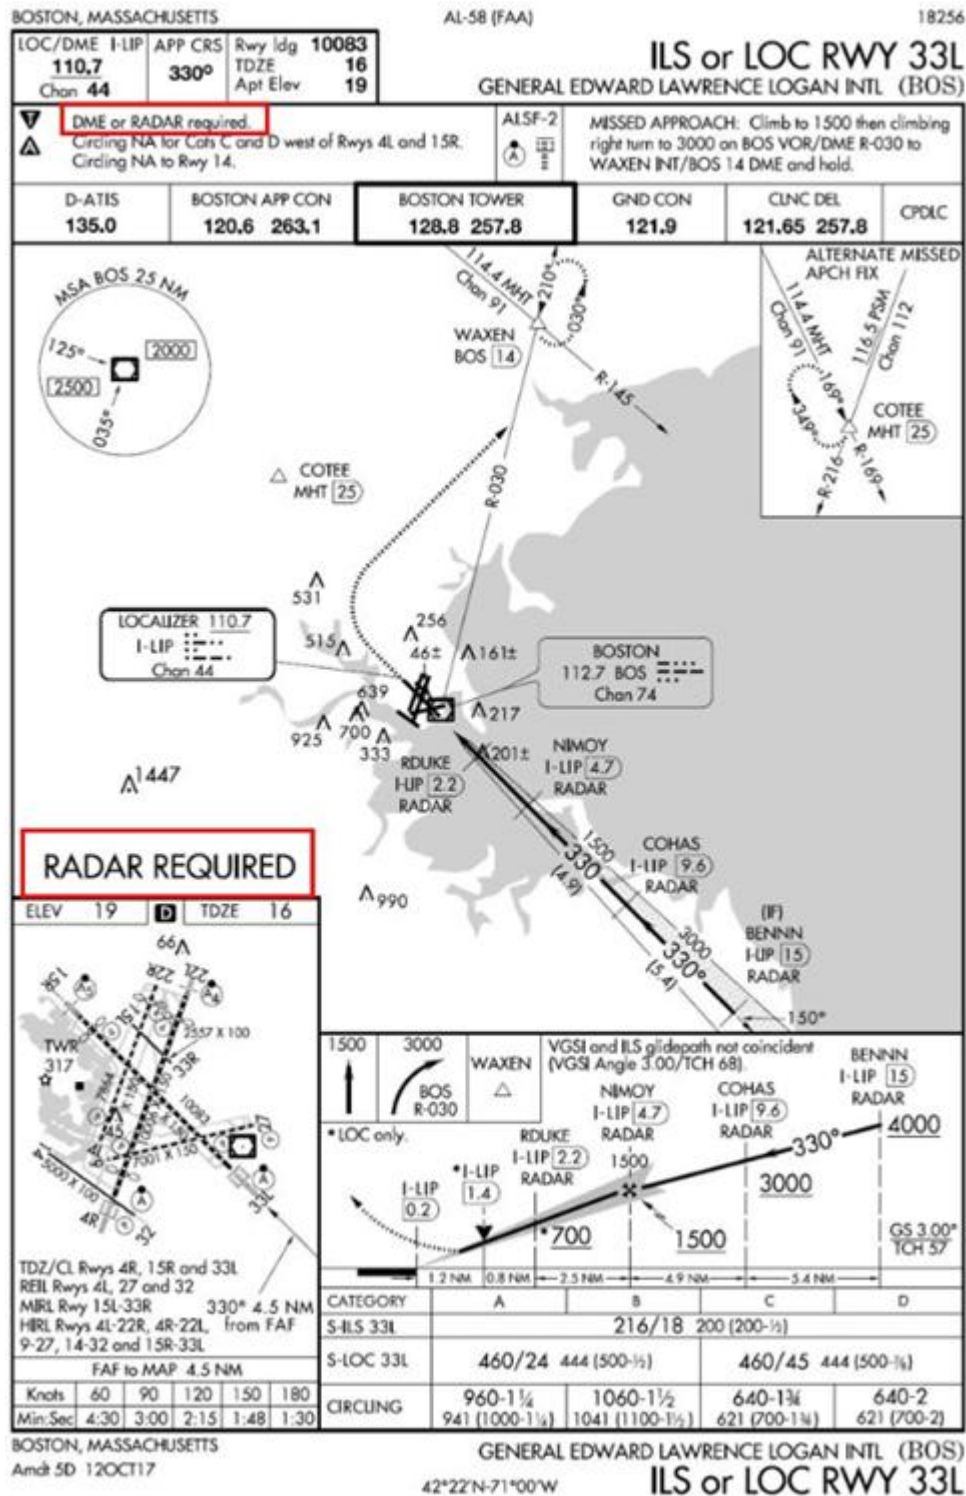

15.12. Radar Approaches. Radar minima, circling MDA, and glideslope angle are in the front of the terminal procedures publication (Figure 15.3.).

Figure 15.3. Radar Approach Minimums.

PORTSMOUTH, NH						
Amdt 1, 05JUN08 (14261) (FAA)						
ELEV 100						
PORTSMOUTH INTL AT PEASE (PSM)						
RADAR-1 125.05 269.4 						
	<u>RWY</u>	<u>GP/TCH/RPI</u>	<u>CAT</u>	<u>DA/</u> <u>MDA-VIS</u>	<u>HAT/</u> <u>HATh/</u> <u>HAA</u>	<u>CEIL-VIS</u>
PAR	34	3.0°/64/1221	ABCDE	284/24	200	(200-½)
ASR	16		ABC	520/40	420	(500-¾)
			DE	520/50	420	(500-1)
	34		ABC	560/40	476	(500-¾)
			D	560/50	476	(500-1)
			E	560/60	476	(500-1¼)

15.13. Non-radar Approaches. Non-radar approaches are defined as approaches that do not require radar vectoring or radar services on final approach and may or may not provide vertical glideslope or glidepath guidance. Examples of non-radar approaches include ILS, LOC, VOR, TACAN, NDB, RNAV, and GLS.

15.14. Reading an Instrument Procedure. [FAA-H-8083-16, Chapter 4; DoD Publications Product Specifications paragraph 303.] Refer to [Figure 15.4](#).

15.14.1. The pilot briefing area consolidates information necessary to conduct the approach in one location. It includes final approach course, runway and airfield data, procedure restrictions, approach light data, missed approach text, and various radio frequencies.

15.14.2. The plan view provides a pictorial depiction of the instrument procedure; it may be depicted with or without concentric rings.

15.14.2.1. The plan view is depicted without concentric rings when all the procedural and terminal route information can be depicted to scale.

15.14.2.2. Concentric rings are used when all procedural and terminal route information cannot be depicted to scale. A 10 nautical mile distance ring is shown when necessary; all information within the 10 nautical mile distance ring is shown to scale. **Note:** A 20 nautical mile distance ring replaces the 10 nautical mile distance ring on high procedures.

15.14.2.3. Additional rings are not depicted to scale.

TOP MARGIN IDENTIFICATION

City and state: **PITTSFIELD, MASSACHUSETTS**

Issue # (issue authority): **AL-975 (FAA)**

Approach lighting (this is U.S. configuration sequenced flashing, see FIH): **10322**

LOC/DME I-EIF 108.3 **APP CRS 259°** **Rwy Idg 5001** **TDZE 1176** **Apt Elev 1194**

PITTSFIELD MUNI (PSF)

PILOT BRIEFING INFORMATION

⚠ Circling to Rwy 14/32 NA at night. Inoperative table does not apply. Circling NA south of Runways 8 and 32. Visibility reduction by helicopters NA.

MALSF **MISSED APPROACH:** Climb to 4000 on heading 259° and P/WL VOR/DME R-021 to HIAL INT/PWL 30 DME and hold.

ASOS 135.375 **ALBANY APP CON 132.825 307.2** **CLNC DEL 128.6** **UNICOM 122.7 (CTAF)**

PLANE VIEW

MISSING APPROACH VERBIAGE

MISSING APPROACH ICONS

PROFILE VIEW

LANDING MINIMUMS

CATEGORY	A	B	C	D
S-26	2300-1 1/4	1124 (1200-1 1/4)	2300-3	1124 (1200-3)
CIRCLING	2300-1 1/4 1106 (1200-1 1/4)	2300-1 1/2 1106 (1200-1 1/2)	2300-3	1106 (1200-3)
HEKIR FIX MINIMUMS (DUAL VOR RECEIVERS OR DME REQUIRED)				
S-26	1880-1	704 (700-1)	1880-2 704 (700-2)	1880-2 1/2 704 (700-2 1/2)
CIRCLING	1880-1	686 (700-1)	1880-2 686 (700-2)	2200-3 1006 (1100-3)

AMENDMENTS

Latitude/longitude coordinates

Airport identifier

Time and speed table

FAF to MAP 6.2 NM

Knots	60	90	120	150	180
Min Sec	6:12	4:08	3:06	2:29	2:04

PITTSFIELD, MASSACHUSETTS

Amtd 8 29JUL10

42°26'N 73°18'W

PITTSFIELD MUNI (PSF)


LOC RWY 26

BOTTOM MARGIN IDENTIFICATION

15.14.3. An emergency safe altitude (ESA) is normally published only for U.S. military procedures; it is a single altitude that provides 1,000 feet of obstacle clearance (2,000 feet in designated mountainous areas) within 100 nautical miles of the facility or fix. **Note:** Canada and other ICAO States publish a “safe altitude within 100 NM” on civil or military instrument procedures; it provides the same obstacle clearance.

15.14.4. The minimum sector altitude provides at least 1,000 feet of obstacle clearance within 25 nautical miles (on conventional navigation systems this radius may be expanded to 30 nautical miles if necessary to encompass the airfield landing surfaces) of the facility or fix. The minimum sector altitude may be further divided into a maximum of four sectors when more than one minimum sector altitude is required. At some airfields the minimum sector altitudes may have sub-sectors based on distances (**Figure 15.5.**). **Note:** Minimum sector altitudes do not guarantee NAVAID reception.

Figure 15.5. Minimum Sector Altitude with Sub-sector Based on Distance.

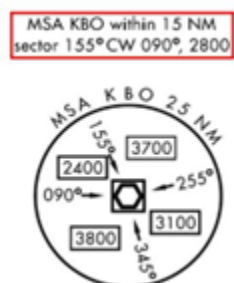

15.14.5. The profile view provides a side view of prescribed altitudes, descent gradients, and a pictorial representation of the missed approach procedures.

15.14.5.1. Vertical descent angles are calculated to provide a constant descent rate in the final segment. The optimum VDA is 3.00 degrees. Where operationally feasible, straight-in non-precision approaches (all categories) have a VDA equal to the commissioned angle of an installed visual glideslope indicator (VGSi). An approach without a FAF does not have a VDA. **Note:** When instrument flight procedures have an unlit 20:1 penetration on final, USAF approach plates will have the note, “USAF Only: When VGSi inop, straight-in Rwy (runway number) authorized at night with aircrew command approval.” Command approval for these approaches is through group commanders or the command and control authority.

15.14.5.2. The threshold crossing height (TCH) refers to the point where the VDA crosses above the threshold. The typical TCH is 30 to 50 feet unless required by larger type aircraft.

15.14.6. The airfield diagram depicts field elevation, TDZE, runway dimensions, lighting systems, obstructions, and final approach direction. **Note:** Not all obstructions are depicted; check NOTAMs, En Route Supplement, etc.

15.14.6.1. The field elevation is the highest point on any usable landing surface.

15.14.6.2. The touchdown zone elevation is the highest point in the first 3,000 feet of the landing surface.

15.16. PBN Transitions to Conventional Final Approach. [ICAO Doc 8168 Volume 2; AC 90-105; AC 90-108; FAA Order 8260.58, *United States Standard for Performance Based Navigation (PBN) Instrument Procedure Design*] Some published approaches may combine area navigation initial, intermediate, or missed approach segments with a conventional final approach segment ([Figure 15.7](#)). The PBN segments are designed under RNAV 1 or RNP 1 criteria. These approach procedures are expected to be extracted, in their entirety, from a valid and certified database without alteration.

15.16.1. Aircraft must be operationally certified, and aircrew must be trained and approved to fly PBN transition to conventional final approaches as applicable by their respective MAJCOMs. **(T-0)**

15.16.2. Pilots must ensure information from the correct navigation source is displayed (e.g., PBN source for PBN segments). **(T-0)**


15.16.3. [AIM 1-2-3] Pilots will transition aircraft navigation from PBN to conventional course guidance prior to the FAF. **(T-0) Exception:** MAJCOMs may authorize pilots to use a suitable RNAV system or RNP system to navigate on the final approach segment of a conventional instrument approach procedure based on a VOR, TACAN, or NDB. The underlying NAVAID must be operational and the NAVAID monitored for final segment course alignment. **(T-0)**

15.16.4. Many USAF aircraft do not have conventional instrument procedures in the navigation database. Pilots may still request or accept radar vectors to the conventional final approach segment when there is no fully conventional approach to the same runway if:

15.16.4.1. The pilot coordinates for alternate missed approach instructions; or


15.16.4.2. The missed approach segment is conventional.

Figure 15.7. PBN Transitions to Conventional Final Approach.

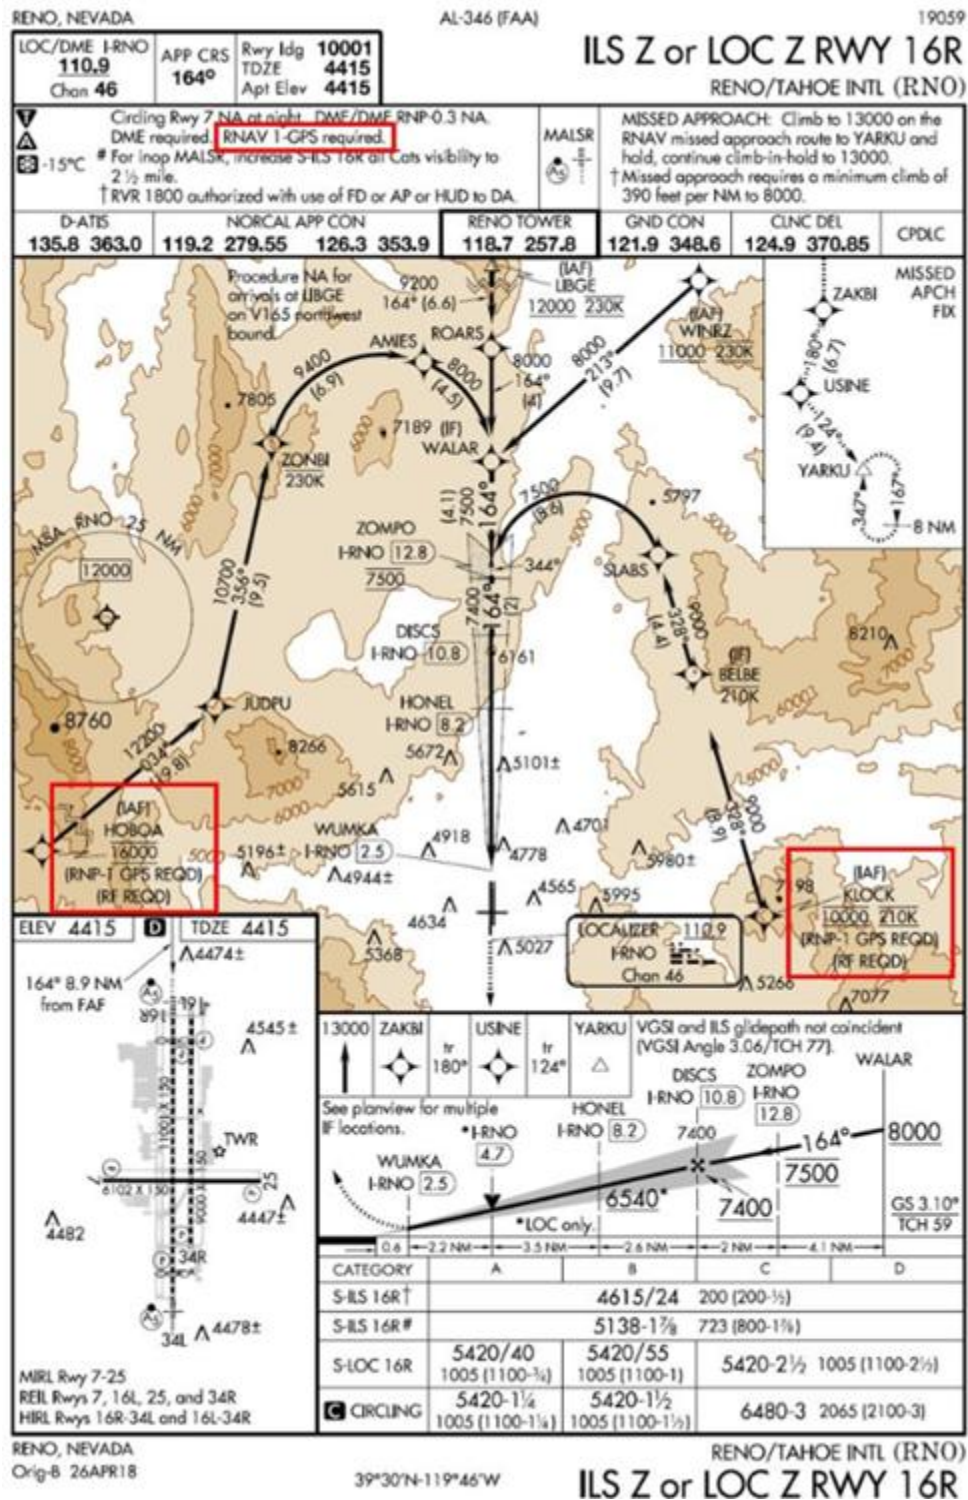

15.17. RNAV Lines of Minima. [AIM 5-4-5] Each line of minima on an RNAV instrument procedure is titled to reflect the level of service required (**Figure 15.8.**). The minima are dependent on the navigation equipment capability as outlined in the IFR LANDING MINIMA section at the front of the terminal procedures publication. Typically, the approach chart indicates the equipment required for the approach (e.g., GPS, RNP-0.3).

Figure 15.8. RNAV Lines of Minima.

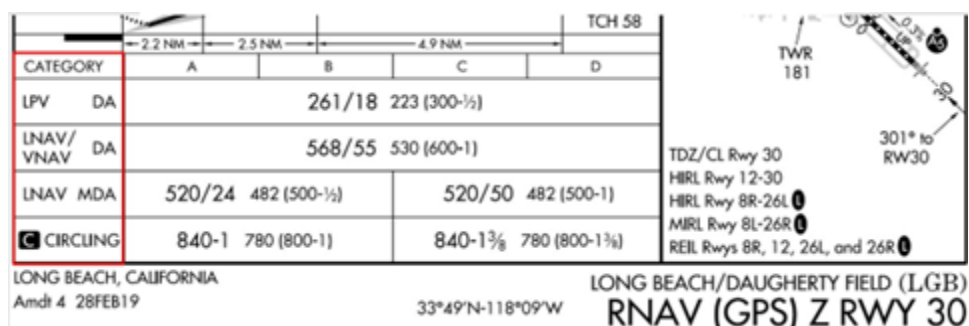

15.17.1. The LPV level of service provides lateral and VNAV guidance; it is an APV and the line of minima is published as a DA. LPV takes advantage of the improved accuracy of SBAS lateral and vertical guidance to provide an approach that is very similar to a CAT I ILS. LPV approaches are designed for angular guidance with increasing sensitivity as the aircraft gets closer to the runway; this sensitivity is nearly identical to an ILS at similar distances from the runway. **Note:** Pilots will not use the LPV line of minima unless the aircraft flight manual states installed equipment supports LPV approaches. **(T-0)**

15.17.2. The LP level of service provides LNAV guidance only; it is a non-precision approach and the line of minima is published as an MDA. LP takes advantage of the improved accuracy of SBAS to provide approaches with angular lateral guidance; therefore, lateral sensitivity increases as the aircraft gets closer to the runway, similar to localizer approaches.

15.17.2.1. LP is only published when terrain, obstructions, or other reasons prevent publishing a vertically guided procedure; LP is not published with another approach that contains approved vertical guidance (e.g., LPV or LNAV/VNAV). LP is published in addition to LNAV only when it provides lower minimums.

15.17.2.2. LP is not a fail-down mode for LPV. A SBAS receiver may not support LP even if it supports LPV.

15.17.2.3. Pilots will not use the LP line of minima unless the aircraft flight manual includes LP as an approved approach type. **(T-0)**

15.17.2.4. Some SBAS avionics provide LP with advisory vertical guidance (LP+V); pilots will only use advisory vertical guidance for situational awareness to the LP MDA. **(T-0)**

15.17.3. The LNAV/VNAV level of service provides lateral and vertical navigation guidance; it is an APV and the line of minima is published as a DA. Vertical guidance is usually provided by approach-certified Baro-VNAV but with lateral and vertical integrity limits larger than a precision approach or LPV. **Note:** Pilots will not use the LNAV/VNAV line of minima unless the aircraft flight manual states the aircraft has been demonstrated to support LNAV/VNAV approaches or the installed equipment supports GNSS approaches with approach-approved Baro-VNAV. **(T-0)**

15.17.4. The LNAV level of service provides LNAV guidance only; it is a non-precision approach and the line of minima is published as an MDA. **Note:** Some RNAV systems present LNAV with advisory vertical guidance (LNAV+V); pilots will only use advisory vertical guidance for situational awareness to the LNAV MDA. **(T-0)**

15.18. Baro-VNAV Systems. Baro-VNAV systems compute vertical guidance referenced to a specified vertical path angle (VPA). The computer-resolved vertical guidance is based on aircraft barometric altimetry systems. This VPA may be greatly affected by non-standard temperatures, incorrect or rapidly changing altimeter settings, and altimeter error. Pilots must not use Baro-VNAV guidance for reference below the published DA. **(T-0)** Pilots should closely monitor compliance with step down fix altitude constraints. **Note:** Deviations from the VNAV path are often linear as opposed to angular (e.g., one dot deviation represents a fixed number of feet from the vertical path regardless of distance to the runway waypoint).

15.19. Baro-VNAV Temperature Limitations. [FAA-H-8083-16, Chapter 4] A minimum and maximum temperature limitation is published on procedures that authorize Baro-VNAV operation (**Figure 15.9**). These temperatures represent the airfield temperature above or below which Baro-VNAV is not authorized to LNAV/VNAV minimums unless temperature compensation can be accomplished.

Figure 15.9. Baro-VNAV Temperature Limits.


LONG BEACH, CALIFORNIA			AL-236 (FAA)		19171	
WAAS CH 99521 W30A		APP CRS 301°	Rwy Idg 7415 TDZE 38 Apt Elev 60	RNAV (GPS) Z RWY 30 LONG BEACH/DAUGHERTY FIELD (LGB)		
RNP APCH ▼ For uncompensated Baro-VNAV systems, <u>LNAV/VNAV NA below 4°C or above 54°C</u> . For inop ALS, increase LNAV Cat C and D visibility to 1 1/2 SM.				MALSR 		MISSED APPROACH: Climb to 800 then climbing left turn to 3000 direct PADDR and hold
ATIS 127.75		SOCAL APP CON 125.35 316.125		LONG BEACH TOWER* 120.5 257.6 (Rwy 12) 119.4 (CTAF) 257.6 (Rwy 30)		GND CON 133.0 257.6
				CLNC DEL 118.15		UNICOM 122.95

15.19.1. When the temperature is above the high temperature or below the low temperature limit, Baro-VNAV may be used to provide a stabilized descent to the LNAV MDA; however, extra caution should be used in the visual segment to ensure a vertical correction is not required. If the VGSI is aligned with the published glidepath, and the aircraft instruments indicate on glidepath, an above or below glidepath indication on the VGSI may indicate that temperature error is causing deviations to the glidepath. These deviations should be considered if the approach is continued below the MDA.

15.19.2. Many systems which apply Baro-VNAV temperature compensation only correct for cold temperature. In this case, the high temperature limitation still applies. Also, temperature compensation may require activation by maintenance personnel during installation in order to be functional, even though the system has the feature. Some systems may have a temperature correction capability, but correct the barometric altimeter all the time, rather than just on the final, which would create conflicts with other aircraft if the feature were activated. Pilots should be aware of compensation capabilities of the system prior to disregarding the temperature limitations.

15.20. Approach Segments. [FAA-H-8083-16, Chapter 4; ICAO Doc 8168 Volume 1] There are five segments to an instrument approach procedure: arrival, initial, intermediate, final, and missed approach (Figure 15.10.). Approach segments begin and end at designated fixes; however, there are circumstances where a segment begins at a point where no fixes are available. The intermediate segment begins at a point where the aircraft is proceeding inbound to the FAF along the final approach course within the “remain within” distance if an IF is not shown on an approach chart (Figure 15.11.).

Figure 15.10. Approach Segments.

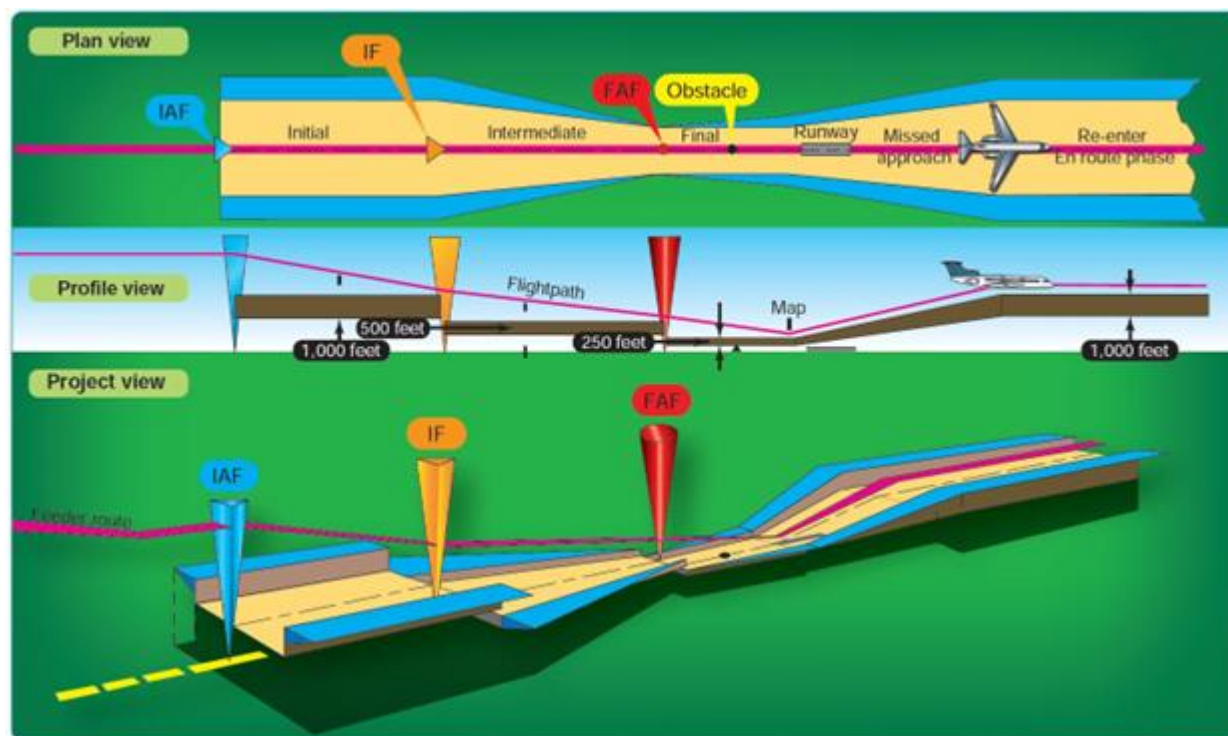

STILLWATER, OKLAHOMA
AL-5151 (FAA)
18200

VOR/DME SWO 108.4 Chan 21	APP CRS 178°	Rwy Idg TDZE Apt Elev 7401 1000 1000

VOR RWY 17

STILLWATER RGNL (SWO)

⚠ When local altimeter setting not received, use Ponca City Rgnl altimeter setting and increase all MDA 80 feet and Circling Cat D visibility ½ mile. VDP NA with Ponca City altimeter setting. For Inop MALSR increase 5-17 Cts A/B visibility to 1 mile. Helicopter visibility reduction below ¾ SM NA.

MALSR

MISSED APPROACH: Climbing right turn to 2600 d'rmt SWO VOR/DME and hold.

ASOS 135,725	KANSAS CITY CENTER 127.8 319.1	STILLWATER TOWER * 125.35 (CTAF) 0	GND CON 121.6	UNICOM 122.95

CATEGORY	A	B	C	D
S-17	1460-¾ 460 (500-¾)			1460-1 460 (500-1)
CIRCLING	1460-1 460 (500-1)	1520-1½ 520 (600-1½)	1740-2¼ 740 (800-2¼)	

ELEV 1000

TDZE 1000

REIL Rwy 35 **0**

MJRL Rwy 4-22 and 17-35 **0**

FAF to MAP 3.1 NM

Knots	60	90	120	150	180
Min-Sec	3:06	2:04	1:33	1:14	1:02

STILLWATER, OKLAHOMA
Amdt 14A 17OCT13
36°10'N-97°05'W


STILLWATER RGNL (SWO)

VOR RWY 17

15.21. Dead Reckoning Segment. [ICAO Doc 8168 Volume 1 Section 4 Chapter 3.3]

15.21.1. An ILS procedure may include a dead reckoning segment from a fix to the localizer where an operational advantage can be obtained (**Figure 15.12.**). The dead reckoning track intersects the localizer at 45 degrees and is not more than 10 nautical miles in length. The point of interception is the beginning of the intermediate segment and allows for proper glidepath interception.

15.21.2. [FAA Order 8260.3, Chapter 2] [NAS Only] An initial approach segment may include a dead reckoning course. The alignment of the dead reckoning course intercepts the extended intermediate course. For low altitude procedures, the intercept point is at least 1 nautical mile from the IF for each 2 nautical miles of dead reckoning flown. For high altitude procedures, the intercept point may be 1 nautical mile from the IF for each 3 nautical miles of dead reckoning flown. The intercept angle does not exceed 90 degrees and is less than 45 degrees except when DME is used or the dead reckoning distance is 3 nautical miles or less.

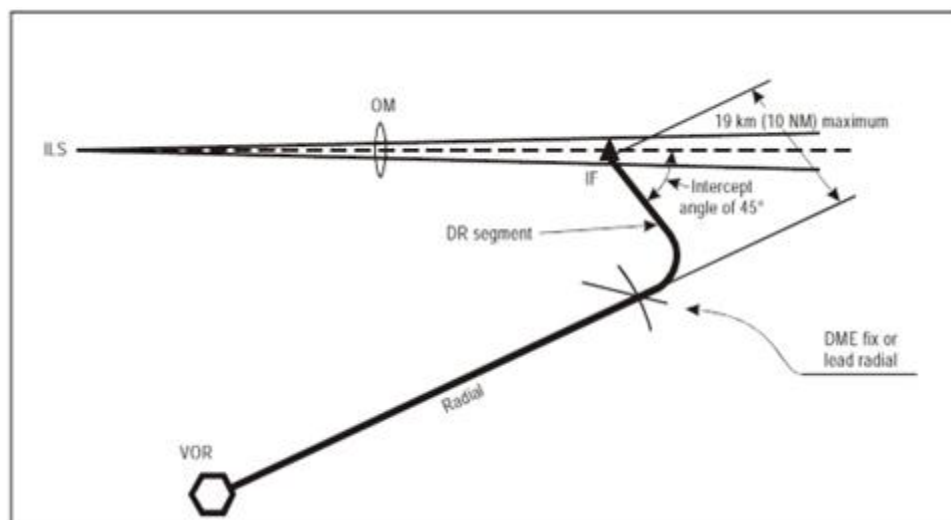Figure 15.12. [ICAO] Dead Reckoning Segment.

15.22. Instrument Approach Segment Descents. [ICAO Doc 8168 Volume 1] The aircraft will cross the fix or facility and fly outbound on a specific track, descending, as necessary, to the procedure altitude but no lower than the minimum crossing altitude associated with that segment of the approach. **(T-0)** If further descent is specified after the inbound turn, this descent will not be started until the aircraft is established on the inbound track in accordance with **paragraph 15.23. (T-0)**

15.23. Established on Track. [ICAO Doc 8168 Volume 1] The aircraft is not “established on track” until within the any of the following limits:

- 15.23.1. Within half-full-scale deflection.
- 15.23.2. Within +/-5 degrees of the required bearing for NDB.
- 15.23.3. [NAS Only] Within full-scale deflection for LOC.
- 15.23.4. Within 1X the required accuracy for RNAV or RNP segments flown [AIM 5-5-16].


15.24. Shuttle, Climb-in Hold, and Descent-in Hold. [ICAO Doc 8168 Volume 1, Chapter 3.3.8]

15.24.1. [ICAO] A shuttle is a descent or climb conducted in a holding pattern. A shuttle is normally specified where the descent required between the end of the initial approach and the beginning of the final approach exceeds standard ICAO approach design limits.

15.24.2. [NAS Only] When a climb-in hold is specified by a published procedure (e.g., “climb-in holding pattern to depart XYZ VORTAC at or above 10,000”), additional obstacle protection area has been provided to allow for greater airspeeds in the climb for those aircraft requiring them. A maximum airspeed of 310 KIAS is permitted in climb-in holding, unless a maximum holding airspeed is published.

15.25. Types of Course Reversals. The two types of course reversal procedures are the procedure turn and the racetrack or [NAS Only] HILPT. Procedure turns include the 45°/180°, 80°/260°, and base turn or [NAS Only] teardrop ([Figure 15.13](#)).

Figure 15.13. Types of Course Reversals.

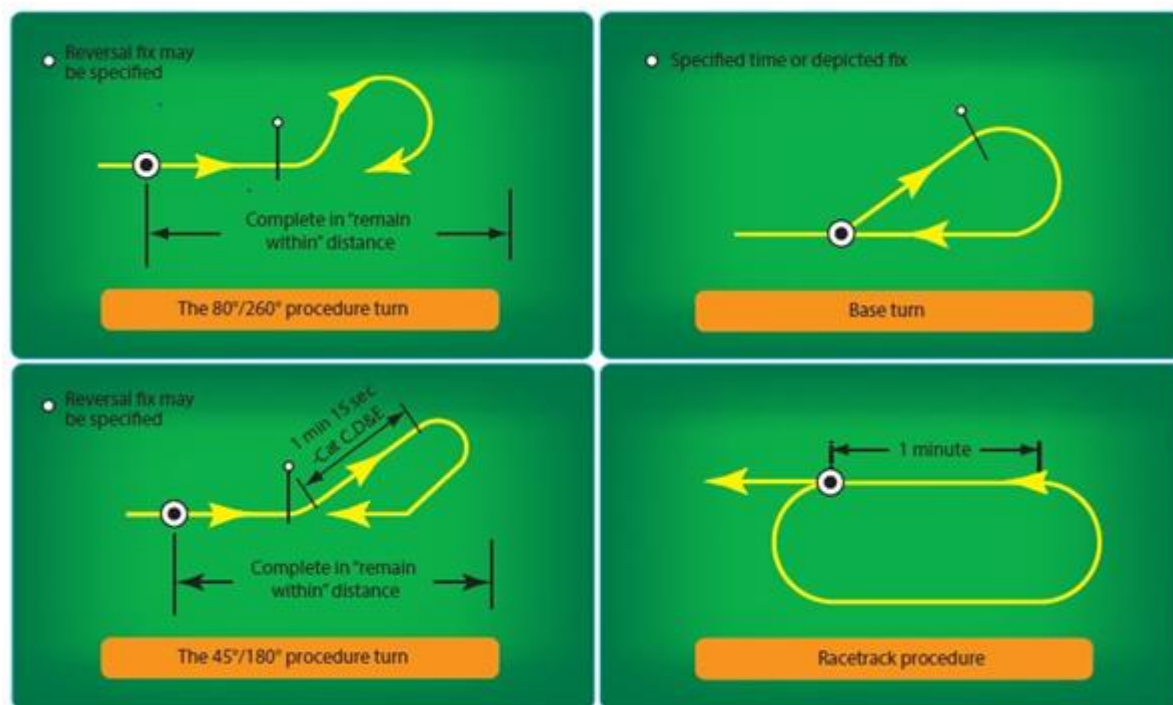

15.26. ICAO-Specific Course Reversal and Racetrack Procedures. [ICAO Doc 8168 Volume 1, Section 4, Chapter 3] Unless the procedure specifies entry restrictions, reversal procedures must be entered from a track within +/-30 degrees of the outbound track ([Figure 15.14](#)). (T-0) However, for base turns, where the +/-30-degree direct sector does not include the reciprocal of the inbound track, the entry sector is expanded to include the additional area ([Figure 15.15](#)).

15.26.1. ICAO specifies a 30-degree sector entry because the course reversal protected airspace may not include any airspace except on the outbound side of the procedure turn fix. In the NAS, protected airspace includes a much larger entry zone surrounding the fix ([Figure 15.16](#)). If the aircraft arrival track is not within the entry sector most course reversals have a published arrival holding pattern at or near the IAF to accommodate arrivals from outside the entry sector. PANS-OPS directs pilots coming from outside the entry sector to enter holding prior to commencing the reversal procedure. In most cases the holding pattern aligns the aircraft with the entry sector for the instrument procedure.

15.26.2. Bank angle is based on the average achieved bank angle of 25 degrees, or the bank angle giving a rate of 3 degrees per second (standard rate), whichever is less.

Figure 15.14. Direct Entry Sector.

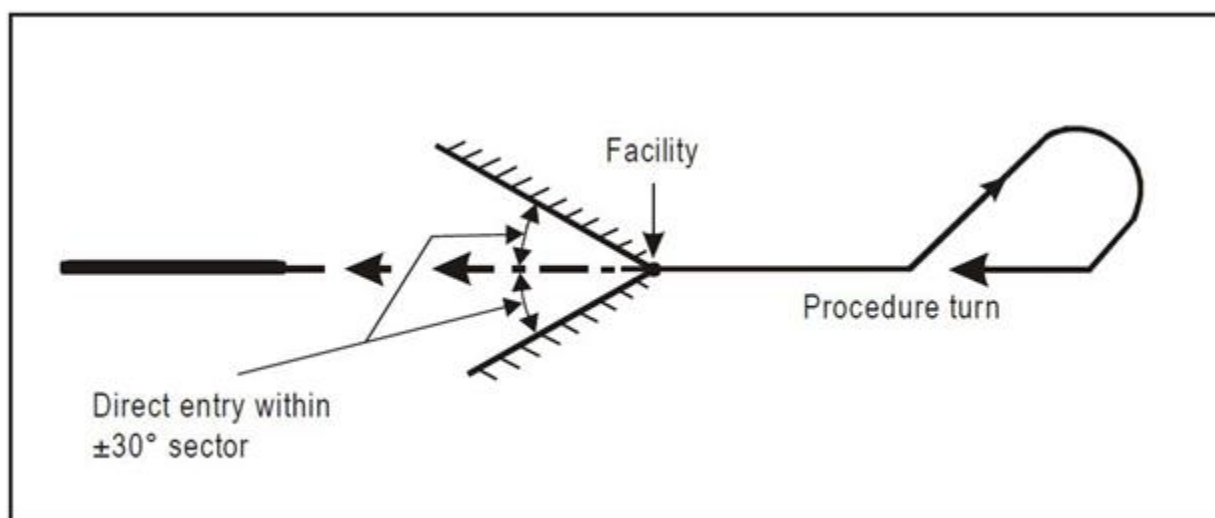


Figure 15.15. Base Turn Entry Expanded Entry Sector.


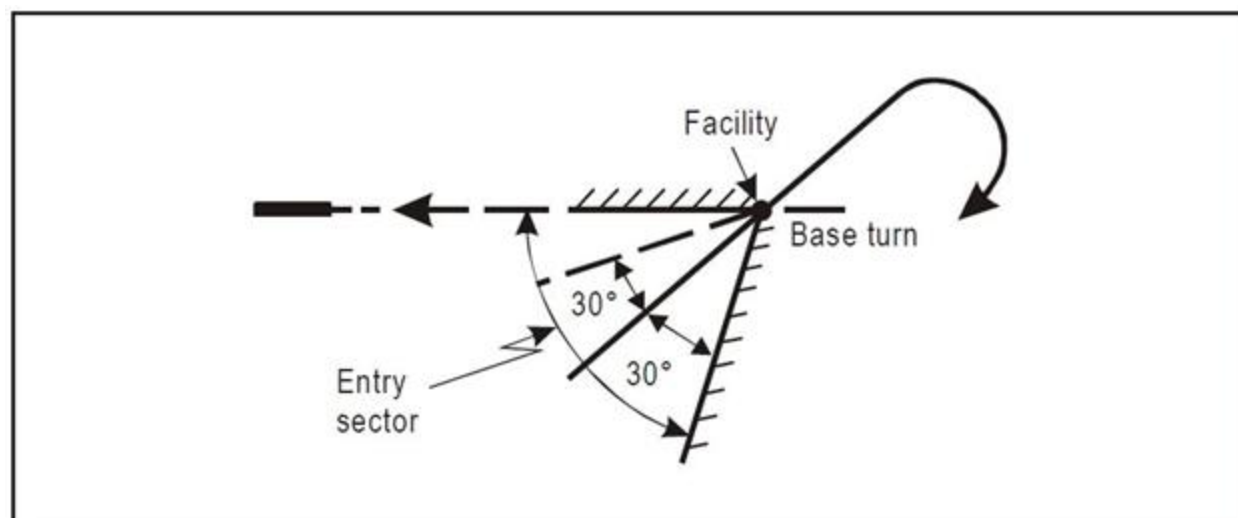


Figure 15.16. ICAO PANS-OPS versus U.S. TERPS Protected Airspace.

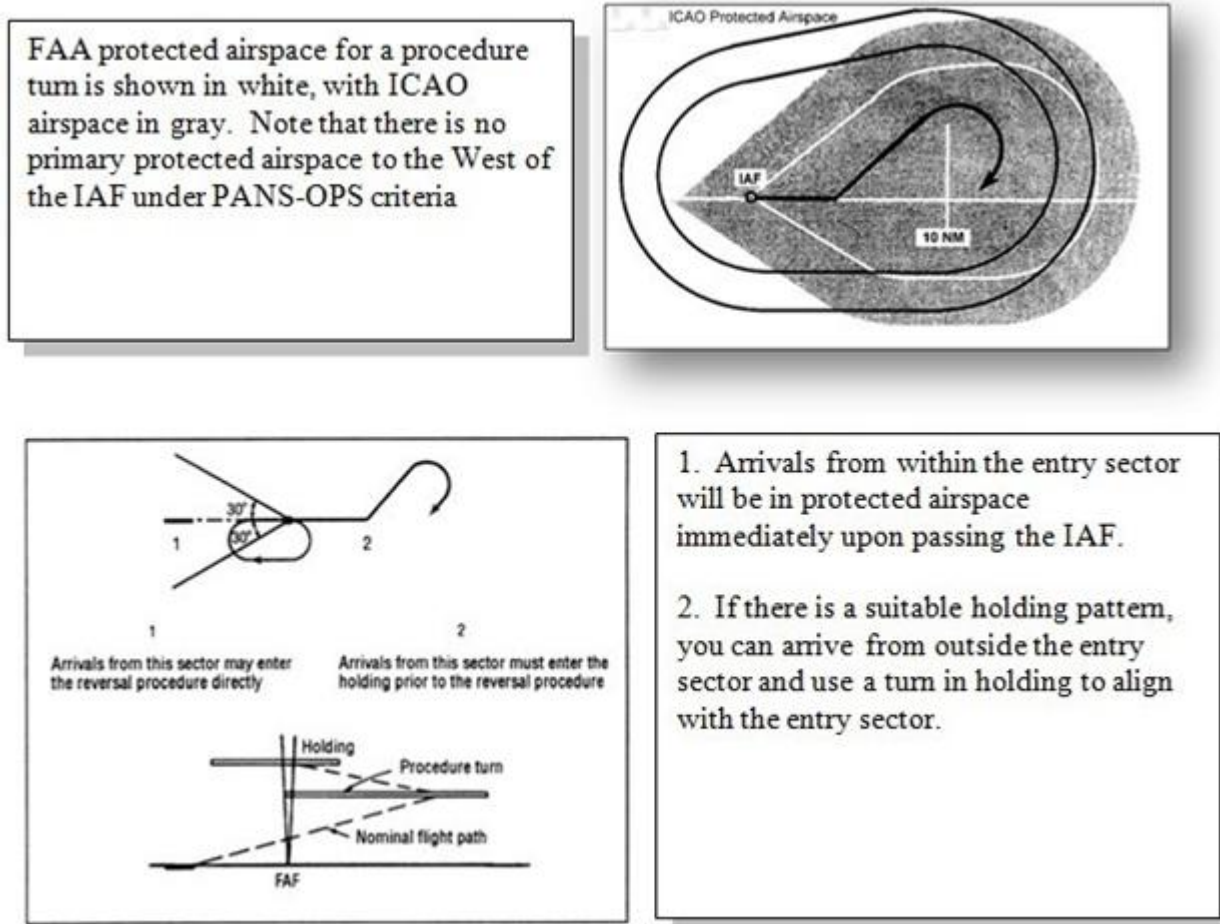

15.26.3. Descent rates are in accordance with [Table 15.3](#).

Table 15.3. ICAO Course Reversal and Racetrack Descent Rates.

Outbound Track	Maximum Descent Rate*	Minimum Descent Rate*
Category A/B	804 feet/min	Not Applicable
Category C/D/E/H	1197 feet/min	Not Applicable
Inbound Track		
Category A/B	655 feet/min	394 feet/min
Category C/D/E	1000 feet/min	590 feet/min
Category H	755 feet/min	Not Applicable
* Maximum or Minimum descent for 1 minute nominal outbound time in feet		

15.26.4. Apply drift corrections to track the published ground track. All ICAO instrument procedures must be flown as depicted. **(T-0)** The 45°/180° procedure turn is an alternative to the 80°/260° procedure turn and vice versa, unless specifically excluded on the procedure.

15.26.5. Allowances should be made in both heading and timing to compensate for the effects of wind so that the aircraft regains the inbound track as accurately and expeditiously as possible. In making these corrections, full use should be made of the indications available from the NAVAID and from estimated and known winds. This is particularly important for slow aircraft in high wind conditions, when failure to compensate may render the procedure unflyable (e.g., the aircraft may pass the fix before establishing on the inbound track or it could depart the protected airspace).


15.26.6. Before crossing the IAF, reduce airspeed to aircraft flight manual required speeds, the maximum category speed in accordance with [Table 15.4](#), or the maximum speed published on the procedure, whichever is lowest.

Table 15.4. ICAO Maximum Speeds for Course Reversals and Racetrack Procedures.

Category	Initial Approach Speed Range (KIAS)	Final Approach Speed Range (KIAS)
A	90 to 150 (110*)	70 to 100
B	120 to 180 (140*)	85 to 130
C	160 to 240	115 to 160
D	185 to 250	130 to 185
E	185 to 250	155 to 230
H	70 to 120**	60 to 90***
Note: The speeds given are converted and rounded to the nearest multiple of five for operational reasons and from the standpoint of operational safety are considered equivalent. * Maximum speed for reversal and racetrack procedures. ** Maximum speed for reversal and racetrack procedure up to including 6,000 feet is 100 knots and 110 KIAS above 6,000 feet. *** Helicopter point-in-space procedures based on basic GNSS may be designed using maximum speeds of 120 knots for initial and intermediate segments and 90 knots on final, or 90 knots for initial and intermediate segments and 70 knots on final depending on the operational need. Refer to PANS-OPS, Vol II, Part IV, Chapter 2, PinS RNP APCH approach procedures for helicopter down to LNAV minima.		

15.27. Procedure Turn. [AIM 5-4-9] Procedure turns are depicted in the plan view on U.S. Government instrument procedure charts with a “barb” arrow indicating the maneuvering side of the outbound course on which the procedure turn is to be accomplished ([Figure 15.17](#)). A procedure turn is not authorized when there is no barb depicted ([Figure 15.18](#)).

Figure 15.17. Procedure Turn.

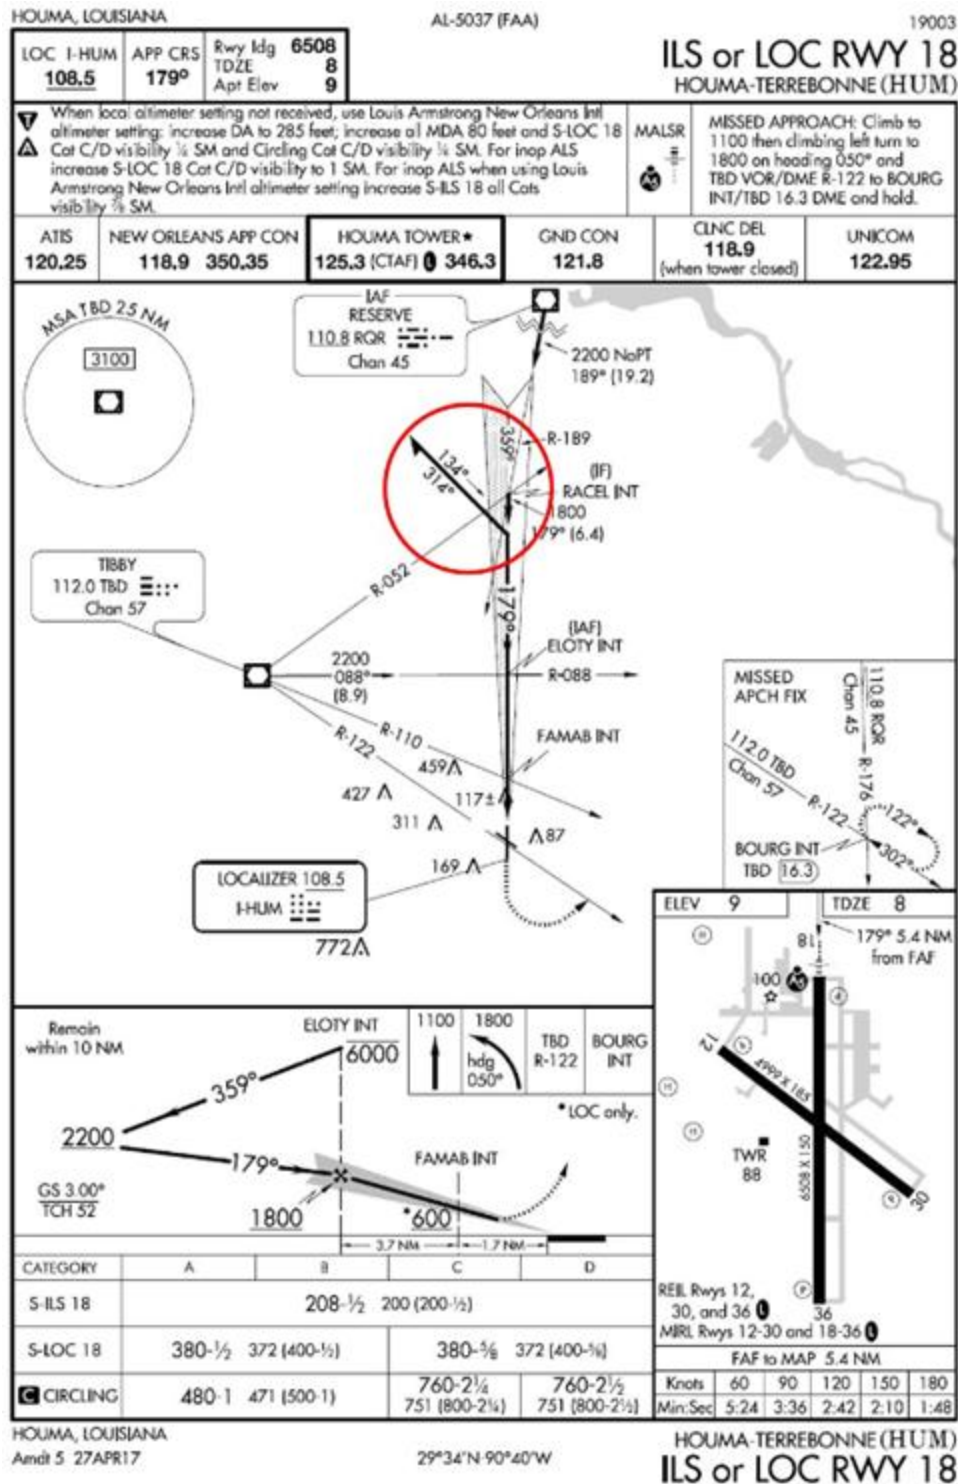

KLAMATH FALLS, OREGON

(LOC) LMT 109.5	APP CRS 321°	Rwy Idg TDZE Aprt Elev 1030Z 4095 4095

ILS or LOC/DME RWY 32
CRATER LAKE-KLAMATH RGNL (L.M.T)

MALSR
MISSED APPROACH: Climb to 4700 then climbing left turn to 10000 via heading 263° and UMI VORTAC R-293 to FINGER/LMT VORTAC 10.6 DME then left turn direct UMI VORTAC and hold.

ATIS	KINGSLEY APP CON	KINGSLEY TOWER *	GND CON	UNICOM
126.5 263.0	123.675 270.8	133.975 (CTAF) 257.8	121.9 348.6	122.95

DME REQUIRED

ELEV 4095 TDZE 4095

R-142

[F] MUREX LMT [17]

[F] TAHOE LMT [17]

[F] TUPE LMT [17]

ARC


15.27.3. Plan the outbound leg to allow enough time for configuration and any descent required prior to the FAF. Adjust the outbound leg length to ensure the aircraft will stay inside the “remain within distance” noted on the profile view of the instrument procedure. **(T-0)** The “remain within distance” is measured from the procedure turn fix unless the instrument procedure specifies otherwise. Turn to intercept the inbound course at the completion of the outbound leg. The normal remain within distance is 10 miles; it may be reduced to 5 miles where only CAT A and helicopters operate or increased to 15 miles to accommodate high performance aircraft.

15.27.3.1. When the NAVAID is on the field and no FAF is depicted, plan the outbound leg so the descent to MDA can be completed with sufficient time to acquire the runway and position the aircraft for a normal landing (**Figure 15.19**).

15.27.3.2. When flying this type of approach, the FAF is the point when the pilot begins descending from the procedure turn completion altitude. Since this point is considered the FAF, the pilot should establish approach configuration and airspeed prior to departing procedure turn completion altitude unless aircraft flight manual procedures require otherwise.

15.27.4. Do not descend from the procedure turn fix altitude (published or assigned) until crossing over or outbound abeam the procedure turn fix. Do not descend from the procedure turn completion altitude until established on the inbound segment of the approach. Procedures may contain a note on the chart profile or depict an “at or above” altitude at the procedure turn fix without a note (**Figure 15.20**). Absence of a chart note or a specified minimum altitude adjacent to the procedure turn fix is an indication that descent to the procedure turn altitude can commence immediately upon crossing over the procedure turn fix, regardless of the direction of flight.

Figure 15.19. Procedure Turn with No FAF Depicted.

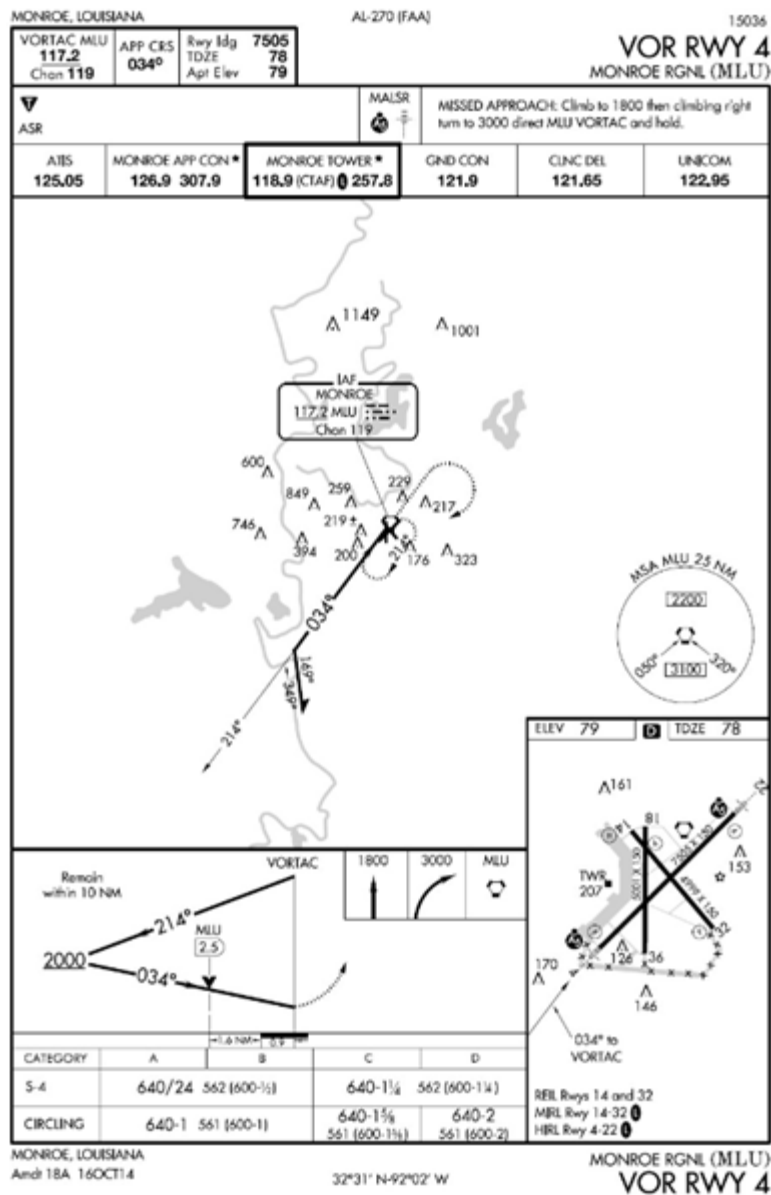

WICHITA FALLS, TEXAS

LOC I-SPS 109.7 Chan 34	APCH CES 333*	Rwy lbg 33L 13,100 33C 10,002 THRE 33L 1000 33C 989 Arpt Elev 1019	ALS-1 A1	MISSED APPROACH: Climb to 2200, then climbing right turn to 3100 via SPS VORTAC R-030 to EYERI (SPS R-030/11) and hold.

AL-454 [USAF]

SHEPPARD AFB/
WICHITA FALLS MUNI (KSPS)

• When ALS inop, increase all CATs vis to 1 mile.
• When ALS inop, increase all CATs vis to 1 mile.
• When ALS inop, increase all CATs vis to 1 mile.

ATIS • 132.05 269.9	SHEPPARD APP CON 118.2 269.025	SHEPPARD TOWER • 119.75 279.525 [CTAF]	GND CON 125.5 289.4	CINC DEL 121.2 282.225	ASOS	ASR

† Circling NA West of Rwy 15L/33L

ELEV 1019 THRE 33L 1000 THRE 33C 989

ENROUTE FACILITIES

EMERG SAFE ALT 100 NM FROM *SPS* VORTAC 4600

VGS and descent angle not coincident

Remain within 15 NM

CATEGORY	A	B	C	D	E
5-ILS 33L *	1200-½		200 (200-½)		
5-LOC/ DME 33L **	1340-½		340 (400-½)		
SD/STEP 33C ***	1340-½ 351 (400-½)		1340-¾ 351 (400-¾)		
6 CIRCLING†	1440-1 421 (500-1)	1480-1 461 (500-1)	1480-1½ 461 (500-1½)	2020-3 1001 (1100-3)	2080-3 061 (1100-3)

WICHITA FALLS, TEXAS 33°59'N-98°30'W


SHEPPARD AFB/WICHITA FALLS MUNI (KSPS)

ILS or LOC/DME RWY 33L

- 15.28.1. A straight outbound leg with course guidance limited by time, radial or distance;
- 15.28.2. A 45 degree turn commenced at the designated radial or DME fix, or at the completion of the published timing requirement;
- 15.28.3. A timed straight leg without track guidance. Begin timing upon initiating the 45 degree turn. Time for 1 minute (Categories A and B) or 1 minute and 15 seconds (Categories C, D, and E); timing is mandatory under ICAO. **(T-0) Note:** Adjust the time or distance on the outbound track to ensure the reversal is initiated at a point specified on the instrument procedure if so depicted, or the maneuver is completed within the specified “remain within” distance.

15.28.4. The 180-degree turn is made in the opposite direction of the 45-degree turn to intercept the inbound track.

Figure 15.21. 45°/180° Procedure Turn.

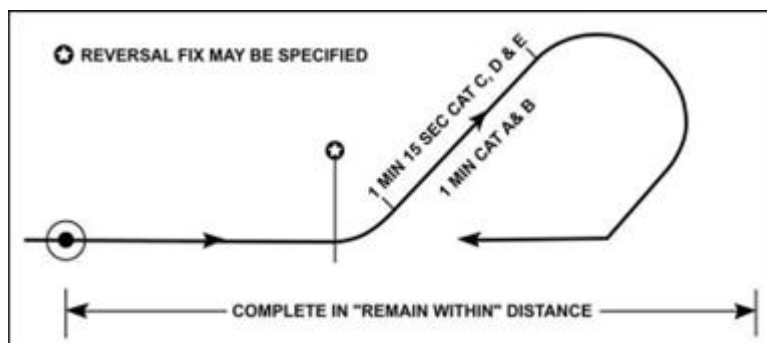


15.29. Procedure Turn – 80°/260°. The 80°/260° starts at a facility, fix, or IAF and consists of the following ([Figure 15.22.](#)):

15.29.1. A straight outbound leg with course guidance limited by time, radial or distance;
Note: Adjust the time or distance on the outbound course to ensure the reversal is initiated at a point specified on the instrument procedure if depicted, or the maneuver is completed within the specified “remain within” distance.

15.29.2. An 80 degree turn commenced at the designated radial or DME fix, or at the completion of the published timing requirement, followed immediately by;

15.29.3. A 260 degree turn in the opposite direction to intercept the inbound track.

Figure 15.22. 80°/260° Procedure Turn.

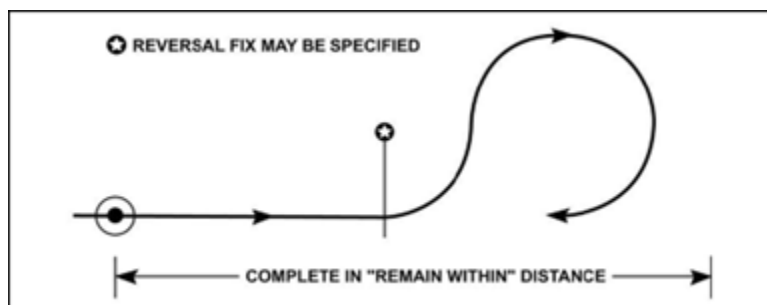

15.30. Base Turn or [NAS Only] Teardrop. [ICAO Doc 8168 Volume 1, Section 4, Chapter 3; AIM 5-4-9] This procedure consists of intercepting and maintaining a specified outbound track, timing or DME distance from a facility or fix, followed by a turn to intercept the inbound track ([Figure 15.23.](#)). The base turn must be flown as depicted. **(T-0)** More than one track may be depicted depending on aircraft category ([Figure 15.24.](#)).

Figure 15.23. Base Turn or [NAS Only] Teardrop.


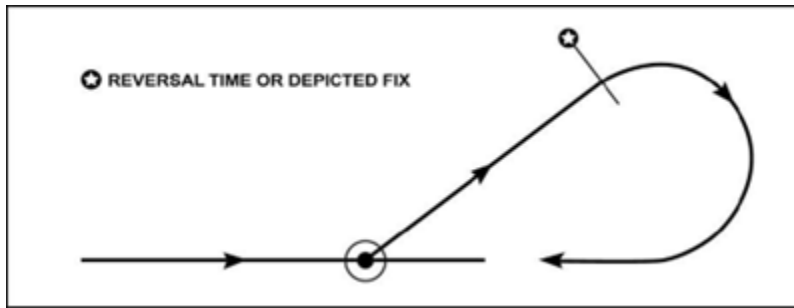



Figure 15.24. Base Turn with More Than One Track.

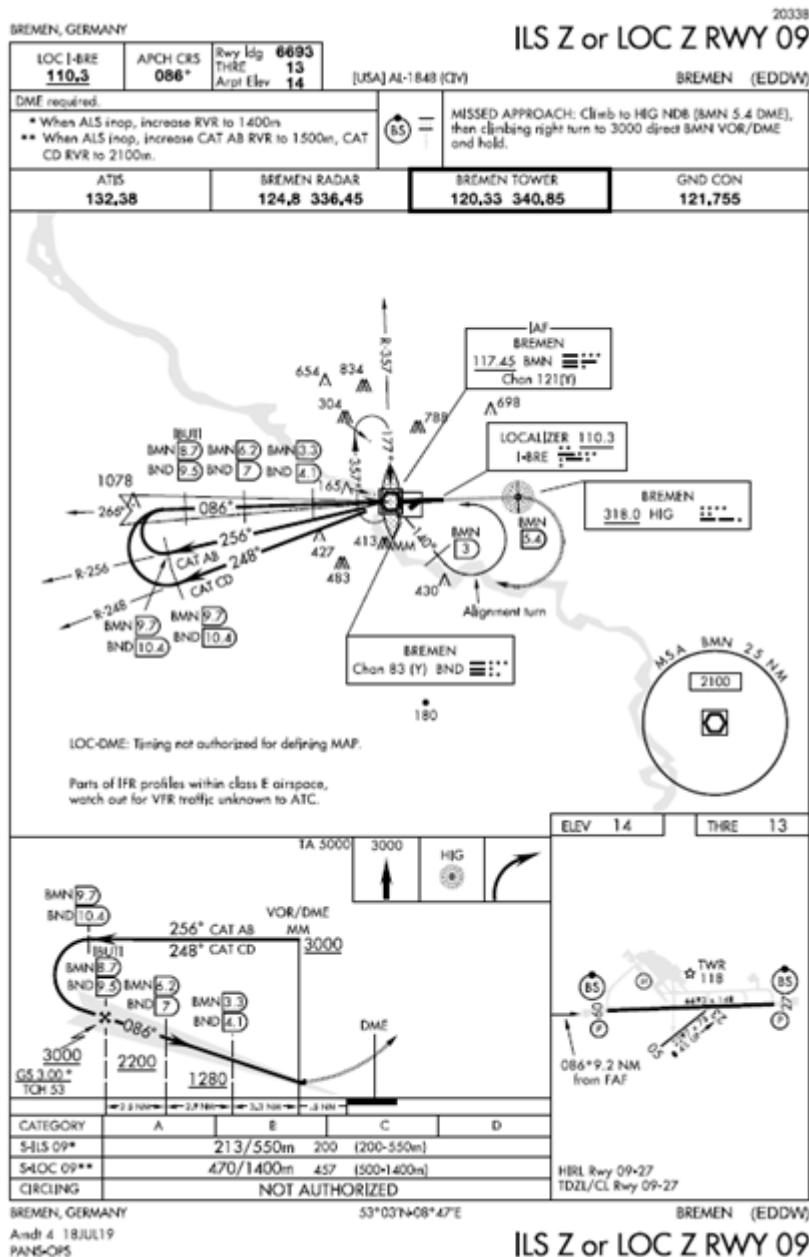

15.31. Racetrack or [NAS Only] HILPT. [ICAO Doc 8168 Volume 1, Section 4, Chapter 3; AIM 5-4-9] This procedure consists of a turn from the inbound track through 180 degrees from overhead the facility or fix on to the outbound track for 1, 2, or 3 minutes specified in 30-second increments, followed by a 180 degree turn in the same direction to return to the inbound track (**Figure 15.25** and **Figure 15.26**). As an alternative to timing, a DME distance or an intersecting radial or bearing may limit the outbound leg. Racetrack procedures are used when sufficient distance is not available in a straight segment to accommodate the required loss of altitude and when entry into a reversal procedure is not practical. They may also be specified as alternatives to reversal procedures to increase operational flexibility (in this case, they are not necessarily published separately).

15.31.1. [NAS Only] The HILPT is depicted as a holding pattern printed with a heavy black line in the plan view and established over an IF or FAF.

Figure 15.25. Racetrack or [NAS Only] HILPT.

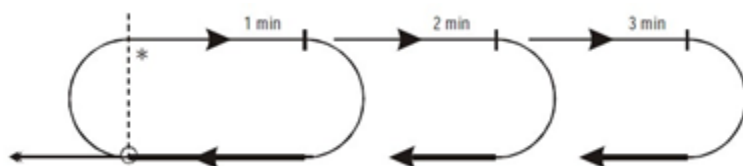

15.31.2. Entry procedures are in accordance with the holding entry procedures from **Chapter 13** with the following considerations:

15.31.2.1. Pilots will limit time on a 30-degree teardrop track to 1 minute and 30 seconds, then turn to a heading parallel to the outbound track for the remainder of the outbound time for an offset entry; pilots will limit time on a 30-degree teardrop track to 1 minute if the outbound time is only 1 minute. **(T-0)**

15.31.2.2. Pilots will not turn direct to the facility without first intercepting the inbound track for a parallel entry. **(T-0)**

15.31.2.3. Pilots will maneuver on the maneuvering side of the inbound track. **(T-0)**

15.31.3. Timing:

15.31.3.1. When the procedure is based on a facility, the outbound timing starts from abeam the facility or on attaining the outbound heading, whichever occurs last.


15.31.3.2. When the procedure is based on a fix, the outbound timing starts from attaining the outbound heading.

15.31.3.3. The turn onto the inbound track should be started within the specified time adjusted for winds, when encountering the published DME distance, or when the limiting radial or bearing has been reached, whichever occurs first.

15.31.3.4. Descent from the minimum holding altitude may be depicted in two ways: descent at the holding fix or descent on the inbound leg. The pilot must be established on the inbound segment of the approach before beginning descent when a descent is depicted on the inbound leg. **(T-0)**


15.31.3.5. [AIM 5-4-9] If cleared for the approach prior to returning to the holding fix and the aircraft is at the prescribed altitude, additional circuits of the holding pattern are not necessary nor expected by ATC. If pilots elect to make additional circuits to lose excessive altitude or to become better established on track, it is their responsibility to advise ATC upon receipt of their approach clearance.

Figure 15.26. HILPT Approach.

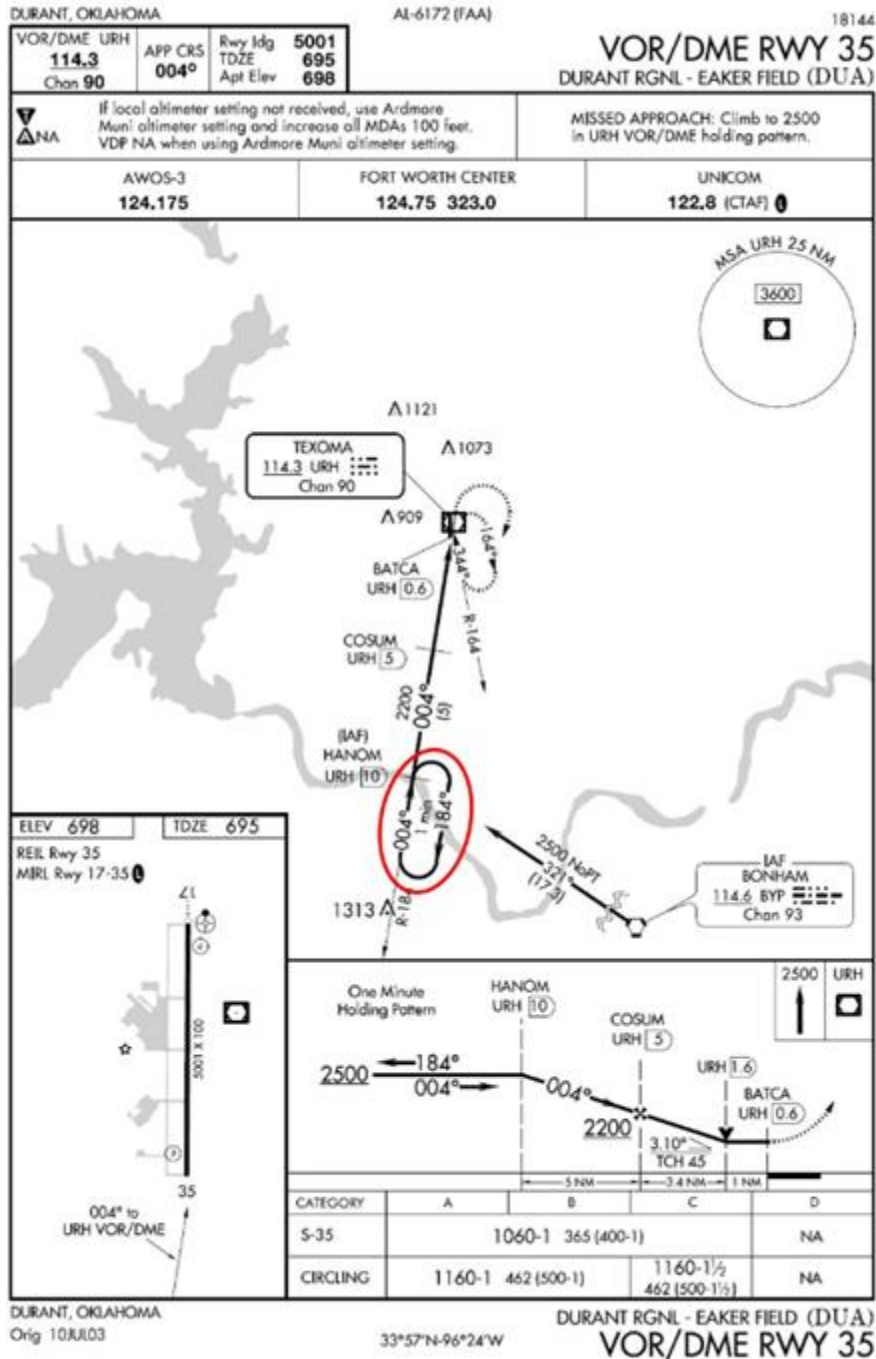


15.32.5. Conducting a timed approach from a holding fix [AIM 5-4-10]. **(T-0)**

Figure 15.27. [NAS Only] NoPT Routing.

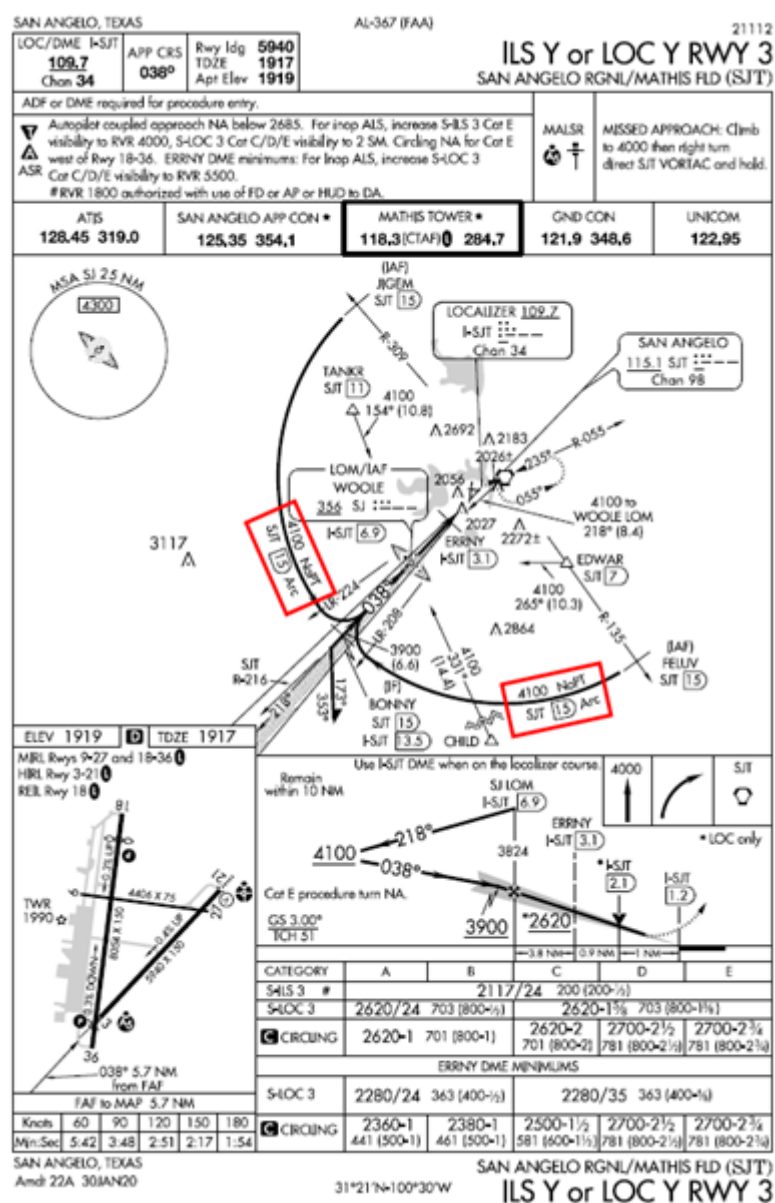

15.33. Stepdown Fixes. [AIM 5-4-5] Altitude restrictions depicted at stepdown fixes within the final approach segment are applicable only when flying a non-precision approach to a straight-in or circling line of minima identified as a MDA (Figure 15.28). Stepdown fix altitude restrictions within the final approach segment do not apply to pilots using precision approach or approach with vertical guidance lines of minima identified as a DA or DH, since obstacle clearance on these approaches are based on the aircraft following the applicable vertical guidance. Pilots are responsible for adherence to stepdown fix altitude restrictions when outside the final approach segment regardless of which type of procedure the pilot is flying. **(T-0) Note:** In rare circumstances stepdown fixes exist inside the expanded circling area. Once commencing the circling maneuver and remaining within the circling area, pilots may descend to the circling MDA.

Figure 15.28. Instrument Procedure Stepdown Fixes.

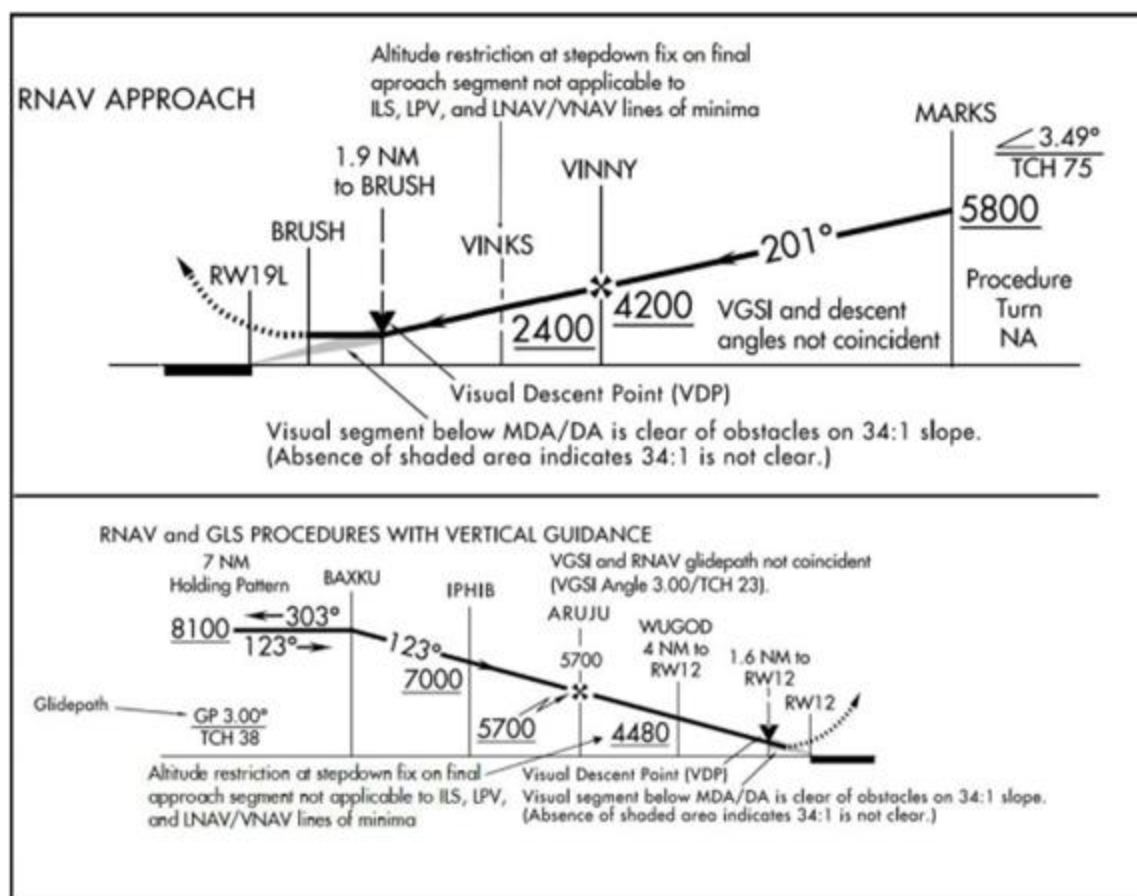

15.34. High Altitude Approaches. Establish approach configuration and airspeed prior to the FAF unless aircraft flight manual procedures require otherwise.

15.35. Non-DME Teardrop High Altitude Approach. Non-DME teardrop high altitude approaches are normally associated with VOR or NDB facilities (Figure 15.29.).

15.35.1. When station passage occurs at the IAF, turn immediately in the shorter direction toward the outbound course and attempt to intercept it. Begin descent when established on a parallel or intercept heading to the approach course and outbound from IAF. Use a descent gradient of 800-1,000 feet per nautical mile (8 degrees to 10 degrees) to ensure the aircraft remains in protected airspace.

15.35.1.1. If arriving at the IAF below the published altitude, the pilot should maintain altitude and proceed outbound 15 seconds for each 1,000 feet the aircraft is below the published altitude before starting descent.


15.35.1.2. If arriving at the IAF above the published altitude, the pilot should descend to the published IAF altitude prior to starting the approach. Request maneuvering airspace from ATC if descent is required at the IAF.

15.35.2. A 30-degree angle of bank is normally used during the penetration turn; however, bank may be shallowed if undershooting course.

15.35.2.1. When a penetration turn altitude is not published, start the turn after descending one half the total altitude between the IAF and FAF altitudes.

15.35.2.2. If a penetration turn completion altitude is published, do not descend below this altitude until established on the inbound course.

Figure 15.29. Non-DME Teardrop High Altitude Approach.

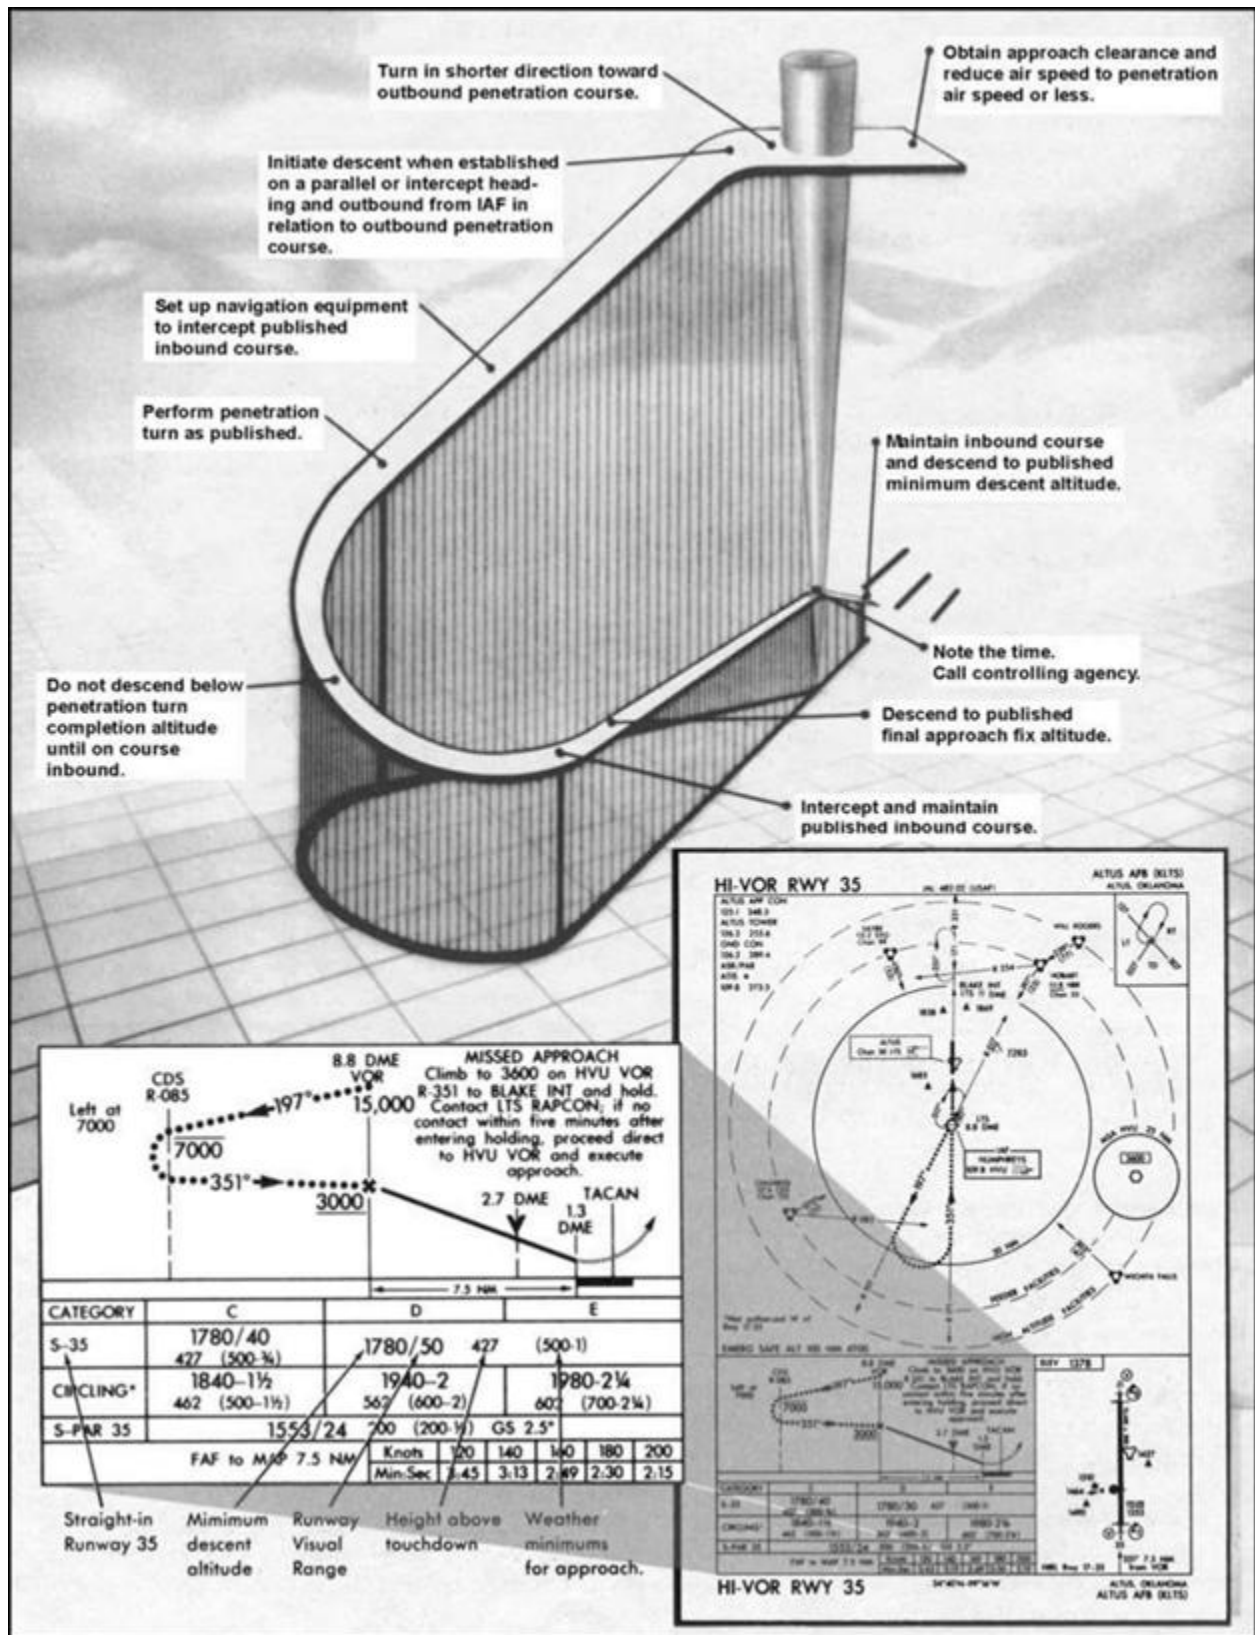


15.36. Helicopter-Only Approaches. Helicopter only approaches are identified by the term “COPTER,” the type of facility producing final approach course guidance, and a numerical identification of the final approach course; for example, “COPTER VOR RWY 17” or “COPTER RNAV (GPS) 291°” (Figure 15.30).

15.36.1. These approaches are considered “straight-in” approaches. The pilot should plan to touch down on the threshold of the procedure runway or helipad. The designated instrument helipad is shown with inverse symbology if there are multiple helipads (**Figure 15.30**).


15.36.2. A maximum descent of 400 feet per nautical mile is normally planned for low altitude approaches; it may be as high as 800 feet per nautical mile for helicopter only approaches.

Figure 15.30. Helicopter-Only Approach.

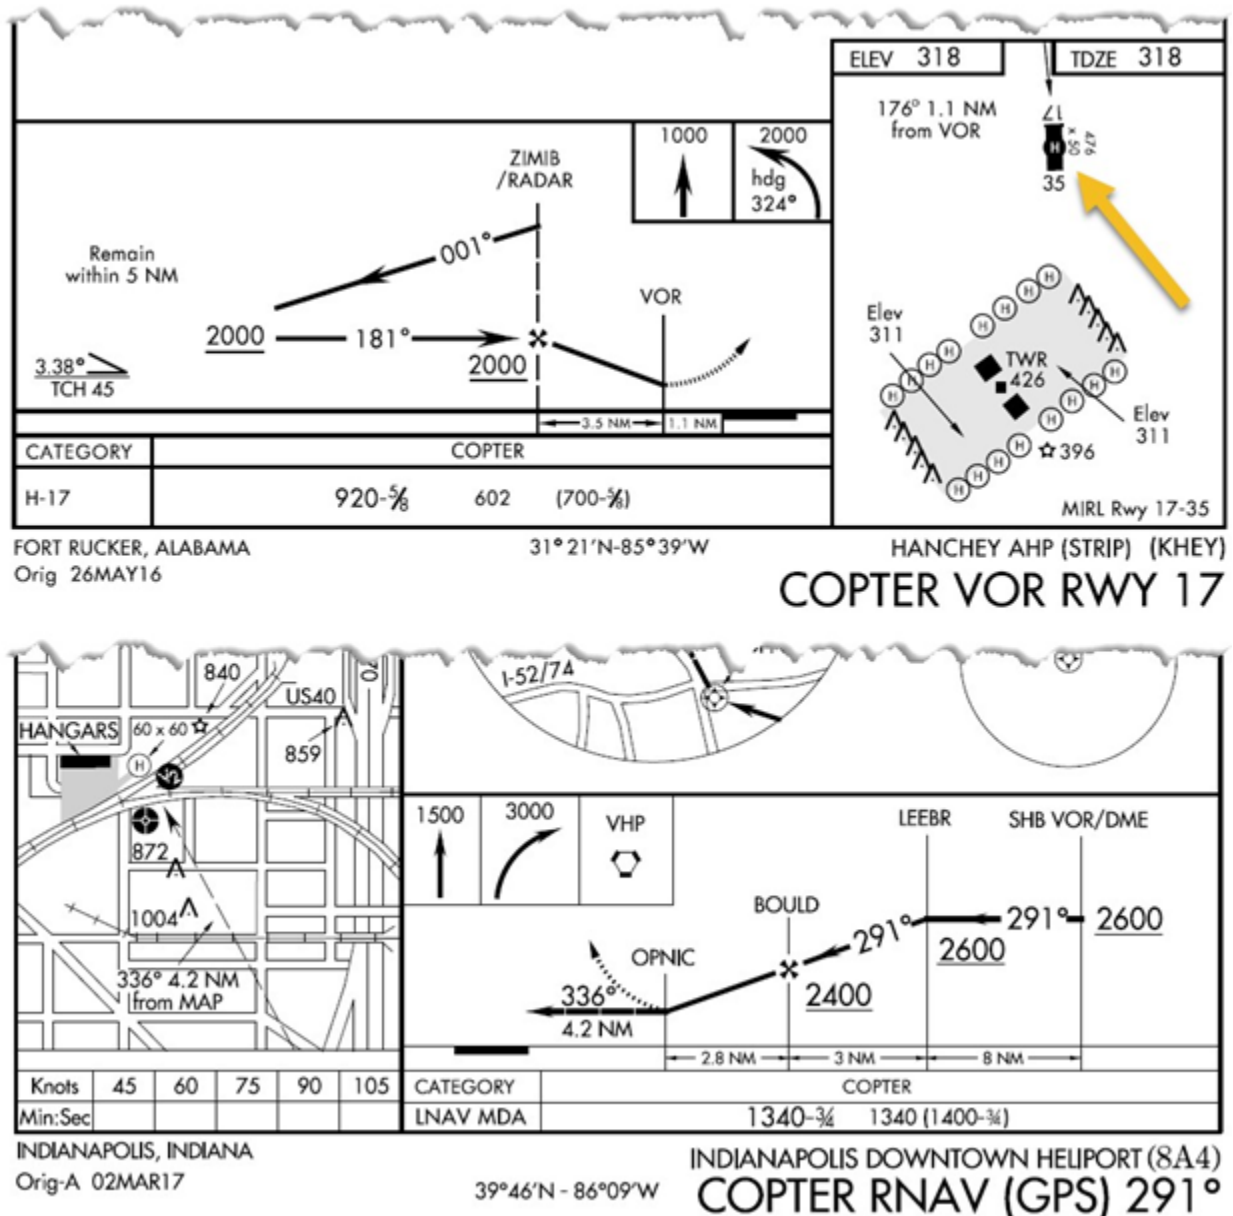

15.36.3. **Figure 15.31** is an example of a short final approach. The IAF is only 0.5 miles from the DME arc procedural track. The FAF to the MAP is 2.3 miles. While this approach should not be difficult to accomplish, careful review could prevent the pilot from becoming rushed during the maneuver.

Figure 15.31. Short Final Approach.

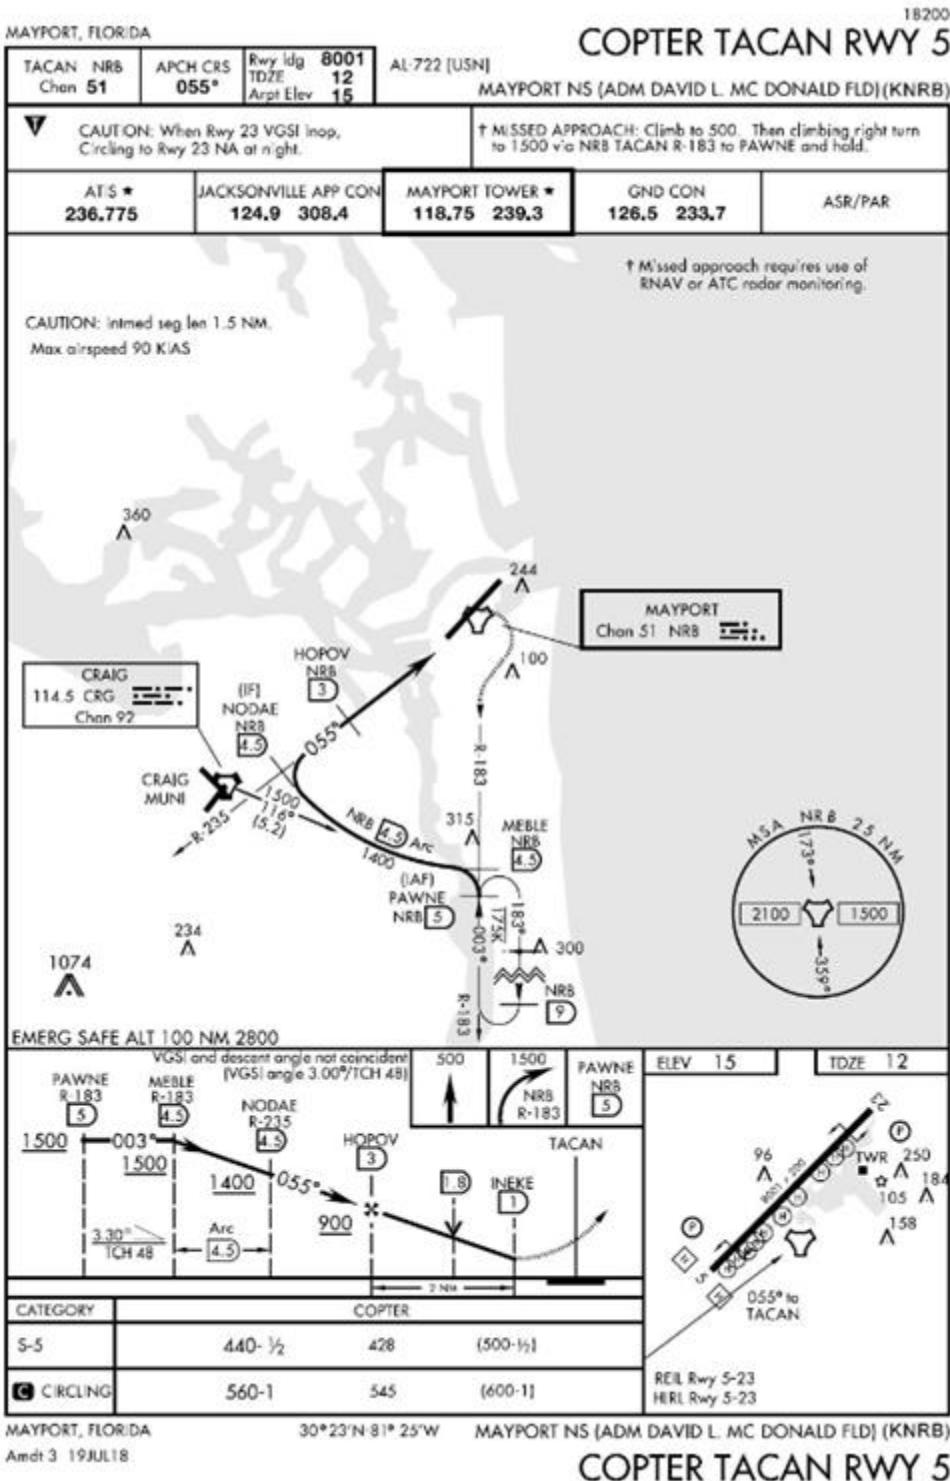

15.36.4. At locations where the MAP is located more than 2 statute miles from the landing site, the turn from the final approach to the visual segment is greater than 30 degrees, or the VFR segment from the MAP to the landing site has obstructions that require pilot actions to avoid them, a Point-In-Space (PinS) procedure may be developed ([Figure 15.32](#) and [Figure 15.33](#)). These approaches are annotated “Proceed VFR from (MAP) or conduct the specified missed approach.” Some PinS approaches allow the pilot to fly to multiple heliports after reaching the MAP. If planning to use this type of approach, pay careful attention to weather conditions upon arrival, as VMC conditions are required to maneuver.

Figure 15.32. Point-in-Space (PinS) Approach.


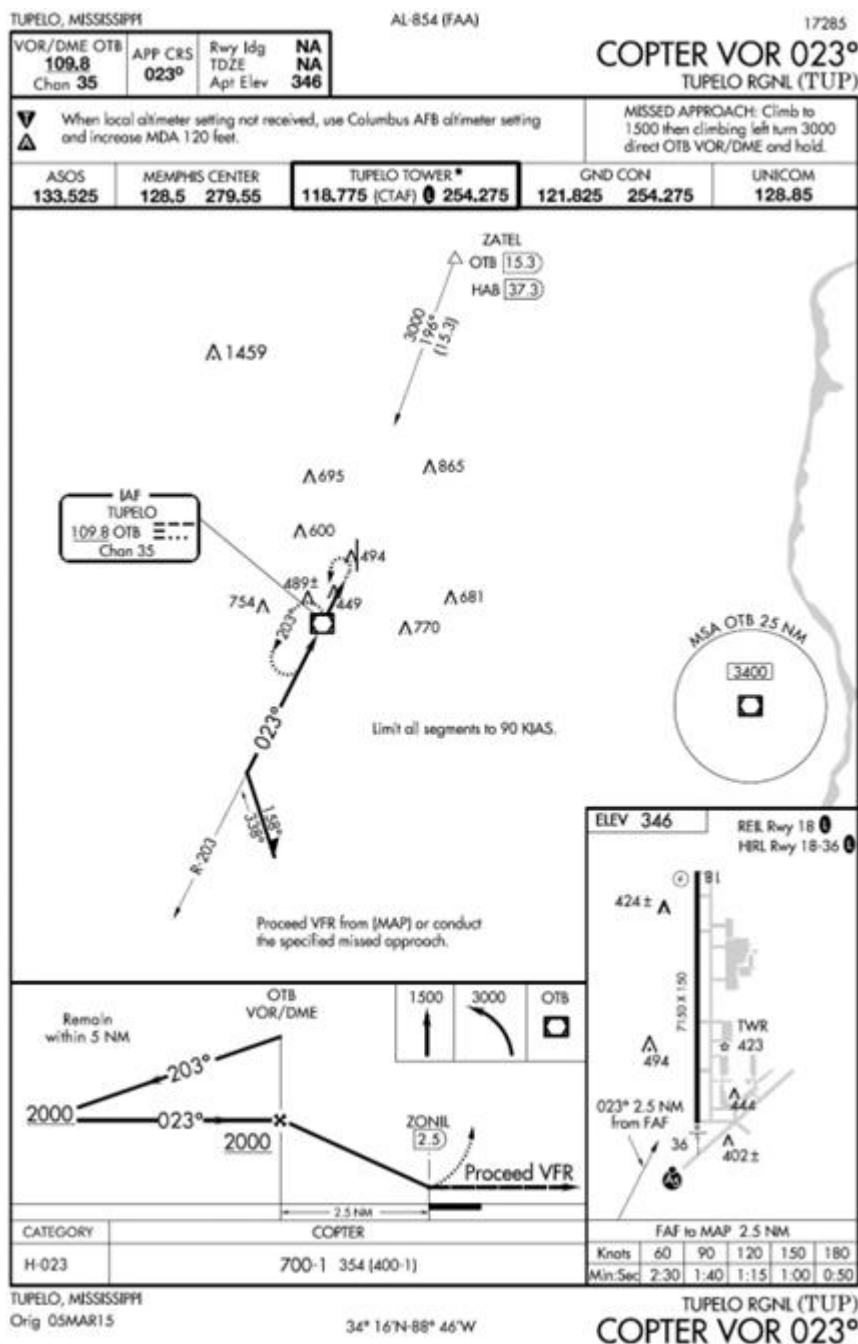


Figure 15.33. PinS Approach to Multiple Heliports.

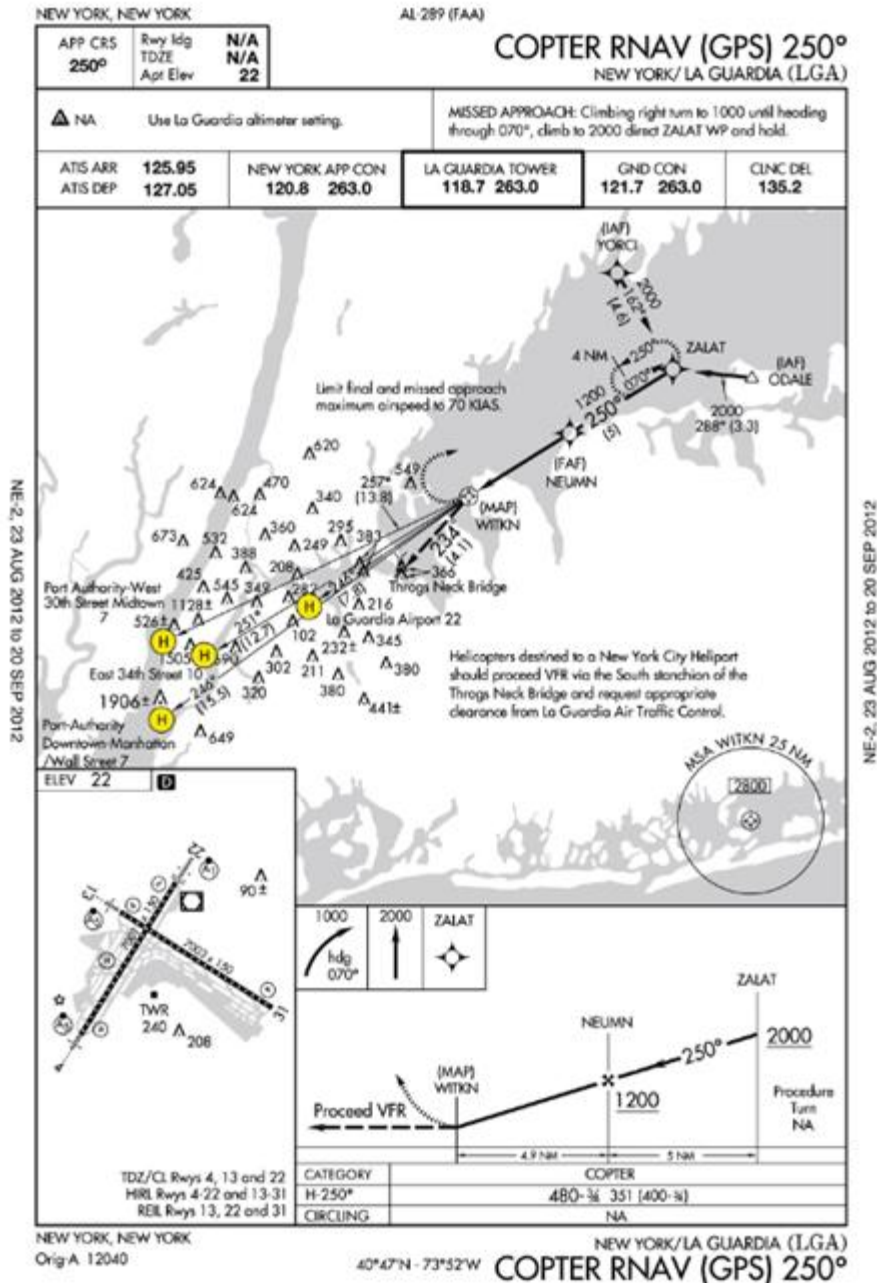

15.37. Not Used.

15.38. Visual Approach. [AIM 5-4-23] Visual approaches reduce pilot and controller workload and expedite traffic by shortening flight paths to the airfield. A visual approach is an IFR procedure conducted under IFR in VMC. Comply with controller's instructions for vectors toward the airfield of intended landing or to a visual position behind a preceding aircraft. **(T-0)**

15.38.1. A visual approach does not alter IFR flight plan cancellation responsibility. Radar service is automatically terminated without advising the pilot when instructed to change to advisory frequency.

15.38.2. If instructed by ATC to follow another aircraft, notify the controller if the aircraft to be followed is not in sight, unable to maintain visual contact with the aircraft to be followed, or for any other reason responsibility for visual separation cannot be assured. ATC may still clear the aircraft for a visual approach; however, ATC retains both aircraft separation and wake separation responsibility. When visually following a preceding aircraft, acceptance of the visual approach clearance constitutes acceptance of pilot responsibility for maintaining a safe approach interval and adequate wake turbulence separation.

15.38.3. After being cleared for a visual approach, proceed visually and clear of clouds to the airfield in the most direct and safe manner to establish the aircraft on a normal straight-in final approach. Clearance for a visual approach does not authorize the pilot to do an overhead or VFR traffic pattern.

15.38.4. A visual approach is not an instrument approach procedure and therefore does not have a missed approach segment. If a go-around is necessary for any reason, aircraft operating at controlled airfields are issued an appropriate advisory, clearance, or instruction by the tower. At non-towered airfields, aircraft are expected to remain clear of clouds and complete a landing as soon as possible. If a landing cannot be accomplished, the aircraft is expected to remain clear of clouds. Contact ATC as soon as possible for further clearance (e.g., separation from other IFR aircraft is maintained under these circumstances).

15.38.5. [ICAO Doc 4444] The pilot must maintain visual reference to the terrain and report the aerodrome or the preceding aircraft in sight. **(T-1)** The reported ceiling at the airfield must be at or above the initial approach altitude, or the pilot must report that meteorological conditions are such that a visual approach and landing can be completed with the aerodrome or the preceding aircraft in sight. **(T-1)** Visual approaches may be requested by the pilot or initiated by the controller. If initiated by the controller, in ICAO, concurrence by the pilot is required. Pilots will not fly visual approaches without ATC authorization. **(T-1)**

15.38.6. [NAS Only] The pilot must have either the airfield or the preceding identified aircraft in sight, and the approach must be authorized and controlled by the appropriate ATC facility. **(T-0)** The reported weather at the airfield must have a ceiling at or above 1000 feet and visibility of 3 miles or greater. **(T-0) Note:** Helicopters making a PinS Approach may be requested to report when able to proceed to the landing area by visual reference to the prescribed surface route.

15.39. Contact Approach [NAS Only]. A contact approach is a procedure that may be used by a pilot in lieu of conducting an instrument procedure to an airfield. It is not intended to be used to operate to an airfield without a published and functioning instrument procedure. Nor is it intended for an aircraft to conduct an approach to one airfield, and then when “in the clear,” discontinue that approach and proceed to another airfield.

15.39.1. Pilots operating on an IFR flight plan, when clear of clouds with at least 1 mile flight visibility and can reasonably expect to continue to the destination airfield in those conditions, may request ATC authorization for a contact approach.

15.39.2. ATC may authorize a contact approach provided:

15.39.2.1. The contact approach is specifically requested by the pilot. ATC cannot initiate this approach;

15.39.2.2. The reported ground visibility at the destination is at least 1 statute mile; and

15.39.2.3. The contact approach is made to an airfield having a published instrument approach procedure.

15.39.3. Advise ATC immediately if unable to continue the contact approach or if visibility is reduced to less than 1 mile.

15.39.4. When executing a contact approach, the pilot assumes responsibility for obstruction clearance. If radar service is being received, it automatically terminates when the pilot is instructed to change to advisory frequency.

15.39.5. Being cleared for a visual or contact approach does not authorize the pilot to fly a 360 degrees overhead traffic pattern. An aircraft conducting an overhead maneuver is VFR and the IFR flight plan is canceled when the aircraft reaches the initial point. Aircraft operating at an airfield without a functioning control tower must initiate cancellation of the IFR flight plan prior to executing the overhead maneuver. **(T-0)**

15.40. Charted Visual Flight Procedures. Charted visual flight procedures may be established at airfields with control towers for environmental or noise abatement considerations as well as when necessary for safety and efficiency of air traffic operations (**Figure 15.34.**). Designed primarily for turbojet aircraft, charted visual flight procedures depict prominent landmarks, courses, and recommended altitudes to a specific runway equipped with a visual or electronic vertical guidance. Most charted visual flight procedures also depict NAVAID information for supplemental navigation guidance only.

15.40.1. When informed charted visual flight procedures are in use, the pilot must advise the arrival controller on initial contact if unable to accept the charted visual flight procedure. **(T-0)**

15.40.2. Pilots must have a charted visual landmark or a preceding aircraft in sight, and weather must be at or above the published minimums before ATC issues a charted visual flight procedure clearance. **(T-0)**

15.40.3. Unless indicating a Class B airspace floor, all depicted altitudes are for noise abatement purposes and are recommended only. Pilots are not prohibited from flying other than recommended altitudes if operational requirements dictate. Weather minimums for charted visual flight procedures provide VFR cloud clearance at minimum vectoring altitudes. Therefore, clearance for a charted visual flight procedure is possible at MVA, which may be below the depicted altitudes.

15.40.4. When landmarks used for navigation are not visible at night, the approach is annotated “procedure not authorized at night.”


15.40.5. Charted visual flight procedures usually begin within 20 miles from the airfield.

15.40.6. Published weather minimums for charted visual flight procedures are based on minimum vectoring altitudes rather than recommended altitudes depicted on the charts.

15.40.7. ATC does not issue clearances for charted visual flight procedures when the weather is below the published minimum. When accepting a clearance to follow a preceding aircraft, pilots are responsible for maintaining a safe approach interval and wake turbulence separation. Pilots should advise ATC if at any point they are unable to continue an approach or lose sight of a preceding aircraft.

15.40.8. Charted visual flight procedures are not instrument approaches and do not have missed approach segments. The pilot should have preplanned climb-out options based on aircraft performance and terrain features.

Figure 15.34. Charted Visual Flight Procedure.

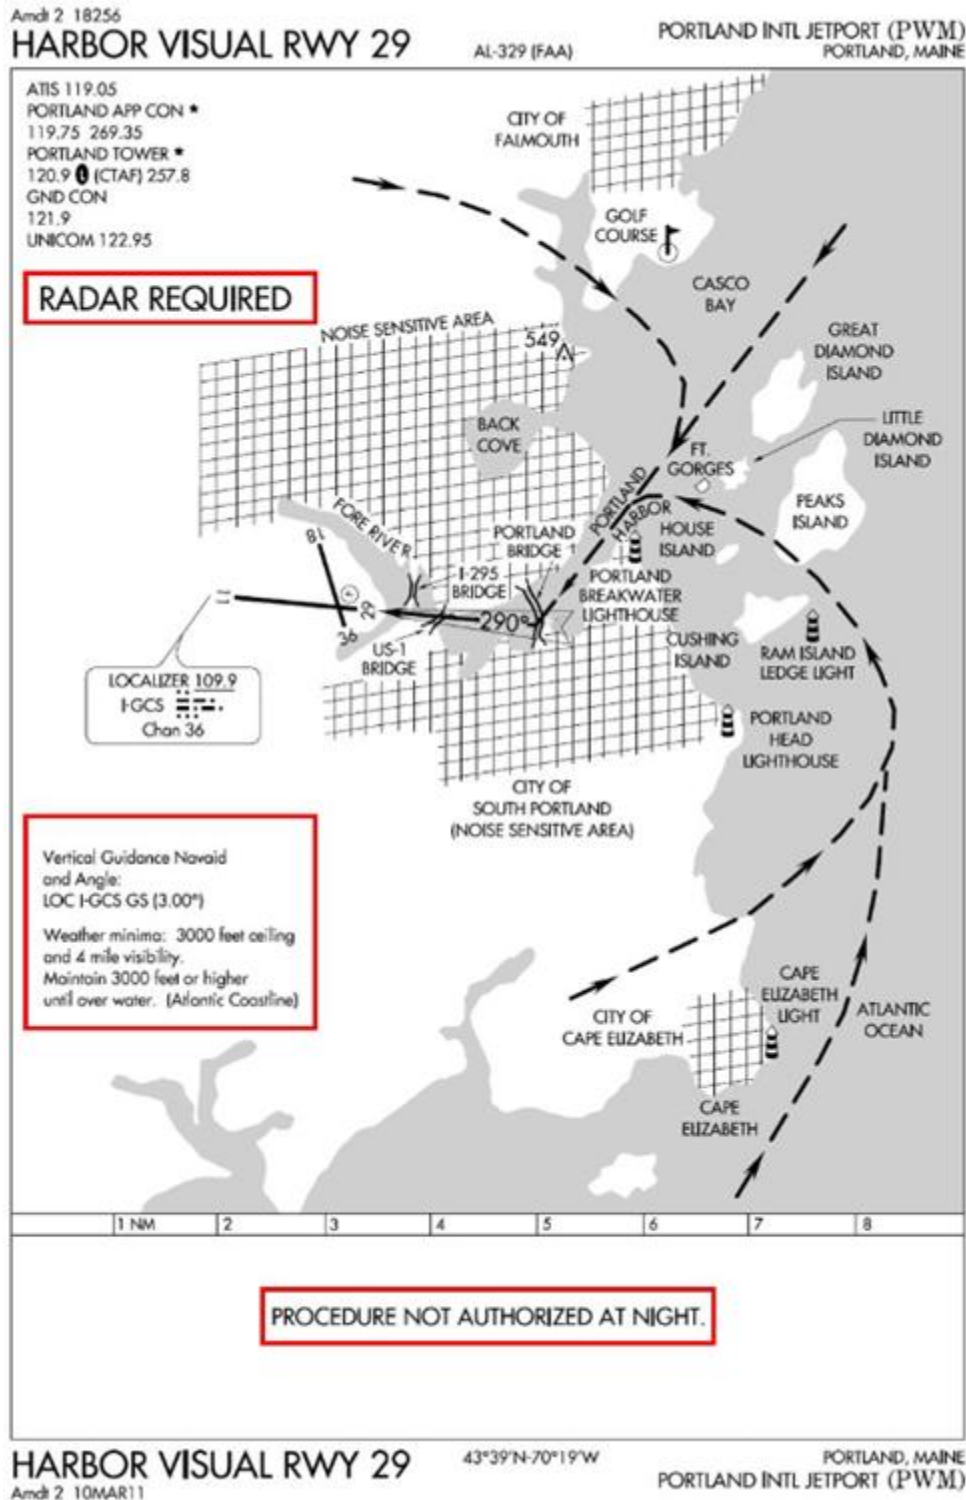

15.41. Simultaneous Approaches to Parallel Runways. [AIM 5-4-13] ATC procedures permit ILS, RNAV, or GLS instrument approach operations to dual or triple parallel runway configurations. Approaches to parallel runways are grouped into three classes: Simultaneous Dependent Approaches; Simultaneous Independent Approaches; and Simultaneous Close Parallel PRM Approaches (**Figure 15.35**).

15.41.1. RNAV approach procedures that are approved for simultaneous operations require GNSS as the sensor for position updating; VOR/DME, DME/DME and IRU position updating are NA.


15.41.2. The classification of a parallel runway approach procedure is dependent on adjacent parallel runway centerline separation, ATC procedures, and airfield ATC final approach radar monitoring and communications capabilities.

15.41.3. At some airfields, one or more approach courses may be offset up to 3 degrees. ILS approaches with offset localizer configurations result in loss of CAT II/III capabilities and an increase in the DH (50 feet).

15.41.4. Depending on weather conditions, traffic volume, and the specific combination of runways being utilized for arrival operations, a runway may be used for different types of simultaneous operations to include closely spaced dependent or independent approaches. Pilots should ensure that they understand the type of operation that is being conducted and ask ATC for clarification if necessary.

15.41.5. Refer to **Chapter 17** for simultaneous close parallel PRM approaches.

Figure 15.35. Simultaneous Approaches to Parallel Runways.

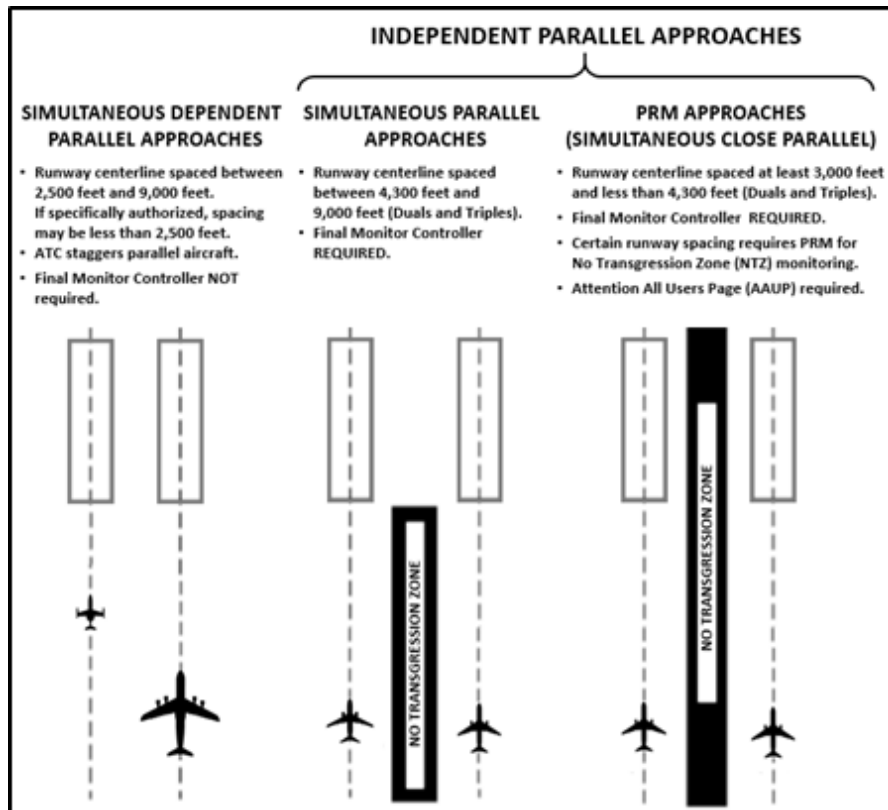


15.42. Simultaneous Dependent Approaches. [AIM 5-4-14] Simultaneous dependent approaches are an ATC procedure permitting approaches to airfields having parallel runway centerlines separated by at least 2,500 feet up to 9,000 feet (**Figure 15.36.**).

15.42.1. Although non-precision minimums may be published, pilots must only use those procedures specifically authorized by chart note. **(T-0)**


15.42.2. A simultaneous dependent approach differs from a simultaneous independent approach in that, the minimum distance between parallel runway centerlines may be reduced; there is no requirement for radar monitoring or advisories and a staggered separation of aircraft on the adjacent final course is required.

Figure 15.36. Simultaneous Dependent Approaches.

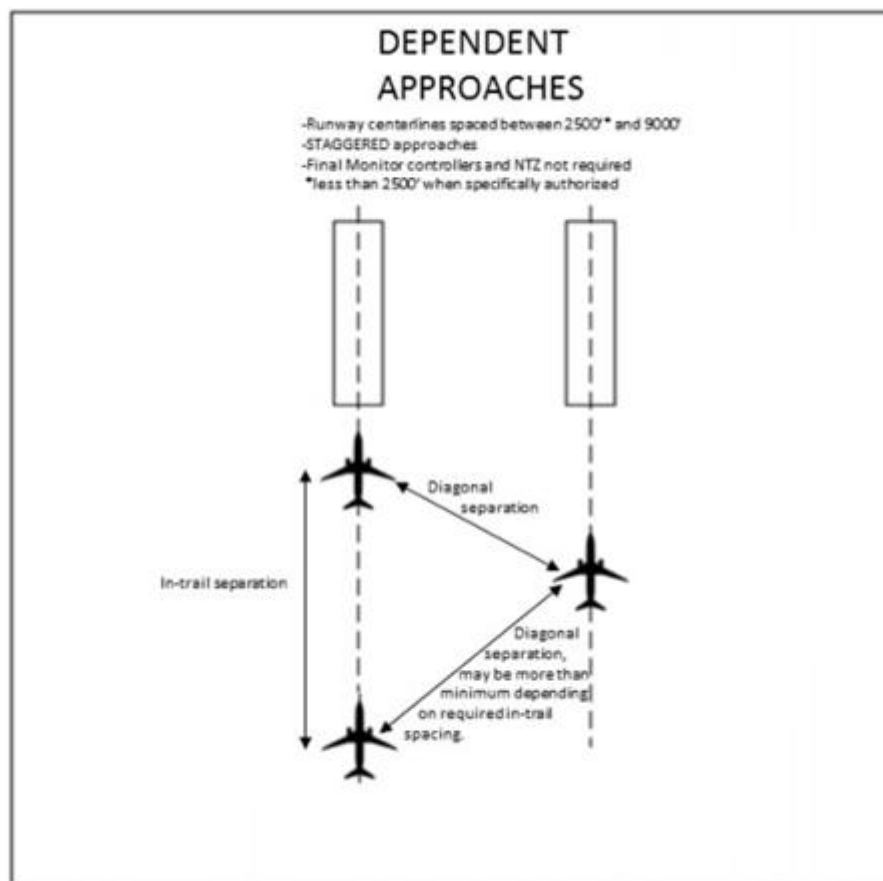

15.43. Simultaneous Independent Approaches. [AIM 5-4-15] An approach system permitting simultaneous ILS, RNAV, or GLS approaches to parallel runways with centerlines separated by 4,300 to 9,000 feet (9,200 feet for airfields above 5,000 feet elevation) utilizing no-transgression zone final monitor controllers (**Figure 15.37.**).

Figure 15.37. Simultaneous (Parallel) Independent Approaches.

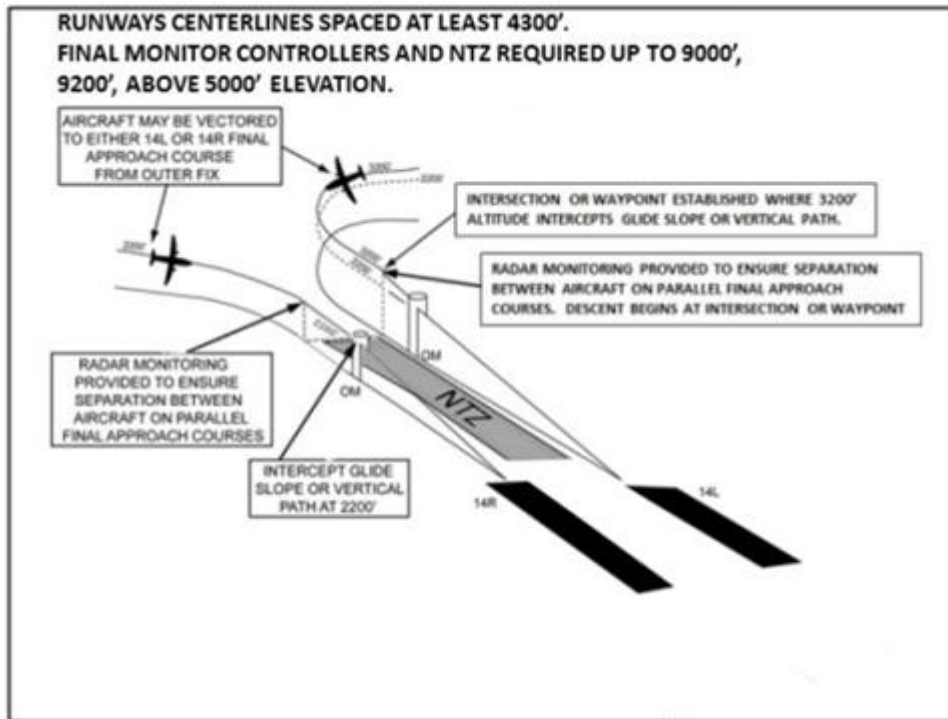

15.44. Simultaneous Converging Instrument Approaches. [AIM 5-4-17] ATC may conduct instrument approaches simultaneously to converging runways (e.g., runways having an included angle from 15 to 100 degrees) at airfields where a program has been specifically approved to do so. The basic concept requires that dedicated, separate standard instrument approach procedures be developed for each converging runway included. These approaches can be identified by the letter “V” in the title; for example, “ILS V RWY 17 (CONVERGING)” (Figure 15.38).

Figure 15.38. Simultaneous Converging Instrument Approach.

PHILADELPHIA, PENNSYLVANIA		AL-320 (FAA)		18032
LOC/DME I- PHL	APP CRS	Rwy Idg	ILS V RWY 9R (CONVERGING)	
109.3	087°	10506	PHILADELPHIA INTL (PHL)	
Chan 30		TDZE 21		
		Apt Elev 36		
NA	Simultaneous approach authorized.		ALSIF-2	MISSED APPROACH: Climbing right turn to 3000 direct OOD VORTAC and hold.
For inop ALS, increase S-ILS 9R all Cats visibility to 2 SM.				
D-ATIS		PHILADELPHIA TOWER		

Chapter 16

FINAL APPROACH

16.1. General. [AIM 5-4-5] Final approach guidance is categorized as non-radar, radar, procedures with a visual component (visual approach, contact approach, approaches with a visual segment and charted visual chart procedures), MAJCOM-certified approaches, or specialized procedures (converging approaches, simultaneous dependent and independent parallel approaches). Once inside the FAF, one navigation receiver available to the pilot flying must remain tuned to and display the facility that provides final approach course guidance. **(T-0)**

16.2. Final Approach Components. In general, the final approach segment consists of glideslope or glidepath angles, intercept altitudes, FAF, stepdown fixes, visual descent point (VDP), VDA, MAP, MDA and DA. The FAF, stepdown fixes, VDP and the MAP can be defined by a NAVAID, RADAR, a waypoint, crossing radials of two NAVAIDs, or a radial and DME. The optimum final approach course length is 5 miles but may be up to 10 miles.

16.2.1. For a precision approach or approach with vertical guidance, the final approach segment begins where the glidepath intercepts the minimum glidepath intercept altitude indicated on the approach chart by the lightning bolt symbol. If ATC authorizes a lower intercept altitude, the final approach segment begins upon glideslope or glidepath interception at that altitude.


16.2.2. For a non-precision approach, the final approach segment begins either at the FAF depicted by a “Maltese cross” in the profile view of the approach along with a recommended, minimum, or mandatory crossing altitude; or at the point where the aircraft is established inbound on the final approach course where no FAF is depicted. Normally, aircraft cross the FAF at approach speed in the landing configuration.

16.3. Visual Descent Point (VDP). The VDP is a defined point on the final approach course of a non-precision approach straight-in procedure from which a stabilized descent from the MDA to the runway touchdown point may be commenced (**Figure 16.1.**). Pilots should not descend below MDA prior to reaching the VDP. The VDP is identified by DME or area navigation along-track distance (e.g., LNAV only approaches) to the MAP. The VDP is based on the lowest MDA published on the instrument procedure and is harmonized with the angle of the VGSI if installed or the procedure VDA when not installed. If flying a higher MDA (e.g., higher category, higher minimums required) calculate a new VDP. VDPs are not a mandatory part of the procedure.

16.3.1. While pilots should calculate a VDP if one is not published, use extreme caution when departing the MDA, as there may be an obstacle penetrating the 20:1 surface. Unless familiar with the airfield, if visibility is limited, consider remaining at the MDA even if the runway environment is in sight if terrain and obstacles along the final approach cannot be discerned.

16.3.2. Divide the HAT by the desired descent angle in degrees times 100. For example, a HAT of 450 feet and a desired descent angle to the runway of 3 degrees: $450 \div (3 \times 100) = 1.5$ miles to descend from the MDA to TDZE.

Figure 16.1. VDP.

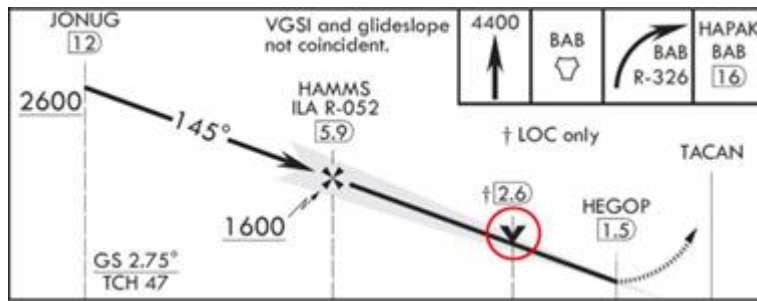

16.4. Vertical Descent Angle (VDA). VDAs are published to the maximum extent possible on non-precision approaches except those published in conjunction with vertically guided minimums (e.g., ILS, LNAV/VNAV, LPV), no-FAF procedures without stepdown fixes, or circling-only approaches. The published angle is for information only as it does not guarantee obstacle clearance below the MDA in the visual segment. Use the published angle and groundspeed to find a target rate of descent that can be flown with the vertical velocity indicator (VVI). When there are obstacles in the visual area between the MDA and touchdown, the instrument procedure does not show a VDA in the profile view and one of two statements is charted in the profile view: “Visual Segment-Obstacles” (Figure 16.2) or “Descent Angle NA” (Figure 16.3). A chart note indicates if the VGSI is not coincident with the VDA.

Figure 16.2. Visual Segment – Obstacles.


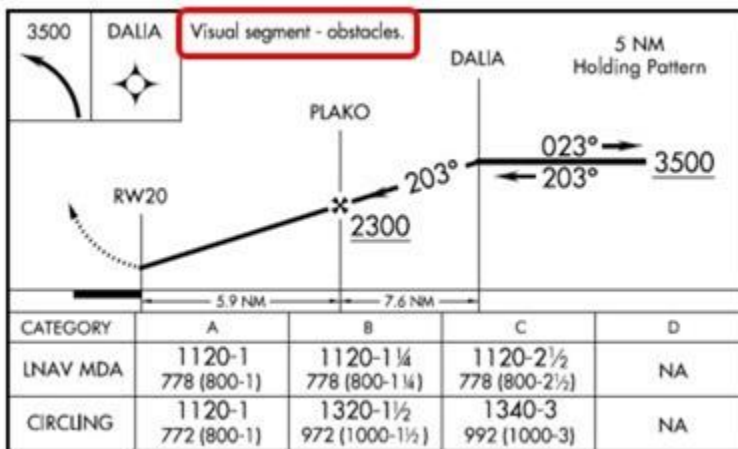


Figure 16.3. Descent Angle NA.

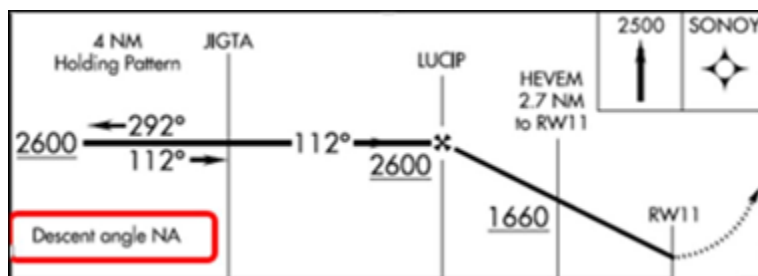

16.5. Continuous Descent Final Approach (CDFA). [AC 120-108, *Continuous Descent Final Approach*; ICAO Doc 8168 Volume 1] Many ICAO States require the use of the CDFA technique and apply increased visibility or RVR requirements when the technique is not used. Pilots should use the CDFA technique when practicable.

16.5.1. [EU-OPS 1] Civil operators in the EU must fly all non-precision approaches using the CDFA technique unless otherwise approved by the authority for a specific approach to a particular runway. **(T-0)** An increase to the approach minima is required if the CDFA technique is not used. **(T-0)** Refer to the FLIP AP series or the ICAO State AIP for exceptions.


16.5.2. CDFA is the preferred method that allows for flying the final approach segment of a non-precision approach as a continuous descent. It is consistent with stabilized approach procedures and has no level-off. A CDFA starts from an altitude or height at or above the FAF and proceeds to an altitude or height approximately 50 feet above the landing runway threshold or to a point where the flare maneuver should begin for the type of aircraft being flown. This method harmonizes USAF flight operations with FAA, European Aviation Safety Agency, and ICAO standards.

16.5.3. Controlled flight into terrain (CFIT) is a primary cause of worldwide commercial aviation fatal accidents. Unstable approaches are a key contributor to CFIT events. Non-precision approaches are designed with and without stepdown fixes in the final segment. Stepdowns flown without a continuous descent require multiple thrust, pitch, and altitude adjustments inside the FAF. These adjustments increase pilot workload and potential errors during a critical phase of flight. Non-precision approaches designed without stepdown fixes in the final segment allow pilots to immediately descend to the MDA after crossing the FAF. In both cases, the aircraft remains at the MDA until descending for the runway or reaching the MAP. This practice is commonly referred to as “dive and drive,” and can result in extended level flight as low as 250 feet AGL in IMC, and shallow or steep final approaches.

16.5.3.1. **Figure 16.4** is an example of an aircraft leveled at the MDA (“dive and drive”) and is proceeding to the MAP to acquire the visual references to continue the approach below the MDA. The 3.0 degree VDA would be used in this example to fly a CDFA.

16.5.3.2. As the aircraft approaches the published MAP, the required descent angle to the runway threshold steepens. At approximately 0.5 nautical miles from the MAP, the required angle increases to 6 degrees. At a groundspeed of 120 knots, a 1,270 foot per minute rate of descent would be required to cross the threshold at the planned TCH of 50 feet. The steep final angle, low-power setting and high descent rate may result in an unstable approach and unsafe condition in the transition to landing.


16.5.3.3. If the pilot descends 0.5 nautical miles early, a 2 degree descent angle is required. At a groundspeed of 120 knots, this corresponds to a 425 foot per minute rate of descent. Higher power settings and increased deck angles are required.

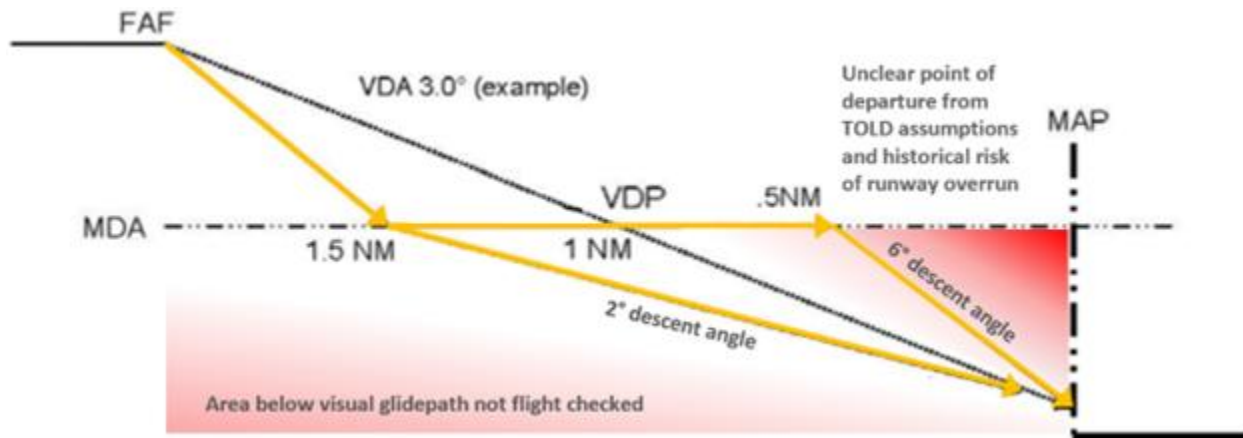Figure 16.4. Dive and Drive.

16.5.4. **Figure 16.5** is an example of using a CDFA. In this example, flying the VDA or CDFA from the FAF results in reaching the derived decision altitude (DDA) and MDA prior to the published MAP. The pilot has two courses of action: continue visually to the landing runway if the required visual cues are acquired or execute a missed approach.

16.5.4.1. Do not descend below the MDA when executing a missed approach from a CDFA. (T-0)

16.5.4.2. A DDA is an altitude above the MDA where a missed approach should be initiated to ensure the aircraft does not descend below the published MDA. Follow aircraft flight manual guidance for DDA; MAJCOMs will establish acceptable methods for calculating DDA if aircraft flight manual guidance does not adequately address DDA (e.g., use of demonstrated altitude lost in a go-around, use of industry practice 50 feet above the MDA as the DDA).

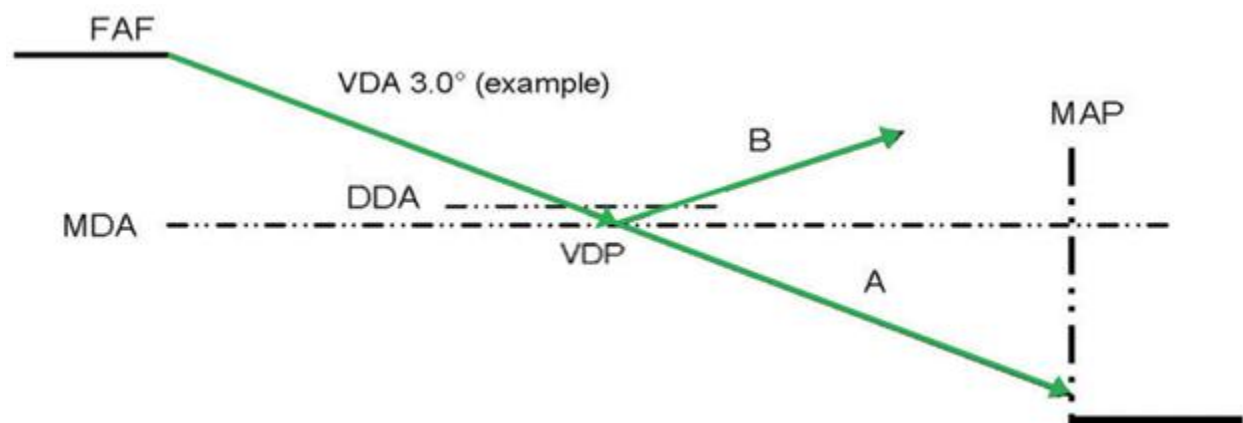Figure 16.5. CDFA.

16.5.5. A stabilized approach is a key feature to a safe approach and landing. Operators are encouraged by the FAA and ICAO to use the stabilized approach concept to help eliminate CFIT. The stabilized approach concept is characterized by maintaining a stable approach speed, descent rate, vertical flightpath, and configuration to the landing touchdown point. Depart the FAF configured for landing and on the proper approach speed, power setting, and flightpath before descending below the minimum stabilized approach height.

16.5.6. Precision instrument procedures and approach procedures with vertical guidance have a continuous descent approach profile in their design. Non-precision approaches were not originally designed with this vertical path but may easily be flown using the CDFA technique. Flying non-precision approaches with a continuous descent profile provides a safety advantage over flying approaches using the “dive and drive” technique. CDFA has several advantages:

- 16.5.6.1. Increased safety by employing the concepts of stabilized approach criteria and procedure standardization;

- 16.5.6.2. Improved situational awareness and reduces pilot workload;

- 16.5.6.3. Improved fuel efficiency by minimizing the low-altitude level flight time;

- 16.5.6.4. Reduced noise level (noise abatement) by minimizing the level flight time at high thrust settings;

- 16.5.6.5. Procedural similarities to precision approach operations; and

- 16.5.6.6. Reduced probability of infringement on required obstacle clearance during the final approach segment.

16.5.7. CDFA requires the use of a published VDA or barometric vertical guidance on the instrument procedure. RNAV approaches with LNAV/VNAV minima are published with a glidepath. Non-precision approach or RNAV approaches with LNAV only minima are published with a VDA. Aircraft with FMS, Baro-VNAV, or WAAS typically provide the published glidepath or VDA when the instrument procedure is selected from the database. Aircraft equipped with flight path angle allow the pilot to enter an electronic descent angle based on the published glidepath or VDA.

16.5.8. If the VDA or glideslope is published or known, aircrew should use the “Instrument Takeoff or Approach Procedure Charts Rate of Climb/Descent Table” on the inside back cover (or EFB legend) of the terminal procedures publication to convert the published VDA or glideslope into the required rate of descent (**Figure 16.6.**).

Figure 16.6. Find Rate of Descent with Known VDA or Glideslope.

INSTRUMENT TAKEOFF OR APPROACH PROCEDURE CHARTS													
RATE OF CLIMB/DESCENT TABLE													
(ft per min)													
A rate of climb/descent table is provided for use in planning and executing climbs or descents under known or approximate ground speed conditions. It will be especially useful for approaches when the localizer only is used for course guidance. A best speed, power, altitude combination can be programmed which will result in a stable glide rate and altitude favorable for executing a landing if minimums exist upon breakout. Care should always be exercised so that minimum descent altitude and missed approach point are not exceeded.													
ft/NM	%	GROUND SPEED (knots)											ANGLE
		60	90	120	150	180	210	240	270	300	330	360	
270	4.44	270	410	540	630	810	950	1080	1220	1350	1490	1620	2.54
280	4.61	280	420	560	700	840	980	1120	1260	1400	1540	1680	2.64
290	4.77	290	440	580	720	870	1020	1160	1310	1450	1600	1740	2.73
300	4.94	300	450	600	750	900	1050	1200	1350	1500	1650	1800	2.83
310	5.10	310	470	620	770	930	1090	1240	1400	1550	1710	1860	2.92
320	5.27	320	480	640	800	960	1120	1280	1440	1600	1760	1920	3.01
330	5.43	330	500	660	830	990	1160	1320	1490	1650	1820	1980	3.11
340	5.60	340	510	680	850	1020	1190	1360	1530	1700	1870	2040	3.20
350	5.76	350	530	700	880	1050	1230	1400	1580	1750	1930	2100	3.30


16.5.9. If the VDA or glideslope is not known, descent gradient (ft/NM) may be calculated by finding the height from the FAF to the TCH, and dividing by the distance shown between those points on the approach chart profile view to find the descent gradient. The “Instrument Takeoff or Approach Procedure Charts Rate of Climb/Descent Table,” on the inside back cover (or EFB legend) of the FAA Terminal Procedure Publication (TPP), is available to convert the descent gradient (ft/NM) into the required rate of descent (ft/min) based on groundspeed (Figure 16.7.).

Figure 16.7. Find Rate of Descent with Computed Descent Gradient.

INSTRUMENT TAKEOFF OR APPROACH PROCEDURE CHARTS RATE OF CLIMB/DESCENT TABLE (ft per min)													
A rate of climb/descent table is provided for use in planning and executing climbs or descents under known or approximate ground speed conditions. It will be especially useful for approaches when the localizer only is used for course guidance. A best speed, power, altitude combination can be programmed which will result in a stable glide rate and altitude favorable for executing a landing if minimums exist upon breakout. Care should always be exercised so that minimum descent altitude and missed approach point are not exceeded.													
ft/NM	%	GROUND SPEED (knots)											ANGLE
		60	90	120	150	180	210	240	270	300	330	360	
270	4.44	270	410	540	630	810	950	1080	1220	1350	1490	1620	2.54
280	4.61	280	420	560	700	840	980	1120	1260	1400	1540	1680	2.64
290	4.77	290	440	580	720	870	1020	1160	1310	1450	1600	1740	2.73
300	4.94	300	450	600	750	900	1050	1200	1350	1500	1650	1800	2.83
310	5.10	310	470	620	770	930	1090	1240	1400	1550	1710	1860	2.92
320	5.27	320	480	640	800	960	1120	1280	1440	1600	1760	1920	3.01
330	5.43	330	500	660	830	990	1160	1320	1490	1650	1820	1980	3.11
340	5.60	340	510	680	850	1020	1190	1360	1530	1700	1870	2040	3.20

16.5.10. CDFA Descent Point Beyond the FAF. Approach designers normally calculate the VDA from the FAF altitude to the TCH. When a stepdown fix crosses this VDA, approach designers may instead publish the VDA from the stepdown fix altitude to the TCH. In this rare situation, the VDA appears on the instrument procedure following the associated stepdown fix as in [Figure 16.8](#). For this example, the descent angle between the FAF altitude and the stepdown fix altitude is significantly shallower than the published VDA. Pilots should, in this case, calculate a planned descent point beyond the FAF at the published VDA and clear the stepdown fix altitude using a constant descent angle. If delayed descent is recommended, Jeppesen® plates may depict the calculated descent point beyond the FAF.

Figure 16.8. CDFA Descent Point Beyond the FAF (KTLH VOR 18).

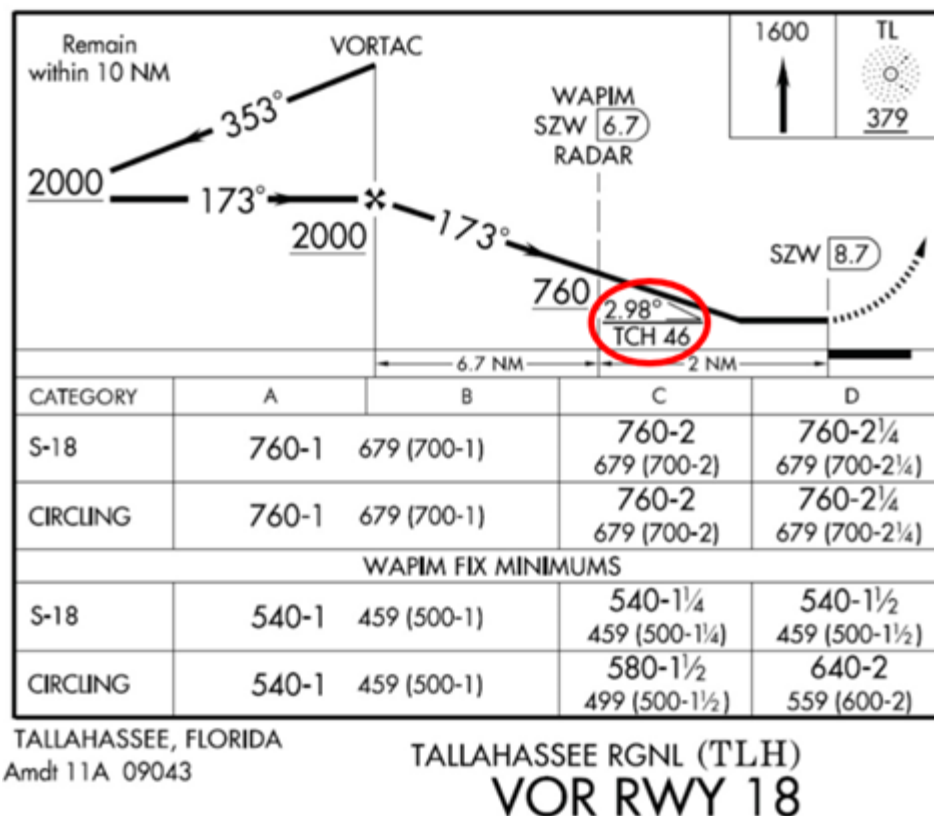

16.5.10.1. To calculate the descent point beyond the FAF, first determine the desired altitude to lose: FAF (2,000 feet) – [airport elevation (81 feet) + TCH (46 feet)] = 1,873 feet. Divide the desired altitude to lose (1,873 feet) by the descent gradient (316 feet per nautical mile). This produces a distance of 5.9 nautical miles from the runway threshold, which is a point approximately 2.8 DME beyond the FAF (Figure 16.9).

Figure 16.9. Calculating a CDFA Descent Point beyond the FAF.

$$\begin{aligned}
 &= \frac{\text{FAF} - (\text{Airport Elevation} + \text{TCH})}{\text{Descent Gradient}} \\
 &= \frac{2000\text{ft} - (81\text{ft} + 46\text{ft})}{316\text{ft}/\text{NM}} = \frac{1873\text{ft}}{316\text{ft}/\text{NM}} = 5.9\text{NM}
 \end{aligned}$$

16.6. Flying the Approach.

16.6.1. Avoid rapid descents on final by crossing the FAF at the published altitude. When a turn is required over the FAF, turn immediately and intercept the final approach course to remain within the protected airspace. Do not descend to the MDA or stepdown fix altitude until past the FAF. When the FAF is identified by the NAVAID for the approach, a straight-in approach course change of up to 30 degrees may be published. To determine the approximate initial descent rate required on final, refer to the VVI chart in the instrument procedure or use one of the formulas provided in [Attachment 2](#).

16.6.2. Variations in density altitude may cause step down altitudes to cross glideslope. Unless on radar vectors, adhere to all published step down altitudes outside the FAF. **(T-0)** If established on a precision approach, do not leave glideslope inside the FAF to adhere to non-precision approach step down altitudes.

16.6.3. Timing is required when the final approach does not terminate at a published fix. When timing is used to identify the MAP, begin timing when passing the FAF or the starting point designated in the timing block on the instrument procedure. This point is usually the FAF but it may be a fix not co-located with the FAF such as an outer marker (OM), NDB, crossing radial, or DME fix. Time and distance tables on the approach chart are based on groundspeed.

16.6.3.1. If timing is not specifically depicted on the instrument approach procedure, timing is not authorized as a means of identifying the MAP.

16.6.3.2. If both timing and another means of identifying the MAP are published (e.g., DME), timing is normally only used as a backup unless the other means of MAP identification is not operational.

16.7. Runway Environment. Aircrew will not descent below MDA, DA, or DH until sufficient visual reference with the runway environment has been established and the aircraft is in position to execute a safe landing. **(T-0)**

16.7.1. The runway environment consists of one or more of the following elements:

16.7.1.1. The runway or runway markings.

16.7.1.2. The runway end identifier lights.

16.7.1.3. The runway lights.

16.7.1.4. The visual glideslope indicator.

16.7.1.5. The threshold, threshold markings, or threshold lights.

16.7.1.6. The touchdown zone, touchdown zone markings, or touchdown zone lights.

16.7.1.7. The approach light system.

16.7.2. The pilot will not descend below 100 feet above the TDZE using the approach lights as a reference unless the red terminating bars or the red side row bars are also distinctly visible and identifiable. **(T-0)**

16.8. ILS or LOC. Required components of the ILS are the glideslope, localizer, and outer marker.

16.8.1. If the OM is inoperative or not installed, it may be replaced by DME. **Note:** [NAS Only] The OM may be replaced by another NAVAID, a crossing radial, a waypoint, or a radar fix, provided these substitutes are depicted on the approach plate or identified by NOTAM [FAA Order 6750.24E].

16.8.2. If the glideslope fails or is unavailable, the approach reverts to an approach without glidepath guidance.

16.8.3. The ILS or LOC approach must be discontinued if the localizer course becomes unreliable, or any time full-scale deflection of the CDI occurs on final approach. **(T-0)**

16.8.4. [NAS Only] [FAA Order 6750.24E] An OM or suitable substitute is only required to indicate the FAF for non-precision approach operations (e.g., LOC only). The FAF for ILS approach operations is the published glideslope intercept altitude, not the OM. Therefore, in the NAS, an OM or suitable substitute is not required for to fly an ILS approach operations.

16.8.5. Airborne marker beacon receivers that have a selective sensitivity feature should always be operated in the “low” sensitivity position.

16.8.6. If making an autopilot coupled approach or auto land operations, use the aircraft flight manual procedures for the category of ILS approach being conducted. When the ceiling is less than 800 feet or the visibility of less than 2 miles, vehicles and aircraft are not authorized in or over the ILS critical area when an arriving aircraft is between the ILS FAF and the airfield (except for aircraft that land, exit a runway, depart or execute a missed approach). When executing either an autopilot coupled approach or auto land operations and the ceiling is above 800 feet and the visibility is more than 2 miles, the pilot should advise ATC as soon as practicable but not later than the FAF. This allows time for clearance of the appropriate ILS critical area or for an advisory issuance.

16.8.6.1. If controllers advise “localizer or glideslope signal not protected,” be alert for unstable or fluctuating ILS indications that may prevent an autopilot-coupled approach.

16.8.6.2. When aircraft equipment and crew qualification permit, the localizer and glideslope may be used for autopilot operations to the points specified in FLIP for each category of ILS approach, unless a restriction is published on the approach procedure.

16.8.7. Set the published localizer front course in the course selector window prior to attempting localizer interception for ILS, LOC, and LOC Back Course (LOC BC) approaches. On a LOC BC, the term “front course” refers to the inbound course depicted on the ILS or LOC approach for the opposite runway. Follow aircraft flight manual guidance for aircraft specific procedures.

16.8.7.1. Unless the aircraft’s ILS equipment includes reverse sensing capability, when flying inbound on the back course it is necessary to steer the aircraft in the direction opposite the needle deflection when making corrections from off-course to on-course. This “fly away from the needle” is also required when flying outbound on the front course of the localizer. Do not use back course signals for approach unless a LOC BC instrument procedure is published for that particular runway and the approach is authorized by ATC.

16.8.7.2. [AIM 1-1-9] False glideslope signals may exist around the localizer back course approach which can cause the glideslope flag alarm to disappear and present unreliable glideslope indications. Disregard all glideslope signal indications when making a localizer back course approach unless a glideslope is specified on the approach and landing chart.

16.8.8. [AIM 1-1-9] Be alert when approaching the glideslope intercept. False courses and reverse sensing occur at angles considerably greater than the published glidepath. Where available, use other NAVAIDs to help identify the localizer course and glideslope intercept point.

16.8.9. Do not descend below localizer minimums if the aircraft is more than half-scale below or full scale above the glideslope. If the glideslope is recaptured to within the above tolerance, descent may be continued to the DA.

16.8.10. The middle marker (MM) may not be used as the sole means of identifying the MAP. If the MM is the only way to identify the MAP (e.g., no timing published or DME out of service), then the approach is not authorized. Although the MM cannot be the sole means, it may assist the pilot in identifying the MAP on certain localizer approaches. To determine the location of the MAP, compare the distance from the FAF to MAP adjacent to the timing block. It may not be the same point as depicted in the profile view. If the MM is received while executing such an approach, and the primary indications (e.g., DME or timing) agree, consider the aircraft to be at the MAP and take appropriate action.

16.9. RNAV (GPS) and GPS Approach Procedures. Apply the following procedures when flying RNAV (GPS) and GPS Approaches:

16.9.1. Unless circling from the approach, VNAV guidance should be followed if provided by aircraft avionics and certified for use by the MAJCOM.

16.9.2. VNAV guidance may be used to LNAV minimums; however, the aircraft must level off at the MDA or utilize a DDA if the runway environment is not in sight. **(T-0)** Due to the temperature and pressure altitude effects, USAF crews will not use VNAV guidance below any published MDA or DA. **(T-0)**


16.9.3. Do not activate the missed approach lateral navigation or turn away from the final approach course prior to the missed approach waypoint. **(T-2)**

16.10. Visual Segment. Some instrument procedures contain a published visual segment (**Figure 16.10.**). The visual segment of an instrument procedure begins at the DA or MDA and continues to the runway. The words “Fly Visual” or “Fly Visual to Airport” appear in the profile view of the instrument procedure. A dashed line in the profile view with an approximate heading and distance to the end of the runway.

16.10.1. The depicted ground track associated with the visual segment should be flown as dead reckoning course. When executing the visual segment, remain clear of clouds and proceed to the airfield maintaining visual contact with the ground.

16.10.2. Altitude on the visual segment is at the discretion of the pilot, and it is the pilot’s responsibility for obstacle clearance.

Figure 16.10. Visual Segment.

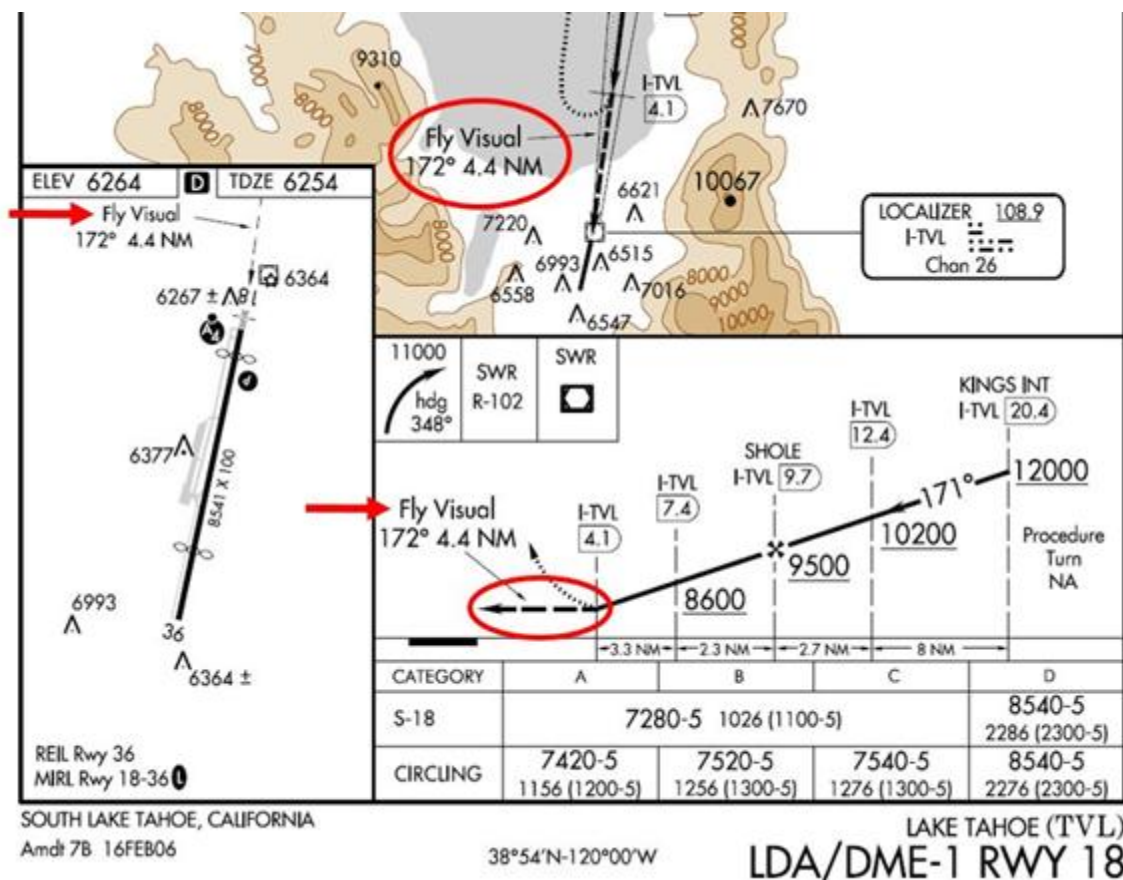

Chapter 17

SPECIAL AIRCREW AND AIRCRAFT CERTIFICATION REQUIRED APPROACHES

17.1. General. Certain instrument procedures require specific aircraft certification and additional aircrew training and certification. MAJCOMs must provide training and operational approval for each individual procedure type listed in this chapter; training and approval for one procedure type does not extend to other procedure types (e.g., operational approval for CAT II procedures does not also authorize Special Authorization CAT I procedures). Aircrews may identify these instrument procedures by a chart note:

17.1.1. “SPECIAL AIRCREW & AIRCRAFT CERTIFICATION REQUIRED,” or

17.1.2. “AUTHORIZATION REQUIRED.”

17.2. Special Authorization Category I (SA CAT I). [FAA Order 8400.13, *Procedures for the Evaluation and Approval of Facilities for Special Authorization Category I Operations and All Category II and III Operations*] Special Authorization CAT I allows a DH of 150 feet and RVR 1400 at runways with reduced lighting; a head-up display (HUD) must be used to DH ([Figure 17.1](#)). (T-0)

17.2.1. Single pilot operators are prohibited from using SA CAT I landing minimums. (T-0)

17.2.2. The runway has a landing distance of at least 5000 feet.

17.2.3. Required lighting and equipment: simplified short approach lighting system with runway alignment indicator lights (SSALR), medium intensity approach lighting system with runway alignment indicator lights (MALSR), approach lighting system with sequenced flashing lights (ALSF) -1, or ALSF-2; high intensity runway lighting (HIRL); and touchdown RVR sensor.

Figure 17.1. SA CAT I ILS Approach.



17.3. Category II (CAT II). [FAA Order 8400.13, AC 120-118, *Criteria for Approval/Authorization of All Weather Operations for Takeoff, Landing, and Rollout*] CAT II allows a DH of 100 feet and an RVR of 1200 feet; RVR may be reduced to 1000 feet with autoland or HUD to touchdown when noted on the procedure (**Figure 17.2.**).

17.3.1. Required lighting: ALSF-2; HIRL; touchdown zone (TDZ) lighting; and runway centerline lighting system (RCLS). **(T-0)**

17.3.2. CAT II ILS operations require a touchdown RVR sensor. A rollout sensor is also required for CAT II operations below RVR 1600. When the runway is in excess of 8000 feet in length, a midpoint RVR sensor is required in addition to the touchdown and rollout sensors for CAT II operations below RVR 1600. **(T-0)**

17.3.2. **(AMC)** Touchdown zone RVR must be equal to or greater than the specified minimums on the IAP. **(T-0)** Midpoint and Rollout RVR may be less than the IAP minimums if defined in applicable AFMAN 11-2MDSV3.


17.3.3. CAT II operations require an operational ATC tower; if the tower does not provide continuous service, operations are not authorized when the tower is closed. **(T-0)**

17.3.4. “RA NA” is annotated in the CAT II line of minima when radio altimeter minimums are not authorized for a CAT II approach. Only the inner marker (IM) may be used to identify the DH due to terrain, obstacles, or other local requirements that preclude the use of radio altimeter minimums. **(T-0)**

17.3.5. Only aircrew authorized for CAT II operations flying operationally certified CAT II aircraft may fly CAT II approaches. **(T-0)**

17.3.6. Only aircrew authorized for CAT II operations flying aircraft operationally certified CAT III aircraft equipped with an operable autoland or HUD approved to touchdown capability may fly CAT II approaches to RVR 1000 minimums [FAA Order 8400.13, Chapter 6] . **(T-0)**

Figure 17.2. CAT II ILS Approach.

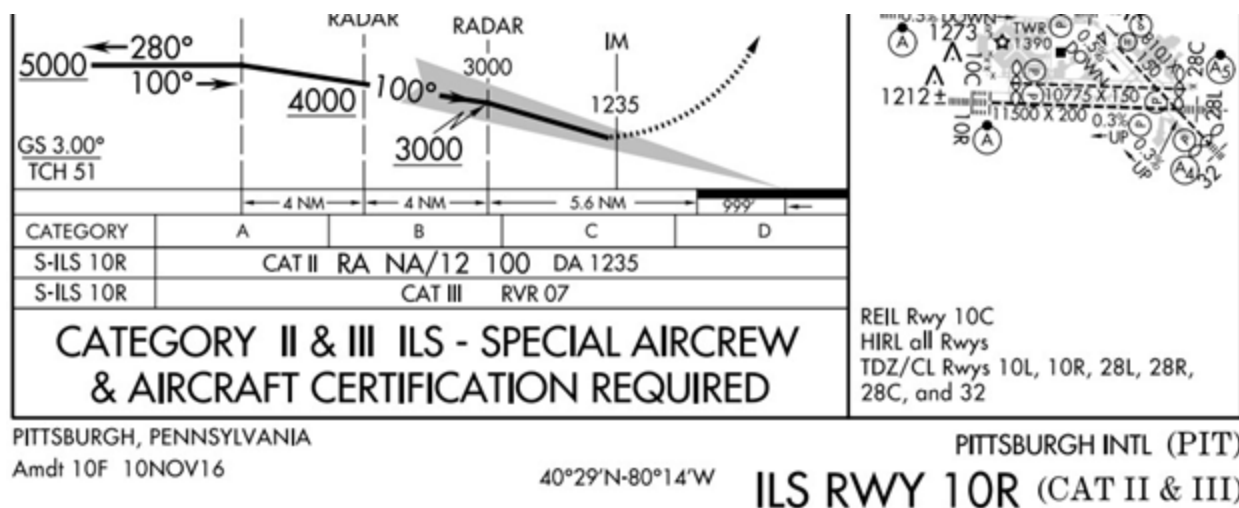

17.4. “Copter” Category II. [FAA Order 8900.1 Volume 4, *Aircraft Equipment and Operational Authorizations*] Copter ILS CAT II allows a DH of 100 feet and an RVR of 1200 feet (**Figure 17.3.**).

17.4.1. Unpublished DH reductions are not authorized. **(T-0)**

17.4.2. The required visibility may not be reduced [14 CFR Part 97.3]. **(T-0)**

17.4.3. A marker beacon receiver with aural and visual indications of the IM or a functioning radio altimeter is required for Copter CAT II ILS operations with DH below 150 feet. **(T-0)**

Figure 17.3. COPTER CAT II ILS Approach.



17.5. Special Authorization Category II (SA CAT II) with Reduced Lighting. [FAA Order 8400.13] Special Authorization CAT II allows a DH of 100 feet and an RVR of 1200 feet; autoland or HUD must be used to touchdown (**Figure 17.4.**) **(T-0)**

17.5.1. SA CAT II approaches require a runway with landing distance of at least 6000 feet. **(T-0)**

17.5.2. SA CAT II approaches require the following lighting: SSALR, MALSR (with threshold bar that is separate from runway end lights), ALSF-1, or ALSF-2; and HIRL. **(T-0)**

17.5.2.1. CAT II and III operations (including SA CAT II) may continue if an installed ALSF-2 is operating as a SSALR or short approach lighting system (SALS), or MALSR is operating as a medium intensity approach lighting system (MALS) [FAA Order 6750.24E].

17.5.2.2. MAJCOMs may authorize SA CAT II aircrew to continue CAT II operations if the installed TDZ or RCLS fail [FAA Order 6750.24E].


17.5.3. SA CAT II operations at RVR 1600 require a touchdown RVR sensor. **(T-0)** SA CAT II operations at RVR 1200 require a minimum of two RVR sensors; one RVR sensor must be for the touchdown zone. **(T-0)**

17.5.4. SA CAT II operations require an operational ATC tower; if the tower does not provide continuous service, operations are not authorized when the tower is closed. **(T-0)**

17.5.5. “RA NA” is annotated in the SA CAT II line of minima when radio altimeter minimums are not authorized for a SA CAT II approach. Only the IM may be used to identify the DH due to terrain, obstacles, or other local requirements that preclude the use of radio altimeter minimums. **(T-0)**

17.5.6. Only aircrew authorized for CAT II operations flying operationally certified CAT III aircraft equipped with an operable autoland or HUD approved to touchdown capability may fly SA CAT II approaches. (T-0)

Figure 17.4. SA CAT II ILS Approach.

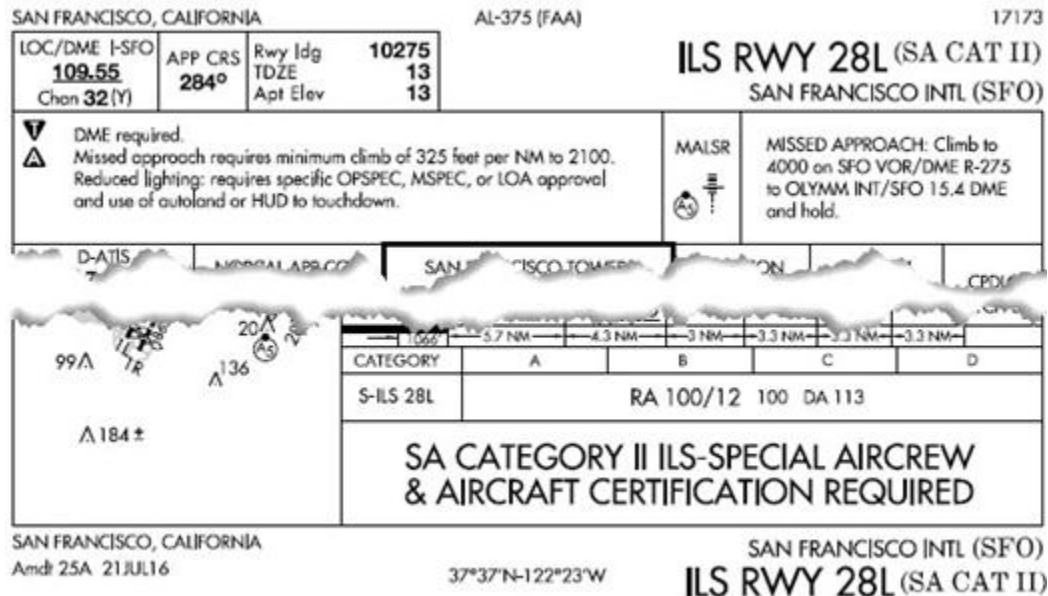

17.6. Category III (CAT III). [FAA Order 8400.13] CAT III operations allows a DH below 100 feet or no DH and a visibility of RVR 300 (Figure 17.5).

17.6.1. CAT III operations are separated into three subcategories [AIM 1-1-9]:

17.6.1.1. CAT IIIa does not have a DH or DH below 100 feet; RVR not less than 700 feet.


17.6.1.2. CAT IIIb does not have a DH or DH below 50 feet; RVR less than 700 feet but not less than 150 feet or [NAS Only] 300 feet.

17.6.1.3. CAT IIIc does not have a DH and no RVR limitation. CAT IIIc operations are currently not authorized [FAA Order 8900.1 Volume 4, Chapter 2]. (T-0)

17.6.1.4. Alert Height is 100 feet above the highest elevation in the touchdown zone, above which a CAT III approach would be discontinued and a missed approach initiated if a failure occurred in one of the required redundant operational systems in the airplane or in the relevant ground equipment. Below this height, the approach, flare, touchdown, and rollout may be safely accomplished following any individual failure in the associated CAT III systems.

17.6.2. Reference DH and Alert Height by AGL measured on the radar altimeter.

Figure 17.5. CAT III ILS Approach.

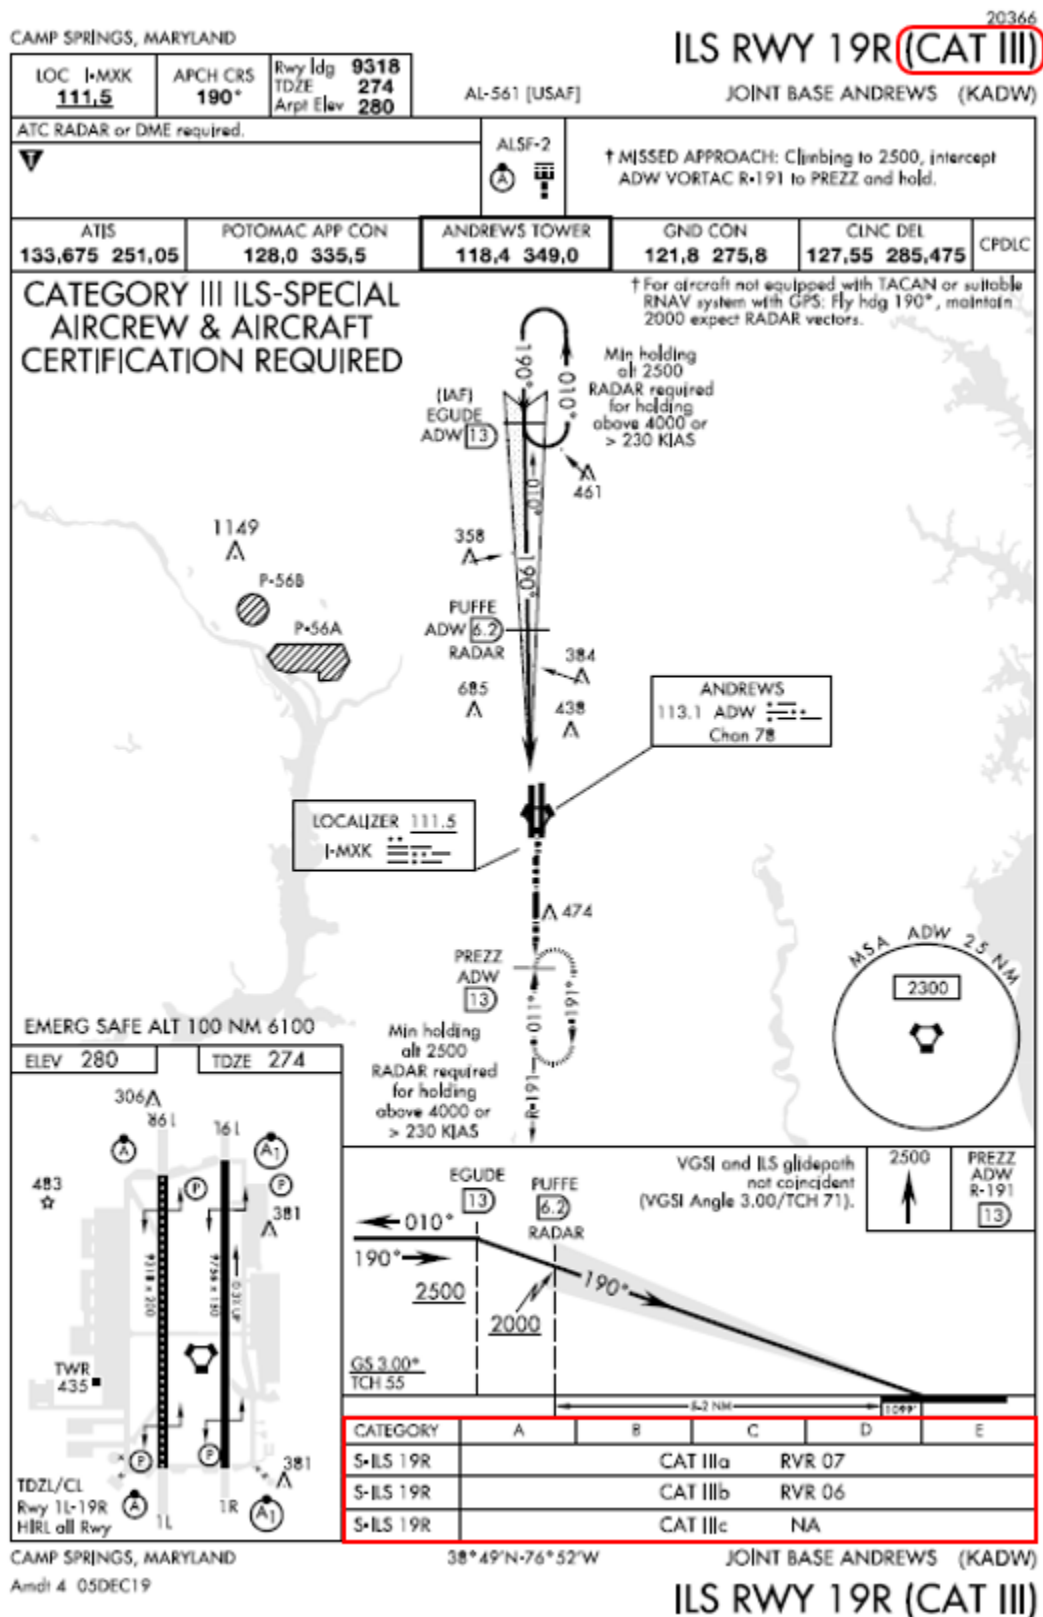


17.7. Simultaneous Close Parallel ILS Precision Runway Monitor (PRM) / RNAV PRM / GLS PRM Approaches. [AIM 5-4-16] The term “PRM” alerts pilots that specific airborne equipment, training, and procedures are required for the approach. MAJCOM training and certification is required prior to participation in ILS PRM, RNAV PRM, or GLS PRM approaches. **(T-0)**

17.8. Simultaneous Offset Instrument Approaches (SOIA). [AIM 5-4-16] The SOIA procedure utilizes an ILS PRM approach to one runway and an offset localizer type directional aid (LDA) PRM approach with glideslope to the adjacent runway. MAJCOM training and certification is required prior to participation in SOIA. **(T-1)**

17.9. RNP Authorization Required (AR) Approach Procedures. [AC 90-101; AIM 5-4-18] Each published line of minima has an associated RNP value defining the lateral and vertical performance requirements. A minimum RNP type is documented as part of the RNP AR authorization and may vary depending on aircraft configuration or operational procedures (e.g., GPS inoperative, use of flight director vice autopilot). Procedures may require RF capability or missed approach instructions with RNP values less than 1.0. **(Figure 17.6.)**

Figure 17.6. RNP Values.

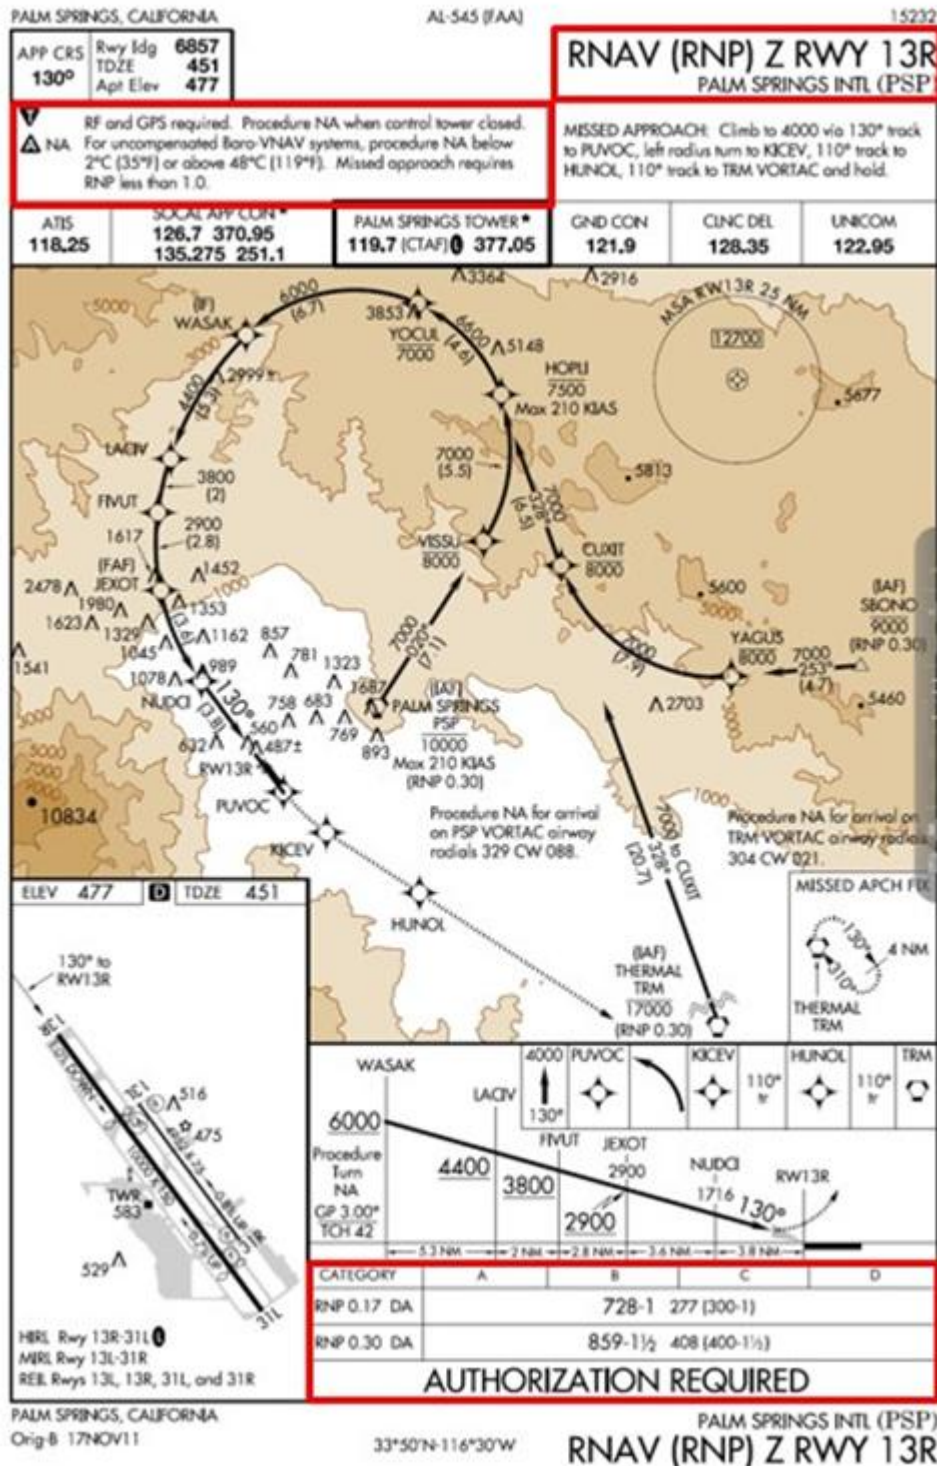

17.9.1. RNP AR approaches are developed based on standard approach speeds and a 200 foot per nautical mile climb gradient in the missed approach. Any exceptions to these standards are indicated on the approach procedure (Figure 17.7.).

ANYTOWN, USA

APP CRS	Rwy ldg	8000
281°	THRE	26
	Apt Elev	30

RNAV (RNP) Z RWY 28R

ANYTOWN (ANY)

GPS required. RF required. Missed approach requires RNP less than 1.0. For uncompensated Baro-VNAV systems, Procedure NA below +5°C (23°F) or above 40°C (104°F).

- Requires Missed Approach Climb Gradient of 380 ft/NM to 4000'.
- Requires Missed Approach Climb Gradient of 425 ft/NM to 4000'.
- Requires Missed Approach Climb Gradient of 360 ft/NM to 4000'.

AIIS

ARR 128,35 269,9

DEP 120,625 239,25

ANYTOWN APP CON

124,35 299,2

ANYTOWN TOWER

Rwys 10L-28R 118,7 257,8

Rwys 3-21, 10R-28L 123,775 251,125

GND CON

121,9 348,6

CLNC DEL

120,125 318,1

CATEGORY	A	B	C	D
• RNP 0.15		276/40	250 (300-1)	
•• RNP 0.3		346-1	320 (400-1)	
••• RNP 0.15		426-1	400 (500-1)	
RNP 0.3		486-1 1/4	460 (500-1 1/4)	

ANYTOWN, USA

Orig 00000

ANYTOWN (ANY)

RNAV (RNP) Z RWY 28R

17.9.2. RNP AR approach minimums may be dependent on aircraft size (**Figure 17.8.**). Large aircraft may require higher minimums due to gear height or wingspan. Approach procedure charts are annotated with applicable aircraft size restrictions.

GUNNISON, COLORADO

APP CRS 242°	Rwy Idg TDZE Apt Elev	9397 7680 7680

AL-517 (FAA) **19003**

RNAV (RNP) RWY 24

GUNNISON-CRESTED BUTTE RGNL (GUC)

V RF and GPS required.
When local altimeter setting not received, procedure NA.

-28°C

Procedure NA for aircraft with wingspan greater than 136 feet.

For uncompensated Baro-VNAV systems, procedure NA below -29°C (-20°F) or above 24°C (75°F).

When VGSi inoperative, procedure NA at night.

Missed approach requires minimum climb of 425 feet per NM to 9000.

MISSED APPROACH: Climb to 14000 on track 242° to KEEZR, and left turn to NUWZO, and on track 330° to HBU VOR/DME and hold.

AWOS-3PT 135.075	DENVER CENTER 125.35 354.05	UNICOM 122.7 (CTAF) 0

ELEV 7680 **D** **TDZE 7680**

Procedure NA for arrivals on HBU VOR/DME airway radius 0.50 CW 190 and for arrivals at POWES via V95-421 southbound.

MISSED APCH FIX

KEEZR → BLUE MESA HBU → NUWZO

Angles: 242°, 17°, 335°, 30°, 165°

Distances: 15.9, 8 NM, 3.0, 1.5

HBL Rwy 6-24
REIL Rwy 24

Vertical scale: 14000 ft 242°

Horizontal scale: 1.5 NM, 1.2 NM, 1.9 NM, 1.9 NM, 3.4 NM

CATEGORY	A	B	C	D
RNP 0.10 DA	7989-1 309 (400-1)			NA

AUTHORIZATION REQUIRED


GUNNISON, COLORADO
Orig-A 30JUN11

GUNNISON-CRESTED BUTTE RGNL (GUC)
RNAV (RNP) RWY 24

17.9.3. RNP stand-alone approach operations provide access to runways regardless of the ground-based NAVAID infrastructure and designed to avoid obstacles, terrain, airspace, or resolve environmental constraints.


17.9.4. RNP parallel approach operations may be used for parallel approaches where the runway separation is adequate (**Figure 17.9.**). Parallel approach procedures may be used either simultaneously or as stand-alone operations. They may be part of either independent or dependent operations based on ATC's ability to provide radar monitoring.

Figure 17.9. RNP Parallel Approach Operations.

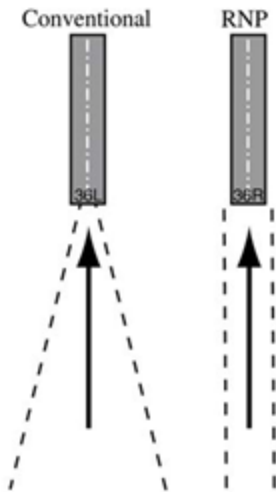


17.9.5. RNP parallel approach runway transition approaches begin as a parallel IFR approach operation using simultaneous runway procedures (**Figure 17.10.**). Visual separation standards are used after the FAF to permit aircraft to transition in visual conditions along a predefined lateral and vertical path to align with the runway centerline.

Figure 17.10. RNP Parallel Approach Runway Transition Operations.

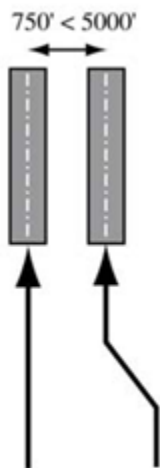

17.9.6. RNP converging runway operations provide a precise curved missed approach path that conforms to aircraft separation minimums for simultaneous operations at airfields where runways converge (**Figure 17.11.**). Dual runway operations may continue to lower ceiling and visibility values than currently available by flying the curved RNP missed approach path.

Figure 17.11. RNP Converging Runway Operations.

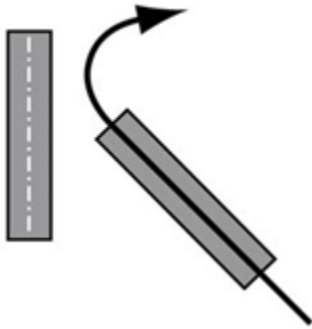

17.10. (Added-AMC) True North Approaches.

17.10.1. **(Added-AMC)** Aircraft capable of navigating via reference to True North meet the Special Aircraft Certification requirement.

17.10.2. **(Added-AMC)** Aircrew must have specific procedures within their MDS-specific technical orders or operations procedures (AFMAN 11-2MDSV3).

Chapter 18

LANDING

18.1. General. The transition from instrument to visual flight conditions varies with each approach. Pilots seldom experience a distinct transition from instrument to visual conditions during an approach in obscured weather.

18.1.1. Aircraft with retractable landing gear will report their gear is down prior to crossing the threshold. **(T-3) Note:** This is an advisory call to ATC and no response from ATC is necessary.

18.1.2. Aircraft with multiple crew positions may omit the call to ATC if the crew has independently verified the landing gear is down prior to crossing the threshold.

18.2. Land and Hold Short Operations (LAHSO). [FAA Order 7110.118B, *Land and Hold Short Operations (LAHSO)*] The PIC is the final authority whether to take-off, land, or continue a touch-and-go when LAHSO is in effect. The PIC of fixed-wing aircraft may not accept a LAHSO clearance without MAJCOM training. **(T-1) Exception:** PIC may passively participate in LAHSO (land or takeoff when another aircraft has been given a LAHSO clearance).

18.3. Reduced Same Runway Separation (RSRS). MAJCOMs may approve non-formation RSRS operations. Host ATC and user units will publish RSRS procedures. **(T-2)** MAJCOM approval shall include MDS-specific RSRS criteria governing similar and dissimilar landing, touch-and-go or low approach operations.

18.4. Helicopter Landing Areas. Helicopters may operate to and from other than established landing areas (e.g., fields, highways, parks) if conducting an operational or training mission. For training missions, permission must be received to use the area and safeguards must exist to permit operations without hazard to persons or property. **(T-3)**

18.5. Landing With Hot Armament. MAJCOMs will publish procedures for aircraft operations with hot armament.

18.6. Touch-and-Go Landings. MAJCOMs will publish guidance addressing operating conditions and qualifications.

18.7. Turns after Touch-and-Go or Low Approach. The minimum turn altitude after takeoff is 400 feet above the DER elevation, unless required by a published procedure or ATC. **(T-0) Exception:** The PIC may turn at a safe altitude when executing closed patterns or visual patterns.

18.8. Traffic Pattern. [14 CFR 91.126, ICAO Annex 2] Fly traffic patterns in accordance with control tower instructions, local flying procedures, or FLIP. **(T-1)**

18.8.1. At non-towered airports or part-time-towered airports when the control tower is not operating, pilots should make all turns to the left unless the airport displays approved light signals, visual markings, or FLIP indicates right turns. **Note:** This includes circling approaches to a left base, unless the approach procedure explicitly states otherwise.

18.8.2. [Helicopter only] Avoid the flow of fixed-wing aircraft unless operating at a compatible airspeed.

18.9. Illusions and Vision in Flight. [AIM 8-1-5; AIM 8-1-6] There are many phenomena, such as rain, smoke, snow, and haze, which may restrict visibility. Knowledge of these various factors aids in making a safe, smooth transition from instrument to visual flight. Refer to AFH 11-203V1 for a detailed description of weather conditions.

18.9.1. Approach lights, runway markings, runway lights, and contrasts are the primary sources of visual cues. Become familiar with the lighting and marking patterns at the destination and correlate them with the weather to prepare for the transition to visual flight. In minimum visibility conditions, the visual cues and references for flare and runway alignment are extremely limited compared to the normal references used during a visual approach. Therefore, the aircraft's projected runway contact point may not be visible until considerably below published minimums.

18.9.2. When flying a straight-in approach in VMC, the pilot has almost unlimited peripheral visual cues available for depth perception, vertical positioning, and motion sensing. Even so, varying length and width of unfamiliar runways can lead to erroneous perception of aircraft height above the runway surface. A relatively wide runway may give the illusion that the aircraft is below a normal glidepath; conversely, a relatively narrow runway may give the illusion of being high. With an awareness of these illusions under unlimited visibility conditions, it becomes easy to appreciate a pilot's challenges in a landing situation in which the approach lights and runway lights are the only visual cues available.

18.9.3. Instrument approach lights do not provide adequate vertical guidance to the pilot during low visibility instrument approaches. Available visual cues may not allow the pilot to adequately determine vertical position or vertical motion.

18.9.3.1. Studies have shown that the sudden appearance of runway lights when the aircraft is at or near minimums in conditions of limited visibility often gives the pilot the illusion of being high. They have also shown that when the approach lights become visible, pilots tend to abandon the established glidepath, ignore flight instruments, and instead rely on the poor visual cues.

18.9.3.2. When flying into ground fog from above, if the pilot initially sees the runway or approach lights, these cues tend to disappear entering the fog bank. The loss of these visual cues can induce the illusion or sensation of climbing. Limited visual cues can cause the illusion that the aircraft is above normal glidepath and potentially result in a pushover reaction (i.e., "duck-under"), an increased rate of descent, and a short or hard landing.

18.9.4. In limited visibility, approach lights may not be seen until the aircraft is close to the ground which may delay the normal transition to landing. The delay in reducing the descent rate when the aircraft is very close to the ground may create a situation in which sufficient lift cannot be generated to break the rate of descent when the pilot realizes the aircraft is going to land short.

18.9.4.1. A method to prevent a high rate of descent and a short or hard landing is to maintain composite cross-check using external visual cues, the glideslope indicator or flight director, VVI, and attitude indicator (AI) indications.

18.9.4.2. Another potential duck-under situation occurs when the pilot attempts to land within the first 500 to 1,000 feet of the runway after breaking out of an overcast condition. In this case, the pilot may attempt to establish a visual profile similar to the one used most often. Establishing the visual profile usually involves reducing power and changing attitude to aim the aircraft at some spot short of the end of the runway. High sink rates and poor thrust/lift relationships can develop quickly which may cause undershoots or hard landings. Landing decisions should be based upon the normal touchdown point from the instrument approach. If stopping distances are in doubt, proceed to an alternate.

18.9.4.3. At 100-foot elevation and a 3 degrees glideslope, an aircraft is approximately 1,900 feet from the runway point of intercept. If the aircraft's final approach speed is 130 knots (215 feet per second), the pilot has about 9 seconds to bring visual cues into the cross-check, ascertain lateral and vertical position, determine a visual flight path, and establish appropriate corrections. More than likely, 3 to 4 seconds is spent integrating visual cues before making a necessary control input. By this time, the aircraft is 600 to 800 feet closer to the runway point of intercept, 40 to 60 feet lower, and possibly well into the flare. Therefore, it is essential to be prepared to use visual cues properly and with discretion during the final stages of a low visibility approach. Prior to total reliance on visual information, confirm that the instrument indications support the visual perspective.

18.10. Approach Lighting Systems (ALS). [FLIP FIH] Approach lighting systems are visual aids used during instrument conditions to supplement the guidance information of electronic aids such as VOR, TACAN, PAR, and ILS. The approach lights are designated high intensity (the basic type of installation) or medium intensity. Most runway and approach light systems allow the tower controller to adjust the lamp brightness for different visibility conditions, or at a pilot's request. The extreme brilliance of high intensity lights penetrates fog, smoke, precipitation, etc., but may cause excessive glare under some conditions. The approach lighting systems currently in use appear in the FIH.

18.11. Runway Lighting Systems. [AFMAN 11-218] Basic runway lighting systems are used to aid the pilot in defining the usable landing area of the runway. These are runway edge lighting system, runway centerline lighting system and touchdown zone lights.

18.12. Runway Markings. [AFMAN 11-218] Runway markings are designed to make the landing area more conspicuous and to add a third dimension for night and low visibility operations.

18.13. Circling Approaches. [AIM 5-4-20; ICAO Doc 8168 Volume 1] Visual maneuvering (e.g., "circling") is the term used to describe the phase of flight after an instrument approach has been completed. It brings the aircraft into position for landing on a runway which is not suitably located for straight-in approach (e.g., one where the criteria for alignment or descent gradient cannot be met). A circling approach is a visual flight maneuver conducted under IFR. Each circling situation is different due to variables such as runway layout, final approach track, wind velocity, and meteorological conditions.


18.13.1. Pilots will not circle from a GLS, an ILS without a localizer line of minima, or an RNAV (GPS) approach without an LNAV line of minima. **(T-0)** Pilots will not circle from an approach without a published circling line of minima. **(T-0)**

18.13.2. State the aircraft category when requesting circling MDA from the controller prior to circling from an airport surveillance radar (ASR) approach.

18.13.3. The circling minima listed on instrument procedures apply to all approach types on the instrument procedure (e.g., ILS or LOC, VOR or TACAN). If planning to circle from an approach with vertical guidance, pilots must ensure the aircraft is within the appropriate circling radius for the aircraft category and above the circling MDA before abandoning the precision glideslope. **(T-0)**

18.14. Circling Protected Area. [AIM 5-4-20; ICAO Doc 8168 Volume 2] Circling approach protected areas are defined by the tangential connection of arcs drawn from each runway end as shown in [Figure 18.1](#). Obstruction clearance areas (e.g., “protected airspace”) are determined by aircraft category. If it is necessary to maneuver at speeds in excess of the upper limit of the speed range authorized, use the landing minima for the category appropriate to the maneuvering speed. Pilots must ensure they remain within the required obstacle clearance radius and maintain situational awareness. **(T-0)** If there is any doubt, accomplish the missed approach.

Figure 18.1. Circling Approach Area.

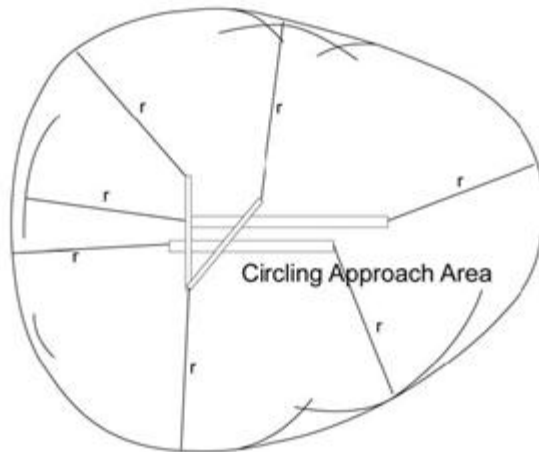


18.14.1. [NAS Only] Prior to late 2012, circling approach protected areas used fixed-radius distances, dependent on aircraft category, as shown in [Table 18.1](#). These approaches can be identified by the absence of the “negative C” symbol on the circling line of minima.

Table 18.1. U.S. TERPS Standard Circling Criteria.

Circling MDA (feet MSL)	CAT A	CAT B	CAT C	CAT D	CAT E
All Altitudes	1.3	1.5	1.7	2.3	4.5
Note: Distances are in nautical miles					

18.14.2. After 2012, TERPS procedure designers began designing circling approach protected areas based on a radius distance dependent on the aircraft category and the altitude of the circling MDA, which accounts for the true airspeed increase with altitude. The approaches utilizing the expanded circling approach areas can be identified by the presence of the “negative C” symbol on the circling line of minima ([Figure 18.2](#) and [Table 18.2](#)).

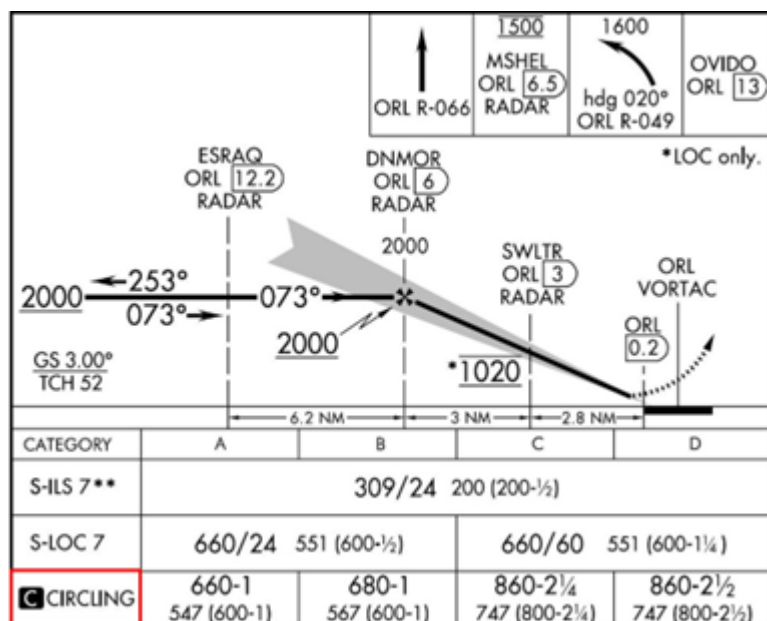Figure 18.2. Expanded Circling Area Annotation.**Table 18.2. U.S. TERPS Expanded Circling Approach Maneuvering Airspace.**

Circling MDA (feet MSL)	CAT A	CAT B	CAT C	CAT D	CAT E
1000 or less	1.3	1.7	2.7	3.6	4.5
1001 – 3000	1.3	1.8	2.8	3.7	4.6
3001 – 5000	1.3	1.8	2.9	3.8	4.8
5001 – 7000	1.3	1.9	3.0	4.0	5.3
7001 – 9000	1.4	2.0	3.2	4.2	5.3
9001 and above	1.4	2.1	3.3	4.4	5.5
Note: Distances are in nautical miles					

18.14.3. [ICAO] Circling area radii are in accordance with [Table 18.3](#). ICAO circling bank angle is 20 degrees average achieved or 3 degrees per second, whichever requires less bank.

Table 18.3. PANS-OPS Circling Area Radii.


	CAT A	CAT B	CAT C	CAT D	CAT E
Maximum Speed (KIAS)	100	135	180	205	240
Obstruction Clearance	90 meters (295 feet)		120 meters (394 feet)		150 meters (492 feet)
Circling MDA (feet MSL)	Circling Area Radii in Nautical Miles				
1000 or less	1.6	2.5	4.1	5.1	6.7
1001 – 3000	1.6	2.6	4.2	5.2	6.9
3001 – 5000	1.7	2.7	4.3	5.4	7.0
5001 – 7000	1.7	2.8	4.5	5.6	7.4
7001 – 9000	1.8	2.9	4.7	5.9	7.8
9001 and above	1.9	3.1	4.9	6.2	8.2

18.14.4. There is no secondary obstacle clearance area for circling maneuvers. Certain sectors may be excluded from consideration where prominent obstacles exist. In this case, a note is provided excluding this sector from use during the circling maneuver.

18.14.5. The maximum speed for circling is in accordance with [Table 18.3](#) [NAS Only] The maximum speed for circling is the aircraft category speed for the instrument procedure flown.

18.14.6. If the controller has a requirement to specify the direction of the circling maneuver in relation to the airfield or runway, the controller issues instructions in the following manner: “Circle west of the airport for a right base to runway one eight.” ATC should not issue clearances such as “extend downwind leg” that take the aircraft out of the protected area.

18.14.7. There may be situations when a circling approach is required but no ceiling is published. In this case, the required ceiling is the HAA plus 100 feet and rounded up to the next one hundred foot value. For example, if the HAA is 757 feet, add 100 feet to get 857 feet and then round up to the nearest one hundred foot value, which would be 900 feet.

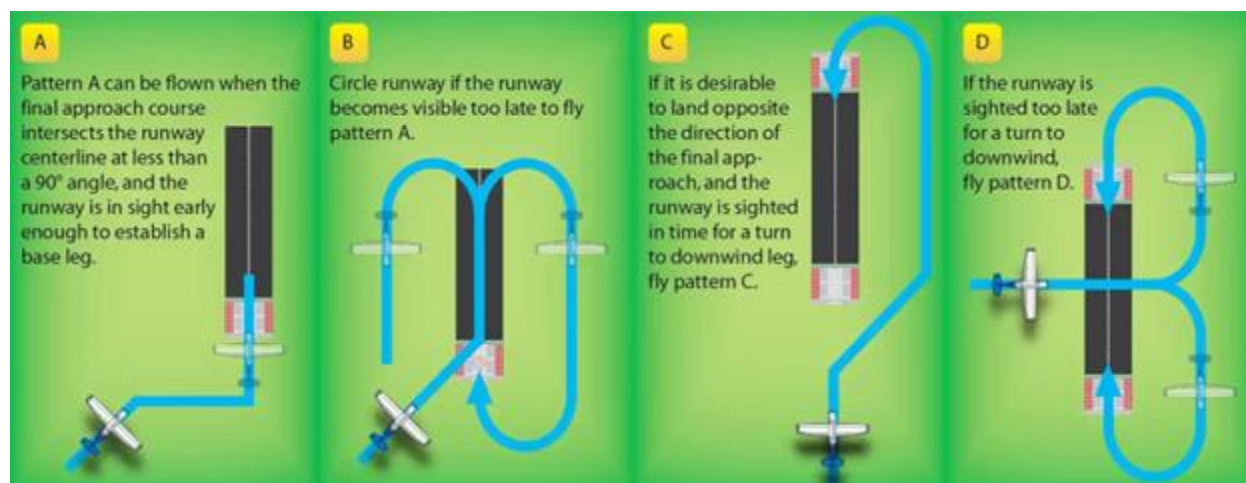Figure 18.3. Circling Maneuver Examples.

18.15. Accomplishing the Circling Maneuver. Maneuver the shortest path to the base or downwind leg, as appropriate, considering existing weather conditions ([Figure 18.3](#)). There is no restriction from passing over the airfield or other runways.

18.15.1. Make either left or right turns to final unless directed by the controlling agency to turn in a specific direction or limited by published restrictions. Circling maneuvers may be made while VFR or other flying operations are in progress at the airfield.

18.15.2. At non-towered airfields consider over flying the airfield to observe current wind and other traffic which may be on the runway or flying near the airfield.

18.15.3. Do not descend below circling MDA until the pilot is able to place the aircraft on a normal glidepath to the landing runway and execute a safe landing. The common tendency is to maneuver too close to the runway at altitudes lower than normal VFR pattern altitude due to using the same visual cues as normal VFR pattern altitudes. Select a pattern that displaces the aircraft far enough from the runway for a turn to final without overbanking or overshooting.


18.16. [ICAO] Visual Maneuver Using a Prescribed Track. [ICAO Doc 8168 Volume 1, Part 4, Section 7] An ICAO State may prescribe a specific track for visual maneuvering in addition to the circling area in those locations where clearly defined visual features permit and if it is operationally desirable. Flight crews need to be familiar with the terrain and visual cues to be used for this procedure. **Note:** Navigation is primarily by visual reference and any radio navigation information presented is advisory only and the missed approach for the normal instrument procedures applies.

18.16.1. The direction and length of each segment are defined, if a speed restriction is prescribed, it is published on the chart. The length of the final segment is based on an allowance of 30 seconds of flight before the threshold. When a minimum altitude or height is specified at the beginning of a segment, the length of the final segment is adjusted, if necessary considering the descent gradient or angle.

18.16.2. The protected area is based on a corridor with a constant width, centered on the nominal track. The corridor starts at the “divergence” point and follows the track, including a go-around for a second visual maneuvering with prescribed track ([Table 18.4](#) and [Figure 18.4](#)).

Table 18.4. Semi-Width of the Corridor.

Semi-Width of the Corridor (Aircraft Category)					
<i>Meters</i>	A	B	C	D	E
Feet	1,400	1,500	1,800	2,100	2,600
	4,593	4,921	5,905	6,890	8,530

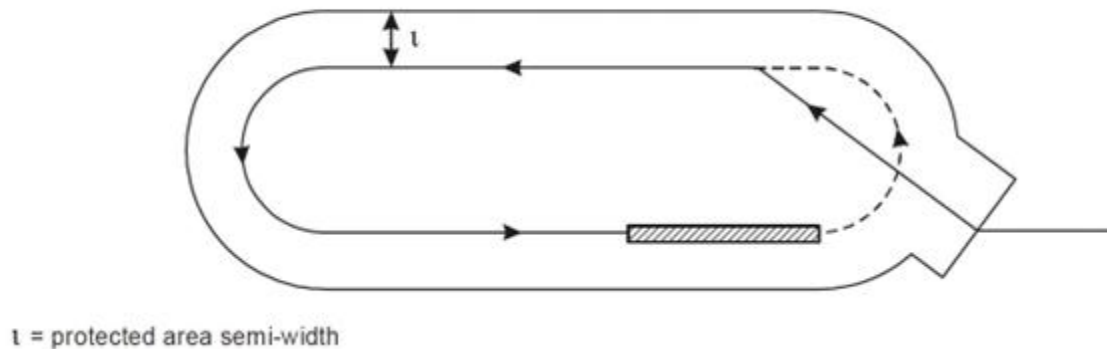Figure 18.4. Visual Maneuver Using a Prescribed Track Protected Area.


18.17. Side-Step Maneuver. [AIM 5-4-19] ATC may authorize an instrument procedure which serves either one of parallel runways that are separated by 1,200 feet or less, followed by a straight-in landing on the adjacent runway where side-step minimums are published (**Figure 18.5**). Aircraft executing a side-step maneuver are cleared for a specified non-precision approach and landing on the adjacent parallel runway. For example “Cleared ILS runway seven left approach, side-step to runway seven right.”

18.17.1. Pilots will not side-step without a published sidestep line of minima. **(T-0)**

18.17.2. Pilots are expected to commence the side-step maneuver as soon as possible after the runway or runway environment is in sight. Typically this occurs inside the FAF.

18.17.3. Side-step minimums are flown to a MDA regardless of the approach authorized.

18.17.4. Follow the missed approach specified for the approach procedure just flown unless otherwise directed by ATC if visual reference is lost during the maneuver. An initial climbing turn toward the landing runway ensures that the aircraft remains within the obstruction clearance area.

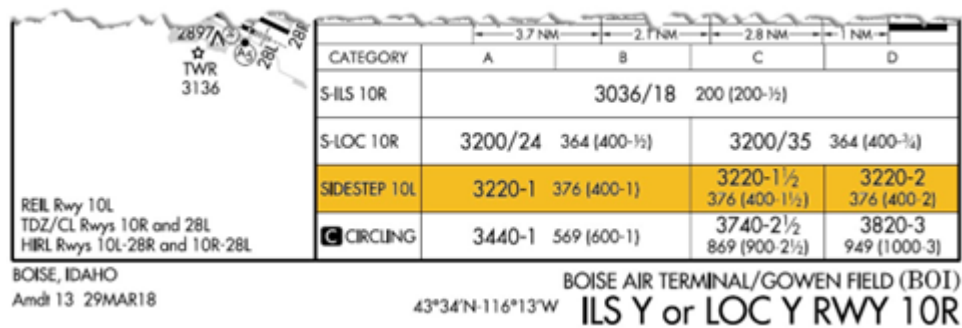Figure 18.5. Published Side-Step Minimums.

18.18. UAS Automatic Landing. MAJCOMs will publish MDS-specific procedures for UAS with automatic landing capabilities. Guidance will at a minimum contain: normal approach and landing procedures, weather minimums, and abort procedures.

Chapter 19

MISSED APPROACH

19.1. General. When a landing cannot be accomplished, advise ATC. Upon reaching the missed approach point, the pilot must comply with the missed approach instructions for the procedure being used unless an alternate missed approach procedure is specified by ATC. References for this chapter are 14 CFR 91.175, AIM 5-4-21 and 5-5-5, FAA-H-8083-16 Chapter 4, ICAO Doc 8168 Volume 1 Part 1 Section 4 Chapter 6, unless otherwise noted.

19.1. (AMC) General. Any aircrew member, upon identifying a condition necessitating a go-around will state, “Go-around,” followed by a concise description of the situation. **(T-2)** The PIC is the final authority as to whether a go-around will be accomplished, however a go-around call by another aircrew member should be honored unless the PIC identifies a clear safety-of-flight reason a go-around should not be accomplished. **Note:** Good judgment dictates whether a go-around must be accomplished. An early decision to execute a go-around is often the best course of action, especially when flying in poor weather conditions, complex flying environments, and/or in the vicinity of hazardous terrain.

19.2. Missed Approach. Fly the missed approach instructions for the procedure being flown or ATC-assigned alternate missed approach instructions. **(T-0)** The PIC must ensure that the aircraft has climbed to a safe altitude prior to proceeding off the published missed approach. **(T-0)**

19.2.1. When the missed approach is initiated prior to the MAP, the pilot will, unless otherwise cleared by ATC, fly the instrument procedure as specified on the approach plate, including altitude restrictions, to the MAP at or above the MDA, DA, or DH before executing the missed approach instructions. **(T-0)**

19.2.2. Any turns on the missed approach will not begin until the aircraft reaches the MAP; likewise, if the aircraft reaches the MAP before descending to the MDA, the missed approach will be initiated at the MAP. **(T-0)**

19.2.3. Ensure the aircraft can meet or exceed 200 feet per nautical mile or the published climb gradient, whichever is higher, to an appropriate IFR altitude whichever ensures obstacle clearance with all engines operating. **(T-1) Note:** or meet 400 feet per nautical mile for “Copter Only” approaches. **(T-0)**

19.3. ICAO Bank Angle. [ICAO Doc 8168 Volume 1, Table I-2-3-1] ICAO missed approach bank angle is 15 degrees average achieved or 3 degrees per second, whichever requires lesser bank.

19.4. Missed Approach Instructions. A clearance for an approach includes a clearance to fly the published missed approach on the instrument procedure, unless otherwise instructed by ATC.

19.4.1. Pilots must comply with the missed approach instructions for the procedure being flown or ATC-issued alternate missed approach instructions. **(T-0)**

19.4.2. Pilots must ensure that they have climbed to a safe altitude prior to proceeding off the published missed approach. **(T-0)**

19.4.3. Abandoning the missed approach procedure prior to reaching the published altitude may not provide adequate terrain clearance. An additional climb may be required after reaching the holding pattern before proceeding back to the IAF or to an alternate.

19.5. ATC Notification. [AIM 5-4-7] When executing a missed approach (e.g., when cleared to land and subsequently execute a missed approach or upon reaching the MAP and unable to continue) the pilot will notify ATC as soon as possible. **(T-0)** Request follow-on action clearance as time permits (e.g., clearance to an alternate airfield, another approach, or holding).

19.6. Missed Approach Airspeed. Comply with any published speed restrictions on the instrument procedure. The maximum ICAO missed approach speeds are shown in [Table 19.1](#) [ICAO Doc 8168 Volume 1].

Table 19.1. ICAO Maximum Missed Approach Speed.

Aircraft Category	Maximum Speed for MAP (knots) Intermediate	Maximum Speed for MAP (knots) Final
A ^{1,2}	100	110
B	130	150
C	160	240
D	185	265
E	230	275
H ³	90	90
CAT H (PinS)	70 or 90	70 or 90
CAT H (PinS) procedures based on basic GNSS may be designed using maximum speeds of 90 KIAS or 70 KIAS depending on operational need.		
Notes: 1) The minimum final approach speed considered for a CAT A aircraft is 70 knots. This is only critical when the missed approach point is specified by a distance from the FAF. In these cases, a slower speed when combined with a tailwind may cause the helicopter to reach the start of climb after the point calculated for CAT A aircraft. This reduces the obstacle clearance in the missed approach phase. 2) Conversely, a slower speed combined with a headwind could cause the helicopter to reach the missed approach point and any subsequent turn altitude before the point calculated for CAT A aircraft, and hence depart outside the protected area. 3) Therefore, for helicopters, speed should be reduced below 70 knots only after the visual references necessary for landing have been acquired and the decision has been made that an instrument missed approach procedure will not be departed.		

19.7. Missed Approach Phases. [ICAO Doc 8168 Volume 2].

19.7.1. The initial phase begins at the MAP and ends at the start of climb. This phase requires concentrated attention of the pilot on establishing the climb and the changes in airplane configuration. It is assumed that guidance equipment is not extensively utilized and no turns are specified in this phase.

19.7.2. The intermediate phase extends from the start of climb. The climb is continued, normally straight ahead. It extends to the point where 50 meters (164 feet) (Cat H, 40 m (132 feet)) obstacle clearance is obtained and can be maintained. The intermediate missed approach track may be changed from the initial phase by a maximum of 15 degrees. During this phase it is assumed that the aircraft begins track corrections.

19.7.3. The final phase begins at the point where 50 meters (164 feet) (Cat H, 40 m (132 feet)) obstacle clearance is first obtained and can be maintained. It extends to the point where a new approach, holding, or a return to en route flight is initiated. Turns may be prescribed in this phase.

19.8. Turning Missed Approach. [ICAO Doc 8168 Volume 1, Part 1, Section 4, Chapter 6] Turns in a missed approach procedure are only prescribed where terrain or other factors make a turn necessary.

19.9. RNAV Missed Approach. The missed approach waypoint for RNAV approaches without vertical guidance (e.g., LP and LNAV), is normally the runway threshold but may be located prior to the threshold, on or off runway centerline. RNAV approaches with vertical guidance (e.g., LPV and LNAV/VNAV) and GLS approaches utilize a DA.

19.9.1. RNAV missed approach procedures are RNAV 1 or RNP 1.

19.9.2. There are no RNP requirements for the missed approach if it is based on conventional means (e.g., VOR, DME, NDB, or dead reckoning).

19.9.3. RNAV missed approach holding waypoints are fly-over waypoints. If these waypoints are dual-use (e.g., the named waypoint has a different attribute on another procedure or en route chart), see [paragraph 10.4.2](#).

19.9.4. [ICAO Doc 9613; AC 90-105] The flight guidance mode should remain in LNAV when initiating a go-around or missed approach to enable display of deviation and positive course guidance during a missed approach RF leg. If the aircraft does not provide this capability, crew procedures must be used that assure the aircraft will adhere to the specified flightpath during the RF leg. **(T-0)** Pilots must be able to couple the autopilot or FD to the navigation system (e.g., engage LNAV) by 500 feet AGL during missed approach procedures that include an RF leg. **(T-0)**

19.9.5. [AIM 1-1-17] To execute a missed approach, activate the missed approach after crossing the missed approach waypoint. GPS missed approach procedures require pilot action to sequence from the missed approach waypoint to the missed approach procedure. If the missed approach is not activated, the GPS receiver displays an extension of the inbound final approach course and displayed distance increases from the missed approach waypoint. Once the missed approach is activated, CDI sensitivity will change to the terminal (+/-1 NM) sensitivity. Missed approach routings in which the first track is via a course rather than direct to the next waypoint require additional action from the pilot to set the course in accordance with aircraft flight manual procedures.

19.10. Radar Approaches. [AIM 5-4-11] Precision approach radar (PAR) approaches utilize a radar glidepath to a DA to determine the MAP. ASR approaches utilize an MDA to the MAP. The pilot is advised of the location of the MAP procedure and is advised of the aircraft's position each mile from the runway, airfield, heliport or MAP, as appropriate. At locations where ATC radar service is provided, conform to radar vectors when provided by ATC in lieu of the published missed approach procedure.

19.10. (AMC) Radar Approaches. Minimum RVR for a PAR approach is 2400 feet (750 meters) or 1/2 mile visibility (800 meters) if no RVR readout is available. Decision altitudes are as published but no lower than 200 feet HAT.


19.11. CDFA Missed Approach Procedures. [ICAO Doc 8168 Volume 1] If the visual references required to land have not been acquired when the aircraft is approaching the MDA, the climbing portion of the missed approach is initiated at an altitude above the MDA sufficient to prevent the aircraft from descending below the MDA. At no time is the aircraft flown in level flight at or near the MDA. **Note:** Depending upon the location of the MAP, the descent from the MDA, once the runway environment is in sight, often needs to be initiated prior to reaching the MAP to execute a normal (e.g., 3 degrees) descent to landing.

19.12. Early Missed Approach Initiation. When the missed approach is initiated prior to the MAP, the pilot will, unless otherwise cleared by ATC, fly the instrument procedure as specified on the approach plate, including altitude restrictions, to the MAP at or above the MDA, DA, or DH before executing the missed approach instructions. **(T-0)**

19.12.1. Any turns on the missed approach will not begin until the aircraft reaches the MAP; likewise, if the aircraft reaches the MAP before descending to the MDA, the missed approach will be initiated at the MAP. **(T-0)**

19.12.2. **Figure 19.1** is an example of an approach altitude restriction that would not permit an early climb should the pilot choose to initiate a missed approach prior to SWLTR. In this example, unless authorized by ATC, a missed approach initiated prior to SWLTR would still require the pilot to descend to the 1,020 feet altitude restriction at SWLTR prior to climbing due to overlying protected airspace for approach routes into Orlando International.

Figure 19.1. Early Missed Approach Restriction.

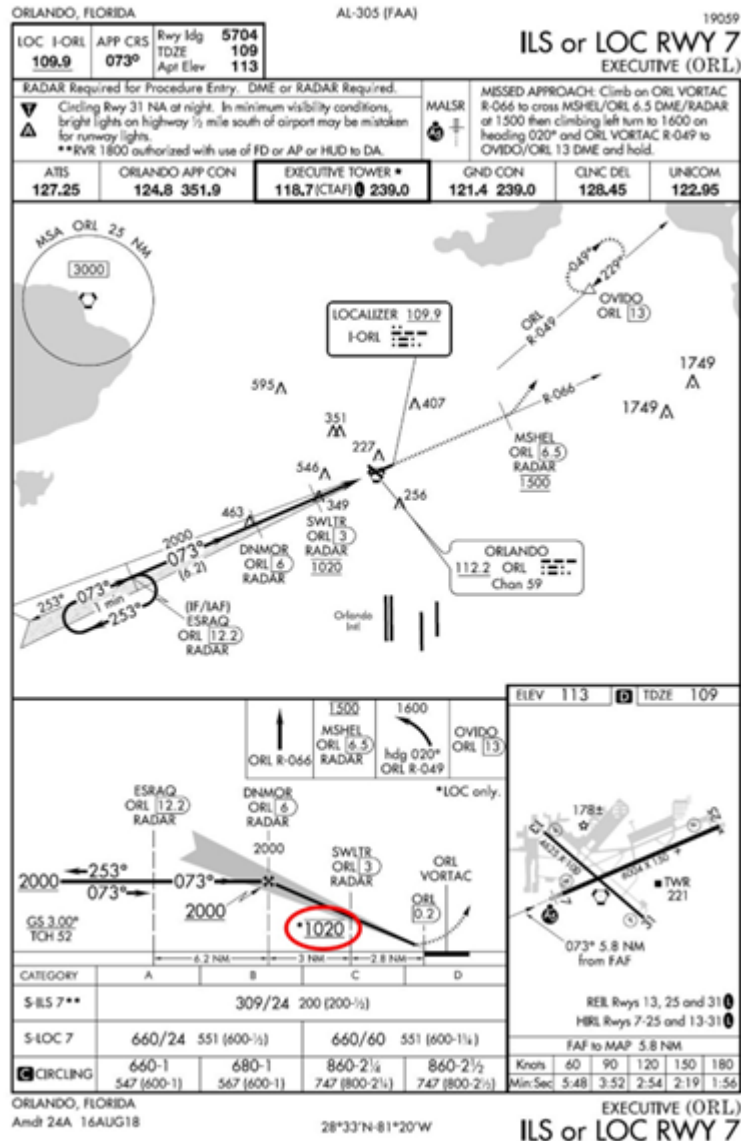

19.13. Delayed Missed Approach Decision. Obstacle clearance is the pilot's responsibility if the decision to execute a missed approach occurs beyond the MAP or below the MDA, DA, or DH. Contact ATC as soon as possible to obtain an amended clearance.

19.13.1. If unable to contact ATC for any reason, the pilot should attempt to re-intercept a published segment of the missed approach and comply with route and altitude instructions.

19.13.2. If unable to contact ATC, and in the pilot's judgment it is no longer appropriate to fly the published missed approach procedure, then consider either maintaining visual conditions if practicable and reattempt a landing, or a circle-climb over airfield. Executing a missed approach past the MAP at a location with high terrain may necessitate an excessive climb gradient and make intercepting the published MAP procedure impractical.

19.13.3. Continuous contact with an air traffic facility may not be possible when a missed approach becomes necessary while operating at an airfield that is not served by an operating control tower. The pilot should execute the appropriate missed approach procedure without delay and contact ATC when able to do so.


19.13.4. In all cases, prudent mission planning should be performed to consider geographical features, obstacles, restrictions, aircraft performance capabilities. The “Trouble T” section and departure procedures in the terminal procedures publication are a good supplemental source of information for obstacle, takeoff visual climb requirements, and standard climb rate data not specifically expressed on the approach chart.

19.14. Loss of Visual Reference While Circling. [AIM 5-4-21; ICAO Doc 8168 Volume 1] If unable to maintain required visual references while circling or unable to make a safe landing execute the missed approach specified for the instrument procedure just flown, unless otherwise directed. Transition from the circling maneuver to the missed approach by executing a climbing turn, within the protected circling area, towards the landing runway, returning to circling altitude or higher. Continue to turn until established on the missed approach course (**Figure 19.2**) or alternate missed approach instructions. An immediate climb must be initiated to ensure climb gradient requirements are met. **(T-0)**

19.14.1. [ICAO] A missed approach will be executed whenever the runway environment is not in sight during the circling maneuver. **(T-0)** The runway environment includes features such as the runway threshold, approach lighting aids, or other markings identifiable with the runway.

19.14.2. [NAS Only] A missed approach will be executed whenever an identifiable part of the airfield is not distinctly visible to the pilot during a circling maneuver at or above MDA, unless the inability to see an identifiable part of the airfield results only from a normal bank of the aircraft during the circling maneuver. **(T-0)**

Figure 19.2. Missed Approach from the Circling Approach.

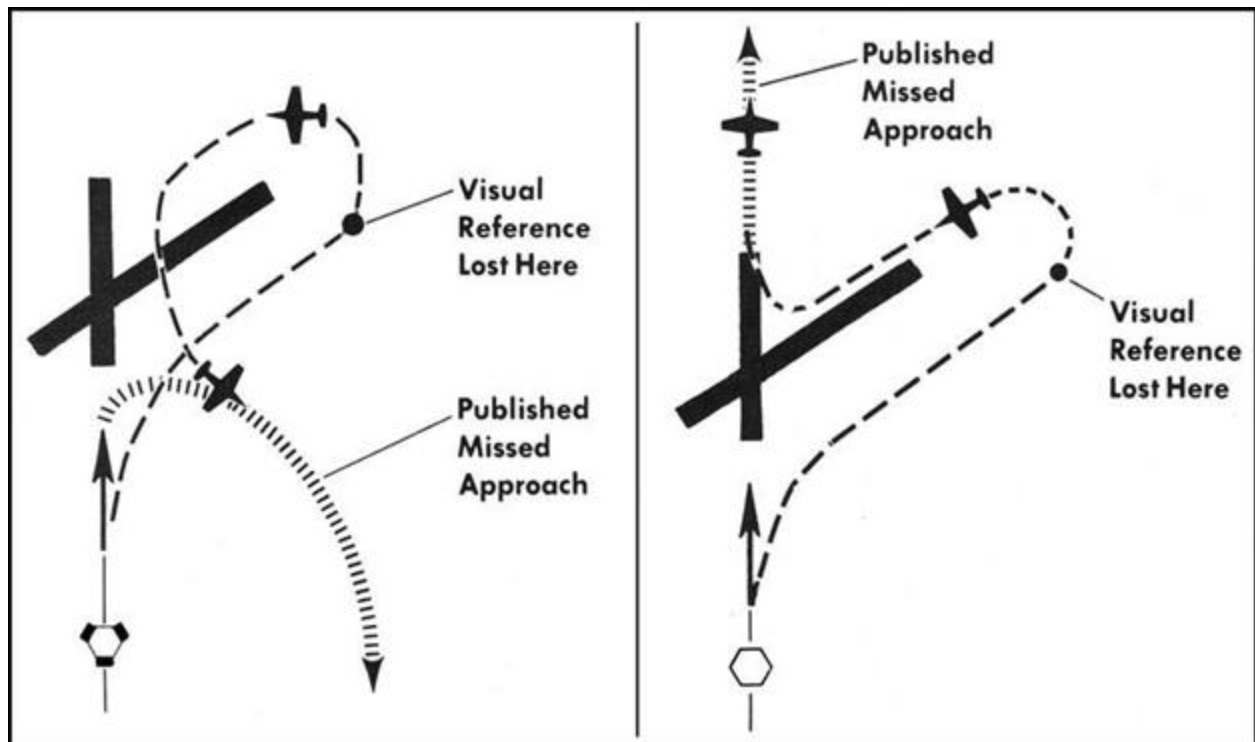

19.15. Training – Multiple Approaches. [FAA Order 7110.65] Prior to the FAF, the controller is required to issue appropriate departure instructions to be followed upon completion of approaches that are not to full stop landings. The pilot should tell the controller how the approach terminates prior to beginning the approach. ATC climb-out instructions include a specific heading or a route of flight and altitude. The controller should state, “After completing low approach/touch-and-go, climb and maintain (altitude). Turn (left or right) heading (degrees).” Climb-out instructions may be omitted after the first approach if instructions remain the same.

Chapter 20

EXTREME LATITUDE NAVIGATION

20.1. General. Areas of Magnetic Unreliability (AMU) consist of two large areas of operation, centered around the earth's poles where unique features significantly complicate air navigation. The two major factors affecting navigation in the polar regions are magnetic variation and the convergence of true meridians at the poles.

20.1.1. MAJCOMs will provide aircraft-specific operational approval and training prior to authorizing operations using NAVAIDs oriented to true or grid north. As a minimum, procedures and training should address:

20.1.1.1. Identification of areas where reference to true or grid north is required.

20.1.1.2. Procedures for displaying true or grid heading reference.

20.1.1.3. Procedures for verifying magnetic variation information from the aircraft navigation computer. Procedures for inputting manual magnetic variation information.

20.1.1.4. Procedures for returning to automatic magnetic variation computation.


20.1.1.5. Minimum equipment requirements.

20.1.1.6. Emergency procedures in the event of true or grid navigation equipment failure while operating in the AMU.

20.1.2. Since the horizontal component of the Earth's magnetic field vanishes near the magnetic poles, magnetic compasses are highly unreliable and unusable in an area approximately 1,000 nautical miles from each magnetic pole. Within these areas, air navigation is further complicated by very rapid changes in magnetic variation over short distances as isogonic lines converge. For example, when flying between the magnetic north pole and the geographic North Pole, a heading of true north results in a magnetic heading of south (magnetic variation of 180°).

20.1.3. Since the two major AMUs also occur near the geographic poles, the convergence of meridians also presents an additional navigation problem. When flying courses at the extreme latitudes (polar operations), convergence of the meridians can create rapid changes in true headings and true courses with small changes in aircraft position. While maintaining a course without turning, the true heading changes strictly based on the aircraft's relative position to the true pole as it crosses meridians. **Figure 20.1** provides a graphical depiction of how heading information changes in relation to the angular difference from true north as meridians are crossed. As a result, relatively small errors introduced can make determining the aircraft's actual position very difficult when trying to determine the proper heading to fly to maintain or correct back to the desired flight path. When even small errors occur, very large navigation errors can develop over extremely short distances.

20.1.4. Due to the combined effects of magnetic unreliability and the geographic convergence of meridians at acute angles, when flying in the polar regions, to navigate more precisely, a "grid" system was developed. Navigating in the AMU was also enhanced by the development of gyro driven heading indicators.

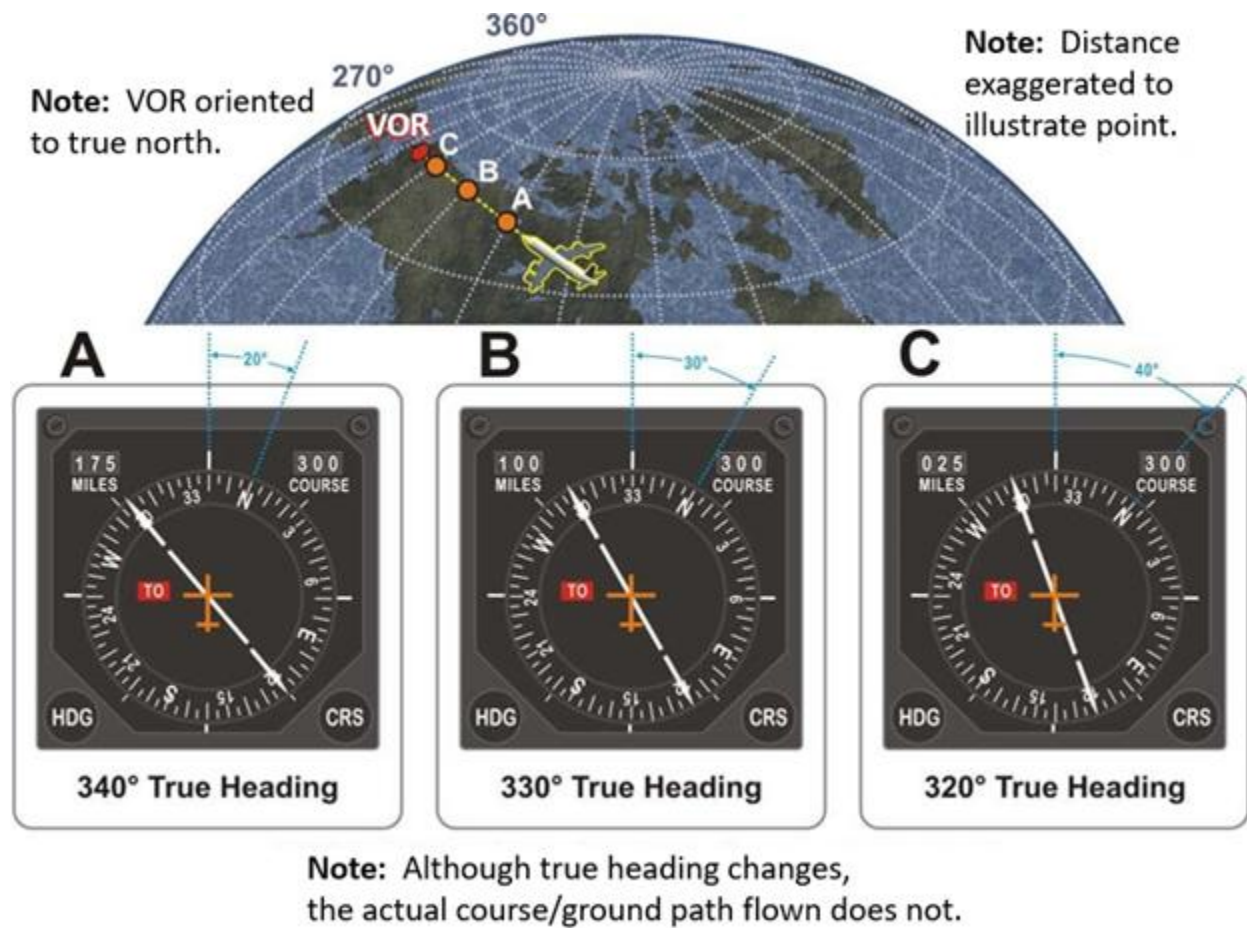Figure 20.1. Heading Indications While Crossing Meridians.

20.2. Boundaries of the AMU.

20.2.1. The Canadian AIP establishes the basic boundaries for the Northern Hemisphere AMU. In general, this corresponds to Canadian Northern Domestic Airspace, and the entire Canadian Northern and Arctic Control Areas. AMUs are also depicted on Canadian en route charts. The FAA refers to the Northern Hemisphere AMU as the “north polar area” and defines this region as all geographical areas and airspace located above 78° north.

20.2.2. The FAA refers to the Southern Hemisphere AMU as the “south polar area” and defines this region as any area south of the 60° south latitude.

20.3. Grid Operations. Grid navigation is a reorientation of the standard heading references and is used to offset the difficulties of trying to navigate in an AMU (north or south polar area) using conventional techniques and procedures. Grid navigation uses a set of parallel and perpendicular “green” lines depicted on most grid navigation charts (GNC) and jet navigational charts (JNC) and enables the aircrew to fly a constant grid heading while crossing rapidly changing longitudinal lines and contend with the erratic magnetic variations present in the AMU. The use of a grid heading, whether provided automatically by on board systems or manually calculated, provides a method upon which an aircrew can safely navigate in an AMU region. Most modern USAF aircraft incorporate a heading reference switch that allows the pilot to select between true, magnetic, or grid. With the heading reference selected to grid mode, the on board navigation systems should

automatically switch to grid operations and update the navigation displays to reflect aircraft grid heading and position. In grid mode, the onboard navigation magnetic variation is automatically set to “0” (zero) and therefore magnetic heading is equal to true heading. The on-board system then applies a known correction (added or subtracted), based on the current longitudinal line to provide a grid heading for the pilot to fly.

20.3.1. There are several ways grid lines may be depicted on charts depending on the type of projection. For example, the polar grid chart is designed using the prime meridian as the base reference line of longitude. An aircrew may calculate a grid heading based on this standard reference.

20.3.2. To manually calculate a grid heading, the pilot needs to multiply the appropriate longitude with the chart’s convergence factor (normally stated in the margin) and then add or subtract the aircraft true heading. The convergence factor is particular to the chart being used and is determined by the angle at which the “longitudinal line” cuts across the “grid” line. This angle is known as the convergence angle. In the Southern Hemisphere, the pilot adds “east longitudinal” lines and subtracts “west longitudinal” lines to calculate a grid heading. It is the opposite in the Northern Hemisphere (add “west longitude” and subtract “east longitude”). Since the convergence factor on the polar grid chart is equal to 1 (one), to obtain grid heading, the pilot adds or subtracts the longitudinal line to true heading. As an example, at McMurdo Station, the longitudinal line of the Pegasus Field (NZPG) runway is 167 “east;” therefore, for any given true heading, adding 167 gives grid heading. Refer to Air Force Pamphlet (AFPAM) 11-216, *Air Navigation*, for more details on grid navigation.

20.4. Definition of an Emergency in the AMU.

20.4.1. Many situations are considered an emergency regardless of geographic location. For example, engine failure is considered an emergency by most aircrews whether in or out of the AMU. When operating in the AMU, USAF directives require aircraft to be equipped with a heading source other than magnetic. However, there are situations (e.g., electrical power loss, gyro failure) where the heading source may become inoperative after entering the AMU. A simple gyro failure typically would not be considered an emergency outside the AMU, especially if an alternative means of navigation is available. This situation is dramatically different in the AMU where navigation options may be extremely limited, diversion airfields widely spaced, radar vectors are generally unavailable, weather conditions are less than optimal, and communications often unreliable. Any equipment failure in the AMU that leaves an aircrew with magnetic information as the sole source of heading information is typically considered an emergency.

20.4.2. The techniques outlined below are useful for emergency navigation should the true or grid heading source become inoperative or unreliable while operating in the AMU. Use of these techniques should be limited to emergency navigation to an alternate, the planned destination, or out of the AMU. They should not be used as normal navigation procedures for aircraft not equipped with a heading source other than magnetic.

20.4.2.1. In the unlikely event that all navigation systems become unavailable, reversion to manual navigation (e.g., dead reckoning) is required. Radar, NAVAIDs, or visual fixes may be available. Application of basic navigation principles ensures that the aircraft proceeds in a direction that at least approximates the desired track until more accurate navigation or a safe landing is possible. A thorough review of basic dead reckoning techniques and procedures is recommended prior to flight in the AMU, particularly without a navigator on board. The pilot should always have a backup dead reckoning plan ready for every flight in the AMU. **Note:** Accurately plotting the cleared flight path track on a suitable chart, along with frequent position checks, helps ensure the flight remains on course. This not only increases and maintains positional awareness but enables the pilot to make the transition to dead reckoning should one or more navigation systems fail.

20.4.2.2. If the aircraft has an additional heading reference system, the pilot may be able to operate the system in directional gyro mode and manually set the heading to coincide with the FMS, true, or inertial heading from the primary navigation source in accordance with flight manual. This provides a backup true heading reference in case the primary navigation system fails. Update the heading periodically in accordance with the flight manual to correct for drift. **Note:** This technique is not acceptable for use as the primary means of navigation but is very useful as an emergency backup source of true heading information.

20.5. Using the VOR in the AMU.

20.5.1. Flight instrument indications and interpretation:

20.5.1.1. Because of problems associated with magnetic referenced navigation in the AMU, VOR navigation stations are aligned to true north in this area.

20.5.1.2. Flight instrument indications and interpretation for VORs in the AMU are different than for conventional VORs outside the AMU. This is due to convergence of the meridians and the fact that VOR radials are defined at the station, not at the aircraft. The VOR display does not provide a “relative bearing” to the VOR, it uses the received radial and displays it against that azimuth value on the horizontal situation indicator. At lower latitudes, the received radial matches the relative bearing to the station, so there appears to be no difference between them. In the AMU, it is quite likely that the VOR bearing pointer does not point at the station or even at the correct true bearing to the station. This is because the radial being sent out from the station is specific to true north from the station which is slightly different from true north seen at the aircraft.

20.5.1.3. True VOR radials, which are based on phase relationships formed at the VOR transmitter are decoded in the aircraft. The radial leaving the VOR station is based on the meridian (true north) location of the station, while at the aircraft, the VOR radial information is decoded and portrayed using a heading which is based on the meridian at the location of the aircraft, not the VOR station. The difference or apparent error seen on the instruments depends on the aircraft distance from the VOR and the convergence angle of the meridians involved. The difference seen becomes zero as the VOR station is crossed, where the station and aircraft meridians are the same.

20.5.1.4. Aligning the VORs to true north eliminates the magnetic variation problem and compass unreliability factors but does not eliminate the convergence angle problem.

20.5.2. Navigating TO the station:

20.5.2.1. To proceed direct to the station, center the CDI with an inbound bearing and make heading corrections as necessary to keep the CDI centered. Make heading corrections similar to wind corrections to maintain a desired track. Approaching the station, the true heading changes progressively until passing the station when it is the same as the CDI course (+/- wind drift). Reference the VOR indications versus the heading indications represented in [Figure 20.1](#).

20.5.2.2. Do not select magnetic heading references, stay in true heading. Do not turn to a true heading that places the bearing pointer at the top of the case and keep it there until the aircraft arrives over the station. Doing this would eventually get the aircraft to the station, but it would take the aircraft off the direct course.

20.5.3. Navigating FROM the station:

20.5.3.1. Making use of VOR bearing information in this case is the reverse of the paragraph above. Set the desired outbound radial and keep the CDI centered. The heading required to keep the CDI centered progressively diverges from the CDI course. If the outbound radial is not printed on the chart and outbound information is desired, draw a true north line from the station symbol, then plot a course line from the station and measure the course. Set that radial and keep it centered.

20.5.3.2. This should not be relied upon as the primary means of navigation.


20.5.4. Using off-route true VORs for coast-in or coast-out, and en route accuracy checks:

20.5.4.1. Interpreting bearing information from an off-route VOR station is somewhat involved. Plot a true north line from the station as a reference to draw the true radial or bearing that represents the centered CDI radial. Locate the aircraft's position on this line using the DME indicated distance.

20.5.4.2. To check the FMS indicated true track to the station, plot a true north line from the plotted aircraft position and measure the true track back to the VOR station using the true north line at the aircraft location. This should match the indicated FMS true track. The FMS distance to the VOR station should match the DME indication.

20.6. Using an NDB in the AMU. Despite some inherent errors that may cause minor inaccuracies, the NDB offers an excellent source upon which to navigate from in the AMU since the basic operating principle remains unaffected. The automatic direction finder (ADF) needle simply points directly towards the NDB station. Even if the compass card and other navigation anomalies are occurring from operating in the AMU, the ADF needle points to a properly tuned and identified NDB station. This attribute of the NDB can greatly reduce some of the concerns experienced when dealing with the navigation complexities caused by the rapidly changing magnetic variation or meridian convergence at higher latitudes.

20.7. En Route Navigation at High Latitudes. En route navigation in higher latitude regions may be based on reference to true or grid north instead of the customary reference to magnetic north. Procedures vary greatly between aircraft type and avionics capabilities. Thorough mission planning is essential to accurate navigation at higher latitudes. Refer to en route charts for proper heading source and NAVAID orientation ([Figure 20.2](#)).

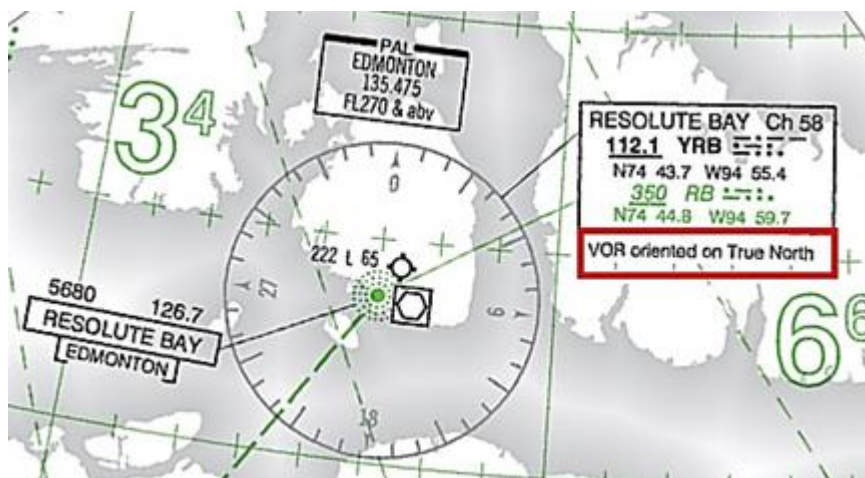Figure 20.2. En Route Charts for Navigation at Higher Latitudes.

20.7.1. Normally, navigation north of 70° north latitude or south of 60° south latitude is conducted with reference to true north or grid north. Specific procedures vary greatly depending on aircraft type, avionics capabilities, and crew complement. Unless otherwise annotated, where there is a reference to true north, the text also applies in southern latitudes and applies to navigation with reference to grid north or grid south.

20.7.1.1. There are areas officially designated AMU at extreme high and low latitudes. For areas north of 70° north and south of 60° south that are not officially designated as AMUs, MAJCOMs will determine the highest allowable latitude for aircraft capable of displaying only magnetic heading.


20.7.1.2. Although partly south of 70° north, the entire Canadian Northern and Arctic Control Areas and areas of Northern Domestic Airspace are designated as Areas of Magnetic Unreliability (**Figure 20.3**).

20.7.2. Aircraft navigation displays must be set to display true north prior to flying true headings or courses. **(T-2)** Suitably equipped aircraft may also use grid reference.

20.7.3. Outside of designated AMUs, aircraft unable to display true or grid heading may use NAVAIDs oriented to true north for en route navigation provided procedures listed below are followed.

20.7.3.1. Aircraft navigation computers may automatically provide magnetic variation information. Accuracy of this magnetic variation depends on the period since the last magnetic variation update and aircraft system.

20.7.3.2. When true or grid heading information cannot be displayed, aircraft magnetic variation information must be verified with current aeronautical charts prior to use of area navigation equipment to fly true or grid courses. **(T-2)** Consult the aircraft flight manual and MAJCOM guidance for specific procedures for navigation with reference to true or grid north.

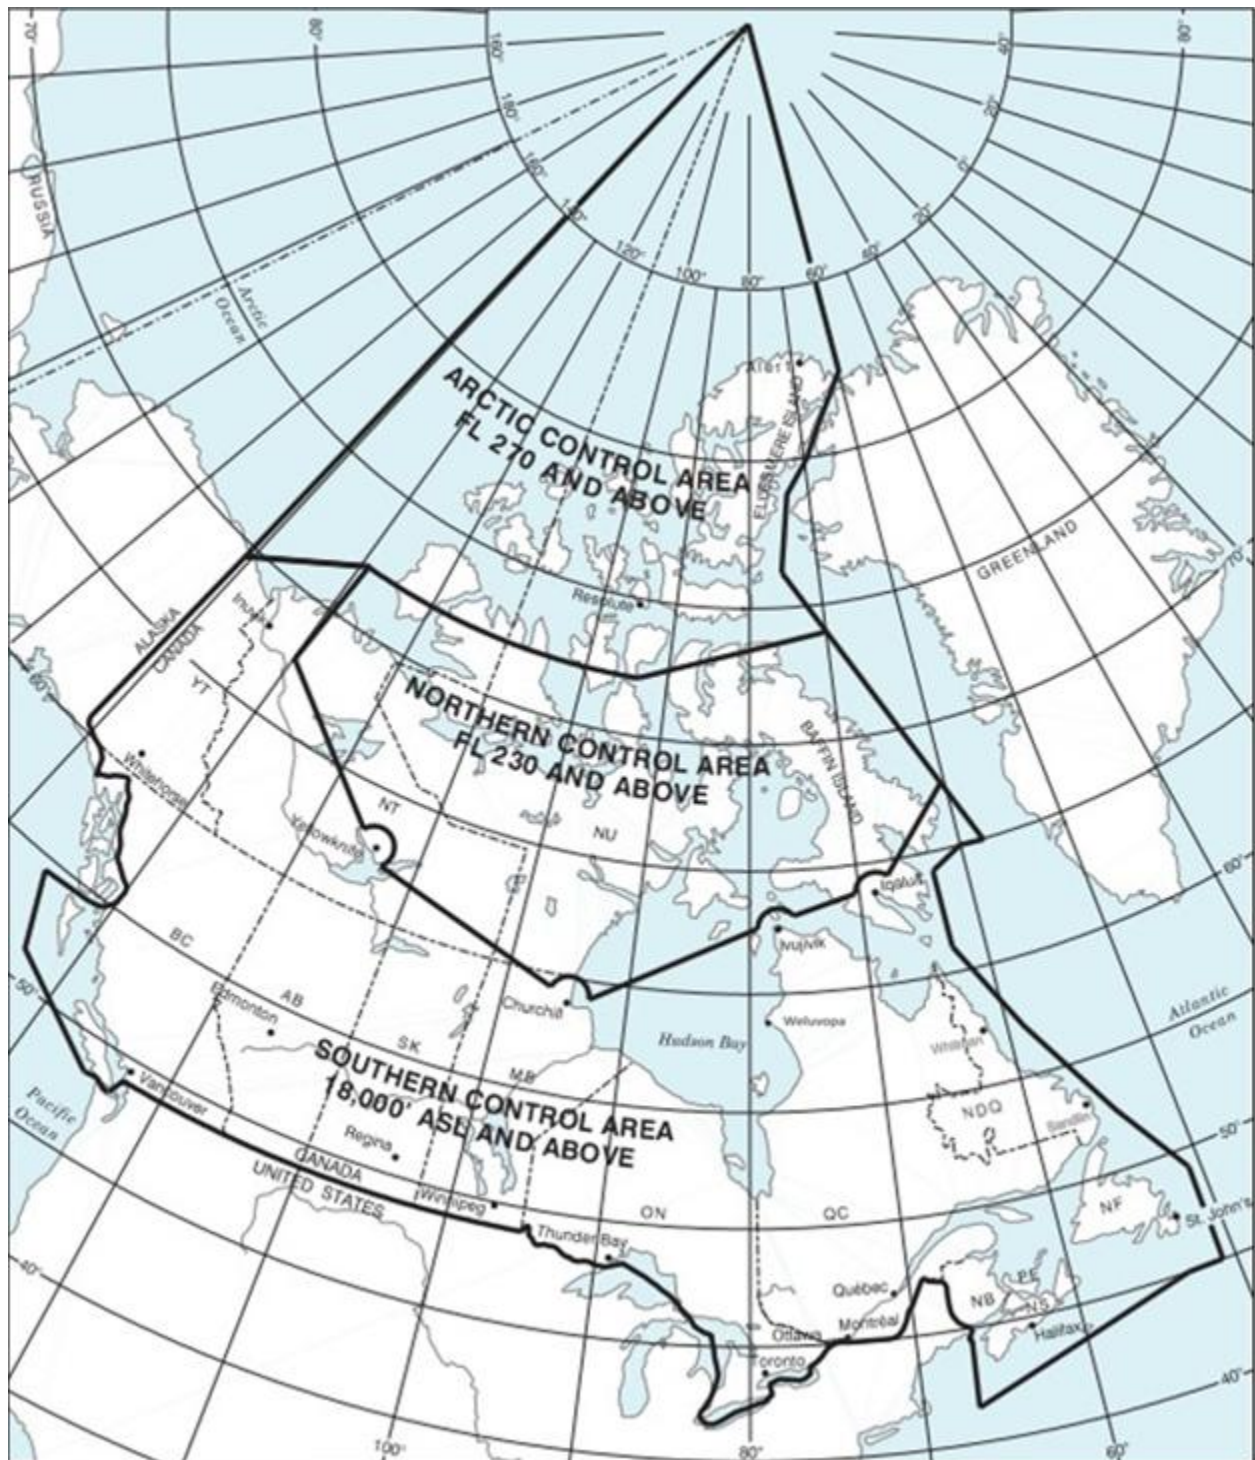Figure 20.3. Canadian Arctic, Northern and Southern Control Areas.**20.8. True North En Route Procedures.**

20.8.1. For navigation using VOR or TACAN, if the NAVAID is oriented to true north, use the following procedures for en route navigation:

20.8.1.1. If the aircraft allows selection of true north as a heading reference, select true north. No additional corrections are required for courses or headings.

20.8.1.2. If the aircraft does not allow selection of true north as a heading reference, use the following procedures:

20.8.1.2.1. VOR and TACAN courses do not require correction for magnetic variation.

20.8.1.2.2. Set the desired true course in the CDI. The aircraft CDI indicates deviations left and right of the desired true course. With magnetic heading displayed, the bearing pointer does not point to the station, but instead indicates true bearing to the station. Therefore, when established on track, the CDI is centered on the desired true course, but the bearing pointer indicates true bearing to the station and is displaced from aircraft no-wind heading by the amount of station magnetic variation. For example, the Thule magnetic variation was approximately 45° west in 2015 (-0.86 degrees/year rate of change). When proceeding inbound on the Thule 180T radial (360T course), the aircraft no-wind heading is 060, while the bearing pointer points to 360T. This discrepancy between aircraft heading and desired course may make flight director guidance unreliable.

20.8.1.2.3. All headings require corrections for magnetic variation.

20.8.2. Unlike a VOR or TACAN, an NDB cannot be oriented to true north. ADF needles always display relative bearing to the station. Use the following procedures:

20.8.2.1. If the aircraft allows selection of true north as a heading reference, select true north. No additional corrections are required for relative bearings.

20.8.2.2. If the aircraft does not allow selection of true north as a heading reference, all relative bearings require correction for magnetic variation. Aircrew should compute and fly the appropriate magnetic course by correcting the desired true course for the magnetic variation at the current aircraft location. This correction should be updated at least every 5 degrees of magnetic variation or every 30 nautical miles, whichever occurs first.

20.9. Chart Reading in High Latitudes. Chart reading in high latitudes presents unique challenges. The nature of the terrain is significantly different, charts are less detailed and less precise, seasonal changes may alter the terrain appearance or hide it completely from view, and there are fewer cultural features.

20.9.1. In high latitudes, there are few distinguishable features from which to determine a position. Built-up features are practically nonexistent and the few that do exist are usually closely grouped, offering little help when flying long navigation legs. Natural features may be limited in variety and are difficult to distinguish from each other. Lakes can seem endless in number and identical in appearance. The countless coastal inlets are extremely difficult to identify. Recognizable, reliable checkpoints are few and far between.

20.9.2. Map reading in high latitudes is further complicated by inadequate charting. Some polar areas are yet to be thoroughly surveyed. The charts portray the appearance of general locales, but many individual terrain features are merely approximated or omitted entirely. In place of detailed outlines of lakes, for example, charts often carry the brief annotation, "Many lakes."

20.9.3. When snow blankets the terrain from horizon to horizon, pilotage becomes acutely difficult. Coastal ice becomes indistinguishable from the land, coastal contours can change dramatically, and many inlets, streams, and lakes disappear. Blowing snow may extend to heights of 200 to 300 feet and may continue for several days, but visibility is usually excellent. However, when snow obliterates surface features and the sky is covered with a uniform layer of clouds so that no shadows are cast, the horizon disappears, causing earth and sky to blend together. This forms an unbroken expanse of white called whiteout. In this complete lack of contrast, distance and height above ground are virtually impossible to estimate. Whiteout is particularly prevalent in northern Alaska during late winter and spring. The continuous darkness of night presents another hazard; nevertheless, surface features are often visible because the snow is an excellent reflector of light from the moon, the stars, and the aurora.

Chapter 21 (Added-AMC)

MAF COMMAND AND CONTROL (N/A FOR OSA/EA, SEE AFMAN 11-2MDSV3)

21.1. (Added-AMC) General. The Mobility Air Forces (MAF) command and control (C2) network consists of the following C2 centers: 618th Air Operations Center (618 AOC), Pacific Air Forces (PACAF) or United States Air Forces Europe (USAFE) Air Operations Centers, Air National Guard (ANG) Command Center, Air Force Reserve Command (AFRC) Command Center, theater Air Operations Centers, Air Mobility Division (AMD), Joint Operational Support Airlift Center, Special Air Missions Office, Office of Assistant Vice Chief of Staff, USAF (HAF/A3M), Unit Command Posts, Air Mobility Control Centers, Contingency Response Groups (CRGs), Contingency Response Elements (CREs), and Special Tactics Teams. C2 centers are action agents for the AMC commander with execution authority (operational control) over mobility missions/forces.

21.2. (Added-AMC) Execution Authority. Headquarters commanders with command authority over MAF resources hold execution authority for directed missions. Commanders with execution authority formulate plans, allocate assets, and approve missions through a local command post or C2 element. OG/CCs serve as execution authority for local training missions. The PIC will execute missions operating outside normal communication channels (use last known mission orders or best course of action).

21.3. (Added-AMC) Mission Clearance Decision. The execution authority and PIC will make the mission clearance decision. In all cases, final responsibility for the safe conduct of the mission rests with the PIC. If a PIC elects to delay a mission, that mission will not depart until the conditions that generated the decision to delay improve or are resolved. **(T-2)** Further, no execution authority may task another PIC to take the same mission under the same conditions.

21.3.1. **(Added-AMC)** Only re-route or divert a mission when authorized by the execution authority, to resolve an emergency, or if required due to insufficient fuel or enroute or terminal weather conditions. The C2 agency may approve a request to overfly a scheduled enroute stop (ANG Command Center for ANG-directed missions, AFRC command center for AFRC-directed missions).

21.3.2. **(Added-AMC)** The agent that directed the re-route or divert will ensure the aircraft is capable of executing departure, enroute, and destination arrival procedures. **(T-2)**

21.3.3. **(Added-AMC)** The PIC will notify the appropriate C2 agent of any aircraft or aircrew limitation that may preclude re-route or divert. **(T-2)**

21.3.4. **(Added-AMC)** When a C2 agent directs a re-routing or divert to a different airfield than planned, the agent will ensure existing and forecast weather, Notices to Airmen (NOTAMs), and airfield information from the GDSS Airfield Detail (Giant Report) is suitable. **(T-2)** If the divert airfield or routing becomes unsuitable while enroute, PICs will coordinate with the C2 agent for other suitable alternatives. **(T-2)** The PIC is the final authority for accepting a re-routing or divert airfield. A C2 agent will obtain diplomatic clearance, prior permission required approval, and will alert customs and all appropriate ground service agencies to prepare for arrival. **(T-2)**

21.4. (Added-AMC) Operational C2 Reporting.

21.4.1. **(Added-AMC)** Stations With MAF C2 Agency. Local MAF C2 agents will enter mission data (arrival, departure, and advisory messages) in the MAF C2 system. **(T-2)**

21.4.2. **(Added-AMC)** Stations Without MAF C2 Agency. Aircrew will transmit mission data (arrival, departure, and advisory messages) to the controlling C2 agency by any means available (preference in the following order: DSN/commercial line, Airline Operational Control (AOC), HF-ALE, Iridium Phone, AERO-I). **(T-2)** For critical C2 communications, i.e., aircraft waiver request, maintenance delay, etc., voice communications are the primary method.

21.4.3. **(Added-AMC)** C2 Communications.

21.4.3.1. **(Added-AMC)** IFM Missions. AOC is the primary means of routine communications between FM/C2 and aircrew. For critical C2 communications, voice communications are the primary method.

21.4.3.2. **(Added-AMC)** Non-IFM Missions. Aircrew should initialize AOC, but should not send messages unless other channels of communication are not available. Initializing allows 618 AOC to take advantage of automated position reporting, free text capability and automated OOOI (Out of blocks, Off ground, On ground, and In blocks) reporting. For Non-IFM missions, messages are handled on a first come, first serve basis as resources permit.

21.4.3.3. **(Added-AMC)** ACARS Messages. C2 personnel have GDSS permissions to uplink/send free text Aircraft Communications Addressing and Reporting System (ACARS) messages. C2 personnel within unit command posts should only uplink/send ACARS messages to aircraft tails/aircrews under their OPCON. C2 personnel should consider the aircraft phase of flight before uplinking/sending ACARS messages. C2 personnel will end each Free Text message with their C2 agency and initials (i.e., "...KSKA CP MGH..."). **(T-3)** C2 personnel will not send ACARS messages to flight-managed sorties unless coordinated has been accomplished with the responsible flight manager. **(T-2)** Messaging procedures between aircrews and flight managers are not changed.

21.4.3.3.1. **(Added-AMC)** Aircrews should begin each free text message sent to a unit command post with the ICAO identifier followed by 'CP' (i.e., KSKA CP.) This format ensures the correct C2 agency responds to the message. On flight-managed sorties, the FM following the sortie functions as the primary ACARS C2 link. AOC is not a secure means of communication. Aircrews must consider OPSEC/COMSEC when sending messages and will not pass classified information via AOC. **(T-2)**

21.4.3.4. **(Added-AMC)** High Frequency (HF) Radio. Crews will conduct an HF radio ground check before takeoff if use of the HF radio may be required for ATC or C2 communications. **(T-2)** Attempt to establish HF contact before going out of UHF/VHF range. If unable to establish HF contact with the controlling HF station, and an alternate means of relay of ATC information is not available, the aircraft should return to the nearest suitable support base. In the case of airborne HF failure, crews are authorized to continue under the following conditions:

21.4.3.4.1. **(Added-AMC)** If SATCOM-equipped, use Satellite Voice Communications to contact responsible station via special telephone numbers/short codes published in State AIPs (Aeronautical Information Publication).

21.4.3.4.2. **(Added-AMC)** If not SATCOM-equipped:

21.4.3.4.2.1. **(Added-AMC)** Attempt to contact ATC facility on VHF (or UHF, if available).

21.4.3.4.2.2. **(Added-AMC)** Attempt VHF relay via another aircraft on 123.45 MHz.

21.4.3.4.2.3. **(Added-AMC)** When required to provide ARTCC position and weather observations, if unable to contact an ATC agency, attempt to relay through the Global HF stations.

21.4.3.5. **(Added-AMC)** HF Automatic Link Establishment (ALE). The ALE system is provided as an alternate means of communication between the aircraft and a number of C2 agencies. When a High-Frequency (HF) radio, in Selective Calling (SELCAL) mode, is required for primary ATC, use Aero-I and/or AOC to monitor C2, in lieu of ALE. Ensure the other HF radio is not in ALE to preclude overriding ATC messages. (N/A when using CPDLC).

21.4.3.6. **(Added-AMC)** Iridium Phone. Iridium phones may be used for communications between aircrews and command and control agencies when beyond line-of-sight C2 is required and other line-of-sight communications, HF or SAT-2000 do not provide proper security or timeliness. For more information refer to AMC Iridium Satellite Phone CONOPS for Aircrews, available on AMC ePubs. **Exception:** If operational necessity requires use of the Iridium phone during tanker AAR, the phone should be removed from the cradle and used with the portable antenna only.

21.4.3.6.1. **(Added-AMC)** Turn off Iridium phones within 25 feet of ground refueling operations.

21.4.3.6.2. **(Added-AMC)** Turn off Iridium phones during takeoff, air refueling, approach, and landing.

21.4.3.6.3. **(Added-AMC)** PICs will ensure Iridium phone numbers are entered as a remark in the GDSS Mission Detail. **(T-2)**

21.4.3.7. **(Added-AMC)** AERO-I. The Aero-I satellite voice system is provided as an alternative means of communication between the aircraft and a number of C2 agencies and ATC. The system will be used only for non-secure in-flight communications between aircrews and C2 organizations and between aircrews and oceanic air traffic controllers. **(T-2)** Due to the high cost of using the system, aircrews should attempt communications by other means (HF, UHF, ALE, etc.) for C2 communications before using the Aero-I system. Aero-I voice is a backup for the CPDLC, AOC and C2 communications. Certain C2 and ATC agencies have the capability to call the aircraft using the Aero-I for official use only.

21.4.3.7.1. **(Added-AMC)** The Aero-I communications software loaded on the aircraft automatically logs onto a specific Ground Earth Station), based on aircraft location, and which station is under contract to provide service. Manually selecting a different station will result in a connection through a non-contract carrier, resulting in a much higher cost. Aircrews will only manually select a different ground earth station when all other avenues of communication have failed, and when essential for mission completion. **(T-2)**

21.4.3.8. **(Added-AMC)** DV Messages. Airborne unclassified messages originated by DV passengers may be transmitted at the discretion of the PIC.

21.4.4. **(Added-AMC)** Enroute Reporting.

21.4.4.1. **(Added-AMC)** Make the following enroute reports to the appropriate MAF C2 agency. **(T-2)**:

21.4.4.1.1. **(Added-AMC)** Airborne report when departing from a location without an AMC presence.

21.4.4.1.2. **(Added-AMC)** Maintenance report whenever aircraft Landing Status Code (“alpha status”) changes to code 3, 4, or 5 IAW DAFI 21-101. PICs should report aircraft system malfunctions that traditionally require extensive trouble shooting as soon as feasible. Contact arrival C2 agency if available, otherwise contact MAJCOM C2 for relay.

21.4.4.1.3. **(Added-AMC)** On aeromedical evacuation missions, no later than 1 hour prior to landing, provide updated arrival time and AF Form 3858, *Aeromedical Evacuation Mission Offload Message*, information to 618 AOC Global Aeromedical Evacuation (618 AOC/GADA), or the controlling C2 agency, who will coordinate with the Aeromedical Evacuation Cell (AE Cell).

21.4.4.1.4. **(Added-AMC)** Uncoordinated aircraft intercepts via the most expeditious means available, after complying with guidance in the flight information handbook. Aircrew should consider the phase of flight and aircraft emergencies. When an airborne report is not accomplished, PICs must directly notify 618 AOC or appropriate C2 agency upon landing. **(T-2)** In all cases ensure local C2 and Intel agencies are informed.

21.4.4.1.5. **(Added-AMC)** Airfield Data Reports. Aircrews transiting unfamiliar airfields or airfields where conditions may adversely affect subsequent flight should identify airfield characteristics that produce illusions, such as runway length, width, slope, and lighting, as compared to standard runways, sloping approach terrain, runway contrast against surrounding terrain, haze, glare, etc., and previously unknown obstacles, airfield markings, or other safety critical items. Aircrew should debrief the next C2 center transited and send a report to AMC/A3AS or MAJCOM equivalent.

21.4.4.2. **(Added-AMC)** CONUS. Periodic “ops normal” calls/transmissions are not required; however, the controlling C2 agency may increase reporting requirements.

21.4.4.3. **(Added-AMC)** OCONUS. MAJCOM C2 agencies will specify increased reporting procedures through a communications plan in the OPLAN, OPORD, FRAG, Mission Directive, FLIP, or theater-specific Special Instructions (SPINS). **(T-2)** Aircrews will maintain listening watch IAW the communications plan within aircraft equipment capabilities (e.g., AOC, AERO-I, HF-Automatic Link Establishment (HF-ALE), L-Band SATCOM). **(T-2)**

21.4.5. **(Added-AMC)** Thirty Minute Out Call. Transmit a UHF, VHF, or SATCOM arrival advisory to the destination C2 agency approximately 30 minutes prior to arrival to provide Estimated Time in Blocks (ETB). **(T-2)**

21.4.6. **(Added-AMC)** Integrated Flight Management Sorties. On IFM sorties, the flight managers (FM) are the C2 conduit for aircrews. The PIC must contact their FM prior to each IFM sortie. **(T-2)** For critical C2 communications, voice communications are the primary method. **Exception:** For AFRC/ANG missions using IFM, AFRC/ANG will provide C2.

21.4.6.1. **(Added-AMC)** Position Reporting on IFM Missions. IFM missions transiting oceanic FIRs need to add the phrase “Pass to Hilda” to ATC position reports (N/A for AOC/CDPLC sorties). Crews may also use the Aeronautical Radio Inc. (ARINC) frequencies listed in the aircrew flimsy for C2 phone patch requirements. The ARINC phone patch should be used only after exhausting normal communication methods.

21.4.6.2. **(Added-AMC)** The Flight Manager and PIC have specific duties that must be accomplished separately, but they share the responsibility for safe, risk-mitigated, effective and efficient sortie execution. Reference AFMAN 11-255V3, *Flight Manager Responsibilities and Procedures*.

21.4.7. **(Added-AMC)** High Frequency (HF) Communications. HF is the primary means of voice access to the worldwide C2 network. When SELCAL is primary ATC, Aero-I and/or AOC should be used to monitor C2, in lieu of ALE. The other HF radio should not be in ALE mode to preclude the automatic link feature from overriding ATC messages.

21.4.8. **(Added-AMC)** ARTCC Reports. Pilots will provide ARTCC position and weather observations when required. **(T-2)** If unable to contact an ATC agency, pilots should attempt to relay through the Global HF stations.

21.5. (Added-AMC) Mission Commander (MC).

21.5.1. **(Added-AMC)** Unit commanders will designate a MC when more than two aircraft are assembled to perform missions away from home station. **(T-3)** Unit commanders should consider appointing a MC for special, high-visibility missions (i.e., CAPSTONE, DV2, etc.). The MC has overall responsibility and is the final authority for decisions that impact mission execution and will properly coordinate mission details. **(T-2)** For flight-managed sorties, the MC will coordinate any special mission planning requirements with the IFM mission allocator not later than 24 hours prior to mission execution. **(T-2)**

21.5.1.1. **(Added-AMC)** For MAJCOM-tasked missions, MAJCOM/A3 will coordinate and designate a lead planning agency when more than one unit is involved in an AR, airdrop, or tactical airlift operation. For AMC-tasked missions the planning agency is 618 AOC. For theater airlift missions with more than one airlift unit involved, the theater AOC will designate a central planning agency responsible for coordinating the entire mission with all involved agencies. **(T-2)** The OG/CC for the lead planning agency will designate as MC a rated (normally field grade) officer qualified in the type of mission. **(T-2)**

21.5.1.2. **(Added-AMC)** The MC will ensure all collocated aircrew members attend required briefings. **(T-3) Exception:** The PIC may excuse aircrew members from required briefings in order to perform other duties, provided mission-specific information is covered with the excused aircrew members during the AC's briefing.

21.5.1.3. **(Added-AMC)** When non-collocated, the MC (in conjunction with the lead planning agency) will ensure non-collocated aircrew members receive applicable information, to include rendezvous, formation, abort, and recovery procedures. **(T-3)** The MC will provide controlling agency and all non-collocated PICs anticipated delays or mission changes. **(T-3)**

21.6. (Added-AMC) C2 Agency Telephone Numbers. Aircrew members may use the 618 AOC toll-free number, 1-800-AIR-MOBL, or DSN 312-779-0320 to contact other offices within the 618 AOC, including flight managers.

21.7. (Added-AMC) Close Watch Missions. Close Watch missions (for example, Combat Search and Rescue (CSAR), Aeromedical Evacuation (AE), PHOENIX BANNER) receive special C2 attention. PICs will promptly notify appropriate C2 agency of delays, aborts, or other events that effect on-time departure. **(T-2)** The C2 agent should be provided the estimated time in commission, planned ETD, and estimated time of arrival (ETA) within 10 minutes of the event or as soon as safety allows.

21.8. (Added-AMC) Law Enforcement Support. It is the policy of the DoD to cooperate with civilian law enforcement officials to the maximum extent practicable. AFI 10-801, *Defense Support of Civil Authorities*, provides the policies and procedures service members must follow when supporting federal, state, and local civilian law enforcement agencies (including ANG and AFRC when on Title 10 or Title 32 status.) PICs will coordinate all civilian law enforcement authorities' requests for assistance through appropriate C2 channels. **(T-2)**

21.9. (Added-AMC) Enroute Maintenance Support. 618 AOC/GADM will support all mobility aircraft. requests for parts and/or maintenance assistance on TRANSCOM/AMC missions (N/A C-21). **(T-2)** Refer to [paragraph 21.6](#) for 618 AOC telephone numbers.

Chapter 22 (Added-AMC)

OPERATIONAL PROCEDURES

22.1. (Added-AMC) On-Time Takeoffs. (OSA/EA see AFMAN 11-2MDSV3). Mission departures are considered on time if the aircraft is airborne within -20/+14 minutes of scheduled takeoff time.

22.1.1. **(Added-AMC)** Scheduled takeoff time may be adjusted to meet a time over target, time of arrival (TOA), or Air Refueling Control Time (ARCT). PICs will notify C2 agency before takeoff to adjust the scheduled takeoff time. **(T-3)**

22.1.2. **(Added-AMC)** Early Departures. Early departures are authorized to prevent a delay due to weather, ATC restrictions, airfield or aircraft operational limitations, to adjust mission flow during a large-scale operation, or if approved through C2 channels provided the impact on local and downrange facilities and crew duty is evaluated.

22.2. (Added-AMC) Communications Instructions Reporting Vital Intelligence Sightings (CIRVIS) and Other Reports. All vital intelligence sightings from aircraft should be reported as indicated in FLIP planning or FLIP Enroute Supplement.

22.2.1. **(Added-AMC)** In-flight harassment or hostile action against aircraft. Aircraft subjected to harassment or hostile action by foreign aircraft will immediately contact the nearest USAF air and ground voice facility and report the encounter. **(T-2)** Reports should include aircraft nationality, type, insignia, or any other identifying features; note position, heading, time, speed when harassed, and the type of harassment. Aircrew should request relay of the report to the nearest C2 agency. Also, attempt to contact the nearest command post when in UHF and VHF range.

22.2.2. **(Added-AMC)** Other incidents are reported as indicated in AFMAN 10-206, *Operational Reporting (OPREP)*.

22.3. (Added-AMC) In-Flight Meals. Pilots should not eat meals at the same time, and their meals should consist of different menu items.

22.4. (Added-AMC) In-Flight Emergency Procedures.

22.4.1. **(Added-AMC)** Notification of Control Agencies. When practical after completing the aircraft emergency action checklists and associated actions, the PIC will furnish ATC and appropriate C2 agencies with a description of the difficulty, assistance required, intentions, and any other pertinent information. **(T-2)**

22.4.2. **(Added-AMC)** The PIC may initiate a CONFERENCE HOTEL when additional expertise is necessary IAW AFI 11-418, *Operations Supervision*. These procedures make aircraft specialists available to the aircrew when in-flight situations pose system-related questions that cannot be answered at the local level, applicable emergency checklist(s) are exhausted and outcome is not favorable, and time and conditions permit. Communications procedures are as follows:

22.4.2.1. **(Added-AMC)** Local Area. Aircrew should use appropriate UHF or VHF frequencies.

22.4.2.2. **(Added-AMC)** Enroute. Aircrew should attempt to establish a phone patch with the nearest or controlling C2 Center using Aero-I, global HF network, UHF/VHF stations, SATCOM, etc. If unable, aircrews are permitted to use ARINC radio service as an additional avenue for phone patch connectivity.

22.4.2.3. **(Added-AMC)** Aircrew should provide the following information when time permits:

22.4.2.3.1. **(Added-AMC)** Description of the situation to include actions taken and intentions.

22.4.2.3.2. **(Added-AMC)** Type of assistance being requested.

22.4.2.3.3. **(Added-AMC)** Fuel on board and hours of endurance.

22.4.2.3.4. **(Added-AMC)** Position.

22.4.2.3.5. **(Added-AMC)** Altitude and flight conditions.

22.4.2.3.6. **(Added-AMC)** Number of personnel and DVs on board.

22.4.2.3.7. **(Added-AMC)** Qualification of PIC.

22.4.2.3.8. **(Added-AMC)** Planned landing destination and ETA.

22.4.2.4. **(Added-AMC)** MDS-specific CONFERENCE HOTEL points of contact are listed on the ACC Stan/Eval (ACC/A3TV) SharePoint site at <https://usaf.dps.mil/sites/ACC-A3/A3T/A3TV/CONFERENCE%20HOTEL%20Procedure/Forms/AllItems.aspx?viewpath=%2Fsites%2FACC%2DA3%2FA3T%2FA3TV%2FCONFERENCE%20HOTEL%20Procedure%2FForms%2FAllItems%2Easpx> If unable to access this list or to report problems with the procedures, contact MAJCOM Stan/Eval through Stan/Eval channels.

22.4.3. **(Added-AMC)** Need for Medical Assistance. When a person aboard the aircraft requires medical care, the PIC will notify the station of intended landing in sufficient time so the aircraft may be met by medical personnel. **(T-2)** Notification will include the patient's sex, approximate age, and major complaint.

22.4.4. **(Added-AMC)** Time and conditions permitting, inform passengers of the situation and intentions.

22.4.5. **(Added-AMC)** Cockpit Voice Recorder. If involved in a mishap or incident, after landing and terminating the emergency, pull the Cockpit Voice Recorder circuit breaker(s) to preserve recordings of flight deck conversations for safety analysis.

22.4.6. **(Added-AMC)** Impoundment of Aircraft. If an aircraft is involved in a serious in-flight incident, the PIC will contact the controlling C2 agency to coordinate impound with the owning MXG IAW AFI 21-101_AMCSUP. **(T-2)** If at an Air Force installation, the PIC will request impound from the appropriate maintenance authority. **(T-2)**

22.5. **(Added-AMC)** Call Signs.

22.5.1. **(Added-AMC)** Training Mission Call Signs. Aircraft will use the unit static call sign prefix followed by a 2-digit suffix assigned by the parent unit. **(T-2)**

22.5.2. **(Added-AMC)** Operational Mission Call Signs. Use call signs assigned by OPORD, FRAG, or diplomatic clearance. If no call sign has been assigned, use unit static call signs. When flying AMC missions, and no other call sign has been assigned, use the "REACH" call sign followed by the last digit of the year the aircraft was built and the last 3 digits of the aircraft tail number (or as required by diplomatic clearance). To complete flight plans, put the letters "RCH" followed by the last digit of the year the aircraft was built and the last 3 digits of the aircraft tail number.

22.5.3. **(Added-AMC)** The Reach 01 and 18 call signs are reserved for the AMC/CC and 18 AF/CC, respectively.

22.5.4. **(Added-AMC)** Aeromedical Evacuation (AE) Call Signs. For actual AE missions, use the call sign "Evac" followed by the five-digit aircraft number (example, Evac 12345) or mission designator. Refer to FLIP GP Chapter 4. When the AE portion of the mission is completed, normal call signs will be used. This does not alleviate the responsibility to use diplomatically cleared call signs when required.

22.5.5. **(Added-AMC)** Search and Rescue. On actual search, rescue, and recovery missions, missions should use the call sign "Air Force Rescue" plus the last five digits of the aircraft tail number.

22.6. (Added-AMC) Maintenance Documentation. Complete the AFTO Form 781 after each flight. After landing, aircrew members debrief maintenance personnel on the condition of the aircraft, engines, avionics equipment, and all installed special equipment as required. At stations without maintenance support, when a maintenance requirement exists, the PIC will ensure a thorough debrief is provided to the C2 agency. **(T-2)** On all 618 AOC tasked missions, notify Global Maintenance Control (618 AOC/GADM). On all C-21 missions, contact representatives from the C-21 Contractor Logistics Support maintenance team from your home station.

22.6.1. **(Added-AMC)** An entry will be placed in AFTO 781A, *Maintenance Discrepancy and Work Document*, "Aircraft Subjected to Salt Spray" (state lowest altitude and duration) anytime the aircraft is flown over salt water, under 1,000-feet above sea level for longer than 30-minutes. **(T-2)**

22.6.2. **(Added-AMC)** An entry will be placed in AFTO 781A, "Aircraft Operated on Semi-Prepared Runway" (state number of landings and takeoffs accomplished on the semi-prepared runway). **(T-2)**

22.7. (Added-AMC) Border Clearance. The border clearance responsibility will be as designated by the base or area command. For EA, the aide is responsible for the passengers.

22.7.1. **(Added-AMC)** Normal Operations.

22.7.1.1. **(Added-AMC)** The unit dispatching the mission is normally responsible for the border clearance of its aircraft.

22.7.1.2. **(Added-AMC)** When support is not available, border clearance is the responsibility of the PIC. Duties may be assigned to ground personnel or another aircrew member, but the PIC retains ultimate responsibility. When an aircraft is unloaded at a base without an air traffic function, the PIC is responsible for ensuring the following:

22.7.1.2.1. **(Added-AMC)** Aircrew members and passengers possess current passports and valid visas, when required.

22.7.1.2.2. **(Added-AMC)** Aircrew members and passengers have current certificates of immunization (shot record) when required.

22.7.1.2.3. **(Added-AMC)** Cargo entry documents are in proper order.

22.7.1.2.4. **(Added-AMC)** Departing or entering the United States through a location where border clearance can be obtained.

22.7.1.2.5. **(Added-AMC)** Obtaining border clearance for aircraft cargo, passengers, crew and baggage, if required, before takeoff to a foreign area or after arrival from a foreign area.

22.7.1.2.6. **(Added-AMC)** Spraying the aircraft (see the FCG and [paragraph 22.8.](#)).

22.7.2. **(Added-AMC)** Procedures for US Entry.

22.7.2.1. **(Added-AMC)** Enroute, the designated aircrew member will distribute personal customs declarations (when not accomplished by passenger services) to all passengers and aircrew members. **(T-0)** The designated aircrew member will also compile necessary border clearance forms for the PIC's signature. **(T-0)**

22.7.2.2. **(Added-AMC)** Enroute, aircrew should notify the C2 agency at the base of intended landing of any change in ETA to ensure that border clearance is accomplished as soon as possible after landing.

22.7.2.3. **(Added-AMC)** Obtain a permit to proceed when military necessities require that an aircraft, which has landed in the United States for customs clearance, must proceed to another base in the US to obtain border clearance. **(T-0)** The permit to proceed delays customs inspection of cargo, passengers, and crew until arrival at the offload station, and saves intermediate offloading and reloading normally required for customs inspection. The permit to proceed is valid only to the airport of next landing where the border clearance must be completed or a new permit to proceed is issued by a customs official. The aircrew will not make intermediate stops between the issue point of the permit to proceed and destination of manifested cargo unless required by an emergency or directed by the controlling C2 center. **(T-2)**

22.7.2.4. **(Added-AMC)** When an aircraft lands for a US border clearance, a US Customs representative normally meets the aircraft to obtain the required documents. Do not deplane passengers or aircrew members unless necessary for safety or the preservation of life and property and do not unload until approved by customs and agriculture personnel or designated representatives. **(T-0)** This procedure applies to the initial landing in the US and all landings required when operating on a permit to proceed or until all crew, passengers, and cargo complete final border clearance.

22.7.2.5. **(Added-AMC)** Pre-cleared containers, regardless of size, will not be sealed with bolt-type seals and offered for air shipment. **(T-2)** Only easily broken (without specialized tools) seals are authorized for use and include Ball-type, Cable seals, or plastic seals. **(T-2)** The intent of the seal is to detect pilferage or tampering, not prevent it. Additionally, containers will not be locked with key-type or combination padlocks unless the crew has access to keys/combination. **(T-2)**

- 22.7.2.5.1. **(Added-AMC)** Customs pre-clearance is not synonymous with Joint Airlift Inspection (JI). Therefore, if cargo has been JI'd and properly documented (DD Forms 2133, *Joint Airlift Inspection Record/Checklist*, and/or 2855), the need for interior inspection is decreased but not eliminated.
- 22.7.2.5.2. **(Added-AMC)** The Loadmaster/Boom Operator or designated aircrew member is the final on-scene authority to determine if seals/locks may be removed for inspection. Every effort should be made to maintain pre-clearance integrity.
- 22.7.2.5.3. **(Added-AMC)** Procedures for A3 Exemptions to these requirements are outlined in AFI 24-605V2, *Air Transportation Operations*. This exemption is typically used for classified/sight sensitive cargo, however, the exemption does not waive "safety of flight."
- 22.7.3. **(Added-AMC)** Inspections of U.S. Aircraft by Foreign Officials.
- 22.7.3.1. **(Added-AMC)** USAF policy on status of military aircraft is stated in the FCG, General Information (Chapter 3). In substance, this policy holds that US military aircraft are immune from searches, seizures, and inspections (including customs and safety inspections) by foreign officials. In addition, PICs should be aware of, and adhere to, any specific FCG provisions for individual countries.
- 22.7.3.2. **(Added-AMC)** If confronted with a search request by foreign authorities, aircrews should use the following procedures.
- 22.7.3.2.1. **(Added-AMC)** In most cases, search attempts may be halted simply by a statement of the PIC to the foreign official that the aircraft is a sovereign instrumentality not subject to search without consent of USAF Headquarters or the US Department of State officials in the country concerned. This should be clearly conveyed in a polite manner so as not to offend foreign authorities that may honestly, but mistakenly, believe they have authority to search USAF aircraft.
- 22.7.3.2.2. **(Added-AMC)** If foreign authorities insist on conducting a search, the PIC should make every effort to delay the search until he or she can contact USAF Headquarters (through MAJCOM C2) or the appropriate embassy officials. The PIC should then notify these agencies of the foreign request by the most expeditious means available and follow their instructions.
- 22.7.3.2.3. **(Added-AMC)** If foreign officials refuse to desist in their search request, pending notification to USAF Headquarters or the appropriate embassy, the PIC should indicate that he or she would prefer to fly the aircraft elsewhere (provided fuel, flying time, and mechanical considerations permit a safe flight) and request permission to do so.
- 22.7.3.2.4. **(Added-AMC)** If permission is refused and the foreign authorities insist on forcing their way on board an aircraft, the PIC should state that he protests the course of action being pursued and that he intends to notify both USAF Headquarters and the appropriate American Embassy of the foreign action. The PIC should not attempt physical resistance, and should thereafter report the incident to USAF Headquarters and appropriate embassy as soon as possible. The PIC should escort foreign authorities if the inspection cannot be avoided.

22.7.3.3. **(Added-AMC)** Other procedures may apply when carrying sensitive cargo or equipment. Follow these procedures and applicable portions of classified FCG supplements.

22.7.4. **(Added-AMC)** Exercises and Contingency Operations.

22.7.4.1. **(Added-AMC)** Certain airlift missions, which do not transit normal ports of entry or exit, require special procedures to expedite compliance with customs, public health, immunization, and agricultural requirements. A joint memorandum of understanding, between these agencies and MAJCOMs, establishes certain procedures and waivers.

22.7.4.2. **(Added-AMC)** Implementation of the agreement is not automatic. Traffic and border clearing agencies implement all or part of the agreement as necessary for each operation. Inspection and clearance may be accomplished at the US onload or offload base, or at the foreign onload or offload base.

22.7.4.3. **(Added-AMC)** Customs Procedures.

22.7.4.3.1. **(Added-AMC)** Outbound: No requirement. Filing of Customs Form 7507, *General Declaration (Outward/Inward)*, is not required unless directed.

22.7.4.3.2. **(Added-AMC)** Inbound: The following documents will be prepared before arrival. **(T-2)**:

22.7.4.3.2.1. **(Added-AMC)** Customs Forms 7507, *General Declaration (Outward/Inward)*.

22.7.4.3.2.2. **(Added-AMC)** Copy of the Cargo manifest.

22.7.4.3.2.3. **(Added-AMC)** Customs Form 6059B, *US Customs and Border Protection Declaration Form* (one for each person on-board).

22.7.4.3.2.4. **(Added-AMC)** For troops out of country less than 140 days:

22.7.4.3.2.4.1. **(Added-AMC)** Troop commander's certificate for examination of troop baggage.

22.7.4.3.2.4.2. **(Added-AMC)** One copy of the US Customs Baggage Declaration Form for each passenger not under command of the troop commander, to include observers, support personnel, civilians, news reporters, and aircrew members.

22.7.4.3.2.4.3. **(Added-AMC)** Upon arrival at a CONUS offload base, a customs representative will meet the aircraft and accept the troop commander's certificate with respect to troop baggage. **(T-3)** Individual baggage declarations are not required. The troop commander should have inspected troop baggage.

22.7.4.3.2.4.4. **(Added-AMC)** Troops will debark under the observation of the customs representative with only a spot check of articles and baggage. The customs officer may elect to make a more extensive inspection.

22.7.4.3.2.5. **(Added-AMC)** For troops who are out of the country 140 days or more:

22.7.4.3.2.5.1. **(Added-AMC)** One copy of the U.S. Customs Baggage Declaration Form for each passenger. This includes observers, support personnel, civilians, news media personnel, and aircrew members. Personnel may use Customs Form 6059B.

22.7.4.3.2.5.2. **(Added-AMC)** Upon arrival at a CONUS offload base, a customs representative meets the aircraft and collects all declarations. Troops will debark under the observation of the customs representative who may make discretionary examination of the baggage. **(T-0)**

22.7.4.4. **(Added-AMC)** Public Health Procedures.

22.7.4.4.1. **(Added-AMC)** When operating from a base without a traffic officer, the AC will ensure all aircrew members and passengers are properly immunized. **(T-0)**

22.7.4.4.2. **(Added-AMC)** The aircraft will be sprayed if required. **(T-0)**

22.7.4.5. **(Added-AMC)** Immigration Procedures.

22.7.4.5.1. **(Added-AMC)** Outbound: No requirements.

22.7.4.5.2. **(Added-AMC)** Inbound: Submit the following to the immigration inspector if carrying civilian passengers. **(T-0)**

22.7.4.5.2.1. **(Added-AMC)** One copy of Customs Form 7507.

22.7.4.6. **(Added-AMC)** Agriculture Procedures:

22.7.4.6.1. **(Added-AMC)** Outbound: No requirement.

22.7.4.6.2. **(Added-AMC)** Inbound: Reference the AMC Border Clearance Guide.

22.7.4.6.2.1. **(Added-AMC)** The command being airlifted will instruct troops that no fresh fruit, milk, milk products, vegetables, plants, plant pests, soil samples, animals, meat, and animal products can be brought into the United States. **(T-0)** All items of troop personal gear/cargo are to be thoroughly cleaned of mud, dirt, sand, and other foreign material before being brought aboard the aircraft. **(T-0)** Personal gear and equipment must be examined for snails and other plant pests to prevent their accidental entry into the U.S. **(T-0)** Before loading, the command responsible for cargo being airlifted will clear vehicles and cargo of snails or other plant pests and of all mud and soil. **(T-0)**

22.7.4.6.2.2. **(Added-AMC)** When required by agricultural quarantine regulations, the FCG, or higher headquarters, the aircraft will receive an aerosol treatment 30-minutes before landing. **(T-0)**

22.7.4.6.2.3. **(Added-AMC)** On arrival, agricultural inspectors inspect the aircraft after troops have disembarked. Aircrew members will assemble remains of in-flight lunches for prompt removal by fleet service personnel. **(T-2)**

22.7.4.6.2.4. **(Added-AMC)** Inspectors examine baggage, equipment, vehicles, and cargo as offloaded. Any items, vehicles, or cargo found to be contaminated are held for such treatment as the inspector may direct (washing, steam cleaning, physical cleaning, or fumigation).

22.7.5. **(Added-AMC)** Customs Pre-clearance Inspection Program. All aircrew members will ensure compliance with Military Customs Pre-clearance requirements. **(T-0)**

22.8. (Added-AMC) Insect and Pest Control.

22.8.1. **(Added-AMC)** Spraying. PICs will ensure required spraying is accomplished according to the AFPMG TG4 (Armed Forces Pest Management Board Technical Guide 4), *Disinsection of Military Aircraft*, Department of Defense FCG, or as directed by higher headquarters. **(T-0)** Certify the spraying on DD3044, *Pre-embarkation Certificate of Disinsection*, or on forms provided by the country transited.

22.8.2. **(Added-AMC)** Procedure at Aerial Port of Embarkation. Pre-embarkation disinsection is the only DoD authorized aircraft disinsection treatment of aircraft flight decks, cabins, and cargo holds. Aircraft will not be sprayed with passengers on board. **(T-2)**

22.8.3. **(Added-AMC)** Responsibility of PIC In-flight. When seeing any insect or rodent infestation of the aircraft in-flight, the destination C2 center, airfield management operations, or airport manager should be informed of the situation before landing so the proper authorities can meet the aircraft. In-flight disinsection is not approved for DoD aircraft.

22.9. (Added-AMC) Dropped Objects. If an externally dropped object is discovered, the aircrew will:

22.9.1. **(Added-AMC)** Notify 618 AOC or the controlling agency as soon as practical; include details of routing, altitude, weather, etc. **(T-2)**

22.9.2. **(Added-AMC)** Notify maintenance at the first military station transited. **(T-2)**

22.10. (Added-AMC) Aircrew Flight Equipment and Dash 21 Equipment Documentation. The PIC or designated representative will:

22.10.1. **(Added-AMC)** Before departing home station or enroute stations, ensure appropriate serviceable protective clothing, aircrew flight equipment and Dash 21 equipment for the entire or remainder of the mission are aboard the aircraft.

22.10.2. **(Added-AMC)** Before departing home station and following enroute crew changes, review AF Form 4076, *Aircraft Dash 21 Equipment Inventory*, to ensure all required Dash 21 equipment has been certified as installed by maintenance, the initial check has been signed by maintenance, and configuration documents match mission requirements.

22.10.3. **(Added-AMC)** Before departing home station and following enroute crew changes, review, sign, and date the AFTO Form 46, *Prepositioned Aircrew Flight Equipment*, to ensure required aircrew flight equipment has been certified as installed by AFE personnel and that configuration documents match mission requirements. Ensure appropriate number and type of life preservers are aboard for overwater missions carrying children and infants. On overwater flights, do not carry more passengers and aircrew members than life rafts will accommodate. **(T-2)**

22.10.4. **(Added-AMC)** Missing Equipment. Aircrew members discovering equipment missing will accomplish the following:

22.10.4.1. **(Added-AMC)** Make an AFTO Form 781A, *Maintenance Discrepancy and Work Document*, entry for equipment found missing or removed at an enroute locations. **(T-3)**

22.10.4.2. **(Added-AMC)** Advise the PIC and determine whether the missing equipment should be recovered or replaced before mission continuation. **(T-3)**

22.10.4.3. **(Added-AMC)** When possible, advise appropriate Aircrew Flight Equipment or C2 agency (or airport management) before mission continuation. **(T-2)**

22.10.5. **(Added-AMC)** Excess Equipment. If more equipment is discovered during the preflight than is annotated on the AF Form 4076 or AFTO Form 46, the total quantity should be annotated in the next vacant column for the item. The ICAO location designator should be entered above the check number of that column.

22.10.6. **(Added-AMC)** Annotate AF Form 4076 and AFTO Form 46 in the next vacant column indicating the quantity remaining for the item. Ensure the ICAO location designator is entered above the check number of that column. Leave the AF Form 4076 and AFTO Form 46 on board the aircraft in the event of an enroute crew change. **(T-3)**

22.11. (Added-AMC) Classified Equipment and Material Security. Classified Equipment and Material security instructions are contained in DoDM5200.01V3_DAFMAN 16-1404V3, *Information Security Program: Protection of Classified Information*. AMCI 16-1404, *Top Secret Control*, establishes minimum requirements for storage of classified information aboard MAF aircraft. When classified equipment is onboard, aircrew should ensure the C2 facility and/or airfield management operations office is aware of the requirement for aircraft security. Before departing for any destination without COMSEC storage facilities, aircrews should contact their local COMSEC managers for guidance.

22.12. (Added-AMC) Flight Deck Congestion and Loose Objects. Aircrew should store only the minimum amount of professional gear required to accomplish the mission on the flight deck. Additional items, to include personal pubs bags, will be secured in the crew rest area or the cargo compartment. **(T-2)** All items will be secured before passing the combat entry point through the combat exit point. **(T-2)**

22.13. (Added-AMC) Fleet Service. Aircraft departure schedule of events should be planned such that Fleet Service items are aboard the aircraft early enough to permit inventory prior to engine start.

Chapter 23 (Added-AMC)

AIRCRAFT SECURITY (N/A FOR OSA/EA, SEE AFMAN 11-2MDSV3)

23.1. (Added-AMC) Standby Aircraft Security. Aircraft hatches and doors should be secure to show unauthorized entry. The PIC will notify the C2 agency the aircraft is sealed and provide them a means to access the aircraft in an emergency. **(T-2)** The forms will be annotated with the time the aircraft was sealed. **(T-2)** The C2 Senior Controller may grant access to a sealed aircraft, but will document time of entry and ensure it remains launch capable. **(T-2)** The PIC or designated representative must be present if access to the aircraft is required and will ensure the aircraft is resealed. **(T-2)** The aircrew pre-preflight portion remains valid if performed by one aircrew, sealed, and flown by another aircrew.

23.1.1. **(Added-AMC)** WG/CCs should develop local procedures for documentation and management IAW TO 00-20-1 and MAJCOM Supplement.

23.2. (Added-AMC) Enroute Security. The planning agency must coordinate with the execution agency to ensure adequate enroute security is available. The PIC will receive a threat assessment and enroute security capability evaluation briefing for areas of intended operation prior to home station departure and should request updates from enroute C2 as required. **(T-2)** If required, a FAS team is assigned to the mission.

23.2.1. **(Added-AMC)** FAS team guidance and aircrew responsibilities are found in IAW DAFI 31-101 and appropriate MAJCOM supplement. The FAS team consists of a minimum of three (two for small aircraft e.g., C-21) US Air Force security force members, but may include more depending on security requirements. The team's travel status is determined by MAJCOM. The team travels in MEP status and is responsible to the PIC at all times. In turn, the PIC is responsible for the team's welfare (transportation, lodging, etc.). Ensure security team members receive a mission briefing and aircraft egress/passenger briefing (as appropriate).

23.2.2. **(Added-AMC)** Arrival. On arrival, the PIC will assess the local situation and take the following actions as required. **(T-2):**

23.2.2.1. **(Added-AMC)** Area Patrol. Area security patrols may be requested from local security forces.

23.2.2.2. **(Added-AMC)** Aircrew Surveillance. During short ground times, armed aircrew members should remain with the aircraft and maintain surveillance of aircraft entrances and activities in the aircraft vicinity.

23.2.2.3. **(Added-AMC)** Inadequate Security. If, in the opinion of the PIC, airfield security is inadequate and the PIC determines the safety of the aircraft is in question, the PIC may waive the FDP limits and crew rest requirements and depart as soon as possible for a base considered reliable. Report movement and intentions to the controlling agency as soon as practical. If a departure is not possible, the aircrew must secure the aircraft to the best of their ability. In no case, will the entire crew leave the aircraft unattended. **(T-2)** The PIC should rotate a security detail among the crew to provide for both aircraft protection and crew rest until relief is available. Request security assistance from the nearest DoD installation, US Embassy, local military or law enforcement agencies as appropriate.

23.2.3. **(Added-AMC)** Entry Control Procedures. Unescorted entry is granted to aircrew members assigned to the mission who possess their home station AF Form 1199 supported by an Entry Access List (EAL) or aircrew orders.

23.2.3.1. **(Added-AMC)** Normally, non-U.S. nationals, such as cargo handlers, can perform their duties under escort and should not be placed on the EAL.

23.2.3.2. **(Added-AMC)** Personnel not on the EAL or aircrew Flight Authorizations must be escorted within the area. **(T-3)**

23.3. (Added-AMC) Anti-Hijacking Preventive Measures. When an AMC aircraft is operating away from home station, the PIC will comply with this chapter and AFI 13-207, *Preventing and Resisting Aircraft Piracy (Hijacking)* (FOUO), as supplemented. **(T-2)** Preventive measures include the following:

23.3.1. **(Added-AMC)** Anti-Hijacking Inspections. The host station passenger processing or manifesting facility should conduct anti-hijacking inspections. Do not board passengers until the PIC is fully satisfied with inspection results. In the absence of qualified passenger service representatives, the PIC will ensure the anti-hijacking inspection of passengers and baggage is accomplished. **(T-2)**

23.3.1.1. **(Added-AMC)** Medical facility commanders are responsible for anti-hijacking inspection of patients.

23.3.1.2. **(Added-AMC)** During exercises or contingencies in support of combat operations involving the movement of large groups of personnel, the unit being supported will manifest passengers and perform anti-hijacking inspections. **(T-2)**

23.3.2. **(Added-AMC)** Weapon Control. Personnel require official authorization IAW DAFI 31-117, *Arming and Use of Force by Air Force Personnel*, to carry weapons aboard military aircraft (e.g., Contingency Exercise, Deployment orders, a memorandum of authorization, credentials, official aircrew orders with a current AF Form 523, *USAF Authorization to Bear Firearms*). Passengers will not carry weapons or ammunition on their person or in hand-carried baggage aboard an aircraft. **(T-2) Exception:** Special agents, guards of the Secret Service or State Department, FAS Team members (including AMC Phoenix Raven), and other individuals specifically authorized to carry weapons in the performance of official duties.

23.3.3. **(Added-AMC)** Troops or MEP aircrew members will not normally retain custody of ammunition on an aircraft. Ammunition will be turned into the troop commander or PIC, and stored in a centralized location for redistribution upon arrival. **(T-2) Exception:** During combat operations, troops may carry unloaded weapons and ammunition on board the aircraft. When the tactical situation dictates, personnel who will engage an enemy force immediately upon deplaning at the objective may carry loaded weapons aboard the aircraft at the discretion of the troop commander/team leader, with the PIC's concurrence. Weapons should remain clear with magazines or clips removed until immediately prior to exiting the aircraft. Weapons will not be breached until clear of the aircraft. **(T-3)**

23.3.4. **(Added-AMC)** AMC Phoenix Raven team members will only be armed in-flight on specifically designated missions identified on the mission detail as "Raven in-flight arming required". **(T-2)**

23.3.5. (Added-AMC) Weapons are considered loaded if a magazine is installed in the weapon. This applies even if the magazine is empty.

23.3.5.1. (Added-AMC) Dummy clips that can be easily identified may be loaded for training at the order of the team leader in coordination with the aircrew.

23.3.5.2. (Added-AMC) If weapons must be cleared, the PIC or designated representative will instruct the individual(s) to:

23.3.5.2.1. (Added-AMC) Move to a safe, clear area at least 50-feet from any aircraft, equipment, or personnel before un-holstering or un-slinging their weapons. (T-3)

23.3.5.2.2. (Added-AMC) Clear weapons IAW standard safety procedures. (T-3)

23.4. (Added-AMC) Preventing and Resisting Hijacking.

23.4.1. (Added-AMC) The Administrator, Federal Aviation Administration (FAA), has exclusive responsibility to direct law enforcement activity related to actual or attempted aircraft piracy (hijacking) in the United States.

23.4.2. (Added-AMC) In taking action during an aircraft hijacking situation, military forces act under military command within the scope of their duties.

23.4.3. (Added-AMC) In the event an aircraft involved in an aircraft hijacking situation is carrying documents, equipment, or material that DoD has determined to be highly sensitive, or weapons of mass destruction, the DoD provides FAA, and where appropriate, the Federal Bureau of Investigation with all pertinent information. Where possible, the FAA consults and cooperates with DoD prior to directing any law enforcement activity.

23.4.4. (Added-AMC) An aircraft is most vulnerable to hijacking when the aircrew is aboard and the aircraft is operationally ready for flight.

23.4.5. (Added-AMC) To prevent the hijacking of military or military contract aircraft, a concerted effort should be made to detect potential hijackers before they board the aircraft.

23.4.6. (Added-AMC) Should preventive efforts fail, any actual attempt to hijack a military aircraft should be resisted in a manner appropriate to the situation.

23.4.7. (Added-AMC) Since air piracy may be committed by political terrorists or by individuals to whom the threat of death is not a deterrent but a stimulus, ordinary law enforcement procedures may be ineffective. Thus, successful conclusion of a hijacking situation and apprehension of the hijackers may require use of specialized law enforcement techniques and procedures.

23.4.8. (Added-AMC) Delaying actions have been most successful in overcoming hijackings without loss of life or property.

23.4.9. (Added-AMC) In the case of an aircraft carrying passengers, the primary concern is the safety of the passengers.

23.4.10. (Added-AMC) Assistance to hijacked civil or military contract aircraft is rendered as requested by the pilot in command of the aircraft and the authority exercising operational control of the anti-hijacking effort.

23.5. (Added-AMC) Initial Hijacking Response. When an act of air piracy involves an Air Force installation or aircraft within the United States, until such time as FAA assumes active direction of anti-hijacking efforts, aircrew will resist all attempts to hijack a military aircraft. **(T-2)** Resistance may vary from simple dissuasion, through deception and subterfuge, to direct physical confrontation, including the prudent use of weapons.

23.5.1. **(Added-AMC)** The following guidelines should be used to counter a hijacking, actual or threatened, while the aircraft is on the ground:

23.5.1.1. **(Added-AMC)** Delay movement of the aircraft to provide time for ground personnel and the aircrew to establish communication and execute coordinated resistance actions.

23.5.1.2. **(Added-AMC)** The authority for determining when ground resistance will be discontinued is vested in the highest available level of command. When adequate communication cannot be established, or when time does not permit, this authority is delegated in the following order:

23.5.1.2.1. **(Added-AMC)** MAJCOM commander/COMAFFOR exercising operational control of the aircraft.

23.5.1.2.2. **(Added-AMC)** MAJCOM commanders in whose AOR the airfield lies.

23.5.1.2.3. **(Added-AMC)** Senior operational commander on scene.

23.5.1.2.4. **(Added-AMC)** PIC in compliance with MAJCOM directives.

23.5.2. **(Added-AMC)** It is DoD policy to not allow a hijacked aircraft carrying weapons of mass destruction to take off.

23.6. (Added-AMC) In-Flight Resistance. After airborne, success in thwarting a hijacking depends on the resourcefulness of the aircrew. Many variables of a hijacking preclude use of any specific counter-hijacking procedure. Some key factors should be evaluated before deciding a course of action to be taken, including the nature of the threat, danger to life or crippling damage to the aircraft in-flight, destination indicated by the hijacker, and the presence of sensitive material onboard. Some counter-hijacking actions the aircrew may consider are:

23.6.1. **(Added-AMC)** Engage the hijacker(s) in conversation in an attempt to calm them and to evaluate what course of action might be effective.

23.6.2. **(Added-AMC)** Dissuade the hijacker.

23.6.3. **(Added-AMC)** Use facts or subterfuge to convince the hijacker intermediate stops are necessary.

23.6.4. **(Added-AMC)** Propose more favorable alternatives, such as landing in a neutral, rather than a hostile, country.

23.6.5. **(Added-AMC)** Exploit any reasonable opportunity to incapacitate or overcome the hijacker physically, including the prudent use of firearms.

23.7. (Added-AMC) Communications Between Aircrew and Ground Agencies. Crews facing a hijacking threat will transmit an in-the-clear notification of hijacking to ATC. If an in-the-clear transmission is not possible, set transponder to code 7500. If unable to set transponder, or if not under radar control, transmit a radio message indicating transponder change to 7500. Notify ground agencies by any means available as soon as practical and follow-up with situation reports as circumstances permit. Covert signals are no longer to be used per FAA guidance.

23.8. (Added-AMC) Forced Penetration of Unfriendly Airspace. Refer to FIH for international signals for air intercept.

23.9. (Added-AMC) Detecting Unauthorized Entry.

23.9.1. **(Added-AMC)** When parking on a secure ramp, the aircraft will normally be left unlocked/unsealed to allow ground personnel immediate access. If, in the PIC's judgement, the aircraft needs to be locked and sealed to detect unauthorized entry, then aircrew should:

23.9.1.1. **(Added-AMC)** Use available aircraft ground security locking devices.

23.9.1.2. **(Added-AMC)** Secure the doors in a manner that would indicate unauthorized entry (e.g., tape inside of doors to airframe so that entry pulls tape loose).

23.9.1.3. **(Added-AMC)** Close and seal the crew entrance door (box car seal). With classified equipment on board (i.e., defensive systems), aircraft security measures require a GSA lock.

23.9.1.4. **(Added-AMC)** Wipe the immediate area around lock and latches clean to aid in investigation of a forced entry.

23.9.1.5. **(Added-AMC)** Report any unauthorized entry or tampering to the Office of Special Investigations (OSI), Security Forces or local authorities, and the C2 agency. Have aircraft thoroughly inspected prior to flight.

23.9.2. **(Added-AMC)** Security awareness is crucial to effective mission accomplishment. Aircrews must always remain vigilant to their surroundings, especially at high threat, low security locations. In addition to normal preflight activities, aircrews must inspect areas of the aircraft not covered by normal preflight duties to include aircraft wheel wells and crew/troop O2 service panels for unauthorized packages, personnel, or other unfamiliar devices. Report any suspicious items to host security forces. Aircrews will maintain a heightened security posture throughout all pre-takeoff activities. **(T-2)**

23.10. (Added-AMC) Passenger Screening. At facilities without an AMC Passenger terminal, or when the passenger terminal is not used, aircrew must ensure thorough baggage screenings and personnel vetting is accomplished. **(T-2)** See [Chapter 26](#), Cargo and Passenger Procedures.

23.11. (Added-AMC) Arming of Aircrew Members. Aircrew members will be armed according to DAFI 31-117, MAJCOM publications, contingency plans and/or tasking messages. The following procedures apply when arming is directed by the appropriate authority:

23.11.1. **(Added-AMC)** Weapons Issue. When crews are directed to be armed by the mission execution authority, the PIC will determine which aircrew members will be armed (at least one flight deck aircrew member and one non-flight deck aircrew member should be armed). **(T-2)** All aircrew members should know who is armed. Before departing home station, obtain weapons, ammunition, box, lock, and key. If an armed aircrew member must leave the crew enroute, the weapon will be transferred to another authorized aircrew member using AF Form 1297, *Temporary Issue Receipt*. **(T-2)**

23.11.1. **(439AW)** Three crew members are required to obtain weapons from the base armory.

23.11.2. **(Added-AMC)** Weapons Carry. Aircrew will carry their weapons in a holster. **(T-2)** The appropriate carry method may depend upon threat considerations, force protection posture, and diplomatic arrangements. When flying missions outside of hostile areas and directed to carry weapons, they should be concealed at all times to prevent identification of armed aircrew members by potential hijackers, or as directed by theater-specific guidance. Aircrew should not wear weapons off the flight line except to and from the C2, armories, and other facilities associated with aircrew duties.

23.11.2.1. **(Added-AMC)** AMC Passenger Terminal Procedures. Armed aircrew members must discreetly identify themselves to AMC passenger service personnel upon arrival at security checkpoints. One aircrew member will present a valid set of Flight Authorization, their military identification card, and AF Form 523 authorizing the carrying of concealed weapons. **(T-2)** Once terminal personnel verify this, they will allow the aircrew member to vouch for the remaining aircrew members. The entire crew will then proceed through the magnetometer without removing objects from their pockets. **(T-2)** This prevents passengers from determining which aircrew members are armed.

23.11.3. **(Added-AMC)** Aircrew Weapons Storage In-Fight. Aircrew members will be armed before beginning preflight, onload or offload duties and until completion of all postflight duties. **(T-2)** When no passengers are on board that necessitate aircrew remain armed, weapons may be stored in the gun box in flight after a satisfactory stowaway check. Aircrew members will rearm before landing **(T-2)** Weapons need not be unloaded before placing them in a gun box.

23.11.4. **(Added-AMC)** Weapons Storage on the Ground.

23.11.4.1. **(Added-AMC)** Aircrews will store weapons and ammunition in the most secure facility available, normally the base armory. **(T-2) Exception:** With C2 approval, aircraft with integrated weapons safes may store weapons and ammunition onboard during enroute ground stops.

23.11.4.1.1. **(Added-439AW)** During a remain overnight (RON) at home station, weapons shall not be stored in the aircraft gun box.

23.11.4.2. **(Added-AMC)** In the event a secure facility is unavailable:

23.11.4.2.1. **(Added-AMC)** Non-stage aircrews may store weapons and ammunition in the aircraft gun box.

23.11.4.2.2. **(Added-AMC)** Stage aircrews should contact C2 for guidance.

23.11.5. **(Added-AMC)** When storing weapons in the gun box:

23.11.5.1. **(Added-AMC)** Weapons should remain loaded.

23.11.5.2. **(Added-AMC)** Inform C2 which aircrew member has the gun box key.

23.11.6. **(Added-AMC)** Aircrew members will ensure they are reissued the same weapon until mission termination at home station. **(T-2)**

23.11.7. **(Added-AMC)** Loading and Transfer of Weapons. Aircrew should load and unload weapons at approved clearing barrels if available; to avoid using a hand-to-hand transfer of loaded weapons to another aircrew member, weapons should be placed on a flat surface if available.

Chapter 24 (Added-AMC)

OPERATIONAL REPORTS AND FORMS

24.1. (Added-AMC) General. This chapter provides guidelines for worksheets, reports, and forms associated with AMC operational activities. Consult governing instruction or contact wing, unit, or local flight safety officers for assistance with safety forms.

24.2. (Added-AMC) Aviation Safety Action Program (ASAP). ASAP is an identity-protected self-reporting system that is integral to reducing mishaps and improving operations and training. ASAP is designed for Airmen to report information and concepts critical to resolving mishap precursors and to share this information across AF aviation communities. The information is used to reduce mishaps through operational, logistic, maintenance, training, and procedural enhancements.

24.2.1. **(Added-AMC)** ASAP reports must not involve an intentional disregard for safety, criminal activity, substance abuse, alcohol, intentional falsification, or UCMJ violations.

24.2.2. **(Added-AMC)** Aircrew members should consider submitting an ASAP report anytime an event arises from an inflight violation or deviation, such as a deviation from an ATC clearance, or anytime a pilot wishes to report a safety of flight event and have their identity protected (can be submitted anonymously). If an aircrew member is required to fill out a Hazardous Air Traffic Report (HATR), AMC In-Flight Emergency and Unusual Occurrence Worksheet (AMC Form 97), or other deviation report, aircrew members are encouraged to fill out an ASAP as well.

24.2.3. **(Added-AMC)** As a guide, aircrew members should consider submitting an ASAP report for the following events, but are not limited to:

24.2.3.1. **(Added-AMC)** Deviation from an FAR or Air Force flight standard.

24.2.3.2. **(Added-AMC)** Anytime guidance in the Tech Order is not followed or operational procedures is violated.

24.2.3.3. **(Added-AMC)** Failing to follow ATC instructions/clearances.

24.2.3.4. **(Added-AMC)** Takeoff or landing without ATC clearance.

24.2.3.5. **(Added-AMC)** Loss of separation.

24.2.3.6. **(Added-AMC)** Altitude or lateral deviations.

24.2.3.7. **(Added-AMC)** Aircraft exceedances (hard landing, airframe overspeed, flap overspeed).

24.2.3.8. **(Added-AMC)** MEL violations.

24.2.3.9. **(Added-AMC)** Rejected takeoffs.

24.2.3.10. **(Added-AMC)** Other safety of flight events.

24.2.4. **(Added-AMC)** Submitters should describe the event in enough detail to be analyzed by the appropriate organizations, to understand the factors involved the events. If applicable, submitters should include human factors, CRM and TEM issues, possible causes, and suggestions for mitigating future similar occurrences.

24.3. (Added-AMC) AF Form 457, *USAF Hazard Report*. The AF Form 457 is a tool to notify supervisors and commanders of a hazardous condition that requires prompt corrective action. For hazardous weather, complete the front side of an AF Form 457 and send it to the parent wing flying safety office. If addressing a computer flight plan deficiency, attach a copy of the AF Form 72, *Air Report* (AIREP). Send your report so the parent unit receives it within 5 days of the event. For more information, see DAFI 91-202, *The Department of the Air Force (DAF) Mishap Prevention Program*.

24.4. (Added-AMC) AF Form 651, *Hazardous Air Traffic Report (HATR)*. The AF Form 651 is a tool to report near midair collisions and alleged hazardous air traffic conditions. See DAFI 91-202 for more information concerning the HATR program.

24.4.1. **(Added-AMC)** DAFI 91-204, *Safety Investigations and Reports*, and DAFMAN 91-223, *Aviation Safety Investigations and Reports*, list HATR reportable incidents.

24.4.2. **(Added-AMC)** The PIC will report the hazardous condition to the nearest ATC agency (e.g., center, Flight Service Station (FSS), control tower, or aeronautical radio station) as quickly as safety allows. Include the following information in the radio call (as appropriate). **(T-2)**

24.4.2.1. **(Added-AMC)** Aircraft identification or call sign.

24.4.2.2. **(Added-AMC)** Time and place (radial/DME of NAVAID, position relative to the airfield, incident, etc.).

24.4.2.3. **(Added-AMC)** Altitude or flight level.

24.4.2.4. **(Added-AMC)** Description of the other aircraft or vehicle.

24.4.2.5. **(Added-AMC)** Advise controlling ATC agency that the PIC will file a HATR upon landing.

24.4.3. **(Added-AMC)** Deadline to file a HATR is 24 hours after event via any communication mode available. If landing airport has a USAF airfield management function, submit completed AF Form 651 to the airfield management officer for forwarding to wing safety office. If landing airport does not have an airfield management office, notify the safety office of the Air Force base nearest to location where the condition occurred, PIC's home base safety office, or as prescribed by overseas MAJCOM. In that case, provide contact sufficient information to prepare AF Form 651.

24.4.4. **(Added-AMC)** Grant individuals who submit a HATR immunity from disciplinary action provided:

24.4.4.1. **(Added-AMC)** If they were the offending party, their violation was not deliberate.

24.4.4.2. **(Added-AMC)** They did not commit an offense punishable under federal or state criminal statute. They did not violate the UCMJ besides failure to obey an Air Force or DoD regulation related to safety of flight.

24.4.4.3. **(Added-AMC)** Their actions did not result in a mishap.

24.4.4.4. **(Added-AMC)** They properly reported the incident using procedures above.

24.5. (Added-AMC) AMC Form 97, *AMC In-Flight Emergency and Unusual Occurrence Worksheet*. The AMC Form 97 is a tool to notify appropriate authorities of any mishap involving aircrew members or aircraft. Unless other MAJCOM guidance directs, PICs will complete all appropriate areas of the form in as much detail as possible. **(T-2)** When notified, MAJCOM C2 agents will inform their supervisor/commander to start investigation and reporting activities IAW DAFI 91-204 and Operation Report 3 (OPREP-3) procedures.

24.5.1. (Added-AMC) PICs will report aircrew member or passenger injury, aircraft damage, or injury/damage to another organization's people or equipment caused by PIC's aircraft/aircrew member. **(T-2)** At a minimum, report the following:

24.5.1.1. (Added-AMC) Any physiological episode (physiological reaction, near accident, or hazard in-flight due to medical or physiological reasons). These include:

24.5.1.1.1. (Added-AMC) Proven or suspected case(s) of hypoxia.

24.5.1.1.2. (Added-AMC) Carbon monoxide poisoning or other toxic exposure.

24.5.1.1.3. (Added-AMC) Decompression sickness due to evolved gas (bends, chokes, neurocirculatory collapse), or severe reaction to trapped gas that results in incapacitation.

24.5.1.1.4. (Added-AMC) Hyperventilation.

24.5.1.1.5. (Added-AMC) Spatial disorientation or distraction that results in an unusual attitude.

24.5.1.1.6. (Added-AMC) Loss of consciousness, regardless of cause.

24.5.1.1.7. (Added-AMC) Death by natural causes of any aircrew member during flight.

24.5.1.1.8. (Added-AMC) Unintentional loss of pressurization, regardless of effects on people on board.

24.5.1.1.9. (Added-AMC) Inappropriate use of alcohol and effects of hangover that affect in-flight duties (crew members only).

24.5.1.1.10. (Added-AMC) Illness (both acute and preexisting), including food poisoning, dehydration, myocardial infarction, seizure, and so forth.

24.5.1.1.11. (Added-AMC) Exposure to toxic, noxious, or irritating materials such as smoke, fumes, or liquids. **Note:** Aircrew members and passengers involved in a physiological episode must see a flight doctor to report the incident as soon as practical. **(T-2)**

24.5.1.1.12. (Added-AMC) A lasing incident. **Note:** Aircrew members and passengers involved in a physiological episode must see a flight doctor as soon as practical. **(T-2)** If direct eye exposure to laser energy is received but no visual disturbance is experienced, report to the nearest flight doctor as soon as possible. If symptoms of visual disturbance after exposure to laser energy are experienced, report immediately to the nearest emergency room.

24.5.1.2. **(Added-AMC)** A human factors related situation, e.g., misinterpretation of instruments; information overload (i.e., tactile, aural, and visual input too fast to permit reasonable analysis/decision); aircrew task saturation (i.e., too many responses/actions required in a short period of time); or confused switchology (i.e., adjacent switches where actuation of wrong switch creates dangerous situation). Anonymous reports are acceptable.

24.5.1.3. **(Added-AMC)** A condition that required engine shutdown, in-flight flameout, engine failure, suspected engine power loss, or loss of thrust that required descent below MEA. Engine failures include, but are not limited to, shrapnel from a failed internal engine component penetrating the engine case, engine case rupture/burn-through, engine nacelle fire, substantial fuel leak, or unselected thrust reversal. Consistent with safety, immediately report incidents that involve multiple engines (may report single-engine incidents upon landing). **Note:** Exclude intentional shutdowns for FCF unless the engine fails to restart.

24.5.1.4. **(Added-AMC)** A flight control malfunction (including the autopilot and trim systems) that results in an unexpected or hazardous change of flight attitude, altitude, or heading. Enter the flag words, "Reportable Flight Control Malfunction" in the AFTO 781A.

24.5.1.5. **(Added-AMC)** Uncommanded or uncontrollable aerial refueling boom movement.

24.5.1.6. **(Added-AMC)** A landing gear malfunction aggravated by failed emergency system or procedures.

24.5.1.7. **(Added-AMC)** A cargo door, ramp, or other door malfunction when intent for flight exists which could affect system integrity.

24.5.1.8. **(Added-AMC)** An in-flight loss of all pitot-static or gyro-stabilized attitude/directional instrument indications.

24.5.1.9. **(Added-AMC)** Any spillage/leakage of radioactive, toxic, corrosive, or flammable material from aircraft stores or cargo.

24.5.1.10. **(Added-AMC)** Conditions that required pilot to depart takeoff or landing surface.

24.5.1.11. **(Added-AMC)** All in-flight fires, regardless of damage.

24.5.1.12. **(Added-AMC)** All bird strikes, regardless of damage.

24.5.1.13. **(Added-AMC)** Incidents that, in the PIC's judgment, are in the interest of flight safety.

24.5.1.14. **(Added-AMC)** All cases of acoustical tile panel damage due to in-flight ice shedding. An AFTO 781A entry is required after encountering conditions favorable for induction icing for an extended period of time.

24.5.1.15. **(Added-AMC)** Any instance of fuel dump during flight.

24.5.1.16. **(Added-AMC)** Failure/deficiency of cargo tie-down equipment.

24.5.2. **(Added-AMC)** The home station safety officer should always be provided a copy of relevant information. All mission and flight related documents, such as flight plans, weather briefings, NOTAMs, Weight and Balance form, etc., should be preserved for collection by appropriate safety officials. The home station safety officer will immediately route a copy of the AMC Form 97 to the appropriate OG/CC and MXG/CC. **(T-2)** PICs will use the following precedence to report mishaps (as soon as feasible after event). **(T-2)**:

24.5.2.1. **(Added-AMC)** The nearest USAF C2 center.

24.5.2.2. **(Added-AMC)** MAJCOM Flight Safety Officer (FSO).

24.5.2.3. **(Added-AMC)** Any FSO.

24.5.2.4. **(Added-AMC)** Any USAF Airfield Management Operations.

24.5.2.5. **(Added-AMC)** WR-ALC/GRVDAA (failure/deficiency of cargo tie-down equipment only).

24.6. (Added-AMC) Report Violations, Unusual Events, or Circumstances. PICs will document events that require them to deviate from AFMAN 11-202V3 (unless waived by competent authority) or alleged navigation errors (include over-water position errors over 24 NMs, border, or ATC violations). **(T-2)**

24.6.1. **(Added-AMC)** Describe deviation(s) using the following report format:

24.6.1.1. **(Added-AMC)** Facts. Report pertinent details of the event.

24.6.1.2. **(Added-AMC)** Investigation and analysis. Report circumstances which required/drove deviation(s).

24.6.1.3. **(Added-AMC)** Findings and conclusions.

24.6.1.4. **(Added-AMC)** Recommendations to prevent recurrence.

24.6.1.5. **(Added-AMC)** Corrective actions taken.

24.6.2. **(Added-AMC)** Include the following attachments with the report:

24.6.2.1. **(Added-AMC)** Formal notification of incident.

24.6.2.2. **(Added-AMC)** AF Form 4327a, *Crew Flight (FA) Authorization*, or approved crew orders.

24.6.2.3. **(Added-AMC)** Aircrew members' official statements (if applicable).

24.6.2.4. **(Added-AMC)** Other pertinent documents submitted in evidence (logs, charts, etc.).

24.6.3. **(Added-AMC)** In addition to above (when aircraft is equipped), PIC should download original flight plan to the data card and turn it into their standardization and evaluation office.

24.6.4. **(Added-AMC)** OG/CC will send the original investigation report to the appropriate MAJCOM within 45 days of the event/notification. **(T-2) Note:** (ANG Only) If inquiries come from the NGB, units will respond to NGB Stan/Eval (NGB/A3M) directly who will in turn notify AMC. If inquiries originate from AMC, units will respond to AMC and courtesy copy NGB/A3M. **(T-2)**

24.6.5. **(Added-AMC)** Use OPREP-3 reporting procedures contained in AFMAN 10-206 for navigation errors over 24 NMs.

24.6.5.1. **(Added-AMC)** When notified of a navigation position error, the PIC (or agency that receives initial notification) will document the circumstances surrounding the incident (using report format below) and ensure C2 agents submit an OPREP-3. **(T-2)**

24.6.5.2. **(Added-AMC)** Include the following information in the report:

24.6.5.3. **(Added-AMC)** The name and location of agency/unit submitting report.

24.6.5.4. **(Added-AMC)** Affected mission identification number.

24.6.5.5. **(Added-AMC)** Reference OPREPs-3 to determine type of event (i.e., state "navigation position error.").

24.6.5.6. **(Added-AMC)** The date, time (GMT), and location (e.g., ARTCC area) of alleged infraction.

24.6.5.7. **(Added-AMC)** Describe facts and circumstances. Include aircraft type and tail number, unit (aircrew's wing or squadron), home base, route of flight, point of alleged deviation, and miles off course.

24.6.6. **(Added-AMC)** PICs will expeditiously report unusual events/circumstances that impact their mission to appropriate MAJCOM agencies. **(T-2)** Reportable events include, but are not limited to, spectrum interference, interception, fuel dumping, multiple engine failure, hostile fire, injury to passenger or aircrew member, etc. This list is not all inclusive. Most events require C2 agents to forward OPREP reports to higher headquarters. In all cases, pass the "who, what, when, where, why, and how" of the incident to a C2 agency.

24.6.6.1. **(Added-AMC)** The Spectrum Interference Resolution Program, covered in DAFI 17-221, *Spectrum Interference Resolution Program*, establishes procedures to combat the effect of Meaconing, Intrusion, Jamming, and Interference (MIJI). PICs who encounter electromagnetic interference (EMI) will report the event to the nearest C2 agency as soon as practical. **(T-2)**

24.6.6.1.1. **(Added-AMC)** Address EMI reports to: HQ AMC SCOTT AFB IL//A6O// and addressees listed in DAFI 17-221. Send reports via electronic message format with the following information in plain text:

24.6.6.1.1.1. **(Added-AMC)** Frequency selected when EMI occurred.

24.6.6.1.1.2. **(Added-AMC)** Equipment affected by EMI. Location of the system. The system function, name, nomenclature, manufacturer with model number or other system description. The operating mode of the system, if applicable (frequency agile, pulse Doppler, search, etc.).

24.6.6.1.1.3. **(Added-AMC)** Description of EMI (noise, pulsed, continuous, intermittent, on so forth).

24.6.6.1.1.4. **(Added-AMC)** Effect EMI had on system performance (reduced range, false targets, reduced intelligibility, data errors, etc.).

24.6.6.1.1.5. **(Added-AMC)** Date(s) and time(s) of EMI.

24.6.6.1.1.6. **(Added-AMC)** Location where EMI occurred (coordinates or line of bearing, if known, otherwise state as unknown.)

24.6.6.1.1.7. **(Added-AMC)** Source of the EMI if known.

24.6.6.1.1.8. **(Added-AMC)** List other units that received interference (if known) and their location or distance and bearing from your location.

24.6.6.1.1.9. **(Added-AMC)** A clear, concise narrative summary on what you know about the EMI, with any actions taken to resolve the problem.

24.6.6.1.1.10. **(Added-AMC)** Whether or not PIC wants expert/technical assistance (include level of security clearance expert requires).

24.6.6.1.1.11. **(Added-AMC)** Specify impact the EMI had on your mission.

24.6.6.1.1.12. **(Added-AMC)** Provide a POC (Name, Rank, DSN/Commercial Phone Number, and Duty hours).

24.6.6.1.2. **(Added-AMC)** C2 agents must prepare an OPREP-3 if EMI is suspected meaconing, intrusion, or jamming, interference sufficient to cause a hazard, or if, in the PIC's judgment, the situation warrants such a report. **(T-2)**

24.6.6.1.3. **(Added-AMC)** PICs serve as classification authority for EMI reports. Evaluate an adversaries' ability to exploit certain systems using EMI and protect information accordingly. PICs on a non-sensitive mission or who judge the EMI to be interference from a non-hostile source need not classify EMI reports unless that report would reveal system vulnerability. Classify interference report(s) at stations located in combat areas or during sensitive military missions.

24.7. (Added-AMC) Petroleum, Oil, and Lubricants (POL) - Aviation Fuels Documentation. AFI 11-253, *Managing Off-Station Purchases of Aviation Fuel and Ground Services*, prescribes Aviation POL (AVPOL) procedures and aircrew responsibilities that ensure correct documentation, form and invoice processing, and program supervision. The U.S. Government AIR Card® is a co-branded commercial purchase card that aircrews use to obtain fuel, fuel related supplies, and ground services at military facilities, DLA Energy Into-plane contract sites or noncontract locations. Vendors can electronically swipe the AIR Card®, make a mechanical imprint, or hand-scribe it onto a commercial delivery ticket or a DD Form 1898, *Energy Sale Slip*. The AIR Card® is the only charge card which DAF personnel are authorized to use to purchase aviation fuel, fuel related supplies and ground services for DAF-owned aircraft. Its use is mandatory at all DLA Energy Into-Plane contract locations that accept the AIR Card® and optional at DoD installations. AIR Cards® are assigned to aircraft, not individuals. Each AIR Card® must remain with the aircraft whose tail number is embossed upon it. Only DAF military and civilian personnel are authorized users of the AIR Card®. In most cases, no charges when refueling at non-Defense Energy Support Center (DESC) contract locations. A list of all AIR-accepting merchants can be found at <https://www.airseacard.com>.

24.7.1. **(Added-AMC)** Responsibilities. Aircrew and maintenance personnel will be familiar with AVPOL procedures and documentation requirements of this chapter. Improper use of the AIR Card® could create financial liability for the purchaser. All pilots are considered to be AIR Card® users and must fulfill all associated responsibilities (e.g., user training) IAW AFI 11-253. **(T-2)**

24.7.2. **(Added-AMC)** Refuel/defuel DAF aircraft at DoD locations whenever possible. If DoD service is not available, purchase fuel from other source(s) in the following priority:

24.7.2.1. **(Added-AMC)** Defense Fuel Supply Center or Canadian into-plane contracts.

24.7.2.2. **(Added-AMC)** Foreign government air forces. **Note:** DoD FLIP enroute supplements identify locations with into-plane contracts.

24.7.3. **(Added-AMC)** AVPOL Forms Documentation and Procedures.

24.7.3.1. **(Added-AMC)** DD Form 1898 is the fuel transaction receipt used for purchases at other DoD locations, including Defense Fuel Supply Center into-plane contract locations. Log and place the DD Form 1898 inside the AF Form 664, *Aircraft Fuels Documentation Log*. The PIC or designated representative will complete this form. **(T-2)** **Note:** If the contractor insists on a unique invoice along with the DD Form 1898, annotate the vendor's invoice with "DUPLICATE DD Form 1898 ACCOMPLISHED."

24.7.3.2. **(Added-AMC)** AF Form 664, *Aircraft Fuels Documentation Log*. Regardless of the refueling method, aircrew members must use the AF Form 664 to document each refueling and ground services transaction that occurs away from the aircraft's home station. The PIC or designated representative will complete this form as required by recording all off-station aviation fuel transactions on the front of the form and placing all copies of vendor receipts and completed DD Forms 1898 inside the envelope. **(T-2)** Receipts from all transactions are turned in according to local guidance. Wing Refueling Document Control Officers (WRDCOs) track these transactions (both aviation fuel and ground services), verify that they are accurate within DoD financial systems, and take appropriate action when errors occur. Use host country forms to effect purchases at foreign military airfields, including "replacement-in-kind" locations. Hand scribe information from the aircraft identaplate on the local form. Log and place a copy inside the AF Form 664.

24.7.3.3. **(Added-AMC)** SF Form 44, *Purchase Order-Invoice-Voucher*, may be used to purchase fuel, ground services and/or other authorized products when no AIR Card® contract is in place. Reference DoDM 4140.25-M, Volume 2, Chapter 16, *Government Card Program Management Office DoD Fleet Card, Air Card, and Sea Card*, for detailed instructions.

24.7.3.3.1. **(Added-AMC)** If an FBO refuses to accept the MSC card, Aircrew will present the SF 44, *Purchase Order-Invoice-Voucher*, as the purchase invoice. **(T-2)** If the FBO also declines use of the SF 44 and uses its own invoice/receipt, the aircrew will complete the SF 44 and attach it to the FBO vendor ticket/invoice **(T-2)** Fuel purchases are documented on a separate SF 44 from ground services and other authorized products since the FBO invoices DESC for the fuel and the customer for non-fuel product and services.

24.7.3.3.1.1. **(Added-AMC)** Copies 1 and 2 of the SF 44 are provided to the FBO. Copy 1 of the SF 44 and one copy of the FBO commercial invoice, if applicable, will be forwarded to the following address by the FBO to bill/invoice DESC: DESC-RRF, Building 1621-K, 2261 Hughes Avenue, Suite 128, Lackland AFB, Texas 78236.

24.7.3.3.1.2. **(Added-AMC)** Copy 3 of the SF 44 and one copy of the FBO commercial invoice, if applicable, are provided to the aircrew. Log and place a copy inside the AF Form 664. Aircrews will present all fuel purchase receipts to the designated aviation squadron Certifying Official and/or Accountable Official upon return to home station to enable timely validation and financial obligation processing into the Fuels Automated System. **(T-2)**

24.7.3.3.2. **(Added-AMC)** SF 44 fuel purchases where the FBO requires cash payment. Cash fuel purchases are only authorized when either the FCG requires cash payment or when FBO locations outside the United States and U. S. Territories refuse MSC card and/or SF 44 invoicing processes. Aircrews required to pay cash for aviation fuel purchases will employ the following procedures. **(T-2) Note:** these procedures do not apply to non-fuel products or services:

24.7.3.3.2.1. **(Added-AMC)** The aircrew will obtain cash from a local DoD Finance source that is charged to an approved treasury suspense account prior to home station departure. **(T-2)**

24.7.3.3.2.2. **(Added-AMC)** Aircrews complete the SF 44 and obtain the FBO fuel vendor annotation in block 11 to confirm total cash amount, and sign and date the SF 44 block 20 and 21. Log and place a copy inside the AF FORM 664. Aircrew will return unused cash to their local DoD Finance source upon return to home station. **(T-0)** Present the completed SF 44 to the appropriate home station administrative personnel for processing (e.g., Wing Refueling Document Control Officer, Finance Office, etc.).

24.7.3.3.3. **(Added-AMC)** SF 44 purchases of ground services and other approved products (not fuel). Complete a separate SF 44 for non-fuel purchases. Provide FBO copies 1 and 2 of the SF 44. The FBO will use copy 1 and one copy of the FBO commercial invoice, if applicable, to directly bill/invoice the purchasing organization. Block 9 of the SF 44 will reflect the organization name and address of the finance office responsible for payment to the FBO. The purchasing organization will make payment to the FBO upon receipt of the invoice from the FBO. Log and place a copy inside the AF FORM 664. If the vendor presents their own form for signature and accepts the SF 44, write the statement "SF 44 Executed" on the vendor's form. Turn in two copies of the SF 44 to the operations officer at home station IAW local procedures.

24.7.3.3.4. **(Added-AMC)** Purchasing Aviation Fuel in Canada. The DoD and Canadian Department of National Defense have signed an MOU allowing DoD aircraft to use the DD Form 1896, *DoD Fuel Identaplate*, when refueling at Canadian airfields with a Canadian National Defense Contract (CNDC). Use the AIR card for purchases at Canadian airports without a CNDC, and for handling services at all Canadian airports. Reference AFI 11-253 for more information on charges and taxes.

24.7.3.3.5. **(Added-AMC)** Use host-country forms to effect purchases at foreign military airfields, including replacement in-kind locations. Hand scribe information from aircraft identaplate on the local form. Log and place a copy inside the AF FORM 664.

24.7.3.4. **(Added-AMC)** DD Form 791, *In-Flight Issue Log*, is a tool to log in-flight offload of fuel. Except for gallons transferred, fill out all blocks on the form. Use eight-digit tail numbers for the tanker and receivers. Log and place a copy inside the AF Form 664 and turn it in IAW local procedures.

24.7.3.5. **(Added-AMC)** AFTO Form 781H, *Aerospace Vehicle Flight Status and Maintenance*, records POL actions for particular airframe IAW applicable directives. The PIC or designated representative will complete the form and submit to maintenance debrief. **(T-2)**

24.7.3.6. **(Added-AMC)** The PIC will verify the AFTO Form 781H is completed and turned into maintenance debriefing following the mission. **(T-2)**

24.7.3.7. **(Added-AMC)** For off-station missions, the PIC will complete or verify accuracy of the SF 44, AF Form 664, AFTO Form 781H, DD Form 1898, and associated fuels receipts then enter them in the AF Form 664 (use eight digits for all USAF aircraft tail number entries). **(T-2)** The PIC will transmit all AF Form 664 information via phone, fax, or message if mission causes him/her to be off-station past the last day of the month. **(T-2)**

24.7.3.8. **(Added-AMC)** Maintenance technicians will, prior to off-station mission or deployment, obtain sufficient fuels transaction forms to complete the mission/deployment. **(T-3)** Unless directed otherwise by the PIC, accurately complete all ground refueling/de-fueling documents and place them inside the AF Form 664.

24.8. (Added-AMC) AMC Form 54, Aircraft Commander's Report on Services/Facilities. The AMC Form 54 is a tool to report level of excellence for services encountered during mobility operations. Be quick to identify outstanding performers and attempt to resolve problems at lowest level practical. PICs should advise affected agency on their intent to submit an AMC Form 54. Provide a copy of the completed form to local station AMC C2 agency. Upon return to home station, PICs will coordinate form with SQ/CC and OG/CC. **(T-2)** For Forms 54 that require AMC coordination, OG/CCs will review and submit AMC Form 54 to AMC/A3. **(T-2)**

24.9. (Added-AMC) AMC Form 196, Aircraft Commander's Report on Crew Member. The AMC Form 196 is a tool to document an aircrew member or mission essential personnel's outstanding, below average, or unsatisfactory performance during a mobility mission. Be quick to identify outstanding performers and attempt to solve problems at lowest level practical (provide local senior leaders opportunity to resolve problems as they occur). Send the report to subject's unit commander.

24.10. (Added-AMC) DD Form 1748-2, Joint Airdrop Malfunction Report (Personnel-Cargo). The DD1748-2 is used to document any airdrop malfunction or incident IAW AFJI 13-210, *Joint Airdrop Inspection Records, Malfunction Investigations, and Activity Reporting*. Consistent with safety, immediately report off-Drop Zone (DZ) drops/extractions to the controlling agency and proper safety channels. PIC or designated representative will complete the DD1748-2 before entering crew rest. **(T-3)**

24.11. (Added-AMC) AF Form 4096, *Airdrop/Tactical Airland/Air Refueling Mission Recap*. The AF Form 4096 is a tool to document details of airdrop or tactical airland missions. PIC or designated representative will complete AF Form 4096 (or command supplement) and submit same to home station tactics office. **(T-2)**

24.12. (Added-AMC) Operational Forms for Boom Operators / Loadmasters. Detailed instructions for the preparation, distribution, and use of the following forms may be found in the governing directive.

- 24.12.1. **(Added-AMC)** DD Form 2131, *Passenger Manifest* (AFI 24-605V2).
- 24.12.2. **(Added-AMC)** DD Form 1385, *Cargo Manifest* (DOD 4500.32R).
- 24.12.3. **(Added-AMC)** CBP 6059B, *Customs Declaration* (DOD 5030.49R).
- 24.12.4. **(Added-AMC)** CBP 7507, *General Declaration* (Outbound/Inbound).
- 24.12.5. **(Added-AMC)** AF Form 4075, *Aircraft Load Data Worksheet*.
- 24.12.6. **(Added-AMC)** AMC Form 148(-2)(G), *Boarding Pass/Ticket/Receipt*.
- 24.12.7. **(Added-AMC)** I-94, *Immigration Form, Arrival/Departure Record*.

Chapter 25 (Added-AMC)

TRAINING AND OPERATING LIMITATIONS

25.1. (Added-AMC) Simulated Instrument Flight. Artificial vision restricting devices are not authorized for any phase of flight. Simulated instrument flight may be flown and logged without the use of a vision-restricting device.

25.2. (Added-AMC) Maintenance Opportune Training (N/A for OSA/EA).

25.2.1. **(Added-AMC)** All aircraft in the enroute system on AMC missions are available for opportune training except those designated non-available in the advisory section of GDSS Form 59, *Mission Itinerary*, by the 618 AOC (i.e., SAAM, 1A1, Phoenix Banner, and Medevac missions). Mission planners will annotate the GDSS Form 59 for those missions not allowed to be used for opportune training. **(T-2)** The enroute maintenance production supervisor will brief the aircraft commander (aircraft of the intention to train, either at the aircraft or at the air mobility command center, prior to entering crew rest. **(T-2)** If a conflict arises between the crew and enroute maintenance teams it should be routed through 618 AOC duty officer/operations director for resolution. **Note:** Aircraft Commander approval is not required.

25.2.2. **(Added-AMC)** Training will not be performed on aircraft carrying hazardous cargo or on CLOSE WATCH missions. **(T-2)** All training will be complete and the aircraft ready for flight not later than 2 hours prior to crew show. **(T-2)** Crews are not required to remain with the aircraft while training is performed.

25.3. (Added-AMC) Practice Emergency Separations. Practice Emergency Separations may be accomplished with passengers on board. Ensure all passengers are seated with seat belts fastened.

25.4. (Added-AMC) Multiple Approaches. Crews may perform multiple approaches and touch-and-go landings on operational airlift Transportation Working Capital Fund (TWCF) and 618 AOC-directed missions provided the following requirements are met:

25.4.1. **(Added-AMC)** Normal touch-and-go limitations apply, and MEPs are briefed of the activity.

25.4.2. **(Added-AMC)** Pre-mission coordination requirements. Activity must be approved by TWCF/618 AOC tasking authority and unit training is charged to unit. As part of pre-mission planning, PICs will contact parent wing current operations and obtain training mission number(s) for use at each enroute location(s) where training events are planned. **(T-3)** In addition, PICs will coordinate with and receive approval from unit OG/CC and the airfield(s) where training is to be accomplished. They will then coordinate with the 618 AOC to ensure adequate ground time is available at planned training locations to allow for planned training events, clearing customs, required crew rest, etc. Once complete, wing current operations will coordinate with 618 AOC to re-cut the mission and add the training mission number(s) in GDSS.

25.4.3. **(Added-AMC)** Upon initial arrival at the training location, close out the current line on the AFTO Form 781 and log the training time on the next line using the appropriate training mission symbol and number.

Chapter 26 (Added-AMC)

CARGO AND PASSENGER PROCEDURES

26.1. (Added-AMC) General. The Loadmaster/Boom Operator coordinates loading or offloading with air terminal operations or the shipping agency; plans loads; provides in-flight services to passengers; and supervises onloading or offloading operations. Performs preflight and postflight of aircraft and systems and computes aircraft weight and balance; provides for safety and comfort of passengers/duty passengers (hereafter, included as passengers such as Space-A)/troops, and security of cargo, mail, and baggage during flight. Prepares and rigs equipment for airdrop, and participates in the aerial delivery of equipment, supplies, and personnel.

26.2. (Added-AMC) Aircraft Concurrent Servicing Operations. Concurrent servicing operations are defined as the simultaneous servicing of fuel or oxygen with any of the following: passengers on board, performance of minor maintenance, fleet servicing, or cargo loading/unloading. Concurrent servicing operations require a refueling supervisor (formerly Concurrent Servicing Supervisor) and other special precautions IAW T.O. 00-25-172. When required, the PIC and refueling supervisor ensure aircrew members and servicing personnel accomplish concurrent servicing IAW T.O. 00-25-172 and DAFI 32-2001, *Fire and Emergency Services (F&ES) Program*. Generally, cargo containing explosives, oxygen, or flammable gasses or liquids will not be loaded or unloaded during concurrent servicing operations. **Exception:** IAW T.O. 00-25-172, C-17 and C-130 aircraft are permitted to load all HAZMAT during concurrent servicing. Simultaneous fuel and oxygen servicing on an aircraft is not authorized. The refueling supervisor coordinates with all personnel involved prior to beginning concurrent operations. Additional coordination procedures including Aeromedical Evacuation Crew Members (AECM) are provided in [Chapter 28](#) of this manual.

26.3. (Added-AMC) Responsibilities for Aircraft Cargo Loading.

26.3.1. (Added-AMC) AMC Designated Stations:

26.3.1.1. (Added-AMC) Aerial port personnel are responsible for selecting cargo and mail for airlift, promptly completing documentation, palletizing cargo, load planning (as required), computing load distribution, and moving cargo to and from the aircraft to meet scheduled departure. Before starting loading operations, they will advise the Loadmaster/Boom Operator of destination, size, weight, and types of cargo (classified, hazardous, etc.) to permit proper positioning. **(T-2)** They will also coordinate traffic activities affecting loading and offloading, and assign sufficient aerial port loading personnel. **(T-2)** Aerial port personnel are responsible for safe positioning of Material Handling Equipment (MHE) and cargo to or from the aircraft cargo door, ramp or auxiliary ground loading ramps. Under the supervision of the Loadmaster/Boom Operator, aerial port personnel will assist in preparing the aircraft for cargo loading, stow loading equipment if the aircraft is not to be reloaded, physically load the aircraft, tie down cargo and equipment, release tie down and physically offload cargo. **(T-2)** During loading/unloading operations, load teams will have positive control of cargo until it is secured to the aircraft rail system/floor or material handling equipment. **(T-2)**

26.3.1.2. **(Added-AMC)** The Loadmaster/Boom Operator is responsible for aircraft preflight, load planning (as required), certifying load plans, preparing weight and balance documentation, operating aircraft equipment, and supervising cargo tie down. The Loadmaster/Boom Operator coordinates with the load team chief to validate the cargo against manifests, supervises and directs on/offloading and is responsible for safe movement of cargo into and out of the aircraft. The Loadmaster/Boom Operator will notify the PIC, C2, or terminal operations officer if loading personnel are injured or cargo, aircraft equipment, or aircraft structure is damaged during on/offloading. **(T-2)** The Loadmaster/Boom Operator will brief the PIC on any hazardous cargo and jettison ability prior to engine start. **(T-2)**

26.3.1.3. **(Added-AMC)** Loads planned by qualified load planners will be accepted by the aircraft Loadmaster/Boom Operator and loaded aboard the aircraft as planned, unless the load or any portion of it will compromise flight safety or does not comply with applicable aircraft technical orders or USAF/MAJCOM publications. **(T-2)** If cargo is refused or rearranged for these reasons, forward all applicable information, including a copy of the load plan, to MAJCOM Stan/Eval through Stan/Eval channels. **(T-2)** AMC personnel attach an AMC Form 54. **Exception:** The Loadmaster/Boom Operator may deviate from load plans to accommodate additional passengers, facilitate ease of on/offloading of cargo and to alleviate unnecessary aircraft reconfiguration without submitting documentation. The Loadmaster/Boom Operator must take into consideration the next station's cargo configuration requirements and will ensure the aircraft is in proper weight and balance limits. **(T-2)** A new load plan is not required.

26.3.1.4. **(Added-AMC)** The Loadmaster/Boom Operator is the on-scene expert for load planning and accepting cargo for airlift. Some loads are not specifically detailed in applicable directives and require the designated aircrew member to use his/her best judgment based on training, experience, and knowledge to determine the best and safest method of loading the cargo. When difficulties arise, they should seek the advice of other personnel (i.e., squadron, group, wing, qualified Aerial Port personnel, or MAJCOM Stan/Eval personnel).

26.3.1.4.1. **(Added-AMC)** Some non-standard cargo/equipment not contained in aircraft loading manuals requires certification for air shipment. The shipper will provide a copy of the certification to the designated aircrew member prior to loading. **(T-2)** If the certification letter with loading instructions/requirements is not provided to the designated aircrew member, the cargo should be carefully considered prior to accepting the cargo for airlift. Contact Air Transportability Test Loading Agency AFLCMC/EZFC (ATTLA) at Wright Patterson AFB, OH, (937) 255-2330 or MAJCOM Stan/Eval for questions concerning cargo certification. ATTLA certification is required for:

26.3.1.4.1.1. **(Added-AMC)** Items that operate in flight.

26.3.1.4.1.2. **(Added-AMC)** Non-palletized items with questionable structural integrity or items with significant damage to the frame or structural components (e.g., battle damaged equipment).

26.3.1.4.1.3. **(Added-AMC)** Items that exceed the allowable loading limits of the aircraft as described in the applicable aircraft TO 1C-XXX-9.

26.3.1.4.1.4. **(Added-AMC)** Items that require special equipment or loading procedures not listed in the applicable aircraft TOs.

26.3.1.4.1.5. **(Added-AMC)** Items designed to interface with the aircraft rail systems (e.g., LSA™ adapters), not contained in the applicable aircraft TO.

26.3.1.4.1.6. **(Added-AMC)** Any type of watercraft, fixed-wing and rotary-wing aircraft not identified in the applicable aircraft TO.

26.3.1.4.1.7. **(Added-AMC)** Enclosed items (airtight containers, on-board tanks, etc.) not designed with pressure relief devices or items that cannot be configured in a way to allow for aircraft cabin pressure changes.

26.3.1.4.1.8. **(Added-AMC)** Items that cannot be restrained using standard restraint procedures listed in the aircraft's TO or items requiring specific restraint procedures.

26.3.1.4.2. **(Added-AMC)** ATTILA certifications for cargo remain valid until superseded or rescinded. Cargo offered for airlift utilizing an ATTILA certification is considered a T.O. 1C-MDS-9, Chapter 6 equivalent and will not be rejected for airlift unless safety is compromised, or the item has been altered from the approved certification. **(T-2)** One-time ATTILA airlift approvals are annotated on the certification letter. The aircraft designated aircrew member is the final authority in determining the validity of certifications.

26.3.2. **(Added-AMC)** Locations Without AMC Air Terminal or Traffic Personnel. The shipper assumes responsibilities and provides sufficient qualified personnel and MHE for on/offloading. Boom Operator/Loadmaster responsibilities and authority remain the same.

26.3.3. **(Added-AMC)** DD Form 2133. During JA/ATT, SAAM, USAF mobility, and contingency missions, the Loadmaster/Boom Operator can accept DD Form 2133 as valid pre-inspection of equipment being offered for air shipment. This form, validated by two joint inspector signatures (user and transporting force), may be used in lieu of applicable portions of the vehicle inspection portion of the applicable loading checklist. However, this does not relieve the Loadmaster/Boom Operator from ensuring accompanying loads are secured prior to takeoff. The DD Form 2133 will not be used to document preparation of hazardous materials. **(T-2)** This will be accomplished using the Shipper's Declaration for Dangerous Goods.

26.3.4. **(Added-AMC)** Passenger Hand-Carried Items. With the exception of deploying personnel, all passenger hand-carried items should be of a size to fit under the seat and must not obstruct the safety aisle(s). Any items that do not fit under a seat or obstruct an aisle will be stowed with checked baggage and secured for flight. **(T-3)**

26.4. (Added-AMC) Pre-Mission and Preflight Duties.

26.4.1. **(Added-AMC)** Cargo Missions.

26.4.1.1. **(Added-AMC)** The Loadmaster/Boom Operator will coordinate with aerial port personnel to establish loading times. **(T-2)** Loading times that differ from the normal pre-departure sequence of events will be established, with PIC coordination, before the designated aircrew member enters crew rest. **(T-2)** Loading time is governed by the type of load and complexity of loading procedures (bulk, palletized, etc.) not by port saturation or management of aerial port workload levels. When reporting for duty, the Loadmaster/Boom Operator will check-in with the Air Terminal Operations Center or other designated location to obtain load brief and assist in load planning as required. **(T-2)**

26.4.1.2. **(Added-AMC)** Proper cargo documentation will accompany each load. **(T-2)** A consolidated statement (manifest) will be delivered to the aircraft prior to departure. **(T-2)** **Exception:** If one is not available due to a lack or failure of the manifest processing equipment. In this case, a cargo listing or load plan with Transportation Control Numbers will accompany the load. **(T-2)**

26.4.1.3. **(Added-AMC)** Tiedown equipment.

26.4.1.3.1. **(Added-AMC)** Aerial ports ensure aircraft are equipped with required, serviceable, tiedown quantities specified in each aircraft Addenda A. Tiedowns are unit funded and remain on aircraft to be utilized in support of on-board requirements. Aerial Ports do not perform one-for-one swaps on aircraft. The first available Aerial Port with sufficient tiedown assets can be used to resupply aircraft, IAW applicable aircraft addenda, when depleted of tiedown at a previous station due to mission requirements.

26.4.1.3.2. **(Added-AMC)** Loadmaster/Boom Operator/Designated Representatives will conduct a physical tie-down inventory on aircraft and make appropriate adjustments IAW applicable AFMAN 11-2MDS Addenda A requirements, but inventories will not delay aircraft departures. **(T-3)** **Note:** Home stations may leave addenda A authorized tiedown on returning aircraft unless directed to move for necessary operational or maintenance requirements (i.e., depot-level maintenance).

26.4.1.3.3. **(Added-AMC)** Commercial Cargo Straps. Do not use commercial cargo straps. **(T-2)**

26.4.1.3.4. **(Added-AMC)** Do not use MB-1 chains with “W-Italy” stamped on hook.

26.4.1.3.5. **(Added-AMC)** Ratchets. Ratchet devices stamped: PECK & HALE, LLC, CGU-1/B 5000 LBS CAP. 94658 6MRW/ 1465B with white unmarked strap will not be used. **(T-2)** Any deficient devices found on the cargo/aircraft should be turned into aerial port/maintenance personnel for final disposition.

26.4.1.3.6. **(Added-AMC)** Defective/prohibited tiedown equipment. Loadmasters/Boom Operators will remove and write-up in AFTO Form 781 any tiedown equipment identified as unserviceable. **(T-2)** Quarantine any tiedown equipment involved with an abnormal occurrence (releases, loosens, or breakage) and turn into Safety inspection team, aircraft incident investigator(s) or Stan/Eval for disposition. **(T-2)**

26.4.1.4. **(Added-AMC)** HCU-7A/E low-profile side nets are approved for use and are the preferred net for use with bulk low-profile cargo.

26.4.1.5. **(Added-AMC)** Preflight Duty Crew Operations. Preflight Duty Loadmaster/Boom Operator/designated aircrew member will receive crew rest prior to being assigned/scheduled for preflight/loading operations. **(T-2)** All necessary preflight checklists will be accomplished for the assigned/scheduled mission for that aircraft. **(T-2)** When sealing the aircraft after completion, an info note will be entered in the AFTO Form 781A, indicating preflight accomplishment, cargo compartment configuration and any additional information deemed necessary for the oncoming primary aircrew member(s). **(T-2)**

26.4.1.6. **(Added-AMC)** Ramp Coordinator (RAMPCO) Loadmaster Operations. This duty may be utilized by Mission Commanders/mission execution cells for aircraft launch operations when deemed necessary. Duties may include load planning, mission preparation, or maintenance coordination for successful mission execution.

26.4.1.7. **(Added-AMC)** Wireless headsets are authorized for use IAW MAJCOM guidance.

26.4.2. **(Added-AMC)** Passenger Missions:

26.4.2.1. **(Added-AMC)** Seat Availability. PICs will maximize seat availability on all missions, when possible. **(T-2)** The maximum number of passengers may be limited by aircrew complement, available life support equipment, operable seats with seat belts, baggage securing capabilities, aircraft configuration, latrine capacity, and a thorough assessment of ORM based on mission requirements. **(T-2)**

26.4.2.1.1. **(Added-AMC)** The PIC or designated aircrew members will inform port personnel of any maintenance, crew complement, or operational mission requirements that will negatively affect number of seats available when port representatives conduct the cargo/passenger upload briefing. **(T-2)** Late takeoffs caused by configuration changes should be documented as "Passenger Service/Reconfiguration."

26.4.2.2. **(Added-AMC)** Manifesting. Manifesting. Passenger service personnel (or airfield management personnel at non-AMC bases) manifest passengers at locations with an AMC passenger processing activity.

26.4.2.2.1. **(Added-AMC)** The PIC and designated aircrew member are responsible for ensuring all passengers are properly manifested. Aircrew should file a copy of the DD Form 2131, *Passenger Manifest*, with the flight plan, or annotate the location of the manifest on the flight plan.

26.4.2.2.1. **(439AW)** Accept the passenger manifest from the passenger service representative only after all passengers are seated and the total passengers on board agree with the total number on the manifest.

26.4.2.3. **(Added-AMC)** Passenger Briefings. All passenger briefing(s) contained in Flight Manual(s)/checklist(s) will be accomplished for any mission with passengers aboard, regardless of passenger category (i.e., DV, Duty passenger, Space Required passenger, Space available passenger, Mission Essential Passenger, etc.) or manifest documenting method (passenger manifest, Flight Authorizations, etc.). **(T-2)**

26.4.2.4. **(Added-AMC)** Passenger and Baggage Processing. At locations without an AMC passenger processing activity or equivalent, the aircrew must ensure passenger service functions are performed for their passengers **(T-2)** These functions include manifesting, anti-hijacking processing, and ensuring visa/passport requirements are met. When the aircrew accomplishes manifesting, anti-hijack processing is also completed by the aircrew IAW AFI 13-207, *Preventing and Resisting Aircraft Piracy (Hijacking)*. The Transportation Security Administration provides the latest guidance on passenger screening and carry-on allowances which can be downloaded at <https://www.tsa.gov/travel/security-screening>.

26.4.2.4.1. **(Added-AMC)** All passengers will be vetted through the GATES program to ensure compliance with the DHS No-Fly list IAW Defense Transportation Regulation Part 1. **(T-0)** If passengers cannot be vetted through the GATES system they will not be allowed on-board the aircraft. **(T-0)** Contact the Aerial Port Control Center (618 AOC/GADPA), DSN 779-0350/0355 or commercial 618-229-0350/0355 for assistance. Aircrew will not delay take-off to accomplish this process when manifesting planeside Space-A passengers. **(T-2) Note:** N/A for authorized MEP. Contact the 618 AOC/GADPA if any questions arise such as who may travel to specific locations or for passport/visa requirements. Aircraft operating within other MAJCOMs which have operational C2 over that aircraft should contact the appropriate AMOCC for specific details.

26.4.2.4.2. **(Added-AMC)** Carry-on restrictions apply to all passengers required to process through the passenger terminal, or equivalent when at a non-AMC location. Carry-on restrictions do not apply to personnel not required to process through the passenger terminal or equivalent when at non-AMC locations. This includes:

26.4.2.4.2.1. **(Added-AMC)** Aircrew members listed on the Flight Authorization for that mission.

26.4.2.4.2.2. **(Added-AMC)** MEP for that mission.

26.4.2.4.2.3. **(Added-AMC)** OSA/EA passenger not required to process through the Passenger Terminal (primary DV, spouse/party, aides, and security details only).

26.4.2.4.2.4. **(Added-AMC)** Duty passengers on ANG/AFRC mission numbers.

26.4.2.4.3. **(Added-AMC)** Consider baggage contained in areas not readily accessible in flight as checked baggage, even if carried to the aircraft by passengers. This includes, but is not limited to segregated baggage compartments, floor loaded baggage tied down with cargo straps/chains, palletized baggage, and baggage in baggage bins.

26.4.2.4.4. **(Added-AMC)** Brief passengers that baggage in these areas will not be accessed in flight. If these passengers attempt to access checked baggage in-flight, all attempts will be made to stop the passengers from accessing the baggage. Land the aircraft at the nearest suitable airport (preferably a military facility) with appropriate law enforcement personnel. Request assistance in removing the passenger(s) and accompanying baggage from the aircraft. Comply with all law enforcement direction.

26.4.2.5. **(Added-AMC)** Aircrew should ensure the Auxiliary Power Unit/Air Turbine Machine/Gas Turbine Compressor is shut down prior to boarding if required for safe boarding of passengers or if passengers are unable to obtain adequate ear protection. A passenger service representative or aircrew member will assist passengers at the bottom of the steps/stairs, and the designated aircrew member will assist in seating passengers. **(T-2)** DVs, passengers requiring assistance, and families should be boarded first to minimize separation. Make every effort to seat families together. Ensure that only adult, English speaking, physically capable, and willing passengers are seated next to emergency exits. **(T-2)** Do not seat mothers with infants, or children under 15 years old, in seats adjacent to emergency exits. **(T-2)**

26.4.2.6. **(Added-AMC)** When children under the age of two are accepted as passengers, their sponsor has the option to either hold the child or place him/her in a Department of Transportation-approved Infant Car Seat (ICS). Although the use of ICS for children processed through AMC owned or controlled terminals (including gateways) is no longer mandatory, all passengers (duty and Space-A), regardless of age, are required to be assigned their own seat. **(T-2)** This policy provides an infant and their sponsor with a dedicated seat allowing the use of an ICS at the sponsor's discretion; this mirrors current FAA (commercial) standards. The FAA has banned the use of booster seats, harnesses, and vest child restraints.

26.4.2.6.1. **(Added-AMC)** Passengers may hand-carry their ICS. If used, secure the ICS to the seat using the seat belt. Adults will not hold the ICS during any phase of flight. **(T-2)** In the event of turbulence or emergency landing, it is highly recommended for infants to be secured in an ICS. To prevent blocking an exit route, the ICS should not be used in an emergency exit/aisle (for missions equipped with airline style seat pallets) seat. If the aircraft is configured with side-facing seats, aircrew must ensure the ICS is adequately secured. **(T-2)** The design of the sidewall seatbelt makes it difficult to remove enough slack to secure the ICS. Aircrew members may need to reroute the seatbelt by crossing the belt, between the sidewall and the seatback webbing, routing the belt back through the webbing and through the securing point on the ICS. When removing slack from the seatbelt the buckle should remain on one side or the other so that it can be easily accessed for release. The PIC is the final authority for determining whether the ICS is adequately secured.

26.4.2.7. **(Added-AMC)** Decisions regarding eligibility or acceptance of a passenger with disabilities for flight should be determined at the lowest level possible. Problems concerning eligibility or acceptance that cannot be resolved locally must be reported (circumstances, chronology, names, units, etc.) to AMC/A4T. **(T-2)** For time sensitive problems, telephone 618 AOC/GADPA DSN 312-779-0350, commercial (618) 229-0350.

26.4.2.8. **(Added-AMC)** Aircrew will download the baggage of no-show passengers and those removed from a flight. **(T-2)** In the case of SAAM or exercise missions at non-AMC locations, aircrew should coordinate with CRG or deploying unit CC to decide if downloading of baggage is necessary.

26.4.2.9. **(Added-AMC)** If an extended delay occurs, aircrew should ensure all food items are removed from the aircraft by fleet service and returned to the flight kitchen.

26.5. (Added-AMC) Passenger Handling.

26.5.1. **(Added-AMC)** The Loadmaster/Boom Operator/designated aircrew member is a key figure in good passenger relations. The following rules should be observed:

26.5.1.1. **(Added-AMC)** Address passengers by proper titles.

26.5.1.2. **(Added-AMC)** Avoid arguments and controversial subjects, national or international politics, criticism of other personnel or organizations.

26.5.1.3. **(Added-AMC)** Offer services or perform duties in a manner indicating a personal interest and willingness to help.

26.5.1.4. **(Added-AMC)** Comments by the aircrew members and the manner in which they are made often determine passenger attitudes about the flight. Remember that passengers are individuals; address them collectively only when making announcements.

26.5.1.5. **(Added-AMC)** Ensure aircrew member's and MEP's entertainment media are of an appropriate nature.

26.5.2. (Added-AMC) In-Flight Passenger Procedures.

26.5.2.1. **(Added-AMC)** Passengers may move about the cabin after reaching cruise altitude; however, aircrew members' judgment should be exercised on the number of passengers allowed out of their seats at any one time. Aircrew should encourage passengers to remain seated with their seat belts fastened. Due to concern for their safety, passengers should not be allowed to lounge or sleep on cargo, cargo floor or baggage, or to congregate around the galley and lavatory.

26.5.2.2. **(Added-AMC)** Aircrew should make frequent checks on cabin temperature, passengers with small children, and cleanliness of the cabin and lavatories.

26.5.2.3. **(Added-AMC)** Aircrew will not allow passengers to tamper with cargo or emergency equipment, or be permitted access to checked baggage. Passengers will not lounge or sleep under or on top of cargo, baggage bins, or baggage secured to the floor. **(T-2)**

26.5.2.4. **(Added-AMC)** On long flights, particularly during hours of darkness, aircrew should use all possible means to make passengers comfortable, to include dimming and extinguishing unnecessary cargo compartment lights.

26.5.2.5. **(Added-AMC)** Passengers will not be permitted access to the flight deck unless approved by the PIC. **(T-2)**

26.5.3. **(Added-AMC)** Body Fluid/Bio-Hazard Clean-Up. Aircrew personnel are the first line of defense when human fluids/waste contaminate aircraft. Because of the potential health risk to passengers and crew, aircrew members will ensure, to the best of their ability, all body fluids/waste are cleaned up immediately when it does not detract from their primary duties. **(T-3)** Designated aircrew members should request troop commanders, team leaders, or traveling companions assist with in-flight clean-up whenever possible. When it is not possible for aircrew personnel or passengers to clean-up during flight, aircrew will request Bio Environmental meet aircraft to provide a determination of cleaning responsibilities. **(T-3)**

26.5.3.1. **(Added-AMC)** The clean-up will be accomplished using kits provided by Fleet Service IAW the following procedures. **Note:** When traveling to a location without Fleet Service capability, aircrew should coordinate with departure base Fleet Service to build and deliver enough kits for the mission. Number of kits is determined by tasked unit personnel.

26.5.3.1.1. **(Added-AMC)** Cordon off the contaminated area if possible. **(T-3)**

26.5.3.1.2. **(Added-AMC)** Use non-sterile vinyl or nitrile gloves that cover part of the arm. **(T-3)**

26.5.3.1.3. **(Added-AMC)** Wear safety goggles/glasses/a disposable face shield and the equivalent of a surgical mask to protect the mucous membranes from the splashing of blood-borne pathogens that may exist. **(T-3)**

26.5.3.1.4. **(Added-AMC)** Wear disposable coveralls and footwear covers to protect skin, clothing and footwear if available. **(T-3)**

26.5.3.1.5. **(Added-AMC)** Apply paper towels or other absorbent material to the fluid to absorb the fluids and minimize the spill area. **(T-3)**

26.5.3.1.6. **(Added-AMC)** Use fluid from clean-up kit. **(T-3)**

26.5.3.1.7. **(Added-AMC)** Place all material into bag. **(T-3)**

26.5.3.1.8. **(Added-AMC)** Do not touch the mouth or face area with soiled hands or gloves. Wash hands thoroughly with soap and water after cleaning or clean hands with an alcohol-based hand gel (at least 60% alcohol) when soap and water are not available. **(T-3)**

26.5.3.1.9. **(Added-AMC)** Annotate type of body fluid/biohazard cleaned-up and location in AFTO 781A, *Aircraft Maintenance Discrepancy and Work Document*. **(T-2)**

26.5.4. **(Added-AMC)** Meal Service. Loadmaster/Boom Operator/Designated Aircrew member will ensure each passenger receives the meal ordered by verifying the passenger's AMC Form 148(-2)(G). **(T-2)** **Exception:** When purchased meals are unable to be furnished to passenger(s), the designated aircrew member will annotate the individual's AMC Form 148(-2)(G) to reflect reimbursement is authorized and inform the passenger(s) they may receive refunds at the passenger service counter at the next station, originating location, or destination terminal. **(T-2)**

26.5.4.1. **(Added-AMC)** Box Meals. After takeoff, box meals should be distributed to passengers who boarded at the previous station. This lessens confusion when flight segments are short and more passengers board at subsequent stations. Box meals should be served in the following sequence:

26.5.4.1.1. **(Added-AMC)** Small children requiring assistance.

26.5.4.1.2. **(Added-AMC)** DV.

26.5.4.1.3. **(Added-AMC)** All other passengers.

26.5.4.2. **(Added-AMC)** Frozen/cooked meals are normally not accepted for passengers, unless authorized for specific mission.

26.5.4.3. **(Added-AMC)** Liquids or hot foods should not be served during turbulence.

26.5.4.4. **(Added-AMC)** Complimentary snacks and beverages are authorized on TWCF-funded missions (including AFRC flown missions) for passenger consumption only. Complimentary snacks are not authorized on JA/ATT, Joint Chief of Staff (JCS) exercises, or SAAM missions. The squadron or port operations officer will ensure snacks and beverages are placed on board when departing AMC stations. **(T-2)** When departing from other stations and no snacks or beverages are placed onboard, the Loadmaster/Boom Operator/designated representative may obtain required snacks and beverages from the local in-flight kitchen.

26.6. (Added-AMC) Emergency Airlift of Personnel. Emergency airlift of noncombatants or combat troops will be directed by controlling combatant commander, MAJCOM/A3, or DIRMBOFOR, and may be accomplished without the use of individual seats or safety belts. If baggage allowance is not directed by C2, the PIC will determine allowances.

26.6.1. **(Added-AMC)** If sufficient emergency oxygen sources will not be available, limit altitude for emergency airlift to FL250. **(T-2)**

26.6.2. **(Added-AMC)** Aircraft-specific guidance will be published in applicable AFMAN 11-2MDSV3.

26.7. (Added-AMC) Transportation of Service Animals, Pets, and Other Animals. Refer to DoDI 4515.13, *Air Transportation Eligibility*. Pets includes dogs and cats only. Pet movement aboard DoD organic aircraft is authorized for PCS moves only when such aircraft provide the only service to a location.

26.8. (Added-AMC) Enroute and Post-flight Onloading and Offloading.

26.8.1. **(Added-AMC)** At stations where a crew change is made and loading or offloading is required, the inbound designated aircrew member is responsible for offloading the aircraft; the outbound designated aircrew member is responsible for planning and loading the outbound load. **(T-2)**

26.8.2. **(Added-AMC)** At crew stage points, Loadmaster/Boom Operator/designated aircrew members will inform relief personnel about passenger and aircraft equipment, any missing items, the location of through cargo, mail and baggage, any information pertinent to through passengers, and cargo requiring special consideration (hazardous material, perishables, etc.). **(T-2)** If unable to conduct a face-to-face briefing, written instructions should be left with the cargo manifest or local C2.

26.8.3. **(Added-AMC)** Aircrew will assist passengers in deplaning. **(T-2)** If BLUE BARK, DVs, COIN ASSIST, or couriers are onboard, the Loadmaster/Boom Operator/designated aircrew member will inform the traffic or protocol representative respectively; and notify arrival base C2 using Flight Plan VIP Codes from General Planning FLIP. **(T-2)**

26.8.4. **(Added-AMC)** TWCF-Funded Passengers on Delay Aircraft. If the aircraft delay is at a location where DoD facilities and TWCF funds are available, payment for lodging (contract or on-base) and other required support is charged to local TWCF funds via miscellaneous pay account, such as Prime Knight. If the aircraft delay is at a location where TWCF funds are not available (regardless if DoD facilities are available or not), the aircraft commander will utilize SF 44 authority to acquire the necessary meals, quarters, and transportation for only the group travel status passengers. Upon return to home station, the aircraft commander will turn in the SF 44 to the local FMA office. Supporting documentation should include a copy of the service members' group travel orders along with applicable invoices/receipts for lodging, meals, and other required support.

26.9. (Added-AMC) Cargo Validation On/Offloading Procedures and Format. Loadmaster/Boom Operator/Designated Aircrew members should use the following format when tasked to validate a new loading procedure or when encountering any cargo judged to require special or specific on/offloading or tie-down procedures not currently listed in Flight Manuals. After completion, this information should be sent through standardization channels to MAJCOM Stan/Eval.

26.9.1. **(Added-AMC)** General Loading Data:

26.9.1.1. **(Added-AMC)** Nomenclature of item. Give military or civilian name, national stock number (NSN), and a brief description of the item (i.e., dump truck, medical van, etc.).

26.9.1.2. **(Added-AMC)** Dimensions (in inches). Length, width, and height. Rough drawing or picture of the unit pointing out critical dimensions, projections, overhangs, etc.

26.9.1.3. **(Added-AMC)** Weight (in pounds). GW; individual axle weight; or data plate weight if possible.

26.9.2. **(Added-AMC)** Manpower Requirements. Number of loading crew personnel and designated aircrew member required to on/offload cargo and their position to observe clearances, if required.

26.9.3. **(Added-AMC)** Equipment and Material Requirements. Special equipment and material required to on/offload cargo (i.e., cargo winch, prime mover, shoring requirements, etc.).

26.9.4. **(Added-AMC)** Aircraft Configuration Required.

26.9.5. **(Added-AMC)** Preparation of Cargo for Loading. Components that must be removed or reconfigured to on/ offload cargo (i.e., helicopter struts, exhaust stacks, cabs, etc.).

26.9.6. **(Added-AMC)** On/offloading Procedures.

26.9.7. **(Added-AMC)** Location of Tiedown Points.

26.9.8. **(Added-AMC)** Comments.

26.10. (Added-AMC) Loading Rucksacks. During administrative (training) deployments, rucksacks may be loaded on deploying vehicles or palletized. During tactical deployments into a FOB/OB, rucksacks not loaded on vehicles will be carried by the individuals onto the aircraft. **(T-2)** Allocate pallet space on the load plan for loading rucksacks.

26.11. (Added-AMC) Additional Cargo Considerations.

26.11.1. **(Added-AMC)** Lithium Batteries and Pyrotechnic Material (Class/Division 1.3G). Aircraft halon fire extinguishers are suitable when transporting only rechargeable (lithium-ion) batteries. These extinguishers only help reduce the intensity of the fire until the lithium and pyrotechnic material expends itself. **Note:** Aircraft potable water will not be used as a fire suppression system for lithium batteries or pyrotechnic material. **(T-2)** Water presents a hazard to electronic equipment located on the aircraft and is ineffective in less than a large quantity.

26.11.2. **(Added-AMC)** ISU-90 Containers. IAW AMCI 24-6051V1, *AMC Aerial Port Expeditor (APEX) Aircraft Loading Program*, and/or DTR Part II, MAJCOM inspectors and aircrew are authorized access to all cargo containers placed on aircraft unless exempted from full inspection in writing as “sight sensitive.” **Note:** Exempted cargo may still be visually inspected for hazardous materials and to ensure safety of flight. The key or combination for locks on unescorted containers is required to be provided to the aircraft commander or designated representative (i.e., usually placed adjacent to the lock).

26.11.3. **(Added-AMC)** Load plans are required to allow in-flight access in event of an emergency, or hazardous materials will be removed from the container. Some containers have built-in “HAZMAT” access panels; however, when these containers are utilized, any hazardous material is required to be positioned to permit access through the panel. Hazardous materials in the upper compartment of the container are inaccessible unless the adjacent pallet position is left empty to facilitate opening the doors. **(T-2)** See AFMAN 24-604/TM 38-250/NAVSUP PUB 505/MCOP4030.19J/DLAI 4145.3 for hazardous cargo not required to be accessible in-flight and information on waiver authority.

26.12. (Added-AMC) Handling of Classified Cargo, Registered Mail, Mission Capable (MICAP) Parts, Very, Very Important Part (VVIP), Forward Supply System (FSS) Shipments, and Courier Material. These shipments are normally not carried on EA passenger aircraft. PICs may accept or decline shipments at their discretion based on mission requirements or crew/aircraft capabilities.

26.12.1. **(Added-AMC)** MICAP, VVIP, sensitive cargo, courier materials, and registered mail moving within the normal airlift system are receipted at the on and offload stations using the air cargo manifest. For unit moves operated IAW Defense Transportation Regulation (DTR), Part III, *Mobility*, classified or sensitive cargo movement is normally manifested utilizing the DD Form 2130-2, *C-130 E/H/J Load Plan*, or similar automated product, and will normally be accompanied by a unit courier. However, if classified/sensitive unit cargo is offered without an accompanying courier, the DD Form 1907, *Signature and Tally Record*, must be used.

26.12.2. **(Added-AMC)** Aircrew Designation as Couriers. In accordance with DoDI 5200.33, *Defense Courier Operations*, USTRANSCOM Defense Courier Division (DCD) couriers coordinating with the PIC are authorized to designate officer or enlisted, (E-5 and above) aircrew members on military aircraft as couriers to escort and safeguard courier material when other qualified personnel (including qualified passengers) are not available. The following restrictions apply:

26.12.2.1. **(Added-AMC)** Primary aircrew members will not be designated couriers without the consent of the PIC. **(T-3)**

26.12.2.2. **(Added-AMC)** Aircrew members on aircraft scheduled to make an extended enroute stop at a location where DCD couriers cannot provide enroute support will not be designated as couriers. **(T-3)**

26.12.3. **(Added-AMC)** Courier Enroute Security. During stops at enroute locations supported by DCD stations, DCD couriers are required to meet designated couriers, guard and protect the material. **(T-2)** During unscheduled enroute stops at locations not supported by DCD stations, aircrew members may coordinate with DCD couriers to place courier material in temporary custody of the following agencies in descending order of priority.

26.12.3.1. **(Added-AMC)** TOP SECRET control officer of the US armed forces.

26.12.3.2. **(Added-AMC)** US Department of State Diplomatic Courier.

26.12.3.3. **(Added-AMC)** US Department of State activity.

26.12.3.4. **(Added-AMC)** US military guards.

26.12.3.5. **(Added-AMC)** US DOD civilian guards.

26.12.4. **(Added-AMC)** Frustrated Courier Material. If unable to follow the itinerary to the destination of the courier material, or material is lost, stolen or otherwise compromised, report circumstances to the nearest Defense Courier Station and notify the local US military commander or US Government activity. **(T-2)**

26.12.5. **(Added-AMC)** Life or Death Urgent Cargo. Life or death urgency shipments consist of biological or other medical supplies of such urgency that human life is dependent upon immediate receipt. Shipments will be manifested separately, and the manifest annotated with the words LIFE OR DEATH URGENCY. **(T-2)** All shipments will be handled on a hand-to-hand receipt basis and should use the air cargo manifest or the DD Form 1907. The PIC, or designated representative, will be briefed on the urgency of the shipment and be made the custodian during flight. **(T-3)**

26.12.6. **(Added-AMC)** Cargo Documentation. Aircrew will ensure proper cargo or mail documentation will accompany each load. **(T-2)**

26.12.7. **(Added-AMC)** Load Data Information. For aircrew completing 618 AOC directed missions at stations where there is no mobility air transportation function, the aircrew will collect the required load information on each leg and submit it to the first with such a function. **(T-3)** The report should be submitted on AF Form 4075.

Chapter 27 (Added-AMC)

AIR-TO-AIR REFUELING (AAR)

27.1. (Added-AMC) Communications Failure. Procedures for aircraft experiencing two-way communications failure during the conduct of AR are contained in FLIP *Flight Information* handbook to include:

27.1.1. **(Added-AMC)** Continue the flight, Squawk code 7600 for at least 2 minutes before exiting the track or anchor.

27.1.2. **(Added-AMC)** Aircraft that have not received altitude instructions beyond the exit point will exit the track or anchor at the lowest altitude specified in the clearance for the refueling portion of the flight and proceed IAW "Procedures for Two Way Radio Failure IFR-VFR" set forth in DoD FIH.

27.2. (Added-AMC) AAR Cancellation Policy. For 618 AOC-controlled missions that were initially planned to include an AAR, if it is determined that a scheduled AAR is not required for mission accomplishment, as verified by current parameters and computer flight planning software, the flight manager (FM) will coordinate the cancellation of the AAR as early as possible in the schedule of events. **(T-2)** The FM will immediately advise the tanker and airlift duty officers (DO), and the tanker DO will advise the tanker unit of the cancellation to allow the aircraft and crew to be released or reassigned to a different mission. **(T-2)** The DO does not need to wait until crew show for crew input. On flight managed sorties this process should occur four to six hours prior to scheduled departure. If the AAR is not required for mission accomplishment but the PIC needs to perform the air-to-air refueling event prior to expiration of an evaluation or for required AAR currency, the PIC should contact the nearest C2 agency or stage manager to ensure that a departure leg info remark including the surname of the aircrew member(s) requiring the event is entered into the GDSS Form 59 prior to entering crew rest.

27.3. (Added-AMC) MARSA. Military Assumes Responsibility for Separation of Aircraft (MARSA) applicability for Aerial Refueling.

27.3.1. **(Added-AMC)** MARSA begins between the tanker and receiver when the tanker advises ATC that it is accepting MARSA. If in doubt as to what separation is provided by ATC, or what separation the aircrew is responsible for, the aircrew should query the tanker and/or controlling agency.

27.3.2. **(Added-AMC)** If MARSA has not been accepted by the tanker before the receiver reaches the air refueling initial point (ARIP), the receiver may be required to hold at the ARIP.

27.3.3. **(Added-AMC)** Once the rendezvous is completed, headings and altitude assignments may be made with the tanker's concurrence with MARSA remaining in effect.

27.3.4. **(Added-AMC)** Upon completion of the rendezvous, receiver aircraft will remain within 3 NM of the tanker until MARSA is terminated. **(T-2)**

27.3.5. **(Added-AMC)** MARSA ends when normal separation standards are established, ATC accepts control at end of refueling, and ATC advises MARSA is terminated.

27.4. (Added-AMC) Altitude Reservations (ALTRV).

27.4.1. **(Added-AMC)** IAW FLIP *General Planning*, an ALTRV is authorization by a central altitude reservation function (CARF, EUCARF, PACMARF, CARU) or the appropriate ARTCC/CERAP under certain circumstances, for airspace utilization under prescribed conditions. Air refueling on operational missions often uses an ALTRV under these conditions. ALTRVs may include all, a portion, or portions of the intended route of flight. Request and approval format can be found in FAA 7610.4, *Special Operations*.

27.4.2. **(Added-AMC)** PICs will ensure ALTRV approval is received prior to mission execution. **(T-2)** ALTRV status may be verified through the appropriate 618 AOC cell.

27.4.3. **(Added-AMC)** Aircraft must depart within the assigned AVANA (ALTRV Void if Aircraft Not Airborne) time for the purpose of providing separation between altitude reservations. **(T-2)** Normal AVANA is 30 minutes. If a mission is to be delayed beyond the AVANA time, aircrew should coordinate with the C2 authority as soon as possible. Rescheduling is normally in 24-hour increments after the original schedule.

27.4.4. **(Added-AMC)** Aircraft on an ALTRV must operate within the altitude, time, and areas specified in the approval. **(T-2)** An ALTRV APVL authorizes the aircraft to climb or descend as specified. Controllers are not required to issue a climb or descent clearance for the various flight segments. They may, however, request that the pilot advise them prior to initiating an altitude change.

27.4.5. **(Added-AMC)** In a non-radar environment, the aircraft will advise ATC if actual fix timing is more than plus or minus 5 minutes from the planned ALTRV enroute fix estimate. **(T-2)**

27.4.6. **(Added-AMC)** File flight plans DD 1801 containing ALTRVs IAW FLIP GP. Include the name of the ALTRV in the remarks section of the flight plan. ALTRV requests or approvals do not eliminate the responsibility to obtain proper diplomatic clearance or file flight plans.

27.5. (Added-AMC) Receiver Pilot in Command Responsibilities.

27.5.1. **(Added-AMC)** Squawking normal when separation from the tanker is greater than 3 NM.

27.5.2. **(Added-AMC)** Maintaining two-way radio contact with ATC until cleared to the refueling block altitude, established in that block, and cleared to the AR frequency by ATC.

27.5.3. **(Added-AMC)** Receiver pilots are reminded that oceanic clearances and read back are mandatory for all flights within North Atlantic (NAT) controlled airspace. References for oceanic clearance procedures are contained in FLIP Area Planning (AP)/2 and NAT Doc 007.

27.5.4. **(Added-AMC)** Receiver pilots will not rely on the tanker to obtain and read-back oceanic clearance. **(T-2)** To the maximum extent possible, receiver pilots should obtain their own, individual clearance from the oceanic control authority of the airspace in which they intend to operate, prior to entering oceanic airspace. Pilots will request oceanic clearance IAW AP/2 and NAT Doc 007. **(T-2)** Consider obtaining clearance and providing read-back prior to rendezvous and air refueling.

27.5.5. **(Added-AMC)** Tanker aircraft will not accomplish clearance read-back for receiver aircraft. **(T-2)** Receiver PICs are responsible for ensuring that oceanic clearance is always read back, and acknowledged by the oceanic controlling authority, prior to entering oceanic airspace.

27.6. (Added-AMC) Tanker Pilot in Command Responsibilities. Tanker PICs are responsible for:

27.6.1. **(Added-AMC)** Remaining within the protected lateral, longitudinal, and vertical airspace of the refueling track or anchor including orbit patterns.

27.6.2. **(Added-AMC)** Notifying the appropriate ATC facility of all altitudes vacated and not anticipated for further use by refueling aircraft. Such altitudes cannot be reoccupied without further ATC clearance.

27.6.3. **(Added-AMC)** Receiver navigation, regardless of the number of tankers or receivers, after rendezvous completion through completion of refueling operations (AR and MARSA have been terminated) except when under control responsibility of a military radar facility while in an anchor area.

27.6.4. **(Added-AMC)** Maintaining communications with the appropriate ATC facility. All communications during refueling operations, including those concerning the receivers, will be between the ATC facility or military radar unit and tanker. **(T-2)** To the extent practical, receivers will establish communications with the tanker prior to or when departing the ARIP on the specified AR frequency. **(T-2)** The tanker will assume position reporting responsibility for the receivers upon rendezvous completion. **(T-2)**

27.6.5. **(Added-AMC)** Coordinating Altitude and Route Clearance:

27.6.5.1. **(Added-AMC)** From the ATC facility for receivers and tanker at least 5 minutes prior to refueling completion except when both aircraft are operating on an approved altitude reservation (ALTRV).

27.6.5.2. **(Added-AMC)** Through the radar controller when operating in refueling anchors with military ground radar. At least 5 minutes prior to completing refueling operations, the military radar facility will forward requests to the assigned ATC facility and subsequently relay ATC clearances for the tanker and receiver aircraft from the ATC facility. **(T-2)**

27.6.5.3. **(Added-AMC)** Tanker aircrews should not normally obtain nor read back oceanic clearances for receiver aircraft intending to operate in NAT oceanic airspace. This is a receiver PIC responsibility.

27.6.5.4. **(Added-AMC)** Vertically position aircraft prior to reaching the planned exit point to facilitate the safe and efficient transfer of separation responsibility from the military to the ATC facility on completion of refueling operations. Vertical separation of receivers and tankers will be accomplished within the assigned altitudes. **(T-2)**

27.6.5.5. **(Added-AMC)** Providing each receiver, upon request, with the aircraft's position at the completion of refueling operations. Additional information concerning amendments or changes to the receiver's ATC clearance is also provided as appropriate.

27.6.5.6. **(Added-AMC)** Coordinating all refueling formation operations to ensure all aircraft are in proper post air refueling formation prior to cell breakup. Prior to terminating air refueling, the lead tanker will confirm all aircraft in the formation are in proper post air refueling position with required lateral/vertical separation. **(T-2)**

27.7. (Added-AMC) ATC Clearance. AR operations are normally conducted on tracks or anchor areas published in DoD FLIP. Operational considerations may require AR outside published areas or within an ALTRV. The tanker PIC will receive specific ATC clearance from the appropriate ATC facility for the following:

27.7.1. **(Added-AMC)** Entry to/exit from assigned aerial refueling altitude block (except on an approved ALTRV).

27.7.2. **(Added-AMC)** Altitudes requested for tanker and receiver aircraft upon completion of air refueling.

27.7.3. **(Added-AMC)** Routing for each aircraft or formation flight when exiting the refueling track prior to or beyond the exit point, or if different from the flight plan routing.

27.7.4. **(Added-AMC)** Extending the refueling operations beyond the track or anchor exit point due to adverse winds, mission requirements, etc.

27.7.5. **(Added-AMC)** Use of altitudes in excess of those for which specific clearance has been granted (i.e., “tobogganing”).

27.8. (Added-AMC) Coronet Command and Control.

27.8.1. **(Added-AMC)** For Coronet fighter moves, 618 AOC Air Refueling Operations (618 AOC/ARDO) or their satellite planners will coordinate tanker support with ACC Air Operations Squadron (AOS) and provide tanker flight planning based on ACC AOS/XP produced profile.

27.8.2. **(Added-AMC)** During MAJCOM AOS-planned moves, the tanker Mission Commander (MC) is the final authority and will ensure tanker aircrew members have properly coordinated mission details for the deployment IAW AFI 11-207, *Fighter Aircraft Delivery*.

27.8.3. **(Added-AMC)** The MC and all tanker aircrew members will attend the appropriate MAJCOM AOS/Delivery Control Officer pre-takeoff briefing. The PIC may excuse aircrew members from required briefings to accomplish preflight duties. Cover tanker specific information in the pre-takeoff briefing to coordinate all takeoff, formation, enroute, AAR, and recovery requirements between tanker and receiver aircraft.

27.9. (Added-AMC) DUAL ROLE Procedures.

27.9.1. **(Added-AMC)** A valid DUAL ROLE contains the following:

27.9.1.1. **(Added-AMC)** A MAJCOM-validated AAR requirement. 618 AOC must receive validated requirement NLT 14 days before mission start date to ensure proper mission support.

27.9.1.2. **(Added-AMC)** A MAJCOM-validated and 618 AOC approved user cargo requirement of at least two pallets of cargo, not including baggage.

27.9.2. **(Added-AMC)** Since DUAL ROLE is primarily an AAR mission, the tanker must first meet the AAR requirement without regard to protecting ancillary cargo capability.

27.9.3. **(Added-AMC)** AMC does not guarantee DUAL ROLE ancillary cargo movements and will not expend additional tanker sorties or hours for the purpose of moving ancillary cargo.

27.9.4. **(Added-AMC)** 618 AOC will normally refuse DUAL ROLE requests that require excessive positioning or de-positioning time unless aircrew members will receive effective training on positioning and de-positioning legs. **Exception:** MAJCOM/A3 may approve missions that do not meet these criteria but reduce total fiscal cost, do not impact other tanker requirements, and present the most practical means available to move cargo. For 618 AOC missions, AMC/A3/10 delegates approval authority for dual-role coronet missions to 618 AOC/CC and 618 AOC/CV. For AFRC and ANG missions, consider unit-identified training needs to justify positioning and de-positioning time.

27.10. (Added-AMC) Opportune Air Refueling.

27.10.1. **(Added-AMC)** PICs must receive permission from controlling authority (OG/CC, 618 AOC, etc.), or designated representative, prior to accomplishing opportune AAR with US DoD receivers/tankers.

27.10.2. **(Added-AMC)** The tanker and receiver pairing must be IAW ATP-3/3/4/2/, *Air-to-Air Refueling*, and US Standards Related Document (SRD).

27.11. (Added-AMC) Air-to-Air Refueling with Foreign Aircraft. ATP-3.3.4.2 and the US SRD serve as the source documents for air refueling information among participating countries and is no longer limited to NATO countries only.

27.11.1. **(Added-AMC)** Tankers will only refuel those aircraft listed in ATP 3.3.4.2 and the US SRD or specifically authorized by MAJCOM/A3V, Air Tasking Order, Operational Order (OPORD), Exercise Order, or on approved flying schedule. **(T-2)** Receiver aircraft not previously certified for refueling operations (includes foreign variants of US-produced aircraft) must be certified for technical and operational compatibility IAW ATP-3.3.4.2 prior to refueling (N/A AFMC).

27.11.2. **(Added-AMC)** AAR of foreign aircraft must be tasked by proper C2 authority. Opportune AAR of foreign aircraft is prohibited. **(T-2)**

Chapter 28 (Added-AMC)

AEROMEDICAL EVACUATION

28.1. (Added-AMC) Aeromedical Evacuation (AE) Mission. AE missions may be directed at any time by C2 agencies. **Exception:** Executive Airlift aircraft are not designated to support the AE mission. AE personnel will utilize the procedures in applicable AFMAN 11-2AEV3 and DAFI 48-107V1, *En Route Care and Aeromedical Evacuation Medical Operations*, in conjunction with this publication, to accomplish the AE mission.

28.2. (Added-AMC) Operational Control and Reporting of Aeromedical Evacuation Forces.

28.2.1. **(Added-AMC)** AMC is lead command for AE. AMC Directorate of Operations (AMC/A3) is the executive agent for operational AE missions. Establishes, in coordination with the AMC Command Surgeon (AMC/SG), AFRC, NGB, and other MAJCOMs, the standards for system-wide organization, equipping and training of the AE force.

28.2.2. **(Added-AMC)** Command and control of AE missions is the same as other airlift missions.

28.2.3. **(Added-AMC)** The PIC is a qualified pilot responsible for command and control of all persons aboard the aircraft during an AE mission. In matters of flight safety, crew duty waivers, or operational considerations, his/her decisions are final. In matters of patient care, decisions of the MCD are final.

28.2.4. **(Added-AMC)** Medical Crew Director. A qualified flight nurse responsible for the overall supervision of patient care and management of aeromedical evacuation crew assigned to AE missions. The MCD is expected to use their best judgment to ensure the safety of the patients. **Exception:** A non-current or unqualified flight nurse may serve as an MCD/FN on any mission when supervised by a qualified instructor or flight examiner nurse (direct supervision for critical phases of flight). Additionally, the MCD advises the PIC on patients' conditions and the use of medical equipment that may affect aircraft operations. The MCD is directly responsible for the safety and medical well-being of patients on the aircraft and coordinates enplaning and deplaning procedures with supporting agencies.

28.3. (Added-AMC) AE Alerting Procedures.

28.3.1. **(Added-AMC)** C2 agent will establish a legal for alert time with the PIC and when appropriate, the MCD of AE crews. **(T-2)** The C2 agency will alert the PIC, and when appropriate, the MCD. **(T-2)** The MCD will alert the medical crew. **(T-3)** At all times the PIC will have communication with the MCD as to alerts, access to the aircraft, and patient considerations. The goal is to link the primary PIC, local AMC C2 agency and MCD before mission execution.

28.3.2. **(Added-AMC)** When the AE crew is staged separate from the aircrew, the MCD will contact AMC local C2 agency and establish alert, show time, etc. with the C2 agency. **(T-2)** The MCD will make every effort to communicate with the aircrew any mission irregularities prior to crew rest. Utilize local AMC C2 agency to leave messages for non-emergency. Crew rest will be based on scheduled launch time and will be the same for both the aircrew and AE crews.

28.3.3. **(Added-AMC)** The local AMC C2 agency will provide PIC/MCD AE mission information when he/she checks on mission status. Local C2 agency will be the link between the AE crews and the PIC, thus permitting mission status updates to both parties without interruption of crew rest.

28.3.4. **(Added-AMC)** AE mission requirements can change depending on clinical status of patient(s) and aircraft availability. There will be occasions when aircraft cannot depart (i.e., maintenance problems) or emergency patient movement that may separate an AE crew from the front-end crew. The MCD is responsible for communicating these changes with the PIC and local AMC C2 agency to de-conflict problems.

28.4. (Added-AMC) Pilot in Command Responsibilities for AE Missions.

28.4.1. **(Added-AMC)** Establish communications link with the MCD during pre-mission planning and throughout the mission.

28.4.2. **(Added-AMC)** Brief AE crew on the mission, flight plan, flight profile, and current threat (as applicable). Identify armed aircrew members (as required).

28.4.3. **(Added-AMC)** The PIC will fully integrate aircrew and AECMs into a single crew throughout mission including enroute transportation, dining, billeting, etc. **(T-3)**

28.4.4. **(Added-AMC)** Coordinate with MCD and C2 agencies for cabin altitude/flight restrictions based on patient requirements. When the sortie is being flight-managed, coordinate flight restrictions with the FM if the FM provided plan needs to be modified.

28.4.5. **(Added-AMC)** For missions with combined cargo and patients, coordinate with the MCD for loading, positioning, and egress considerations.

28.4.6. **(Added-AMC)** Comply with hazardous cargo/passenger restrictions in AFMAN 24-604.

28.4.7. **(Added-AMC)** Advise AECMs of intentions to start engines, taxi, itinerary changes, in-flight difficulties, and additional responsibilities of the aircrew.

28.4.8. **(Added-AMC)** Transmit off load messages and radio transmissions to tasking AE C2 agency as requested by the MCD.

28.4.9. **(Added-AMC)** Brief the MCD on additional responsibilities of the aircrew.

28.4.10. **(Added-AMC)** AIR EVAC Priority. If a medical emergency occurs during flight and is determined by the MCD to be an urgent situation, a request for AIR EVAC Priority will be requested. The PIC may request "AIR EVAC Priority" for preferential ATC handling if a delay will affect a patient's well-being. AIR EVAC Priority will only be used for that portion of the flight requiring expedited handling. Do not request priority for routine air evacuations to avoid ATC delays or inconveniences. It is the PIC's responsibility to use this option only for bona fide medical situations that demand priority handling. This status should be used judiciously.

28.4.11. **(Added-AMC)** AIR EVAC Priority does not initiate an In-Flight Emergency. Therefore, the PIC should consider calling in an In-Flight Emergency, medical in nature, in order to activate the appropriate local response. Transmit the patient's sex, approximate age, major complaint and any other information the MCD deems necessary to transmit.

28.5. (Added-AMC) Loadmaster/Boom Operator Responsibilities for AE Missions.

- 28.5.1. **(Added-AMC)** Assist the AE crew with aircraft systems.
- 28.5.2. **(Added-AMC)** Coordinate emergency evacuation plan with the MCD.
- 28.5.3. **(Added-AMC)** Operate aircraft systems, (i.e., doors, ramps, emergency exits, etc.).
- 28.5.4. **(Added-AMC)** Assist the AE crew as necessary, providing such assistance does not interfere with primary duties.
- 28.5.5. **(Added-AMC)** Assist operating the galley to prepare food and beverages for food service provided to patients by AECMs.
- 28.5.6. **(Added-AMC)** Assist with aircraft configuration for AE operations.
- 28.5.7. **(Added-AMC)** Coordinate vehicle movement/enplaning/deplaning/ERO requirements with the Charge Medical Technician (CMT). The CMT is responsible for medical vehicle movement/positioning around the aircraft.
- 28.5.8. **(Added-AMC)** Provide the MCD with an interphone cord (as required).

28.6. (Added-AMC) Aeromedical Evacuation Crew Member Responsibilities.

- 28.6.1. **(Added-AMC)** Responsible for patient clinical care activities including loading, positioning, and offloading.
- 28.6.2. **(Added-AMC)** Assist the Loadmaster/Boom Operator/maintenance crew with aircraft configuration for AE operations.
- 28.6.3. **(Added-AMC)** Install and remove medical equipment/supplies.
- 28.6.4. **(Added-AMC)** The MCD or designated AECM should monitor interphone (headset) during flight. The MCD will be on headset with the PIC during critical phases of flight and during in-flight emergencies. **(T-3)**
- 28.6.5. **(Added-AMC)** The CMT is responsible for all ground operations involved with patients. The CMT, in coordination with the Loadmaster/Boom Operator/designated representative, is responsible for vehicle movement/positioning around the aircraft.

28.7. (Added-AMC) AE Ground Operations. Engines should be shut down during enplaning and deplaning of patients. **Exception:** Not applicable during ERO procedures.

- 28.7.1. **(Added-AMC)** AECMs will not direct the movement of vehicles within the 10-foot circle of safety from the nose, tail, and wingtips of the aircraft. **(T-2)** Any movement within the 10-foot circle will be directed by the Loadmaster/Boom Operator. AECMs will not direct the movement of fixed wing or rotary-wing aircraft at any time. **(T-2)**

28.8. (Added-AMC) Aircraft Concurrent Servicing Operations with Patients On-Board. Aircraft servicing normally begins after deplaning patients are off the aircraft and prior to enplaning that station's patients.

- 28.8.1. **(Added-AMC)** Prior to starting concurrent servicing with patients on board, the total number of patients, passengers, and crew on board the aircraft will be given to the fire department by the PIC, only if Crash Fire Rescue (CFR) protection is required.

28.8.2. **(Added-AMC)** A current and qualified aircrew member for the type of aircraft being serviced will be appointed as a Passenger Compartment Monitor (PCM) and will continuously monitor patients/passengers during concurrent servicing. **(T-2)** PCMs will not perform other duties during servicing. **(T-2) Exception:** See MDS guidance below. AECMs and passenger service representatives will not serve as PCMs. **(T-2)**

28.8.3. **(Added-AMC)** The PCM will brief patients on emergency egress, exit prohibitions, and hazards. **(T-3)** Ambulatory patients will remain seated but will not wear seatbelts during concurrent servicing. When possible, the PCM should conduct the briefing prior to servicing. The PIC will ensure at least one aircrew member serves as a PCM if passengers remain on board the aircraft during fuel servicing operations.

28.8.4. **(Added-AMC)** Loading ramps/stairs must be in place for immediate use and exits (excluding the overhead escape hatches) must be opened for egress. **(T-3)**

28.8.5. **(Added-AMC)** At least two qualified AECMs (one must be a Flight Nurse) will remain onboard to observe patients and assist patients in the event of an egress.

28.8.6. **(Added-AMC)** The PIC, designated aircrew representative, or refueling supervisor will advise PCMs and AECMs when to evacuate patients.

28.8.7. **(Added-AMC)** Patients will not enter or exit the aircraft during concurrent servicing. **(T-3)** Aircrew members may enter or exit the aircraft only when performing essential duties associated with the concurrent servicing operation. Individuals must properly ground themselves before boarding the aircraft.

28.8.8. **(Added-AMC)** If cabin lights, electrical power to operate medical equipment, and aircraft interphone are operating prior to refueling, use may be continued during servicing operations provided it does not radiate energy. Do not turn electronic equipment on or off during refueling. **Exception:** Only those systems, switches, or electrical circuits needed to operate equipment to sustain life, may be turned on and used during refueling.

28.8.9. **(Added-AMC)** Activities around the aircraft will be kept to a minimum during the refueling process. Onload/offload of patient baggage should be accomplished prior to or after concurrent servicing. IAW T.O. 00-25-172, the AE crew will coordinate with the refueling supervisor if onload/offload of patient baggage is required during concurrent servicing.

28.8.10. **(Added-AMC)** The PCM will set the interior lighting as bright as possible to suit the combat environment.

28.8.11. **(Added-AMC)** Do not use the on-board toilet facilities while they are being serviced.

28.9. (Added-AMC) Aerial Refueling during Aeromedical Evacuation (AE) Missions. Aerial Refueling is an option that can be considered when planning aeromedical patient movements. It may not be desirable in all medical situations, and in some cases may be detrimental to patients. The MCD will consult with and advise the PIC if Aerial Refueling presents concerns for patient care.

28.10. (Added-AMC) AE Aircraft Configuration.

28.10.1. **(Added-AMC)** On designated ARM and operational AE missions, configure the aircraft during preflight per applicable MDS-specific Cargo Loading Manuals and AFMAN 11-2AEV3 Addenda A-A.

28.10.2. **(Added-AMC)** Litter Support Provisions.

28.10.2.1. **(Added-AMC)** Roller conveyors will be stowed from all aisle way, walkway, and AE litter patient positions. **(T-3)**

28.10.2.2. **(Added-AMC)** Roller conveyers will be stowed, unless required for comfort/baggage pallets. **(T-3)** Rollers on the ramp will be stowed during patient onloading or offloading operations. **(T-3)**

28.10.2.3. **(Added-AMC)** Available litter spaces and ambulatory seating will depend on the aircraft configuration.

28.10.3. **(Added-AMC)** Portable Oxygen. AECMs will have portable oxygen available. **(T-2)** AECMs normally use an MA-1 portable oxygen bottle. If MA-1 bottles are not available, PBEs may be used as portable oxygen. **Note:** If a pressure demand regulator is used, the oxygen supply will be turned “off” when the personal oxygen equipment is removed.

28.10.4. **(Added-AMC)** Therapeutic Oxygen. Therapeutic oxygen is not an integral system on all airframes designated for AE use. The Portable Therapeutic Liquid Oxygen / Next generation Portable Therapeutic Liquid Oxygen (PTLOX/NPTLOX) system may be used.

28.10.5. **(Added-AMC)** Emergency Oxygen. Integral patient/passenger emergency oxygen is not available on all airframes designated for AE use. On those airframes in which intrinsic emergency oxygen volume is not available, patients and passengers will use the EPOS. **(T-2)**

28.10.6. **(Added-AMC)** Do not secure aircraft or medical equipment adjacent to an emergency exit in a manner that will prevent or impede egress.

28.10.7. **(Added-AMC)** Life Preservers. Use the Adult/Child life preserver for patients.

28.11. (Added-AMC) Passengers and Cargo on AE missions.

28.11.1. **(Added-AMC)** The decision to carry passengers and cargo with patients on board will be made by the PIC, in consultation with the MCD and Loadmaster/Boom Operator. **(T-2)** The MCD will advise the PIC if a clear detriment to the health and well-being of the patient or passengers exists. **(T-2)** Refer to AFMAN 24-604, *Preparing Hazardous Materials for Air Shipments*, for hazardous product special provisions rating. IAW AFI 24-605V2, the local aeromedical representative may decide which hazardous materials are approved for transport with patients. Refer questions to respective tasking AE command element. P4 and P5 rated hazardous material have no AE restrictions. Litter patients should normally be positioned forward of cargo pallets. **Exception:** If cargo is in place, and the PIC and MCD agree, patients may be transported aft of the cargo. The MCD and Loadmaster will ensure patient egress is not affected by mixed cargo/patient loads. **(T-2)**

28.11.2. **(Added-AMC)** Cargo will not be bumped except in unusual/abnormal cases, and only after the MCD has coordinated with the PIC and notified the tasking AE command element. **(T-2)**

28.11.3. **(Added-AMC)** Do not move ambulatory patients to litters to provide seating for additional patients or passengers.

28.11.4. **(Added-AMC)** PTLOX or NPTLOX may be transported for positioning and de-positioning AE Crews. A maximum of 25 PTLOX and/or NPTLOX serviced units may be transported simultaneously without HAZMAT certification. Processing through aerial port is not required. To prevent potential high concentration of oxygen levels if shipping more than six PTLOX containers as cargo, do not cover with plastic. **(T-2)** Aircrew will ensure the cargo floor is free from any oil or petroleum products. **(T-2) Note:** HAZMAT certification is required when the transport of PTLOX/NPTLOX is not accompanied by an AECM.

28.11.5. **(Added-AMC)** Movement of Contaminated/Contagious Personnel. It is United States Transportation Command (USTRANSCOM) policy that patients, personnel, or casualties with known or suspected contamination from chemical, biological, or nuclear warfare agents will not be transported within the aeromedical patient movement system. These include infections with any agent that may pose a potential threat to national security, require special public health actions, and/or have the potential to cause public panic and social disruption. Decontamination must be performed prior to transport to prevent the potential spread of contamination. **(T-0)** Patients known or suspected to be infected with a highly contagious disease must be treated “in place” or with minimal transportation to medical authorities. **(T-0)** In rare cases, transport may be essential to preserve life, continue critical missions, or in extreme cases, to transport index cases (approximately two) for evaluation or critical medical care. If such transport is deemed essential, all efforts must be made to prevent the spread of contamination and prior approval is required by the involved geographic combatant commanders, Commander USTRANSCOM, and the Secretary of Defense (SECDEF) in consultation with Department of Defense medical authorities. **(T-0)**

28.11.5.1. **(Added-AMC)** MAJCOMs train and equip AE crews and stage required equipment at key hubs to carry out these limited missions for movement of contaminated and contagious patients. **Note:** If AECMs are utilizing the MCU-2A or M50 ground chemical mask, a flight altitude below 10,000 feet above sea-level is recommended due to reported valve failure during rapid decompression.

28.11.6. **(Added-AMC)** While enroute after transiting known disease contamination-risk areas, aircrew will notify the inbound station when any aircrew member or passenger exhibits medical symptoms that could indicate possible exposure to known disease agents. **(T-2)** Aircrew should isolate the individual(s) in the best manner possible, request medical support meet the aircraft on arrival, and isolate any contaminated areas or materials aboard the aircraft. Aircrews should use extreme caution and employ stringent protective measures to avoid self-contamination in any associated clean-up required during flight. Upon landing, any aircraft doors, windows, or hatches should not be opened until cleared to do so by the on-scene authority. The on-scene authority’s instructions should be followed until the situation is fully resolved.

28.12. (Added-AMC) Crash/Fire/Rescue (CFR) for AE Missions.

28.12.1. **(Added-AMC)** Aircraft carrying patient(s) will be provided CFR protection per TO 00-25-172. **(T-2)** When concurrent fuel servicing with patients/passengers on board a major aircraft rescue and fire vehicle will be available to respond within three-minutes or as determined by the base Fire Chief **(T-2)** **Note:** When servicing with JP-4 or Jet B Fuel, a major aircraft rescue and fire vehicle will be positioned at the aircraft. **(T-2)** The aircrew will coordinate CFR requirements. **(T-2)**

28.12.2. **(Added-AMC)** At non-AMC bases, non-U.S. military bases, and civilian airfields, the controlling agency will coordinate the CFR coverage, as necessary. **(T-2)** The request for CFR vehicle coverage may be denied but does not prevent refueling operations from occurring.

28.13. (Added-AMC) Off Load Message. No later than 1 hour prior to landing, the MCD will complete an AF Form 3858 and coordinate for transmission to 618 AOC who will coordinate with the Aeromedical Evacuation Cell (AE Cell).

28.14. (Added-AMC) ERO Procedures. ERO procedures are outlined in AFMAN 11-2AEV3, *Aeromedical Evacuation (AE) Operations Procedures*, and AFMAN 11-2MDSV3.

28.15. (Added-AMC) Floor Loading Procedures. Refer to AFMAN 11-2AEV3, Addenda A-A, *Aeromedical Evacuation Operations Configuration/Mission Planning*, and AFMAN 11-2MDSV3, for floor loading procedures.

Chapter 29 (Added-AMC)

HUMAN FACTORS STRATEGIES

29.1. (Added-AMC) General. This chapter discusses several different human factor strategies that assist aircrews in managing the operating environment, the mission, aircraft systems, and human behaviors. The overall goal of these strategies is safe mission execution and accomplishment.

29.2. (Added-AMC) Crew Resource Management (CRM). CRM is the effective use of all available resources (people, weapon systems, facilities, equipment, and environment) by individuals or crews to safely and efficiently accomplish an assigned mission or task. CRM emphasizes how aircrew members communicate, manage resources, and make decisions. The core CRM skills are Mission Analysis, Situational Awareness (SA), Communication, Risk Management (RM)/Decision Making, Crew/Flight Coordination, and Task Management. Due to the dynamic nature of the mission, aircrew members are expected to employ CRM throughout the mission, from mission planning thru debrief. Finally, CRM should maximize operational effectiveness and combat capability while minimizing the risk of mishap by providing the crew with skills, processes, tools, and techniques to manage the mission, aircraft, and crew.

29.3. (Added-AMC) Threat and Error Management (TEM). TEM is a strategy of managing operational threats and human errors. Threat management reduces the potential for pilot error, while error management mitigates the negative consequences of errors. TEM promotes vigilance versus complacency by implementing an active, continuous process of identifying and preparing for threats and identifying and repairing errors at the earliest opportunity. Failing to effectively manage either threats or errors will negatively influence a crew's ability to maintain a safe operation.

29.3.1. (Added-AMC) Threat Management. A threat is an event or error that occurs outside the influence of the aircrew (i.e., it was not caused by the crew), that increases operational complexity and must be managed to maintain safety margins, and requires crew attention and management if safety margins are to be maintained. All threats have the potential to negatively affect flight operations. The appropriate response to a threat is: Identify and Prepare. The earlier threats are identified (both anticipated and unanticipated), the more quickly and effectively they can be managed. Threats not properly identified, or identified but not effectively mitigated, may result in a degradation of safe operations. Effective threat mitigation strategies include: persistently briefing known and anticipated threats along with expected actions, applying applicable CRM/TEM skills, and adhering to SOP.

29.3.2. (Added-AMC) Error Management. An error is an aircrew action or inaction that leads to deviations from organizational expectations or flight crew intentions. While human error is likely in complex and dynamic operations, errors can be proactively mitigated through effective management strategies. Effective strategies for error management include VVM (verbalize, verify, monitor), effective PM and aircrew member monitoring (CM), active listening and effective communication techniques, flight path management (FPM) strategies, and adhering to SOP.

29.3.3. **(Added-AMC)** Undesired State (US) Management. A US is a safety compromised aircraft state (position, altitude, speed, incorrect aircraft system configuration, aircraft exceedance) resulting from ineffective error management. The appropriate response to a US is: Identify and Recover. Once the US has been identified, aircrews must take immediate corrective action. This action will likely include a combination of CRM, TEM, and technical skills. A US from which a crew does not immediately recover may lead to an incident, mishap, or mission failure.

29.4. (Added-AMC) Automation Management.

29.4.1. **(Added-AMC)** Aircraft Automation Systems. Aircraft automation systems are tools intended to enhance safety, maximize efficiency, improve operational capabilities, and reduce pilot workload.

29.4.2. **(Added-AMC)** Flight Automation. Pilots should maintain proficiency in the use of all automation levels and the skills required to seamlessly shift between those levels. Available flight automation levels vary between aircraft and may include many combinations of flight director guidance, autothrottles and autopilot modes including partial automation. The level of automation used must permit both pilots to maintain situational awareness and a comfortable distribution of workload. Be aware that the use of automation can also lead to complacency and a lack of situational awareness, unless both pilots are consistently aware of the autoflight status of the aircraft. If the use of flight automation creates a loss of situational awareness or results in task saturation, the pilot should shift to a less demanding level or disconnect the automation entirely and re-establish the desired aircraft flight path. Pilots should choose an appropriate flight automation level consistent with changing flight environments and balanced with the requirement to maintain manual flying skills.

29.4.2.1. **(Added-AMC)** The PF will determine, announce, and fly the aircraft using the appropriate level of flight automation IAW flight manual guidance. **(T-2)** The PM will acknowledge the announcement. **(T-2)**

29.5. (Added-AMC) Flight Path Management (FPM). The term “flight path” applies any time the aircraft is in motion, including taxiing the aircraft. FPM is the planning, execution, and assurance of the aircraft’s guidance, trajectory, and energy state in flight or on the ground. All flight deck aircrew members must ensure that effective FPM is a primary and shared responsibility during all phases of flight. FPM is comprised of the following three aspects:

29.5.1. **(Added-AMC)** Planning. Developing a thorough understanding of the aircraft’s desired flight path. Planning is dynamic and includes changes driven by the mission, environmental considerations, and clearances from authorities, such as ATC. **Note:** For the purposes of this document, a clearance is the flight path of the aircraft, as normally defined by the assigned ATC clearance. Typically, two pilots must hear/read, understand, anticipate its impact, and comply with the clearance, unless otherwise deemed necessary for the safe conduct of the flight. Other flight deck aircrew members who have the training, ability, and authority to do so should assist with clearance acceptance.

29.5.2. **(Added-AMC)** Executing. The process through which the aircrew controls the aircraft and achieves compliance with the desired flight path.

29.5.3. **(Added-AMC) Monitoring.** The process through which aircrew members monitor compliance with the desired (planned) flight path. Effectively monitoring the flight path is a critical TEM task that discovers and corrects FPM errors that might lead to undesired states. As a primary and shared responsibility, monitoring is equally as important as controlling the aircraft. Monitoring requirements vary depending on phase of flight and on situations encountered within each phase of flight. Aircrews should anticipate flight situations or phases where they will be most vulnerable to flight path deviations and strategically manage workload and distractions to maximize monitoring during high workload periods.

29.6. (Added-AMC) Information Automation (IA). Managing information is an important aspect of FPM. The quantity and type of information available to the aircrew has substantially changed and will continue to change. IA is automation devoted to the management and presentation of relevant information to flight deck aircrew members. Examples of IA systems include: EFBs, ACARS, moving map displays, performance management calculations, multi-function displays, data uplink, alerting systems (including lights and audible and tactile alerts), and FMS display unit pages and scratch pads.

29.6.1. **(Added-AMC)** Aircrew members must be proficient in the use of automated systems and in accessing and interpreting automated information, determining its reliability, and understanding how to use the acquired information. These tasks must occur seamlessly throughout the flight to prevent distraction from primary flight path management tasks.

29.7. (Added-AMC) Operational Risk Management (ORM). ORM is a logic-based, common-sense approach to making calculated decisions on human, material, and environmental factors before, during, and after all operations. USAF policy on ORM is contained in AFD 90-9, *Operational Risk Management*. PICs will accomplish ORM worksheets IAW MAJCOM and local guidance as part of preflight activities. **(T-2)** Flying units will develop a local ORM program to include personal ORM assessment for all missions and accomplished by all aircrew members at the beginning of each flight duty period. **(T-3)**

29.8. (Added-AMC) Descent Planning and Energy Management. Awareness of maneuver entry parameters and energy management is crucial to meeting the stabilized approach criteria on every approach. Aircrews will ensure the aircraft is following the planned descent profile. All non-tactical descents should follow a normal descent profile procedures and techniques in the absence of ATC or FLIP guidance. All tactical descents should follow published tactical procedures/profiles. When unforeseen interruptions alter the planned descent, immediately correct any deviations. It may be necessary to hold, request vectors, or take alternate actions to comply with the planned descent profile. **Note:** To increase attention to briefings, reduce workload during descent, and to enhance TEM, aircrews should accomplish briefings and appropriate checklist items prior to entering critical phases of flight and prior to the top of descent. This may often require updating destination weather enroute to avoid delays in waiting for ATIS reception to obtain landing winds for choosing an approach and to prevent a subsequently compressed workload during descent.

29.8.1. **(Added-AMC) Visual Transition.** It is imperative for aircrews to review the airfield environment. Identify key features such as approach light type, airfield lighting, geographic layout/configuration of runways, taxiways, ramps, etc. To the max extent possible, this study will take place during the crew mission briefing and reviewed again prior to descent.

29.8.2. **(Added-AMC)** Missed Approach/Go-Around. Aircrews will conduct a thorough briefing for anticipated missed approach/go-around scenarios. **(T-3)** This briefing will include a discussion of specific aircrew member duties. **(T-3) Note:** Execute missed approach/go-around IAW Flight Manual and **Paragraph 19.2** procedures.

Chapter 30 (Added-AMC)

AIRCREW MEMBER DUTIES

30.1. (Added-AMC) General. This chapter supports the human factor strategies presented in [Chapter 29](#) by transforming strategies into actionable duties, policies, and procedures.

30.2. (Added-AMC) Pilot Flying and Pilot Monitoring Duties. There must be a clear understanding of the PF and the PM duties at all times. The aircrew member terms PF and PM are used to designate pilot roles and procedural duties when the aircraft is in motion or as designated by MDS-specific T.O. guidance. Controlling and monitoring the aircraft flight path is the highest priority of the PF and PM, regardless of automation level.

30.2.1. (Added-AMC) Pilot Flying. The pilot at the flight controls who is in direct maneuvering control of the aircraft. The PF is primarily responsible to control and monitor the aircraft's flight path (including auto flight systems, if engaged). The PF is secondarily responsible to monitor non-flight path actions (e.g., radio communications, aircraft systems) but must never allow these activities to interfere with the PF's primary responsibility. Assigning non-flight path-related tasks to the PF should generally be avoided. If the PF must engage in activities that distract from flight path control tasks, the PF should transfer aircraft control to the other pilot, and then assume the PM role.

30.2.2. (Added-AMC) Pilot Monitoring. In addition to MDS-specific T.O. guidance, the PM is the pilot at the flight controls who is not in direct maneuvering control of the aircraft, yet is primarily responsible to actively monitor the aircraft's flight path, intervening if necessary within pre-established parameters. The PM supports the PF by accomplishing non-flight path actions (e.g., radio communications, aircraft systems) but should continue to monitor the flight path.

30.2.3. (Added-AMC) PF/PM roles may change throughout a flight. Transfer of PF and PM roles must be clear to all primary aircrew members. The transfer will be expressed using a three-part aircraft control transference statement and should be done positively with verbal assignment and verbal acceptance to include a short brief of aircraft state, as necessary. **(T-3)** Depending on the situation, it is suggested that the transference statement include airspeed, altitude, heading, and/or automation configuration. An example is as follows: Pilot: "We're level at flight level 350 at .75 Mach and the autopilot is engaged in heading mode; heading 3-0-0. Copilot's aircraft." Copilot: "Understood. Copilot's aircraft." Pilot: "Copilot's aircraft."

30.3. (Added-AMC) Crew Resource Management Assertive Statements. CRM can be an effective resource in breaking the error chain before a mishap occurs. Aircrew members should speak up immediately up if safety of flight is jeopardized:

30.3.1. (Added-AMC) "Time Out". "Time Out" is the common assertive statement for use by all aircrew members.

30.3.1.1. (Added-AMC) The use of "Time Out" is intended to:

30.3.1.1.1. (Added-AMC) Provide a clear warning sign of a deviation or loss of situational awareness.

30.3.1.1.2. (Added-AMC) Provide an opportunity to break the error chain before a mishap occurs.

30.3.1.1.3. **(Added-AMC)** Notify all aircrew members when someone sees the aircraft or crew departing from established guidelines, the briefed scenario, or that someone is simply uncomfortable with the developing conditions.

30.3.1.1.4. **(Added-AMC)** As soon as possible after a "Time Out" has been called, the aircrew will take the following actions: **(T-2)**

30.3.1.1.4.1. **(Added-AMC)** Safety permitting, stabilize the aircraft.

30.3.1.1.4.2. **(Added-AMC)** The initiating aircrew member will voice their concerns to the crew.

30.3.1.1.4.3. **(Added-AMC)** The PIC will provide all other aircrew members with the opportunity to voice inputs relative to the stated concerns.

30.3.1.1.4.4. **(Added-AMC)** After considering all inputs, the PIC will direct the aircrew to continue the current course of action or direct a new course of action.

30.3.2. **(Added-AMC)** "Knock-it-off", "Terminate". "Knock-it-off" and "Terminate" will be executed IAW AFMAN 11-214, *Air Operations Rules and Procedures*. **(T-2)**

30.4. (Added-AMC) Head-Up/Head-Down Policy. Establish clear roles for computer-related tasks, per MDS-specific guidance. One pilot should always remain "head-up." Announce "pilot head-down" or "copilot head-down" when the task requires prolonged attention within the flight deck. Other than momentary occasions, any aircrew member who observes both pilots "heads-down" at the same time (other than instrument flying) will announce the issue to the aircrew without delay.

30.5. (Added-AMC) Verbalize, Verify, and Monitor (VVM). VVM is a closed-loop system of communication designed to significantly reduce aircraft automation errors. MAF aircrews will utilize VVM procedures to the maximum extent practical. **(T-2)** VVM consists of a three-step process:

30.5.1. **(Added-AMC)** Verbalize. Prior to making changes to the selected/armed flight guidance (including altitude), the aircrew member performing the action VERBALIZES the intended change(s).

30.5.2. **(Added-AMC)** Verify. The appropriate aircrew member(s) VERIFY the intended changes *prior* to execution. The aircrew member(s) responds to the intended change(s) by verbally confirming the change or notifies the challenging aircrew member of an issue and/or concern. When necessary, visual cues confirming intended change(s) are acceptable but are not normally the primary method for confirmation. If visual cues are used, when time allows, ensure all appropriate flight deck aircrew members are aware of the executed action by verbally reviewing the executed action.

30.5.3. **(Added-AMC)** Monitor. Once the intended action(s) has/have been confirmed and "executed," aircrew members continually MONITOR the aircraft to ensure the expected performance is achieved by staying vigilant and situationally aware.

30.5.4. **(Added-AMC)** Sterile Cockpit. Aircrew should minimize non-essential cockpit conversations and extraneous activities that could interfere with flight duties when operating below 18,000 feet MSL, during critical phases of flight, during periods of increased workload and during all taxi operations. **Exception:** N/A during non-critical periods of low workload in level cruise flight, regardless of altitude.

30.6. (Added-AMC) Advisory Calls. Refer to [Table 30.1](#) through [Table 30.4](#) for a listing of mandatory advisory calls, responses, and aircrew actions.

30.6.1. **(Added-AMC)** The PF will announce intentions for departures, arrivals, approaches, and when circumstances require deviating from normal procedures. **(T-3)** Should any aircrew member be unsure of the PF's intentions, they will ask for clarification prior to accomplishment. Unless otherwise directed, all primary aircrew members (as applicable) will acknowledge mandatory calls.

30.6.2. **(Added-AMC)** The PM will make all normal advisory calls except those designated for other aircrew members by MDS-specific guidance and this instruction. **(T-2) Exception:** Automated aircraft advisories may satisfy this requirement if acknowledged by a primary aircrew member. Additionally, aircrew members (PM or otherwise) will advise the crew anytime the primary radio is changed, per MDS-specific Vol 3 guidance. If aircraft specific Flight Manual callouts vary from the callouts listed in the tables below, the Flight Manual callouts take precedence (ex. CAT II/III callouts).

Table 30.1. (Added-AMC) Climb Out Advisory Calls.

Climb Out	PM Call	PF Response
Transition Altitude	“Transition Altitude, 29.92, Set” (or 1013)	“29.92, Set” (or 1013)
1,000’ below assigned altitude	“(Altitude passing) for (Altitude Assigned)”	(Acknowledge)
Note: (Acknowledge) is not required to be a verbatim response as long as the PF cross checks the altitudes called and responds to the PM.		

Table 30.2. (Added-AMC) Descent Advisory Calls.

Descent	PM Call	PF Response
Transition Level	“Transition Altitude, (local altimeter), Set”	“(local altimeter), Set”
1,000’ above assigned altitude	“(Altitude passing) for (Altitude Assigned)”	(Acknowledge)
Note: (Acknowledge) is not required to be a verbatim response as long as the PF cross checks the altitudes called and responds to the PM.		

Table 30.3. (Added-AMC) Non-Precision Approach Advisory Calls.

Non-Precision Approaches (1)	PM Call	PF Response
100' above FAF altitude	"100 above"	
1,000' above touchdown	"1,000, stable" or deviation	
100' above step down altitude	"100 above"	
500' above touchdown	"500, stable" or "Go-around, unstable"	(Acknowledge)
100' above MDA	"100 above"	
At MDA	"Minimums"	
Runway environment in sight	"Runway in sight"	"Landing" or "Going around"
Missed Approach Point (MAP)	"Missed Approach Point" (2)	"Landing" or "Going around"
Notes: (1) Refer to stabilized approach guidance in paragraph 30.8.1. Note: Pilots should determine and reference height above touchdown for the approach to be flown using the most practical means available. Radar altimeter height provides a convenient reference but may not provide consistent stabilized approach callouts due to terrain along the approach. Touch Down Zone Elevation (TDZE) or Threshold Crossing Height (TCH/THRE/THR) provides accurate elevation but may not always be published for the desired runway. (2) If the PF has stated "landing" then this call is not required.		

Table 30.4. (Added-AMC) Precision Approach Advisory Calls.

Precision Approaches (1)	PM Call	PF Response
100' above glideslope intercept altitude	"100 above"	
1,000' above touchdown	"1,000, stable" or deviation	
500' above touchdown	"500, stable" or "Go-around, unstable"	(Acknowledge)
100' above DH/DA	"100 above"	
At DH/DA	"Minimums"	(2)
Only approach lights in sight (CAT I ILS)	"Approach lights in sight"	"Continuing" (3)
Runway environment in sight	"Runway in sight"	"Landing" or "Going around"
Approach Lights and/or Runway environment not in sight	"Go-around"	"Going around"
At 100' above TDZE (CAT I ILS)	"100 feet" (4)	"Landing" or "Going around"

Notes:

- (1) Refer to stabilized approach guidance in **paragraph 30.8.1. Note:** Pilots should determine and reference height above touchdown for the approach to be flown using the most practical means available. Radar altimeter height provides a convenient reference but may not provide consistent stabilized approach callouts due to terrain along the approach. TDZE or Threshold Crossing Height (TCH/THRE/THR) provides accurate elevation but may not always be published for the desired runway.
- (2) The PF will announce his/her intentions to either land, continue (CAT I) or go-around. Respond with the intention to land if not in runway environment is in sight, will remain in sight throughout touchdown and the aircraft is in a position for a safe landing. **(T-2)**
- (3) With weather at visibility-only minimums during a CAT I ILS, the pilot may not see the runway environment at DA; however, the initial portion of the approach lights may be visible. The pilot may continue to 100 HAT with reference to the approach lights only. The pilot may not descend below 100 feet above touchdown zone elevation using the approach lights as reference unless the red terminating bars or the red side row bars are distinctly visible and identifiable. **(T-2)**
- (4) If the PF has stated "landing" then this call is not required.

30.6.3. **(Added-AMC)** Deviation Advisories. IAW sound CRM/TEM practices, aircrew members will inform the PF when flight path deviations exceed (or will exceed) MDS tolerances, and no attempt is being made to correct the deviation. **(T-2)** Any aircrew member noticing a potential terrain and/or obstruction issue will immediately notify the PF. **(T-2)** The PF will take immediate corrective action. **(T-2)** This is especially important during critical phases of flight, nighttime, NVG ops, and/or instrument conditions.

30.6.3.1. **(Added-AMC)** Under normal flight conditions, deviations observed in excess of heading (+/- 5 degrees), airspeed (+10/-5 knots), or altitude (+/- 100 feet) will be announced by any aircrew member using clear and concise terminology (e.g., "XX knots fast"). **(T-2)** When conducting planned maneuvers with tolerances different than those listed above, comply with AFTTP 3-3 guidance for "Terminate criteria".

30.6.4. **(Added-AMC)** Emergency Advisories. Any aircrew member detecting an existing or impending emergency condition will immediately inform the AC. The PF will take necessary action to establish and/or maintain control of the aircraft and call for the appropriate checklist. **(T-2)**

30.6.5. **(Added-AMC)** Rejected Takeoff Decision Making. The Rejected Takeoff (RTO)/Continue Takeoff decision making process is dynamic, time critical, and may be complex. Aircrew can mitigate takeoff hazards by building a shared mental model of the takeoff including Take-Off and Landing Data, aircraft systems, cargo, terrain, environmental conditions, high-speed vs. low- speed reject risks. The PIC is the final decision authority and should ensure a clear understanding of expected crew actions IAW MDS-specific guidance.

30.7. (Added-AMC) Critical Action Coordination. Those actions that are flight critical/irreversible in nature must always be confirmed by two aircrew members. **(T-2)** These actions include but are not limited to: placing fuel levers off, pulling the engine fire handle, discharging agent, dumping fuel, and other actions determined to be critical in the aircraft flight manual. Critical Action Coordination is performed as follows:

30.7.1. **(Added-AMC)** Both aircrew members verbally and visually identify the affected control, (i.e., "CONFIRM NUMBER ONE"). The aircrew member performing the action points to the affected control. The aircrew member monitoring the action verbally and visually confirms the proper control is selected, (i.e., "NUMBER ONE CONFIRMED"). The aircrew member performing the action then actuates the affected control. **Note:** During any emergency, the AC normally notifies the crew of the emergency, and the PM normally notifies all others concerned, such as ground control, tower, etc.

30.8. (Added-AMC) Stabilized Approach. Unstable approaches are primary contributors to numerous military and civilian mishaps. Stabilized approaches are essential for the safe operation of aircraft and are mandatory. The following criteria define specific parameters that mitigate risk during this critical phase of flight. This philosophy requires aircrew to take immediate corrective actions to stabilize the approach when outside designated parameters. Although tactical approaches are inherently less constrained, they must still result in the aircraft arriving at a position in space in an appropriate configuration and within acceptable parameters that will permit a safe landing consistent with aircraft flight manual restrictions as well as performance manual assumptions and limitations.

30.8.1. **(Added-AMC) Stabilized Approach Criteria.** The following stabilized approach criteria apply to all approaches and will be briefed prior to the first flight of the day. **(T-2)** Prior to each approach, the PF will brief the planned landing configuration, and targets for airspeed, bank angle, and rate of descent. **(T-2)** Additionally, prior to visual/tactical approaches, the PF will brief the maneuver parameters prior to execution, to include when to expect the aircraft to be stable and when to go around. **(T-2)**

30.8.1.1. **(Added-AMC)** Aircraft is in landing configuration. Final flap configuration may be delayed but will be briefed.

30.8.1.2. **(Added-AMC)** Airspeed is appropriate for the configuration and conditions.

30.8.1.3. **(Added-AMC)** Sink rate is no greater than 1,000 fpm, or as briefed. **Note:** Under certain conditions (weather, terrain, etc.) some approaches may require greater than a 1,000-fpm descent rate. This increased sink rate will be briefed.

30.8.1.4. **(Added-AMC)** All briefings and checklists are complete unless contrary to T.O. guidance.

30.8.1.5. **(Added-AMC)** Aircraft is on the correct track.

30.8.1.6. **(Added-AMC)** Aircraft is in the correct bank angle to maintain proper approach track for instrument, circling, or visual approach.

30.8.1.7. **(Added-AMC)** Power set to maintain the descent profile at approach speed.

30.8.1.8. **(Added-AMC)** Momentary minor corrections or deviations are acceptable and defined as:

30.8.1.8.1. **(Added-AMC)** Airspeed: +10/-5 kts from target

30.8.1.8.2. **(Added-AMC)** Bank Angle: +/- 15 degrees from target

30.8.1.8.3. **(Added-AMC)** Rate of Descent: +/- 300 FPM from target

30.8.2. **(Added-AMC) Stabilized Approach Procedures.** The following procedures apply to all approaches. **Exception:** C-130H/J, C-17, and KC-46 use these criteria for all instrument (including circling) approaches, and refer to MDS-specific paragraphs below for visual (including tactical) approaches.

30.8.2.1. **(Added-AMC)** At 1,000 feet HAT, the stable criteria in [paragraph 30.8.1](#) apply.

30.8.2.1.1. **(Added-AMC)** If criteria are met, PM will state, “1,000, stable.”

30.8.2.1.2. **(Added-AMC)** If criteria are not met, the PM will announce the deviation, and the PF will take immediate corrective action. PM will state “1,000, XXXX” where “XXXX” equates to a concise description of the unstable characteristic(s) which clearly relay to the PF what actions are required to return the aircraft to a stable platform (e.g., “1,000, 15 fast”).

30.8.2.2. **(Added-AMC)** Between 1,000 feet and 500 feet HAT, the stable criteria in [paragraph 30.8.1](#) apply.

30.8.2.2.1. **(Added-AMC)** If criteria are not maintained, the PM will announce the deviation using the “XXXX” format (e.g., “15 fast”), and the PF will take immediate corrective action.

30.8.2.3. **(Added-AMC)** At 500 feet HAT, the stable criteria in [paragraph 30.8.1](#) apply.

30.8.2.3.1. **(Added-AMC)** If criteria are met, PM will state, “500, stable.”

- 30.8.2.3.2. **(Added-AMC)** If unstable or not in final flap configuration at 500 feet HAT, the PM will call, “Go around” and the PF will execute a go-around.
- 30.8.2.4. **(Added-AMC)** **From 500 feet HAT to the runway** , if the criteria in [paragraph 30.8.1](#) are exceeded, the PM or any other aircrew member will announce, “Go around” and the PF will execute a go-around.
- 30.8.3. **(Added-AMC) C-17/KC-46 Visual/Tactical.** The following criteria apply only to C-17 and KC-46 visual (including tactical) approaches:
- 30.8.3.1. **(Added-AMC)** The PF is required to brief the maneuver parameters prior to execution, to include when to expect the aircraft to be stable and when to go around. The briefed stabilization point and required callout for tactical approaches will be no lower than 300 feet AGL.
- 30.8.3.2. **(Added-AMC)** **At 500 feet AGL**, the stable criteria in [paragraph 30.8.1](#) apply, unless briefed by exception.
- 30.8.3.2.1. **(Added-AMC)** If criteria are met, the PM will state, “500, stable.”
- 30.8.3.2.2. **(Added-AMC)** If criteria are not met, the PM will announce the deviation and the PF will take immediate corrective action. PM will state, “500, XXXX” where “XXXX” equates to a concise description of the unstable characteristic(s) which clearly relay to the PF what actions are required to return the aircraft to a stable platform (e.g., “500, fast” or “500, bank angle”).
- 30.8.3.3. **(Added-AMC)** **Between 500 feet AGL and 300 feet AGL**, the stable criteria in [paragraph 30.8.1](#) apply.
- 30.8.3.3.1. **(Added-AMC)** If criteria are not maintained, the PM will announce the deviation using the “XXXX” format (e.g., “15 fast”), and the PF will take immediate corrective action.
- 30.8.3.4. **(Added-AMC)** **At 300 feet AGL**, the stable criteria in [paragraph 30.8.1](#) apply.
- 30.8.3.4.1. **(Added-AMC)** If criteria are met, PM will state, “300, stable.”
- 30.8.3.4.2. **(Added-AMC)** If unstable or not in final flap configuration at 300 feet AGL, the PM or any other aircrew member will announce, “Go around” and the PF will execute a go-around.
- 30.8.3.5. **(Added-AMC)** **From 300 feet AGL to the runway** , if the criteria in [paragraph 30.8.1](#) are exceeded, the PM or any other aircrew member will announce, “Go around” and the PF will execute a go-around.
- 30.8.4. **(Added-AMC) C-130H/J Visual/Tactical** . The following criteria apply to C-130H/J visual (including tactical) approaches:
- 30.8.4.1. **(Added-AMC)** The PF is required to brief the maneuver criteria prior to execution, to include when to expect the aircraft to be stable and when to go around. The briefed stabilization point and required callout for tactical approaches will be no lower than 300 feet AGL. **(T-2)**

30.8.4.2. **(Added-AMC)** At 300 feet AGL , the stable criteria in [paragraph 30.8.1](#) apply, unless briefed by exception.

30.8.4.2.1. **(Added-AMC)** If criteria are met, the PM will state, “300, stable.”

30.8.4.2.2. **(Added-AMC)** If criteria are not met, the PM will announce the deviation and the PF will take immediate corrective action. PM will state, “300, XXXX” where “XXXX” equates to a concise description of the unstable characteristic(s) which clearly relay to the PF what actions are required to return the aircraft to a stable platform. (e.g., “300, fast” or “300, bank angle”).

30.8.4.3. **(Added-AMC)** Between 300 feet AGL and 150 feet AGL, the stable criteria in [paragraph 30.8.1](#) apply.

30.8.4.3.1. **(Added-AMC)** If criteria are not maintained, the PM will announce the deviation using the “XXXX” format (e.g., “15 fast”) and the PF will take immediate corrective action.

30.8.4.4. **(Added-AMC)** At 150 feet AGL, the stable criteria in [paragraph 30.8.1](#) apply.

30.8.4.4.1. **(Added-AMC)** If criteria are met, PM will state, “150, stable.”

30.8.4.4.2. **(Added-AMC)** If unstable or not in final flap configuration at 150 feet AGL, the PM or any other aircrew member will announce, “Go around” and the PF will execute a go-around.

30.8.4.5. **(Added-AMC)** From 150 feet AGL to the runway , if the criteria in [paragraph 30.8.1](#) are exceeded, the PM or any other aircrew member will announce “Go around” and the PF will execute a go-around.

JOSEPH T. GUASTELLA Jr., Lt Gen, USAF
Deputy Chief of Staff, Operations

(AMC)

GERALD A. DONOHUE, Brig Gen, USAF
Director of Operations, Strategic Deterrence &
Nuclear Integration

(439AW)

CHRISTOPHER C. HOLLAND, Colonel, USAF
Commander

Attachment 1**GLOSSARY OF REFERENCES AND SUPPORTING INFORMATION*****References***

AC 20-131A, *Airworthiness Approval of Traffic Alert and Collision Avoidance Systems (TCAS-II) and Mode S Transponders*, 29 March 1993

AC 20-138D, *Airworthiness Approval of Positioning and Navigation Systems*, 28 March 2014

AC 20-140C, *Guidelines for Design Approval of Aircraft Data Link Communication Systems Supporting Air Traffic Services (ATS)*, 28 September 2016

AC 20-150B, *Airworthiness Approval of Satellite Voice (SATVOICE) Equipment Supporting Air Traffic Service (ATS) Communication*, 23 December 2014

AC 20-151C, *Airworthiness Approval of Traffic Alert and Collision Avoidance Systems (TCAS II), Versions 7.0 & 7.1 and Associated Mode S Transponders*, 21 July 2017

AC 20-165B, *Airworthiness Approval of Automatic Dependent Surveillance - Broadcast OUT Systems*, 7 December 2015

AC 20-167A, *Airworthiness Approval of Enhanced Vision System, Synthetic Vision System, Combined Vision System, and Enhanced Flight Vision System Equipment*, 6 December 2016

AC 20-172B, *Airworthiness Approval for ADS-B In Systems and Applications*, 20 May 2015

AC 70-2B, *Reporting of Laser Illumination of Aircraft*, 3 April 2020

AC 90-100A, *U.S. Terminal and En Route Area Navigation (RNAV) Operations*, 14 April 2015

AC 90-101A, *Approval Guidance for Required Navigation Performance (RNP) Procedures with Authorization Required (AR)*, 09 February 2016

AC 90-105A, *Approval Guidance for RNP Operations and Barometric Vertical Navigation in the U.S. National Airspace System and in Oceanic and Remote Continental Airspace*, 7 March 2016

AC 90-106A, *Enhanced Flight Vision Systems*, 10 July 2018

AC 90-107, *Guidance for Localizer Performance with Vertical Guidance and Localizer Performance without Vertical Guidance Approach Operations in the U.S. National Airspace System*, 11 February 2011

AC 90-108, *Use of Suitable Area Navigation (RNAV) Systems on Conventional Routes and Procedures*, 21 April 2015

AC 90-114A, *Automatic Dependent Surveillance-Broadcast Operations*, 30 December 2019

AC 90-117, *Data Link Communications*, 3 October 2017

AC 90-23G, *Aircraft Wake Turbulence*, 10 February 2014

AC 90-91K, *North American Route Program*, 11 December 2008

AC 90-96A, *Approval of U.S. Operators and Aircraft to Operate Under Instrument Flight Rules (IFR) in European Airspace Designated for Basic Area Navigation (B-RNAV) and Precision Area Navigation (P-RNAV)*, 13 January 2005

AC 91-70B, *Oceanic and Remote Continental Airspace Operations*, 1 February 2019

AC 91-85B, *Authorization of Aircraft and Operators for Flight in Reduced Vertical Separation Minimum (RVSM) Airspace*, 29 January 2019

AC 120-28D, *Criteria for Approval of Category III Weather Minima for Takeoff, Landing, and Rollout*, 13 July 1999

AC 120-29A, *Criteria for Approval of Category I and Category II Weather Minima for Approach*, 12 August 2002

AC 120-76D, *Authorization for Use of Electronic Flight Bags*, 27 Oct 2017

AC 120-108, *Continuous Descent Final Approach*, 20 January 2011

AC 120-118, *Criteria for Approval/Authorization of All Weather Operations for Takeoff, Landing, and Rollout*, 2 July 2018

AFH 11-203V1, *Weather for Aircrews*, 12 Jan 2012

(Added-AMC) AFI 10-801, *Defense Support of Civil Authorities*, 29 January 2022

(Added-AMC) AFI 11-207, *Fighter Aircraft Delivery*, 29 August 2023

(Added-AMC) AFI 11-215, *Flight Manuals Program*, 25 March 2019

(Added-AMC) AFI 11-418, *Operations Supervision*, 22 December 2021

(Added-AMC) AFI 13-207-O, *Preventing and Resisting Aircraft Piracy (Hijacking)*, 5 February 2019

(Added-AMC) AFI 16-1301, *Survival, Evasion, Resistance, and Escape (SERE) Program*, 3 August 2017

AFI 17-221, *Spectrum Interference Resolution Program*, 11 May 2018

AFI 11-208, *Department of Defense Notice to Airmen (NOTAM) System*, 13 February 2018

AFI 11-214, *Air Operations Rules and Procedures*, 8 July 2020

AFI 11-253, *Managing Purchases of Aviation Fuel and Ground Services*, 11 May 2021

AFI 11-301V1, *Aircrew Flight Equipment (AFE) Program*, 10 October 2017

(Added-AMC) AFI 24-605V2, *Air Transportation Operations*, 2 July 2020

AFI 33-322, *Records Management and Information Governance Program*, 23 March 2020

AFI 62-601, *USAF Airworthiness*, 11 June 2010

AFI 63-101/20-101, *Integrated Life Cycle Management.*, 30 June 2020

AFI 65-503, *U.S. Air Force Cost and Planning Factors*, 13 July 2018

AFI 91-202, *The U.S. Air Force Mishap Prevention Program*, 12 March 2020

AFMAN 10-206, *Operational Reporting (OPREP)*, 18 June 2018

AFMAN 11-202V1, *Aircrew Training*, 27 September 2019

AFMAN 11-218, *Aircraft Operations and Movement on the Ground*, 05 April 2019

AFMAN 11-230, *Instrument Procedures*, 24 July 2019

(Added-AMC) AFMAN 11-255V3, *Flight Manager Responsibilities and Procedures*, 16 November 2023

(Added-AMC) AFMAN 11-2AEV3, Addenda A-A, *Aeromedical Evacuation Operations Configuration/Mission Planning*, 16 June 2020

(Added-AMC) AFMAN 11-2AEV3, *Aeromedical Evacuation (AE) Operations Procedures*, 28 September 2023

(Added-AMC) AFMAN 11-2C-130HV3, *C-130H Operations Procedures*, 5 December 2023

(Added-AMC) AFMAN 11-2C-130JV3, *C-130J Operations Procedures*, 1 August 2023

AFMAN 11-402, *Aviation and Parachutist Service*, 24 January 2019

AFMAN 11-403, *Aerospace Physiological Training Program*, 13 August 2020

AFMAN 11-409, *High Altitude Airdrop Mission Support Capability Program*, 20 November 2020

AFMAN 11-502, *Small Unmanned Aircraft Systems*, 29 July 2019

(Added-AMC) AFMAN 17-1302-O, *Communications Security (COMSEC) Operations*, 9 April 2020

AFMAN 24-604, *Preparing Hazardous Materials for Military Air Shipments*, 9 October 2020

(Added-AMC) AFMAN 24-604/TM 38-250/NAVSUP PUB 505/MCO P4030.19J/DLAI 4145.3, 9 October 2020

AFMAN 91-223, *Aviation Safety Investigations and Reports*, 14 September 2018

AFJI 11-204, *Operational Procedures For Aircraft Carrying Hazardous Materials*, 11 November 1994

AFPAM 11-216, *Air Navigation*, 1 March 2001

AFPD 11-2, *Aircrew Operations*, 31 January 2019

AFPD 11-4, *Aviation Service*, 11 April 2019

Air Almanac, 01 January 2021

DAFI 11-209, *Participation in Aerial Events*, 20 May 2021

(Added-AMC) DAFI 17-221, *Spectrum Interference Resolution Program*, 31 January 2023

(Added-AMC) DAFI 21-101, *Aircraft and Equipment Maintenance Management*, 20 December 2023

(Added-AMC) DAFI 21-101_AMCSUP, *Aircraft and Equipment Maintenance Management*, 15 July 2024

(Added-AMC) DAFI 31-101, *Integrated Defense (ID)*, 25 March 2020

(Added-AMC) DAFI 31-117, *Arming and Use of Force by Air Force Personnel*, 6 August 2020

(Added-AMC) DAFI 32-2001, *Fire and Emergency Services (F&ES) Program*, 28 July 2022

DAFI 33-360, *Publications and Forms Management*, 1 December 2015

(Added-AMC) DAFI 34-107, *Alcoholic Beverage Program*, 5 July 2023

(Added-AMC) DAFI 36-3802, *Force Support Readiness Programs*, 9 January 2019

(Added-AMC) DAFI 48-107V1, *En Route Care and Aeromedical Evacuation Medical Operations*, 15 December 2020

(Added-AMC) DAFI 91-202, *The Department of the Air Force (DAF) Mishap Prevention Program*, 20 March 2020

(Added-AMC) DAFI 91-204, *Safety Investigations and Reports*, 10 March 2021

(Added-AMC) DAFI 91-212, *Bird/Wildlife Aircraft Strake Hazard (BASH) Management Program*, 13 April 2023

DAFMAN 11-401, *Aviation Management*, 27 October 2020

(Added-AMC) DAFMAN 11-401_AFRCSUP, *Aviation Management*, 12 July 2023

DAFMAN 13-201, *Airspace Management*, 10 December 2020

DAFMAN 48-123, *Medical Examination and Standards*, 8 December 2020

(Added-AMC) DAFMAN 90-161, *Publishing Processes and Procedures*, 18 October 2023

(Added-AMC) DAFMAN 91-223, *Aviation Safety Investigations and Reports*, 20 September 2022

(Added-AMC) AMCI 11-208, *Mobility Air Forces Management*, 8 February 2017

(Added-AMC) AMCI 11-211, *Destination Airfield Suitability Analysis*, 13 March 2024

(Added-AMC) AMCI 11-270, *Mobility Air Forces Electronic Flight Bag Program*, 6 February 2023

(Added-AMC) AMCI 16-1404, *Top Secret Control*, 23 October 2018

(Added-AMC) AMCI 24-6051V1, *AMC Aerial Port Expeditor (APEX) Aircraft Loading Program*, 13 February 2020

DO-260, *Minimum Operational Performance Standards for 1090 MHz Extended Squitter Automatic Dependent Surveillance – Broadcast (ADS-B) and Traffic Information Services – Broadcast*, 2 December 2009

DO-282, *Minimum Operational Performance Standards for Universal Access Transceiver (UAT) Automatic Dependent Surveillance – Broadcast*, 2 December 2009

DoDD 4500.54E, *DoD Foreign Clearance Program*, 28 December 2009

(Added-AMC) DoDI 4515.13, *Air Transportation Eligibility*, 22 January 2016

DoDI 4540.01, *Use of International Airspace by U.S. Military Aircraft and for Missile and Projectile Firing*, 2 June 2015

(Added-AMC) DoDI 5200.33, *Defense Courier Operations*, 30 June 2011

(Added-AMC) DoDM 4140.25-M, Volume 2, Chapter 16, *Government Card Program Management Office DoD Fleet Card, Air Card, and Sea Card*

(Added-AMC) DoDM5200.01V3_DAFMAN16-1404V3, *Information Security Program: Protection of Classified Information*, 12 April 2022

EU-OPS 1, *Regulation (EU) No 965/2012 on Air Operations*, 5 October 2012

Federal Aviation Administration (FAA), *Aeronautical Information Manual (AIM)*, Current Edition

Federal Aviation Administration General Aviation Pilot's Guide to Preflight Weather Planning, Weather Self-Briefings, and Weather Decision Making, 01 August 2006

Federal Aviation Administration Order 6750.24E, *Instrument Landing System and Ancillary Electronic Component Configuration and Performance Requirements*, 29 March 2012

Federal Aviation Administration Joint Order 7110.10BB, *Flight Services*, 17 May 2021

Federal Aviation Administration Joint Order 7400.2M, *Procedures for Handling Airspace Matters*, 28 January 2019

Federal Aviation Administration Joint Order 7610.4V, *Special Operations*, 5 July 2019

Federal Aviation Administration Joint Order 7110.65Y, *Air Traffic Control*, 20 June 2019

Federal Aviation Administration Order 7110.118B *Land and Hold Short Operations (LAHSO)*, 3 August 2020

Federal Aviation Administration Order 7930.2S, *Notices to Airmen (NOTAM)*, 11 December 2018

Federal Aviation Administration Order 8260.19I, *Flight Procedures and Airspace*, 29 June 2020

Federal Aviation Administration Order 8260.3E, *United States Standard for Terminal Instrument Procedures (TERPS)*, 17 September 2020

Federal Aviation Administration Order 8260.46G, *Departure Procedure (DP) Program*, 9 November 2018

Federal Aviation Administration Order 8260.58B, *United States Standard for Performance Based Navigation (PBN) Instrument Procedure Design*, 24 August 2020

Federal Aviation Administration Order 8400.13F, *Procedures for the Evaluation and Approval of Facilities for Special Authorization Category I Operations and All Category II and III Operations*, 25 October 2019

Federal Aviation Administration FAA-H-8083-3B, *Airplane Flying Handbook*, 2016

Federal Aviation Administration FAA-H-8083-15B, *Instrument Flying Handbook*, 2012

Federal Aviation Administration FAA-H-8083-16B, *Instrument Procedures Handbook*, 2017

Federal Aviation Administration FAA-H-8083-25B, *Pilot's Handbook of Aeronautical Knowledge*, 2016

Federal Aviation Administration Order 8900.1 Volume 4, *Aircraft Equipment and Operational Authorizations*, 9 April 2018

Federal Aviation Administration Pilot/Controller Glossary, 2 December 2021

International Civil Aviation Organization Annex 2, *Rules of the Air*, July 2005

International Civil Aviation Organization Annex 10 Volume 1, *Radio Navigation Aids*, July 2018

International Civil Aviation Organization Annex 11, *Air Traffic Services*, July 2018

International Civil Aviation Organization Annex 15, *Aeronautical Information Services*, July 2018

International Civil Aviation Organization Document 4444, *Air Traffic Management*, 2016

International Civil Aviation Organization Document 7030, *Regional Supplementary Procedures*, 2008

International Civil Aviation Organization Document 8168 Volume 1, *Aircraft Operations – Flight Procedures*, 2018

International Civil Aviation Organization Document 8168 Volume 2, *Aircraft Operations – Construction of Visual and Instrument Flight Procedures*, 2020

International Civil Aviation Organization Document 8400, *ICAO Abbreviations and Codes*, 10 Nov 2016

International Civil Aviation Organization Document 9613, *Performance-based Navigation (PBN) Manual*, 2013

International Civil Aviation Organization Document 9849, *Global Navigation Satellite System (GNSS) Manual*, 2017

International Civil Aviation Organization Document 9869, *Performance-based Communication and Surveillance (PBCS) Manual*, 2017

International Civil Aviation Organization Document 10037, *Global Operational Data Link (GOLD) Manual*, First Edition, 2017

Joint Publication 3, *Joint Operations*, 15 May 2018

North Atlantic Operations Document 007, *North Atlantic Operations and Airspace Manual*, version 2021-1, February 2021

RECAT-EU, *European Wake Turbulence Categorization and Separation Minima on Approach and Departure*, 14 February 2018

SS521-AG-PRO-010, *U.S. Navy Diving Manual*, 11 January 2017.

(Added-AMC) T.O. 00-20-1, *Aerospace Equipment Maintenance Inspection, Documents, Policies and Procedures*, 12 January 2023

(Added-AMC) T.O. 1-1-300, *Maintenance Operational Checks and Check Flights*, 15 December 2023

(Added-AMC) T.O. 1C-(MDS-specific)-6, *Aircraft Scheduled Inspections and Maintenance Requirements*

(Added-AMC) T.O. 1C-(MDS-specific)-6CF-1, *Acceptance and/or Functional Check Procedures Manual*

T.O. 42C-1-2 *Anti-Icing De-Icing and Defrosting of Parked Aircraft*

Title 14, Code of Federal Regulations, Part 1, *Definitions and Abbreviations*

Title 14, Code of Federal Regulations, Part 73, *Special Use Airspace*

Title 14, Code of Federal Regulations, Part 121, *Operating Requirements: Domestic, Flag, and Supplemental Operations*

Title 14, Code of Federal Regulations, Part 135, *Operating Requirements: Commuter and on Demand Operations and Rules Governing Persons on Board Such Aircraft*

Title 14, Code of Federal Regulations, Part 91, *General Operating and Flight Rules*

Title 14, Code of Federal Regulations, Part 93, *Special Air Traffic Rules*

Title 14, Code of Federal Regulations, Part 95, *IFR Altitudes*

Title 14, Code of Federal Regulations, Part 97, *Standard Instrument Procedures*

Title 14, Code of Federal Regulations, Part 99, *Security Control of Air Traffic*

Title 47, Code of Federal Regulations, Part 22.925, *Public Mobile Services*

TSO-C145e, *Airborne Navigation Sensors Using the Global Positioning System Augmented by The Satellite Based Augmentation System (SBAS)*, 5 May 2017

TSO-C146e, *Stand-Alone Airborne Navigation Equipment Using The Global Positioning System Augmented By the Satellite Based Augmentation System (SBAS)*, 5 May 2017

U.S. AIP, *United States of America Aeronautical Information Publication*, 31 December 2020

Prescribed Forms

None

(Added-AMC) None

Adopted Forms

(Added-AMC) AF Form 457, *USAF Hazard Report*

(Added-AMC) AF Form 523, *USAF Authorization to Bear Firearms*

(Added-AMC) AF Form 651, *Hazardous Air Traffic Report (HATR)*

(Added-AMC) AF Form 664, *Aircraft Fuels Documentation Log*

AF Form 679, *Air Force Publication Compliance Item Waiver Request/Approval*

(Added-AMC) AF Form 813, *Request for Environmental Impact Analysis*

AF Form 847, *Recommendation for Change of Publication*

(Added-AMC) AF Form 1199, *Air Force Entry Control Card*

(Added-AMC) AF Form 1297, *Temporary Issue Receipt*

(Added-AMC) AF Form 3858, *Aeromedical Evacuation Mission Offload Message*
(Added-AMC) AF Form 4075, *Aircraft Load Data Worksheet*
(Added-AMC) AF Form 4076, *Aircraft Dash 21 Equipment Inventory*
(Added-AMC) AF Form 4096, *Airdrop/Tactical Airland/Air Refueling Mission Recap*
(Added-AMC) AF Form 4327a, *Crew Flight (FA) Authorization*
(Added-AMC) AFTO Form 46, *Prepositioned Aircrew Flight Equipment*
(Added-AMC) AFTO Form 781, *ARMS Aircrew/Mission Flight Data Document*
(Added-AMC) AFTO Form 781A, *Maintenance Discrepancy and Work Document*
(Added-AMC) AFTO Form 781H, *Aerospace Vehicle Flight Status and Maintenance*
(Added-AMC) AMC Form 54, *Aircraft Commander's Report on Services/Facilities*
(Added-AMC) AMC Form 97, *AMC In-Flight Emergency and Unusual Occurrence Worksheet*
(Added-AMC) AMC Form 148(-2)(G), *Boarding Pass/Ticket/Receipt*
(Added-AMC) CBP Form 6059B, *US Customs and Border Protection Declaration Form*
(Added-AMC) CBP Form 7507, *General Declaration (Outward/Inward)*
(Added-AMC) DD Form 791, *In-Flight Issue Log*
(Added-AMC) DD Form 1385, *Cargo Manifest*
(Added-AMC) DD Form 1748-2, *Joint Airdrop Malfunction Report (Personnel-Cargo)*
(Added-AMC) DD Form 1896, *DoD Fuel Identaplate*
(Added-AMC) DD Form 1898, *Energy Sale Slip*
(Added-AMC) DD Form 1907, *Signature and Tally Record*
(Added-AMC) DD Form 2130-2, *C-130 E/H/J Load Plan*
DD Form 2131, *Passenger Manifest*
(Added-AMC) DD Form 2133, *Joint Airlift Inspection Record/Checklist*
(Added-AMC) DD Form 2992, *Medical Recommendation for Flying or Special Operational Duty*
FAA GPS Anomaly Reporting Form
(Added-AMC) GDSS Form 59, *Mission Itinerary*
(Added-AMC) I-94, *Immigration Form, Arrival/Departure Record*
(Added-AMC) SF 44, *Purchase Order-Invoice-Voucher*

Abbreviations and Acronyms

(Added-AMC) **618 AOC**—618th Air Operations Center
(Added-AMC) **AAR**—Aerial Aircraft-to-Aircraft Refueling

AATCP—Allied Air Traffic Control Publication

ABAS—Aircraft-Based Augmentation System

AC—Advisory Circular

(Added-AMC) ACARS—Automated Communications Addressing Reporting System

ACC—Air Combat Command

(Added-AMC) ACF—Acceptance Check Flight

(Added-AMC) ACFP—Automated Computer Flight Plan

ACO—Airspace Control Order

ACP—Actual Communication Performance

ADF—Automatic Direction Finder

ADIZ—Air Defense Identification Zone

ADS-B—Automatic Dependent Surveillance – Broadcast

(Added-AMC) AE—Aeromedical Evacuation

(Added-AMC) AECM—Aeromedical Evacuation Crew Member

AETC—Air Education and Training Command

AF—Air Force

AFAFRICA—Air Forces Africa

AFDW—Air Force District of Washington

(Added-AMC) AFE—Aircrew Flight Equipment

AFFSA—Air Force Flight Standards Agency

AFI—Air Force Instruction

AFJI—Air Force Joint Instruction

AFH—Air Force Handbook

AFGSC—Air Force Global Strike Command

(Added-AMC) AFLCMC—Air Force Life Cycle Management Center

(Added-AMC) AFM—Aircraft Flight Manual

AFMC—Air Force Material Command

AFMAN—Air Force Manual

AFPD—Air Force Policy Directive

AFRC—Air Force Reserve Command

AFREP—Air Force Representative to the FAA

(Added-439AW) AFRIMS—Air Force Records Information Management System

AFSOC—Air Force Special Operations Command
(Added-AMC) AFTO—Air Force Technical Order
(Added-AMC) AGE—Aerospace Ground Equipment
AGL—Above Ground Level
AI—Attitude Indicator
AIM—Aeronautical Information Manual
AIR Card ®—Aviation Into-Plane Reimbursement Card
AIRAC—Aeronautical Information Regulation and Control
AIP—Aeronautical Information Publication
(Added-AMC) ALE—Automated Link Establishment
(Added-AMC) ALEP—Aircrew Laser Eye Protection
ALS—Approach Lighting System
ALSF—Approach Lighting System with Sequenced Flashing Lights
ALTRV—Altitude Reservation
AMC—Air Mobility Command
AMU—Area of Magnetic Unreliability
ANG—Air National Guard
(Added-AMC) AOC—Airline Operational Control
(Added-AMC) AOR—Area of Responsibility
AP—Area Planning
APCH—Approach
APV—Approach with Vertical Guidance
AR—Authorization Required
(Added-AMC) ARC—Air Reserve Component
(Added-AMC) ARCT—Air Refueling Control Time
(Added-AMC) ARINC—Aeronautical Radio Incorporated
(Added-AMC) ARIP—Air Refueling Initial Point
(Added-AMC) ARMS—Aviation Resource Management System
(Added-AMC) ARTCC—Air Regional Traffic Control Center
ASAP—Aviation Safety Action Program
ASDA—Accelerate-Stop Distance Available
ASR—Airport Surveillance Radar

(Added-AMC) ASRR—Airfield Suitability and Restrictions Report

ATC—Air Traffic Control

ATCAA—Air Traffic Control Assigned-Airspace

ATM—Air Traffic Management

ATO—Air Tasking Order

(Added-AMC) ATP—Allied Tactical Publication

ATS—Air Traffic Services

ATIS—Automatic Terminal Information Service

(Added-AMC) ATTILA—Air Transportability Test Loading Agency

(Added-AMC) AvORM—Aviation Operational Risk Management

Baro-VNAV—Barometric Vertical Navigation

(Added-AMC) BASH—Bird/Wildlife Aircraft Strike Hazard

BC—Back Course

BDS—BeiDou Navigation Satellite System

(Added-AMC) C2—Command and Control

CAT—Category

CCMD—Combatant Command

CDFA—Continuous Descent Final Approach

CDI—Course Deviation Indicator

(Added-AMC) CDT—Crew Duty Time

(Added-AMC) CECR—Crew Enhancement Crew Rest

CFIT—Controlled Flight Into Terrain

(Added-AMC) CFP—Computer Flight Plan

CFR—Code of Federal Regulations

CIV—Civilian

(Added-AMC) CM—Counter Measures

(Added-AMC) CMT—Charge Medical Technician

CNS—Communication, Navigation, and Surveillance

CNS/ATM—Communications, Navigation, and Surveillance/Air Traffic Management

COMAFFOR—Commander Air Force Forces

(Added-AMC) COMSEC—Communications Security

(Added-AMC) CONOP—Concept of Operation

CPDLC—Controller Pilot Data Link Communications
(Added-AMC) CPDLC—Controller-Pilot Datalink Communications
(Added-AMC) CRM—Crew Resource Management
CTAF—Common Traffic Advisory Frequency
DA—Decision Altitude
DAFI—Department of the Air Force Instruction
DAFIF—Digital Aeronautical Flight Information File
DAFMAN—Department of the Air Force Manual
DAIP—DoD Aeronautical Information Portal
DDA—Derived Decision Altitude
DER—Departure End of Runway
DH—Decision Height
DIA—Defense Intelligence Agency
DME—Distance Measuring Equipment
DoDI—Department of Defense Instruction
DNIF—Duties Not Including Flying
DVA—Diverse Vector Area
DVFR—Defense Visual Flight Rules
DVOF—Digital Vertical Obstruction File
(Added-AMC) EA—Executive Airlift
(Added-AMC) EAL—Entry Access List
EFB—Electronic Flight Bag
EGPWS—Enhanced Ground Proximity Warning System
EGNOS—European Geostationary Navigation Overlay System
E-IPL—Electronic – Instrument Procedure Library (E-IPL)
ELT—Emergency Locator Transmitter
(Added-AMC) EMI—Electro-Magnetic Interference
(Added-AMC) EPOS—Emergency Passenger Oxygen System
ERAA—Emergency Route Abort Altitude
ESA—Emergency Safe Altitude
ETA—Estimated Time of Arrival
(Added-AMC) ETE—Estimated Time Enroute

ETP—Equal Time Point

EU—European Union

(Added-AMC) FA—Flight Attendant

FAA—Federal Aviation Administration

FAF—Final Approach Fix

(Added-AMC) FAS—Fly Away Security

FBO—Fixed-Base Operator

FCB—Flight Crew Bulletin

(Added-AMC) FCC—Flying Crew Chief

FCG—Foreign Clearance Guide

FCIF—Flight Crew Information File

FD—Fault Detection

FDC—Flight Data Center

FDE—Fault Detection and Exclusion

FDP—Flight Duty Period

FIH—Flight Information Handbook

(Added-AMC) FIR—Flight Information Region

FL—Flight Level

FLIP—Flight Information Publication

(Added-AMC) FMC—Flight Management Computer

FMS—Flight Management System

FOD—Foreign Object Damage

(Added-AMC) FPM—Flight Path Management

(Added-AMC) FRAG—Fragmentary Order

FSS—Flight Service Station

FTE—Flight Technical Error

FTIP—Foreign Terminal Instrument Procedure

GAGAN—GPS and Geo Augmented Navigation System

(Added-AMC) GATES—Global Air Transportation Execution System

GBAS—Ground Based Augmentation System

GCAS—Ground Collision Avoidance System

GCS—Ground Control Station

GDSS—Global Decision Support System
GEO—Geostationary Earth Orbit
GLONASS—Globalnaya Navigazionnaya Sputnikovaya Sistema
GLS—GBAS Landing System
GNC—Grid Navigation Chart
GNSS—Global Navigation Satellite System
GoMex—Gulf of Mexico
GPS—Global Positioning System
GPWS—Ground Proximity Warning System
(Added-AMC) GTIMS—Global Training Information Management System
HAA—Height Above Airfield
HAF—Headquarters Air Force
HAT—Height Above Touchdown
(Added-AMC) HATR—Hazardous Air Traffic Report
HEEDS—Helicopter Emergency Egress Device System
(Added-AMC) HF—High Frequency
Hg—Mercury
HILPT—Hold-In-Lieu-of Procedure Turn
HIRL—High Intensity Runway Lighting
HPMA—High Performance Military Aircraft
hPa—Hectopascals
HQ—Headquarters
HUD—Head-Up-Display
IAF—Initial Approach Fix
IAP—Instrument Approach Plate
ICAO—International Civil Aviation Organization
(Added-AMC) ICS—Infant Car Seat
IF—Intermediate Fix
(Added-AMC) IFM—Integrated Flight Management
IFR—Instrument Flight Rules
ILS—Instrument Landing System
IM—Inner Marker

IMC—Instrument Meteorological Conditions

(Added-AMC) IP—Instructor Pilot

IR—IFR Military Training Routes

IRU—Inertial Reference Unit

ISA—International Standard Atmosphere

(Added-AMC) JA/ATT—Joint Airborne/Air Transportability Tasking

JMCS—Jeppesen® Military Chart Service

JNC—Jet Navigation Chart

JO—Joint Order

JOG-A—Joint Operations Graphics-Air

KIAS—Knots Indicated Airspeed

LAAS—Local Area Augmentation System

LAHSO—Land and Hold Short Operations

LDA—Landing Distance Available

LDA—Localizer Type Directional Aid

LLZ—Localizer

LNAV—Lateral Navigation

LOC—Localizer

LP—Localizer Performance

LPV—Localizer Performance with Vertical Guidance

(Added-AMC) MAF—Mobility Air Forces

(Added-AMC) MAFPS—MAF Automated Flight Planning Service

MAJCOM—Major Command

MALS—Medium Intensity Approach Lighting System

MALSR—Medium Intensity Approach Lighting System with Runway Alignment Indicator Lights

MAP—Missed Approach Point

(Added-AMC) MARSA—Military Assumes Responsibility for Separation of Aircraft

mb—Millibars

(Added-AMC) MC—Mission Commander

(Added-AMC) MCD—Medical Crew Director

MDA—Minimum Descent Altitude

MDS—Mission Design Series

MEA—Minimum En Route Altitude
MHz—Megahertz
MIA—Minimum Instrument Flight Rules Altitude
MIL—Military
MIPS—Military Instrument Procedure Standardization
MM—Middle Marker
MOA—Military Operations Area
MOCA—Minimum Obstruction Clearance Altitude
MON—Minimum Operational Network
MSA—Minimum Safe Altitude
MSAS—Multi-function Satellite Augmentation System
MSL—Mean Sea Level
MTR—Military Training Route
MVA—Minimum Vectoring Altitude
N/A—Not Applicable
NA—Not Authorized
(Added-AMC) NAF—Numbered Air Force
NAS—National Airspace System
NAT HLA—North Atlantic High Level Airspace
NATO—North Atlantic Treaty Organization
NAVAID—Navigation Aid
NDB—Non-Directional Beacon
NGA—National Geospatial-Intelligence Agency
NGB—National Guard Bureau
NM—Nautical Mile
(Added-AMC) NMR—Non-Mission Ready
NOTAM—Notice to Airmen
NSA—National Security Area
NSE—Navigation System Error
NVD—Night Vision Device
OCF—Obstruction Change File
OCONUS—Outside the Continental United States

ODP—Obstacle Departure Procedure
(Added-439AW) OG—Operations Group
OIS—Obstacle Identification Surface
OM—Outer Marker
ONC—Operational Navigation Chart
(Added-AMC) OPLAN—Operations Plan
(Added-AMC) OPORD—Operational Order
OPR—Office of Primary Responsibility
OPTASKLINK—Operational Tasking Data Link
(Added-AMC) ORM—Operational Risk Management
OROCA—Off-Route Obstruction Clearance Altitude
ORTCA—Off Route Terrain Clearance Altitude
(Added-AMC) OSA—Operational Support Airlift
OWS—Operational Weather Squadron
PACAF—Pacific Air Forces
PANS-OPS—Procedures for Air Navigation Services-Aircraft Operations
PAR—Precision Approach Radar
PBCS—Performance-Based Communication and Surveillance
PBN—Performance-Based Navigation
(Added-AMC) PCM—Passenger Compartment Monitor
(Added-AMC) PCMCIA—Personal Computer Memory Card International Association
PDE—Path Definition Error
PED—Portable Electronic Device
(Added-AMC) PF—Pilot Flying
PFR—Primary Flight Reference
PIC—Pilot in Command
PinS—Point-in-Space
(Added-AMC) PM—Pilot Monitoring
(Added-AMC) PMCR—Post Mission Crew Rest
PPS—Precise Position Service
PRM—Precision Runway Monitor
(Added-AMC) PRP—Personnel Reliability Program

(Added-AMC) PSP—Presidential Support Program

RA—Resolution Advisory

(Added-AMC) RAD—Risk Assessment Database Guidance

RAIM—Receiver Autonomous Integrity Monitoring

RCLS—Runway Centerline Light System

RCP—Required Communication Performance

(Added-AMC) RCR—Runway Condition Reading

(Added-439AW) RDS—Records Disposition Schedule

RECAT-EU—European Wake Vortex Re-categorization

RF—Radius-To-Fix

RNAV—Area Navigation

RNP—Required Navigation Performance

ROBD—Reduced Oxygen Breathing Device

(Added-439AW) RON—Remain Overnight

RSP—Required Surveillance Performance

RSRS—Reduced Same Runway Separation

RTRL—Reduced Takeoff Runway Length

RVR—Runway Visual Range

RVSM—Reduced Vertical Separation Minimum

RWY—Runway

SA—Special Authorization

(Added-AMC) SAAM—Special Assignment Airlift Mission

SALS—Short Approach Lighting System

SARP—Standards and Recommended Practices

(Added-AMC) SATCOM—Satellite Communication

(Added-AMC) SATURN—Second generation Anti-jam Tactical UHF Radio for NATO

SBAS—Satellite-Based Augmentation System

SDCM—System for Differential Corrections and Monitoring

SDP—Special Departure Procedure

(Added-AMC) SELCAL—Selective Calling

SID—Standard Instrument Departure

SIGMET—Significant Meteorological Information

SFO/ELP—Simulated Flameout, Forced Landing, or Emergency Landing Patterns

SM—Statute Mile

(Added-AMC) SOFA—Status of Forces Agreement

SOIA—Simultaneous Offset Instrument Approach

SPINS—Special Instructions

SPO—System Program Office

SPS—Standard Positioning Service

SR—Slow Speed Low Altitude Training Route

SSALR—Simplified Short Approach Lighting System with Runway Alignment Indicator Lights

STAR—Standard Terminal Arrival

SVFR—Special Visual Flight Rules

TA—Traffic Advisory

TA—Transition Altitude

TAA—Terminal Arrival Area

TAC—Terminal Area Chart

TACAN—Tactical Air Navigation

TAWS—Terrain Awareness and Warning System

TCAS—Traffic Collision Avoidance System

TCH—Threshold Crossing Height

(Added-AMC) TDY—Temporary Duty

TDZ—Touchdown Zone

TDZE—Touchdown Zone Elevation

(Added-AMC) TEM—Threat and Error Management

TEMPO—Temporary

TERPS—Terminal Instrument Procedures

TFR—Temporary Flight Restriction

TLM—Topographic Line Map

TLv—Transition Level

T.O.—Technical Order

(Added-AMC) TOD—Top Of Descent

TODA—Takeoff Distance Available

TORA—Takeoff Run Available

TPC—Tactical Pilotage Chart
TSE—Total System Error
TSO—Technical Standard Order
(Added-AMC) TWCF—Transportation Working Capital Fund
UAS—Unmanned Aircraft System
UNICOM—Universal Communications
U.S.—United States
USA—United States Army
USAF—United States Air Force
USAFE—United States Air Forces Europe
USG—U.S. Government
USN—United States Navy
USSF—United States Space Force
VCOA—Visual Climb Over the Airport
VDA—Vertical Descent Angle
VDB—VHF Data Broadcast
VDP—Visual Descent Point
VFR—Visual Flight Rules
VGSI—Visual Glideslope Indicator
VHF—Very High Frequency
VMC—Visual Meteorological Conditions
VNAV—Vertical Navigation
VOR—Very High Frequency (VHF) Omni-Directional Range
VORTAC—Very High Frequency (VHF) Omni-directional Range/Tactical Air Navigation
VPA—Vertical Path Angle
VR—VFR Military Training Route
VVI—Vertical Velocity Indicator
(Added-AMC) VVM—Verbalize, Verify, and Monitor
WAAS—Wide Area Augmentation System
WATRS—West Atlantic Route System
WGS—World Geodetic Survey

Office Symbols

(Added-AMC) **618 AOC/ARDO**—Air Refueling Operations

(Added-AMC) **618 AOC/GADA**—Global Aeromedical Evacuation

(Added-AMC) **618 AOC/GADPA**—Aerial Port Control Center

(Added-AMC) **618 AOC/MODZF**—Flight Plans

(Added-AMC) **ACC/A3TV**—Air Combat Command – Standardization and Evaluation

(Added-AMC) **ACC/AOS/XP**—Air Combat Command – Air Operations Squadron – Plans and Programs

(Added-AMC) **AFLCMC/EZFC**—**AF Life Cycle Management Center**—Internal Air Transport Certification

(Added-AMC) **AFRC/A3MV**—**AF Reserve Command**—Standardization and Evaluation

(Added-AMC) **AFSC/SEF**—**AF Safety Center**—Air Safety Division

(Added-AMC) **AMC/A3AS**—Air Mobility Command – Airfield Suitability

(Added-AMC) **AMC/A3V**—Air Mobility Command – Standardization and Evaluation

(Added-AMC) **HAF/A3M**—AF Special Air Mission Office

(Added-AMC) **NGB/A3M**—National Guard Bureau – Standardization and Evaluation

Terms

Abeam—An aircraft is “abeam” a fix, point, or object when that fix, point, or object is approximately 90 degrees to the right or left of the aircraft track. Abeam indicates a general position rather than a precise point.

Aerobatic Flight—An intentional maneuver involving an abrupt change in an aircraft’s attitude, an abnormal attitude, or abnormal acceleration not necessary for normal flight. [*FAA Pilot/Controller Glossary*]

(Added-AMC) **AFW**—**BIFROST**—Air Force Weather Bridging Environmental Intelligence for Responsive Operational Support Portal. A single, net-centric source for authoritative environmental data, products, services, and tools from sources across the AFW Enterprise. Provides environmental impact capabilities to support warfighter situational awareness and decision-making. Access via <https://bifrost.afweather.mil/>

Aircrew Member—An individual, designated on the Flight Authorization who is an aircrew member as explained in AFPD 11-4, *Aviation Service*, AFMAN 11-402, *Aviation and Parachutist Service*, is assigned to a position listed in AFI 65-503, U.S. *Air Force Cost and Planning Factors*, and is designated on orders to fulfill specific aeronautical tasks.

Airfield—An area on land or water that is used or intended to be used for the landing and takeoff of aircraft; includes its buildings and facilities, if any. The FAA term “airport” and the ICAO term “aerodrome” may be used interchangeably with airfield for the purposes of this manual. An area prepared for the accommodation (including any buildings, installations, and equipment), landing, and takeoff of aircraft.

Air Force Flight Standards Agency (AFFSA)—The Field Operating Agency charged with the development, standardization, evaluation and certification of procedures, equipment and standards to support global flight operations.

Airport Reference Point—The official horizontal geographic location of an airport. It is the approximate geometric center of all usable runways at an airport. [FAA Order 8260.3]

Airspace Concept—An airspace concept describes the intended operations within a defined airspace. Airspace concepts are developed to satisfy explicit strategic objectives such as improved safety, increased air traffic capacity, and mitigation of environmental impact. Airspace concepts can include details of the practical organization of the airspace and its users based on specific assumptions (e.g., route structure, separation minima) [ICAO Doc 9613].

Air Traffic Control (ATC)—A service operated by appropriate authority to promote the safe, orderly and expeditious flow of air traffic [AIM Pilot/Controller Glossary].

Aircraft Approach Category—Aircraft approach category is equal to the stall speed (V_{so}) multiplied by 1.3 or stall speed (V_{slg}) multiplied by 1.23 in the landing configuration at the maximum certificated landing mass. If both V_{so} and V_{slg} are available, the higher resulting speed is used [ICAO Doc 8168 Volume 1].

Alternate Airfield—An airfield at which an aircraft may land if a landing at the intended airfield becomes inadvisable [AIM Pilot/Controller Glossary].

Alternate Means of Navigation—The use of a suitable RNAV system in lieu of operational conventional NAVAIDS without monitoring those NAVAIDS.

Altimeter Setting—The barometric pressure reading used to adjust a pressure altimeter for variations in existing atmospheric pressure or to the standard altimeter setting (29.92 inches Hg) [AIM Pilot/Controller Glossary].

Altitude—The height of a level, point, or object measured in feet AGL or MSL [AIM Pilot/Controller Glossary].

Anti-collision Lights—The primary flashing light system on the aircraft intended to attract the attention of others to enhance sense-and-avoid operations.

Approach with Vertical Guidance (APV)—A term used to describe RNAV approach procedures that provide lateral and vertical guidance but do not meet the requirements to be considered a precision approach [AIM Pilot/Controller Glossary].

Arc—The track over the ground of an aircraft flying at a constant distance from a NAVAID by reference to DME [AIM Pilot/Controller Glossary].

Area Navigation (RNAV)—A method of navigation which permits aircraft operation on any desired flight path within the coverage of ground-based or space-based NAVAIDS or within the limits of the capability of self-contained aids, or a combination of these.

Augmented Crew—A basic aircrew supplemented by additional aircrew members to permit in-flight rest. If the basic aircrew requires only one pilot and a second qualified pilot (includes pilots enrolled in an AETC formal aircrew training course) is designated an aircrew member to augment pilot duties, the crew can be considered augmented.

Automatic Dependent Surveillance—Broadcast (ADS-B)—A surveillance system in which an aircraft or vehicle to be detected is fitted with cooperative equipment in the form of a data link transmitter. The aircraft or vehicle periodically broadcasts its GPS-derived position and other information, such as velocity, over the data link to a ground-based transmitter/receiver (transceiver) for processing and display at an air traffic control facility. [*FAA Pilot/Controller Glossary*].

Aviation Safety Action Program (ASAP)—ASAP is an identity-protected, self-reporting system that is integral to reducing mishaps and improving operations and training. ASAP is designed for aircrew to report information and concepts critical to resolving mishap precursors and to share this information across AF aviation communities. The information is used to reduce mishaps through operational, logistic, maintenance, training, and procedural enhancements.

Bearing—The horizontal direction to or from any point, usually measured clockwise from true north, magnetic north, or some other reference point through 360 degrees [*AIM Pilot/Controller Glossary*].

Civil Twilight—Defined to begin in the morning, and end in the evening when the center of the Sun is geographically 6 degrees below the horizon [U.S. Naval Observatory]. Both periods of twilight are considered “day,” unless further restricted by the MAJCOM.

Class 1 EFB Hardware—Portable commercial off-the-shelf (COTS)-based computers, considered to be portable electronic devices (PED) with no aircraft manufacturer and/or system program office (SPO) design, production, or installation approval for the device and its internal components. Class 1 EFBs are not mounted to the aircraft, connected to aircraft systems for data, or connected to a dedicated aircraft power supply. Class 1 EFBs can be temporarily connected to an existing aircraft power supply for battery recharging. Class 1 EFBs that have Type B applications for aeronautical charts, approach charts, or an electronic checklist must be appropriately secured and viewable during critical phases of flight and must not interfere with flight control movement. (Portable Class 1 EFB components are not considered to be part of aircraft type design; e.g., not in the aircraft type certificate or supplemental type certificate.)

Class 2 EFB Hardware—Portable COTS-based computers, considered to be personal electronic devices with no aircraft manufacturer and/or SPO design, production, or installation approval for the device and its internal components. Class 2 EFBs are typically mounted. They must be capable of being easily removed from or attached to their mounts by flight-crew personnel. Class 2 EFBs can be temporarily connected to an existing aircraft power supply for battery recharging. They may connect to aircraft power, data ports (wired or wireless), or installed antennas, provided those connections are installed in accordance with aircraft manufacturer or system program office guidelines. (Portable Class 2 EFB components are not considered to be part of aircraft design.)

Class 3 EFB Hardware—EFBs permanently installed in the aircraft in accordance with applicable airworthiness regulations.

Compatible Published Approach—An instrument approach procedure that is published in Flight Information Publications, and if required contained in the aircraft flight management system database, that the aircraft is equipped with the appropriate certified avionics and the aircrew is trained, current, and certified to fly.

Compatible Published Approach Minimums—The minimum weather or altitude for flight on a published instrument approach procedure. This term is used throughout this manual to address variations in MAJCOM guidance when authorizing flight under IFR.

Contact Approach—A procedure that may be used by a pilot in lieu of conducting an instrument procedure to an airfield.

Controlled Cockpit Rest—A rest period that an aircrew member may use when authorized by MAJCOM. Controlled cockpit rest is useful during long duty days when an aircrew member may be fatigued during the airborne operation of an aircraft. This rest period will not replace or be a substitute for official crew rest.

Controlled Flights—ICAO definition for any flight which is subject to an ATC clearance.

Course Line—A line between any two points on a route.

Critical Phase of Flight—In the absence of MAJCOM guidance, this term should include: terminal area operations including taxi, takeoff and landing, low-level flight, air refueling, airdrop, weapons employment, flight using NVDs, tactical or air combat and formation operations (other than cruise), and all portions of any test or functional check flight or any aerial demonstration.

Day—The time between the beginning of morning civil twilight and the end of evening civil twilight, as published in the Air Almanac.

Dead Reckoning—The navigation of an airplane solely by means of computations based on airspeed, course, heading, wind direction, groundspeed, and elapsed time.

Decision Altitude (DA)—A specified barometric altitude (MSL) on an instrument approach procedure (ILS, GLS, vertically guided RNAV) at which the pilot decides whether to continue the approach or initiate an immediate missed approach if the pilot does not see the required visual references [*AIM Pilot/Controller Glossary*].

Decision Height (DH)—With respect to the operation of aircraft, means the height at which a decision is made during an ILS or PAR instrument approach to either continue the approach or to execute a missed approach. Decision height is referenced to the threshold elevation (e.g., radar altimeter) [*AIM Pilot/Controller Glossary*].

Departure Procedure—A preplanned IFR departure procedure published for pilot use, in graphic or textual format, that provides obstruction clearance from the terminal area to the appropriate en route structure. There are two types of departure procedures: ODP which are printed textually or graphically, and SID which are printed graphically [*AIM Pilot/Controller Glossary*].

Diverse Departure—If the airfield has at least one published approach, the absence of any non-standard takeoff minimums or IFR departure procedures for a specific runway normally indicates that runway meets diverse departure criteria.

Diverse Vector Area—In a radar environment, that area in which a prescribed departure route is not required as the only suitable route to avoid obstacles. The area in which random radar vectors below the MVA or minimum IFR altitude, established in accordance with the design criteria for diverse departures, obstacles and terrain avoidance, may be issued to departing aircraft [*AIM Pilot/Controller Glossary*].

Electronic Flight Bag (EFB)—An electronic display system intended primarily for flight deck use that includes the hardware and software necessary to support an intended function. EFB devices can display a variety of aviation data or perform basic calculations (e.g., performance data, fuel calculations). In the past, some of these functions were traditionally accomplished using paper references, or were based on data provided to the flight-crew by a flight dispatch function. The scope of the EFB functionality may include various other hosted databases and applications. Physical EFB displays may use various technologies, formats, and forms of communication. An EFB must be able to host Type A and/or Type B software applications.

Emergency Fuel—The point at which it is necessary to proceed directly to the airport of intended landing due to low fuel. Declaration of “emergency fuel” is an explicit statement that priority handling by ATC is both required and expected.

FAA Exemption—An official written FAA document which provides the petitioner relief from specified parts of the CFRs.

Fault Detection and Exclusion (FDE)—A function performed by some GNSS receivers, which can detect the presence of a faulty satellite signal and exclude it from the position calculation [ICAO Doc 9613].

Final Approach Course—A bearing, radial, or track of an instrument approach leading to a runway or an extended runway centerline all without regard to distance [*AIM Pilot/Controller Glossary*].

Final Approach Fix (FAF)—The fix from which the final approach to an airfield is executed and which identifies the beginning of the final approach segment. It is designated on U.S. Government charts by the “Maltese Cross” symbol for non-precision approaches and the “lightning bolt” symbol for precision approaches; or when ATC directs a lower-than-published glidepath or vertical path intercept altitude, it is the resultant actual point of the glidepath or vertical path intercept [*AIM Pilot/Controller Glossary*].

Fix—A geographical position determined by visual reference to the surface, by reference to one or more radio NAVAIDs, by celestial plotting, or by another navigation device [*AIM Pilot/Controller Glossary*].

(Added-AMC) Flight Information Region—A FIR is an area of airspace within which flight information and related services are provided. International Civil Aviation Organization (ICAO) has allocated, through regional air navigation agreements, responsibility for civil air traffic management in international airspace adjacent to coastal States in specified FIRs. States responsible for managing FIRs generally establish rules and procedures relating to civil aviation operations to carry out their responsibilities for providing air navigation facilities and air traffic management services in both national airspace and in assigned FIRs. However, DoD understands that these FIR rules and procedures do not apply as a matter of international law to State aircraft, including U.S. military aircraft. If not follow ICAO flight procedures, Aircraft may operate within an established FIR without approval of the adjacent country, provided the PIC avoid flight in national airspace.

Flight Management System (FMS)—A computer system that uses a large database to allow routes to be preprogrammed and fed into the system by means of a data loader. The system is constantly updated with respect to position accuracy by reference to conventional NAVAIDs. The sophisticated program and its associated database ensures that the most appropriate aids are automatically selected during the information update cycle [*AIM Pilot/Controller Glossary*].

(Added-AMC) Foreign National Airspace—Any airspace that is subject to the sovereignty of a State. This includes airspace above the territorial seas, internal waters, archipelagic waters (for archipelagic States) and land territory of a State. Consistent with international law, the U.S.

Formation Flight—[*FAA Pilot/Controller Glossary*] More than one aircraft which, by prior arrangement between the pilots, operate as a single aircraft with regard to navigation and position reporting. Separation between aircraft within the formation is the responsibility of the flight leader and the pilots of the other aircraft in the flight. This includes transition periods when aircraft within the formation are maneuvering to attain separation from each other to effect individual control and during join-up and breakaway.

- a. A standard formation is one in which a proximity of no more than 1 mile laterally or longitudinally and within 100 feet vertically from the flight leader is maintained by each wingman.
- b. Nonstandard formations are those operating under any of the following conditions:
 1. When the flight leader has requested and ATC has approved other than standard formation dimensions.
 2. When operating within an authorized altitude reservation (ALTRV) or under the provisions of a letter of agreement.
 3. When the operations are conducted in airspace specifically designed for a special activity.

Fuel Reserve—The amount of usable fuel that must be carried on each aircraft beyond that required to complete the flight as planned.

Global Navigation Satellite System (GNSS)—GNSS refers collectively to the worldwide positioning, navigation, and timing determination capability available from one or more satellite constellations in conjunction with a network of ground stations [*AIM Pilot/Controller Glossary*].

Ground Based Augmentation System (GBAS)—A ground based GNSS station which provides local differential corrections, integrity parameters and approach data via VHF data broadcast to GNSS users to meet real-time performance requirements for precision approaches. The aircraft applies the broadcast data to improve the accuracy and integrity of its GNSS signals and computes the deviations to the selected approach. A single ground station can serve multiple runway ends up to an approximate radius of 23 nautical miles [*AIM Pilot/Controller Glossary*].

Groundspeed—Groundspeed is the speed of the aircraft over the ground. Normally expressed in nautical miles per hour (knots).

Height Above Touchdown (HAT)—The height of the Decision Height or Minimum Descent Altitude above the highest runway elevation in the touchdown zone (first 3,000 feet of the runway). HAT is published on instrument approach charts in conjunction with all straight-in minimums [*AIM Pilot/Controller Glossary*].

Inner Marker (IM)—A marker beacon used with a CAT II ILS precision approach located between the middle marker and the end of the ILS runway. Transmits a radiation pattern keyed at six dots per second and indicating aurally and visually that the pilot is at the designated DH. Normally 100 feet above the touchdown zone elevation, on the ILS CAT II approach. It also marks progress during a CAT III approach [*AIM Pilot/Controller Glossary*].

Instrument Approach—A series of predetermined maneuvers for the orderly transfer of an aircraft under instrument flight conditions from the beginning of the initial approach to a landing or to a point from which a landing may be made visually [*AIM Pilot/Controller Glossary*].

Instrument Flight Rules (IFR)—Rules governing the procedures for conducting instrument flight. Also a term used by pilots and controllers to indicate type of flight plan [*AIM Pilot/Controller Glossary*].

Instrument Meteorological Conditions (IMC)—Meteorological conditions expressed in terms of visibility, distance from cloud, and ceiling less than the minima specified for visual meteorological conditions [*AIM Pilot/Controller Glossary*].

Intermediate Fix (IF)—The fix that identifies the beginning of the intermediate approach segment of an instrument approach procedure [*AIM Pilot/Controller Glossary*].

International Civil Aviation Organization [ICAO]—A United Nations Specialized Agency, established by ICAO States in 1944 to manage the administration and governance of the Convention on International Civil Aviation (Chicago Convention). ICAO works with the Convention's 192 ICAO Member States and industry groups to reach consensus on international civil aviation SARPs and policies in support of safe, efficient, secure, economically sustainable and environmentally responsible civil aviation sector.

Kollsman Window—A barometric scale window of a sensitive altimeter used to adjust the altitude for the altimeter setting [FAA-H-8083-25].

Land and Hold Short Operations (LAHSO)—Operations which include simultaneous takeoffs and landings or simultaneous landings when a landing aircraft is able and is instructed by the controller to hold-short of the intersecting runway, taxiway or designated hold-short point. Pilots are expected to promptly inform the controller if the hold short clearance cannot be accepted [*FAA Pilot/Controller Glossary*].

Lateral Navigation (LNAV)—A function of area navigation equipment which calculates, displays, and provides lateral guidance to a profile or path [*AIM Pilot/Controller Glossary*].

Low Close-in Obstacles—Obstacles that require a climb gradient greater than 200 feet per nautical mile to an altitude of 200 feet or less above the DER [FAA Order 8260.46].

Magnetic Course—The true course corrected for magnetic variation.

Magnetic Variation—The difference between true north and magnetic north. The magnetic variation is annotated on navigation charts, is different from one position on the earth to another and varies slightly over time.

Marker Beacon—An electronic navigation facility transmitting a 75 MHz vertical fan or bone-shaped radiation pattern. Marker beacons are identified by their modulation frequency and keying code, and when received by compatible airborne equipment, indicate aurally and visually that the pilot is passing over the facility [*AIM Pilot/Controller Glossary*].

Minimum Descent Altitude (MDA)—The lowest altitude, expressed in feet above mean sea level, to which descent is authorized on final approach or during circle-to-land maneuvering in execution of a standard instrument approach procedure where no electronic glideslope is provided [*AIM Pilot/Controller Glossary*].

Minimum En Route IFR Altitude (MEA)—The lowest published altitude between radio fixes which assures acceptable navigational signal coverage and meets obstacle clearance requirements between those fixes. The MEA prescribed for a Federal airway or segment thereof, area navigation low or high route, or other direct route applies to the entire width of the airway, segment, or route between the radio fixes defining the airway, segment, or route [*FAA Pilot/Controller Glossary*].

Minimum Fuel—Indicates that an aircraft's fuel supply has reached a state where, upon reaching the destination, it can accept little or no delay. This is not an emergency situation but merely indicates an emergency situation is possible should any undue delay occur [*FAA Pilot/Controller Glossary*].

Minimum Crossing Altitude—The lowest altitude at certain fixes at which an aircraft must cross when proceeding in the direction of a higher minimum en route IFR altitude (MEA) [*FAA Pilot/Controller Glossary*].

Minimum IFR Altitude (MIA)—Minimum altitude for Instrument Flight Rules operations as published on aeronautical charts for airways and routes, and for standard Instrument Approach Procedures or as assigned by Air Traffic Control [*FAA Pilot/Controller Glossary*].

Minimum Obstruction Clearance Altitude (MOCA)—The lowest published altitude in effect between radio fixes on VOR airways, off-airway routes, or route segments which meets obstacle clearance requirements for the entire route segment and which assures acceptable navigational signal coverage only within 25 statute (22 nautical) miles of a VOR [*FAA Pilot/Controller Glossary*].

Minimum Safe Altitude—Altitudes depicted on approach charts which provide at least 1,000 feet of obstacle clearance for emergency use within a specified distance from the navigation facility upon which a procedure is predicated. These altitudes will be identified as Minimum Sector Altitudes or Emergency Safe Altitudes [*FAA Pilot/Controller Glossary*].

Minimum Vectoring Altitude—The lowest MSL altitude at which an IFR aircraft will be vectored by a radar controller, except as otherwise authorized for radar approaches, departures, and missed approaches. The altitude meets IFR obstacle clearance criteria. It may be lower than the published MEA along an airway or J-route segment. It may be utilized for radar vectoring only upon the controller's determination that an adequate radar return is being received from the aircraft being controlled. Charts depicting minimum vectoring altitudes are normally available only to the controllers and not to pilots [*FAA Pilot/Controller Glossary*].

Mode S—A secondary surveillance radar process that allows selective interrogation of aircraft according to the unique 24-bit address assigned to each aircraft [ICAO Annex 10].

Mountainous Terrain—ICAO PANS-OPS defines mountainous terrain as an area over which the changes of surface elevation exceed 900 meters (3,000 feet) within a distance of 18.5 kilometers (10.0 nautical miles). Defined in 14 CFR 95.11 for the NAS.

National Airspace System (NAS)—The common network of U.S. airspace; air navigation facilities, equipment and services, airfields or landing areas; aeronautical charts, information and serviced; rules regulations and procedures, technical information, and manpower and material. Included are system components shared jointly with the military [*AIM Pilot/Controller Glossary*].

NAVAID Infrastructure—Refers to the ground-based and space-based NAVAIDs available to meet requirements in the navigation specification [ICAO Doc 9613].

Navigation Aid (NAVAID)—Any visual or electronic device airborne or on the surface which provides point-to-point guidance information or position data to aircraft in flight [*AIM Pilot/Controller Glossary*].

Navigation Application—The application of a navigation specification and the supporting NAVAID infrastructure, to routes, procedures, and defined airspace volume in accordance with the intended airspace concept [ICAO Doc 9613].

Navigation Specification—A set of aircraft and aircrew requirements needed to support PBN operations within a defined airspace. There are two kinds of navigation specification: RNAV specifications and RNP specifications [ICAO Doc 9613].

Night—The time between the end of evening civil twilight and the beginning of morning civil twilight, as published in the *Air Almanac*, converted to local time [*AIM Pilot/Controller Glossary*].

Non-precision Approach—An instrument approach based of a navigation system which provides course deviation but no glidepath deviation information (e.g., VOR, NDB, LNAV) [*AIM Pilot/Controller Glossary*].

Notice to Airmen (NOTAM)—A notice containing information (not known sufficiently in advance to publicize by other means) concerning the establishment, condition, or change in any component (facility, service, or procedure of, or hazard in the NAS) the timely knowledge of which is essential to personnel concerned with flight operations [*AIM Pilot/Controller Glossary*].

Obstacle—An existing object, object of natural growth, or terrain at a fixed geographical location or which may be expected at a fixed location within a prescribed area with reference to which vertical clearance is provided during flight operation [*AIM Pilot/Controller Glossary*]. Any natural or man-made obstruction designed or employed to disrupt, fix, turn, or block the movement of an opposing force, and to impose additional losses in personnel, time, and equipment on the opposing force [JP 3-15].

Obstacle Identification Surface (OIS)—An inclined or level surface associated with a defined area for obstruction evaluation [FAA Order 8260.3].

Obstacle Departure Procedure (ODP)—A preplanned IFR departure procedure printed for pilot use in textual or graphic form to provide obstruction clearance via the least onerous route from the terminal area to the appropriate en route structure [*AIM Pilot/Controller Glossary*]. **Note:** Low close in obstacles alone do not constitute an ODP.

Oceanic Airspace—Airspace over the oceans of the world, considered international airspace, where oceanic separation and ICAO procedures are applied. Responsibility for the provisions of ATC service in this airspace is delegated to various ICAO States based generally upon geographic proximity and availability of required resources [*AIM Pilot/Controller Glossary*].

Off—Route Obstruction Clearance Altitude (OROCA)—An off-route altitude which provides obstruction clearance with a 1,000 foot buffer in non-mountainous terrain areas and a 2,000 foot buffer in designated mountainous areas within the United States. This altitude may not provide signal coverage from ground-based navigational aids, air traffic control radar, or communications coverage. [*FAA Pilot/Controller Glossary*]

Off-Route Terrain Clearance Altitude (ORTCA)—An off-route attitude which provides terrain clearance within each bounded latitude/longitude quadrant as shown on DoD IFR charts. This altitude provides terrain clearance of 3,000 feet. This altitude may not provide signal coverage from ground-based navigational aids, air traffic control radar, or communications coverage. [*FLIP GP*]

Outer Marker (OM)—A marker beacon at or near the glideslope intercept altitude of an ILS approach [*AIM Pilot/Controller Glossary*].

P-Coded Civil Airports—U.S. civil airport wherein permit covers use by transient military aircraft. [*FLIP IFR Supplement*]

Passenger—An individual onboard the aircraft who is not on the flight authorization. See DAFMAN 11-401 for further guidance.

Performance-based Navigation (PBN)—Area navigation based on performance requirements for operating along an air traffic route, on an instrument procedure, or in a designated airspace [ICAO Doc 9613].

Pilot Flying—On multi-pilot aircraft, is the pilot maneuvering the aircraft and responsible to control and monitor the aircraft's flight path and energy state, including autopilot systems if engaged.

Portable Electronic Devices (PEDs)—Portable electronic devices which are not installed on an aircraft as standard equipment. PEDs may include temporary mounts, a data interface, an external antenna, and may require aircraft electrical power.

Precise Positioning Service (PPS)—GPS service available to authorized users via the encrypted P(Y) code ranging signal. The P(Y) code is the encrypted GPS signal. PPS can offer greater accuracy and resistance to jamming and spoofing.

Precision Approach—An instrument approach based on a navigation system that provides course and glidepath deviation information meeting the precision standards of ICAO Annex 10 (e.g., PAR, ILS, and GLS) [*AIM Pilot/Controller Glossary*].

Precision Runway Monitor (PRM) Approach—An approach conducted to parallel runways separated by less than 4,300 feet and the parallel runways have a precision radar monitoring system that permits simultaneous independent instrument approaches.

Predictive RAIM (P-RAIM)—Using a standard set of algorithms, the availability of RAIM may be determined based on the satellite coverage expected at an aircraft's ETA. Due to terrain masking and other factors (e.g., satellite fails after RAIM prediction made), P-RAIM does not guarantee there will be sufficient satellite coverage on arrival. P-RAIM does not have to reside in the GPS receiver. It can be provided by FAA Flight Service [NAS Only] and other ground-based RAIM algorithms.

Prevailing Visibility—The greatest horizontal visibility observed throughout at least half of the horizon circle. It need not be continuous throughout 180 consecutive degrees. [*AIM Pilot/Controller Glossary*]

Primary Flight Reference (PFR)—Any display or suite of displays and instruments used to present the basic flight information needed for immediate control of the aircraft. PFR includes attitude (climb or dive angle or pitch and vertical velocity, bank angle, and a prominent horizon reference), indicated or calibrated airspeed, barometric altitude, heading, appropriate fault indications, and the capability to recognize and recover from an unusual attitude. UAS PFR includes link status, flight guidance mode, and logic.

Procedure Turn—The maneuver prescribed when it is necessary to reverse direction to establish an aircraft on the intermediate approach segment or final approach course. The outbound course, direction of turn, distance within which the turn is to be completed, and minimum altitude are specified in the procedure. However, unless otherwise restricted, the point at which the turn may be commenced and the type and rate of turn are left to the discretion of the pilot [*AIM Pilot/Controller Glossary*].

QFE—Atmospheric pressure at airfield elevation (or at runway threshold) [ICAO Doc 8168 Volume 1].

QNE—The barometric pressure used for the standard altimeter setting (29.92 inches Hg) [*AIM Pilot/Controller Glossary*].

QNH—The barometric pressure as reported by a particular station [*AIM Pilot/Controller Glossary*].

Radar—A device which, by measuring the time interval between transmission and reception of radio pulses and correlating the angular orientation of the radiated antenna beam or beams in azimuth or elevation, provides information on range, azimuth, or elevation of objects in the path of the transmitted pulses [*AIM Pilot/Controller Glossary*].

Radar Required—A term displayed on charts and approach plates and included in flight data center (FDC) NOTAMs to alert pilots that segments of either an instrument approach or a route are not navigable because of either the absence or unusability of a NAVAID.

Receiver Autonomous Integrity Monitoring (RAIM)—A technique whereby a civil GNSS receiver determines the integrity of the GNSS navigation signals without reference to sensors or non-DoD integrity systems other than the receiver itself. This determination is achieved by a consistency check among redundant pseudorange measurements [*AIM Pilot/Controller Glossary*].

Reduced Same Runway Separation—Allows reduction of the normal ATC aircraft separation standards during landings and touch-and-goes and restricted low approach operations to increase the airport and runway capacity. [FAA JO 7110.65]

Reduced Takeoff Runway Length Procedure (RTRL)—Method used by TERPS to reduce high IFR climb gradients by shortening the available takeoff runway, thus increasing the distance to the obstacle, spot elevation, or terrain feature. It is normally printed in the IAP ▼ section. An example of an RTRL is “...or with standard takeoff minimums and a normal 200 feet/NM climb gradient, takeoff must occur no later than 2200 feet prior to departure end of runway.”

Reduced Vertical Separation Minimum (RVSM)—RVSM airspace is where ATC separates aircraft by a minimum of 1,000 feet vertically between FL290 and FL410 inclusive [FAA-H-8083-16].

Relief—A means of graphically portraying important topographic features ranging from ridge lines, canyons and peaks in rugged terrain, to isolated sharply rising hills in areas of flat terrain.

Remote or Island Destination—In the absence of more restrictive MAJCOM guidance, pilots will consider a remote or island destination as any aerodrome that, due to its unique geographic location, offers no suitable alternate within two hours flying time.

Reporting Point—A geographical location in relation to which the position of an aircraft is reported [*AIM Pilot/Controller Glossary*].

Required Navigation Performance (RNP)—A statement of the navigation performance necessary for operation within a defined airspace [*AIM Pilot/Controller Glossary*].

RNAV Approach—An instrument approach procedure which relies on aircraft area navigation equipment for navigation guidance [*AIM Pilot/Controller Glossary*].

RNAV Operations—Operations using area navigation for RNAV applications [ICAO Doc 9613].

RNAV System—Navigation system which permits aircraft operation on any desired flight path within the coverage of station-referenced NAVAIDs or within the limits of the capability of self-contained aids, or a combination of these. An RNAV system may be included as part of an FMS [ICAO Doc 9613].

RNP APCH—RNP APCH has a lateral approach accuracy of 1 nautical mile in the terminal and missed approach segments and scales to 0.3 nautical miles in the final approach. “RNAV (GPS)” is equivalent to “RNP APCH” [AIM 1-2-2; ICAO Doc 9613].

RNP AR APCH—RNP AR APCH capability requires specific aircraft performance, design, operational processes, and specific procedure design criteria to achieve the required target level of safety. RNP AR APCH has lateral accuracy values that can range below 1 nautical mile in the terminal and missed approach segments and scale to RNP 0.3 or lower in the final approach. “RNAV (RNP)” is equivalent to “RNP AR APCH” [AIM 1-2-2; ICAO Doc 9613].

RNP Operations—Operations using an RNP system for RNP navigation applications [ICAO Doc 9613].

RNP System—Area navigation system which supports on-board performance monitoring and alerting [ICAO Doc 9613].

Runway Visual Range (RVR)—The range over which the pilot of an aircraft on the centerline of a runway can see the runway surface markings or the lights delineating the runway or identifying its centerline [*AIM Pilot/Controller Glossary*].

Self-Contained Approach—An arrival procedure, normally from an IFR altitude, to a runway, using only navigational equipment onboard the aircraft (GPS, radar, or other sensors).

Smooth Flight—An academic concept taught throughout a pilot’s career and is found throughout industry technical handbooks. Used in this AFMAN only to highlight that maneuvering an aircraft with reference to the onboard instruments is a skill to be mastered.

Special Departure Procedure (SDP)—Aircraft-specific commercially designed and published procedures that require MAJCOM training and certification before use.

Standard Instrument Departure (SID)—A preplanned IFR departure procedure printed in graphic form to provide obstacle clearance and a transition from the terminal area to the appropriate en route structure [*AIM Pilot/Controller Glossary*].

Standard Positioning Service (SPS)—GPS service available to all users via the course/acquisition (C/A) code ranging signal.

Standard Rate Turn—A turn of three degrees per second [*AIM Pilot/Controller Glossary*].

Standard Terminal Arrival (STAR)—A preplanned IFR arrival procedure published graphic [*AIM Pilot/Controller Glossary*].

Stepdown Fix—A fix permitting additional descent within a segment of an instrument approach procedure by identifying a point at which a controlling obstacle has been safely overflown [*AIM Pilot/Controller Glossary*].

Stopway—An area beyond the takeoff runway no less wide than the runway and centered upon the extended centerline of the runway, able to support the airplane during an aborted takeoff, without causing structural damage to the airplane, and designated by the airfield authorities for use in decelerating the airplane during an aborted takeoff [*AIM Pilot/Controller Glossary*].

Strobe Lights—Systems such as wingtip strobes or other similar strobe light installations.

Substitute Means of Navigation—The use of a suitable RNAV system in lieu of out-of-service conventional NAVAIDS or non-installed or non-operable avionics.

Tactical Air Navigation (TACAN)—An ultra-high frequency electronic rho-theta air navigation aid which provides suitably equipped aircraft a continuous indication of bearing and distance to the TACAN station [*AIM Pilot/Controller Glossary*].

Tactical Operations—Flight operations consisting of maneuvers that are unique to the employment of air power to: gain and maintain air superiority, prevent freedom of operation for the enemy in the objective area, and to assist naval and ground forces in the attainment of their objectives. Tactical operations must be specifically MAJCOM (or CCMD) defined, approved and implemented. These operations are normally practiced only on training or exercise missions, in a form of special use airspace or on designated training ranges or routes.

Terminal Area—A general term used to describe airspace in which approach control service or airfield traffic control service is provided [*AIM Pilot/Controller Glossary*].

Terminal Area Operations—Terminal area operations are normally those flight phases conducted within 30 NM of an airfield of intended departure or landing, or those operations on charted Standard Instrument Departures, on charted Standard Terminal Arrivals (STARs), or other flight operations between the last en route fix or waypoint and an initial approach fix or waypoint.

Terrain Awareness Warning System (TAWS)—Generic term for any on-board system taking inputs from terrain databases, radar altimeter, aircraft position sensors, etc. to activate a Ground Proximity Warning System or Automatic Ground Collision Avoidance System (AGCAS). Developed to help prevent Controlled Flight Into Terrain (CFIT) mishaps.

Threshold Crossing Height (TCH)—The theoretical height above the runway threshold at which the aircraft's glideslope antenna would be if the aircraft maintains the trajectory established by the mean ILS glideslope or the altitude at which the calculated glidepath of RNAV or GPS approaches [*AIM Pilot/Controller Glossary*].

Touchdown Zone Elevation (TDZE)—The highest elevation in the first 3,000 feet of the landing surface [*AIM Pilot/Controller Glossary*].

Track—The actual flight path of an aircraft over the earth or a specified course [JP 3-01].

Traffic Collision Avoidance System (TCAS)—An airborne collision avoidance system based on radar beacon signals which operates independent of ground-based equipment.

Transponder—The airborne radar beacon receiver/transmitter portion of the Air Traffic Control Radar Beacon System (ATCRBS) which automatically receives radio signals from interrogators on the ground, and selectively replies with a specific reply pulse or pulse group only to those interrogations being received on the mode to which it is set to respond [*AIM Pilot/Controller Glossary*].

True Airspeed—True airspeed is the speed of an aircraft relative to the air surrounding it.

True Course—The intended horizontal direction of travel over the surface of the earth, expressed as an angle measured clockwise from true north (000 degrees) through 359 degrees.

True Heading—True heading is the horizontal direction in which an aircraft is pointed in relation to true north.

Type A Software Applications—Type A applications are those paper replacement applications primarily intended for use during flight planning, on the ground, or during noncritical phases of flight.

Type B Software Applications—Type B applications are those paper replacement applications that provide the aeronautical information required to be accessible for each flight at the pilot station, and are primarily intended for use during flight planning and all phases of flight. Type B applications include miscellaneous, non-required applications (e.g., aircraft cabin and exterior surveillance video displays, maintenance applications).

Type C Software Applications—Software approved using RTCA/DO-178B compliance or another acceptable means. These are non-EFB software applications found in avionics and include intended functions for communications, navigation, and surveillance that require aircraft manufacturer or SPO design, production, and installation approval. Type C applications are for airborne functions with a failure condition classification considered to be a major hazard or higher.

Unmanned Aircraft System (UAS)—An unmanned aircraft and its associated elements related to safe operations, which may include control stations (ground, ship, or air based) control links, support equipment, payloads, flight termination systems, and launch and recovery equipment. It consists of three elements: unmanned aircraft, control station, and data link. [*FAA Pilot/Controller Glossary*]. A UAS must meet all applicable requirements of a manned aircraft unless specifically exempted. **(T-0)** That system whose components include the necessary equipment, network, and personnel to control an unmanned aircraft [JP 3-30].

Unmonitored NAVAID—Most NAVAIDs have internal monitoring systems that provide automatic shutdown or notification when a malfunction occurs. Unmonitored NAVAIDs lack the ability to immediately notify ATC when a malfunction occurs. The pilot may still use the NAVAID for all types of navigation, including instrument approaches, but must monitor the NAVAID for a loss of identification since no prior warning of operation may be available from ATC.

Unreliable Relief—Source materials are insufficient to show a complete illustration of relief.

Vertical Navigation (VNAV)—A function of area navigation equipment which calculates, displays, and provides vertical guidance to a profile or path [*AIM Pilot/Controller Glossary*].

Very High Frequency (VHF)—The frequency band between 30 and 300 MHz. Portions of this band, 108 to 118 MHz, are used for certain NAVAIDs; 118 to 136 MHz are used for civil air and ground voice communications [*AIM Pilot/Controller Glossary*].

Visual Descent Point (VDP)—A defined point on the final approach course of a non-precision straight-in approach procedure from which normal descent from the MDA to the runway touchdown point may be commenced, provided the approach threshold of that runway, or approach lights, or other markings identifiable with the approach end of that runway are clearly visible to the pilot [*AIM Pilot/Controller Glossary*].

Visual Flight Rules (VFR)—Rules that govern the procedures for conducting flight under visual conditions. The term “VFR” is also used in the United States to indicate weather conditions that are equal to or greater than minimum VFR requirements. In addition, it is used by pilots and controllers to indicate type of flight plan [*AIM Pilot/Controller Glossary*].

VFR-on-Top—ATC authorization for an IFR aircraft to operate in VFR conditions at any appropriate VFR altitude (as specified in FLIP and restricted by ATC). A pilot receiving this authorization must comply with VFR visibility, cloud distance criteria, and minimum IFR altitudes. **(T-0)** [*FAA Pilot/Controller Glossary*]

VFR-over-the-Top—VFR flight maneuver during which an aircraft on a VFR flight plan climbs over a ceiling in VMC, maintains VMC above the clouds, then descends in VMC and lands.

Visual Meteorological Conditions (VMC)—Meteorological conditions expressed in terms of visibility, distance from cloud, and ceiling equal to or better than specified minima [*AIM Pilot/Controller Glossary*].

Vortices—Circular patterns of air created by the movement of an airfoil through the air when generating lift. As an airfoil moves through the atmosphere in sustained flight, an area of low pressure is created above it. The air flowing from the high pressure area to the low pressure area around and about the tips of the airfoil tends to roll up into two rapidly rotating vortices, cylindrical in shape. These vortices are the most predominant parts of aircraft wake turbulence and their rotational force is dependent upon the wing loading, gross weight, and speed of the generating aircraft. The vortices from medium to super aircraft can be of extremely high velocity and hazardous to smaller aircraft [*AIM Pilot/Controller Glossary*].

Wake Turbulence—Phenomena resulting from the passage of an aircraft through the atmosphere. The term includes vortices, thrust stream turbulence, jet blast, jet wash, propeller wash, and rotor wash both on the ground and in the air [*AIM Pilot/Controller Glossary*].

Wide Area Augmentation System (WAAS)—A satellite navigation system consisting of the equipment and software which augments the GPS Standard Positioning Service (SPS). The WAAS provides enhanced integrity, accuracy, availability, and continuity over and above GPS SPS. The differential correction function provided improved accuracy required for precision approaches. [*FAA Pilot/Controller Glossary*].

World Geodetic Survey-1984 (WGS-84)—Developed by the U.S. for world mapping, WGS-84 is the ICAO standard for an earth fixed global reference frame.

Attachment 2

THE “60-TO-1 RULE”

Figure A2.1. DELETE.

What is the "60-to-1 rule"?

The 60-to-1 Rule is a technique for determining the pitch attitude or pitch change required to satisfy a climb/descent gradient. It is also a technique used to determine lateral displacement in "degrees" for course interceptions and offset computations.

1. It allows the pilot to compute the pitch attitude when ESTABLISHING an attitude during the CONTROL AND PERFORMANCE procedure.
2. It reduces the pilot's workload and increases efficiency by requiring fewer changes and less guess work.
3. It gives an alternative to the "TLAR" (that looks about right) method of instrument flying.
4. You can teach the "60-to-1 RULE" as opposed to trying to teach experience, as in the "TLAR" method.

Simply stated the "60-to-1" rule is:

$$\begin{aligned} 1^\circ &= 1 \text{ NM at } 60 \text{ NM} \\ &\text{or} \\ 1^\circ &= 100 \text{ Ft at } 1 \text{ NM} \end{aligned}$$

Let's look at relationship. First look at a circle with a 60 NM radius.

We know that the circumference of a circle is $2\pi r$, therefore the mathematical data supporting this:

$$\begin{aligned} \text{Circumference} &= 2 \times 3.1416 \times 60 \\ &= 376.99 \text{ NM} \end{aligned}$$

Since there are 360° in a circle, we can determine the length of a 1° arc:

$$376.99 \text{ NM} / 360^\circ = 1.05 \text{ NM per Degree or, approximately } 1 \text{ NM per degree at } 60 \text{ NM}$$

Since $1 \text{ NM} = 6076 \text{ Ft}$ or about 6000 Ft ,

$$1^\circ = 6000 \text{ Ft at } 60 \text{ NM}$$

This relationship is true not only in the horizontal plane, but also in the vertical plane. If this $1^\circ = 6000 \text{ Ft}$ at 60 NM relationship is drawn in the form of a vertically inclined plane and the height of the plane is measured at different points, you can see that there is a definite relationship between the height of the 1° plane and the distance from the apex of the 1° angle. The height of the plane at 1 NM is 100 Ft , therefore,

This relationship is constant. If the distance (NM) or the angle is changed, the altitude (Ft) is changed by the same factor.

That is,

$$\begin{aligned} 1^\circ &= 100 \text{ Ft at } 1 \text{ NM} \\ &\text{or} \\ 1^\circ &= 100 \text{ Ft/NM} \end{aligned}$$

At 1 NM , $3^\circ = 300 \text{ Ft}$

At 10 NM , $3^\circ = 3000 \text{ Ft}$ etc.

In this relationship, $1^\circ = 100 \text{ Ft/NM}$, if the distance is changed, multiply the altitude by the same factor. If the angle is changed, multiply the altitude by the same factor. If both the distance and the angle are changed, multiply the altitude by both factors.

Notice that in the discussion of the mathematical data, there has been no mention of aircraft type or speed.

Speed has no effect on the $1^\circ = 100 \text{ Ft/NM}$ relationship! Look at the following Example.

An O-1 at 60 KTAS and an F-15 at 180 KTAS over a 10 NM distance on a 300 Ft/NM descent gradient (3° pitch change from level flight)

[a] How many Ft/NM will the O-1 travel?

Answer: 300

[b] How many Ft/NM will the F-15 travel?

Answer: 300

Both aircraft fly the same descent gradient since their pitch changes are the same. Speed has no effect!

Before we discuss how a rate of descent, Ft/Min, can be derived from a pitch change or descent gradient, aircraft speed must be expressed in Nautical Miles per Minute (NM/Min)

$$\text{From TAS: NM/Min} = \frac{\text{TAS}}{60}$$

If TAS is 420, NM/Min = $\frac{420}{60} = 7$ NM/Min

$$\begin{aligned} \text{From MACH number: NM/Min} &= \text{MACH} \times 10 \\ \text{If MACH is .7, NM/Min} &= .7 \times 10 = 7 \text{ NM/Min} \end{aligned}$$

This relationship is true when 600 NM/Hr is the speed of sound. Since it's always close, MACH can be used to approximate NM/Min. NM/Min can be determined from IAS by converting IAS to TAS. There are two methods available:

$$\begin{aligned} \text{a. TAS} &= \text{IAS} + \text{IAS} \times (2\% \text{ per } 1000') \\ \text{If IAS is 250 and altitude is FL 200} \\ \text{TAS} &= 250 + 250 \times (.02 \times 20) \\ &= 250 + 250 \times .4 \\ &= 250 + 100 \text{ KIAS} = 350 \end{aligned}$$

$$\begin{aligned} \text{b. TAS} &= \text{IAS} + \frac{\text{Flight Level}}{2} \\ &= 250 + 100 \text{ KIAS} = 350 \end{aligned}$$

Now from the example above:

$$\text{NM/Min} = \frac{350}{60} = 5.8 \text{ or } 6 \text{ NM/Min}$$

Now back to the O-1 and the F-15:

The O-1 at 60 KTAS is traveling at 1 NM/Min

The F-15 at 180 KTAS is traveling at 3 NM/Min

How long will it take each aircraft to travel the 10 NM in the example? O-1 at 1 NM/Min takes 10 Min, F-15 at 3 NM/Min takes 3.3 Min.

What will each aircraft's VVI be indicating during the 3000 Ft descent?

$$\text{O-1's VVI} = \frac{3000 \text{ Ft}}{10 \text{ Min}} = 300 \text{ Ft/Min}$$

$$\text{F-15's VVI} = \frac{3000 \text{ Ft}}{3.3 \text{ Min}} = 900 \text{ Ft/Min}$$

By restating some previous facts, a relationship between Pitch, Gradient and VVI is clear.

(1) The O-1 is traveling at 1 NM/Min and its VVI is indicating 300 Ft/Min for a 300 Ft/NM gradient or 3° pitch change.

(Remember 1° = 100 Ft/NM)

(2) The F-15 is traveling at 3NM/Min and its VVI is indicating 900 Ft/Min for a 300 Ft/NM gradient or 3° pitch change.

$$\text{VVI} = \text{NM/Min} \times \text{Ft/NM}$$

or

The VVI for each 1° of pitch change is equal to speed in NM/Min x 100 Ft/NM.

Example: An aircraft makes a 6° pitch change from level flight (it establishes a 600 Ft/NM climb/descent gradient). What does the VVI indicate if the speed is .8 MACH?

$$\text{NM/Min} = .8 \times 10 = 8 \text{ NM/Min}$$

$$\text{VVI} = 8 \text{ NM/Min} \times 600 \text{ Ft/NM}$$

$$\text{VVI} = 4800 \text{ Ft/Min}$$

Practical Applications

1. You're climbing at 285 KIAS (.6 MACH) and 3000 Ft/Min. What pitch change do you make to level off?

$$\frac{3000 \text{ Ft/Min}}{6 \text{ NM/Min}} = 500 \text{ Ft/NM} = 5^\circ$$

2. ARTCC tells you to climb to FL 250 and be at FL 250 in 10 NM. You're currently at FL 200 and are indicating .6 MACH. What minimum pitch change is necessary, what should your VVI indicate, and can you make it?

$$\frac{5000 \text{ Ft}}{10 \text{ NM}} = 500 \text{ Ft/NM} = 5^\circ$$

$$6 \text{ NM/Min} \times 500 \text{ Ft/NM} = 3000 \text{ Ft/Min}$$

Whether you make it or not depends upon your aircraft's performance capability, but at least you know what you need to establish to make it.

3. You're at FL 330 proceeding direct to the BFD TACAN. ARTCC clears you to descend to 3000 Ft and cross the TACAN at 3000 Ft. You are now 50 DME from the TACAN, what do you do? Lower your pitch 6° and verify this by checking that your VVI reads 600 Ft/NM x NM/Min.

$$\frac{33,000 \text{ Ft} - 3,000 \text{ Ft}}{50 \text{ NM}} = 600 \text{ Ft/NM} = 6^\circ$$

If you are indicating .7 MACH, your VVI should read:

$$600 \text{ Ft/NM} \times 7 \text{ NM/Min} = 4200 \text{ Ft/Min}$$

During the descent, you slow to .5 MACH. What should your VVI read if you are still maintaining the 600 Ft/NM descent gradient?
 $600 \text{ Ft/NM} \times 5 \text{ NM/Min} = 3000 \text{ Ft/Min}$

So far, all of our calculations have been "no wind." How does wind affect the relationship between pitch, VVI and the descent gradient?

Let's add a 60 kt tailwind to the last problem. You still need to descend at 600 Ft/NM (fly a 600 Ft/NM descent gradient), but you must figure your VVI using NM/Min in groundspeed.

The no-wind speed was .7 MACH or 7 NM/Min

The groundspeed in NM/Min is 7 NM/Min + 60 kts

or

$$7 \text{ NM/Min} + 1 \text{ NM/Min} = 8 \text{ NM/Min}$$

Now, the required VVI to fly the 600 Ft/NM is:

$$\text{VVI} = 8 \text{ NM/Min} \times 600 \text{ Ft/NM} = 4800 \text{ Ft/Min}$$

To find the pitch change necessary to get this VVI, the "in the air" NM/Min formula must be used.

$$\frac{4800 \text{ Ft/Min}}{7 \text{ NM/Min}} = 690 \text{ Ft/NM} = \text{Approx. } 7^\circ$$

(since $1^\circ = 100 \text{ Ft/NM}$)

The no wind answer was 6° with a VVI of 4200 Ft/Min.

This 1° pitch correction for the 60 kt wind is a good figure to remember. It is not an exact relationship, but it is within $\frac{1}{2}^\circ$ in most cases.

For example, if you have a 120 kt tailwind, you must increase your pitch change by about 2° to realize the computed gradient. If you have a 60 kt headwind, you can decrease your pitch change by about 1° to fly the computed gradient.

Horizontal Plane

Turn radius of your aircraft

Distance to turn 90° using 30° of bank.

a. NM/Min - 2 or (Mach x 10) - 2

b. $\frac{(NM/Min)^2}{10}$ or $(Mach)^2 \times 10$

The more accurate method is b., but a. is easier and will give a small "pad" in determining a lead point.

For turns other than 90° use the following:

Degrees To Turn	Fraction Of 90° Turn
180°	2
150°	1 5/6
135°	1 2/3
120°	1 1/2
90°	1
60°	1/2
45°	1/3
30°	1/6

Determining the lead point for intercepting a radial.

First determine the turn radius of the aircraft. Now convert that turn radius to a number of degrees. For a 90° turn, as in turning from an arc to a radial, the formula is simple:

$$\text{Lead Degrees} = \frac{\text{Turn Radius(NM)} \times 60}{\text{DME}}$$

By the 60-to-1 rule, on the 60 DME arc 1° = 1 NM and on the 10 DME arc, 1° = 1/6 NM or 1 NM = 6°. From this, the number of degrees per NM on any arc can be determined by 60/DME. To find the lead point in degrees, just multiply this factor by the lead point in NM.

For example, how many degrees lead should an aircraft use to turn onto a radial from the 15 DME arc at 180 KTAS?

$$\text{The turn radius is: } \frac{180}{60} - 2 = 1 \text{ nm}$$

$$\text{The lead point in degrees is: } \frac{1 \text{ NM} \times 60}{15} = 4^\circ$$

Bank angle required to maintain an arc.

On close-in arcs, constant bank angle may be necessary to stay on the arc. There are two methods to compute the required bank angle.

$$\text{Required bank angle} = \frac{\text{Turn Radius} \times 30}{\text{Arc}}$$

$$\text{Required bank angle} = \frac{1}{2} \text{ the lead for an arc to radial intercept}$$

Example: If the required lead point for an arc to radial intercept is 16°, then 8° of bank is required to maintain the arc.

Teardrop penetrations.

The only guidance usually available to fly this type of approach is just a recommended turn altitude and a "remain within" distance. It would be helpful to be able to compute a distance to go outbound so that a 30° bank turn will leave you on course inbound or, if a turn point is depicted or you choose to go further outbound to lessen the descent gradient, what bank angle is needed to roll out on course inbound. Examples 1 and 2 illustrate these two problems.

(a) Outbound distance for a 30° turn:

$$\frac{\text{Turn Radius} \times 120}{\# \text{ of degrees between radials}}$$

- (b) Bank angle required for the teardrop turn (when 30° will not work):

$$\frac{TR \times 60}{\text{distance between radials}}$$

Teardrop entry for holding.

This is the same formula as above but "distance outbound" and "degrees between radials" have been switched. Leg length (distance outbound) is the known value and you have to solve for offset (degrees between radials).

$$\frac{\text{Turn Radius} \times 120}{\text{Leg Length}} = \text{Offset Heading}$$

Example: Holding pattern with 10 NM legs. TAS is 240 knots.

$$\text{Turn Radius} = \frac{(240)}{60} - 2 = 2$$

$$\frac{2 \times 120}{10} = 24^\circ \text{ offset}$$

VDP calculations

On non-USAF designed approach plates a VDP is not always published. Compute it for your desired glide slope, usually 3° (300 Ft/NM) or 2½° (250 Ft/NM).

$$\frac{\text{HAT}}{\text{Desired gradient}} = \text{VDP in NM from end of runway}$$

SUMMARY OF 60:1 RULES AND FORMULAS

CLIMBS AND DESCENTS

The 60:1 Rule:

$$1^\circ = 1 \text{ NM at } 60 \text{ NM}$$

$$1^\circ = 100 \text{ FT at } 1 \text{ NM}$$

Climb and Descent Gradients:

$$\text{Required gradient (FT/NM)} = \frac{\text{altitude to lose (or gain)}}{\text{distance to travel}} \quad \text{Pitch change} = \frac{\text{gradient}}{100} \quad (1^\circ \text{ pitch change} = 100 \text{ FT/NM})$$

VVI:

$$\text{VVI} = \text{Gradient (or pitch} \times 100) \times \text{TAS in minutes}$$

$$\text{VVI for a } 3^\circ \text{ glideslope} = \frac{\text{GS} \times 10}{2} \quad \text{VVI for a } 2.5^\circ \text{ glideslope} = \frac{\text{GS} \times 10}{2} - 100$$

Determine TAS and NM/MIN:

$$\text{TAS} = \text{IMN} \times 600$$

$$\text{NM/MIN} = \text{IMN} \times 10$$

$$\text{TAS} = \text{IAS} + (\text{FL} / 2)$$

$$\text{NM/MIN} = \text{TAS} / 60$$

Steps to Determine Required Pitch and VVI (Winded Application). Mathematical steps:

$$\text{Required gradient:} \quad \text{Gradient} = \frac{\text{alt to lose}}{\text{dist to travel}}$$

$$\text{Required VVI with wind:} \quad \text{VVI} = \text{gradient} \times \text{groundspeed (NM/MIN)}$$

$$\text{Required pitch change:} \quad \text{Pitch change} = \frac{\text{required VVI}}{\text{TAS (in NM/MIN)}}$$

NOTE: For practical applications, each 60 KTS of wind will change pitch 1° .

TURNS

Turn Radius (TR)

$$\text{Turn Diameter (TD)} = 2 \times \text{TR}$$

Distance to turn 90° using 30° of bank:

$$\text{TR} = \text{NM/MIN} - 2$$

or

$$\text{TR} = (\text{IMN} \times 10) - 2$$

or

$$\text{TR} = \frac{(\text{NM/MIN})^2}{10}$$

or

$$\text{TR} = \text{IMN squared} \times 10$$

Distance to turn 90° using SRTs and $1/2$ SRTs:

$$\text{SRT} = 1/2\% \text{ of TAS (or groundspeed)}$$

$$1/2 \text{ SRT} = 1\% \text{ of TAS (or groundspeed)}$$

Bank for Rate Turns:

$$\text{Bank for SRT} = \frac{\text{TAS}}{10} + 7$$

$$\text{Bank for } 1/2 \text{ SRT} = \frac{\text{TAS}}{20} + 7$$

Lead Point for Radial to an Arc or 90° Intercept of an Arc:

$$\text{Lead point in DME} = \text{Desired Arc} \pm \text{TR}$$

Lead Point for Arc to Radial or 90° Intercept of a Radial:

$$\text{Lead point (in degrees)} = \frac{60}{\text{Arc}} \times \text{TR (in NM)}$$

or

$$\frac{60}{\text{DME}} \times \text{TR (in NM)}$$

For Turns Less or More Than 90° , Use The Following: (These cover most situations):

Degrees to Turn	Fraction of 90° Turn	Degrees to Turn	Fraction of 90° Turn
180°	2	90°	1
150°	1 5/6	60°	1/2
135°	1 2/3	45°	1/3
120°	1 1/2	30°	1/6

Bank Angle Required to Maintain an Arc:

$$\text{Required bank angle} = \frac{30}{\text{Arc}} \times \text{TR (Use IMN squared for TR to obtain best results)}$$

$$\text{or Required Bank angle} = \text{Radial Lead Point} / 2$$

HOLDING

Teardrop Holding Calculations:

$$\text{Offset in degrees} = \frac{\text{TD} \times 60}{\text{outbound distance}}$$

or

$$\frac{\text{TR} \times 120}{\text{outbound distance}}$$

Timing:

$$\leq 14,000 = 1+00$$

$$> 14,000 = 1+30$$

Outbound Correction for Inbound:

$$1+00 \text{ Correction} = 3600 / \text{inbound time} = \text{outbound time}$$

$$1+30 \text{ Correction} = 8100 / \text{inbound time} = \text{outbound time}$$

Drift calculation:

$$\text{Drift} = \frac{\text{Crosswind Component}}{\text{NM/MIN of TAS}}$$

$$180^\circ \text{ turn} = \frac{1\% \text{ TAS}}{2}$$

$$\text{Ex. } 240 \text{ TAS} = 2.4 / 2 = 1.2 \text{ Min} = 1+12$$

Double Drift:

Into wind turn = 30° bank - 1° for every deg of drift
Inbound to fix = course heading $\pm$ drift

Other Turn = 30° bankOutbound leg = outbound heading $\pm$ (drift X 2)

Hold double drift for same amount
of time as the time in 180° turn

Triple drift:

Into Wind Turn = 30° bankInbound to fix = Course heading $\pm$ driftOther Turn = 30° bankOutbound leg = outbound heading $\pm$ (drift X 3)

Hold triple drift for same amount
of time as the time in 180° turn

APPROACH

Teardrop Penetration Calculation:

Determine outbound distance for 30° bank turn:

$$\text{Outbound distance} = \frac{\text{TD} \times 60}{\text{Degrees Between Radials}}$$

or

$$\frac{\text{TR} \times 120}{\text{Degrees Between Radials}}$$



Determine bank angle required for teardrop penetration (When 30° bank will not work):

$$\text{Bank Angle} = \frac{\text{TR} \times 60}{\text{Distance Between Radials in NM}}$$

Procedure Turn Calculations:

$$45/180 \text{ Maneuver distance} = (3 \times \text{TR}) + 2$$

$$80/260 \text{ Maneuver distance} = 3 \times \text{TR}$$

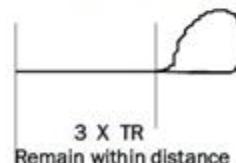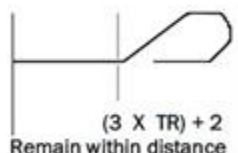

VDP Calculation:

$$\text{VDP (in NM) From the end of the runway} = \frac{\text{HAT}}{\text{Gradient (normally 300)}}$$

$$\text{VDP (in timing) From the FAF} = (\text{FAF to End of runway Distance}) - \frac{\text{HAT}}{\text{Gradient (normally 300)}} = \text{FAF to VDP Dist (NM)}$$

$$\frac{\text{Timing to MAP (From timing box)}}{\text{NM from FAF to MAP}} = \text{Seconds per Mile} \quad \text{or} \quad \frac{60}{(\text{TAS} / 60)} = \text{Seconds per Mile}$$


$$(\text{Seconds per Mile}) \times \text{FAF to VDP Dist (NM)} = \text{Time (in Seconds)}$$

CIRCLE

Perpendicular to Runway
 Timing passing runway =
 10% TAS (corrected for winds)
 (TAS + headwind - tailwind component)
 (Yes, subtract tailwind to counteract
 it "pushing you across the ground")

Displacement using 45° rule
 Turn 45° off RWY HDG
 (Kill Drift)
 Displace using Runway


Displacement using 30° rule
 Turn 30° off RWY HDG
 (Kill Drift)
 Time for 10% TAS X 4

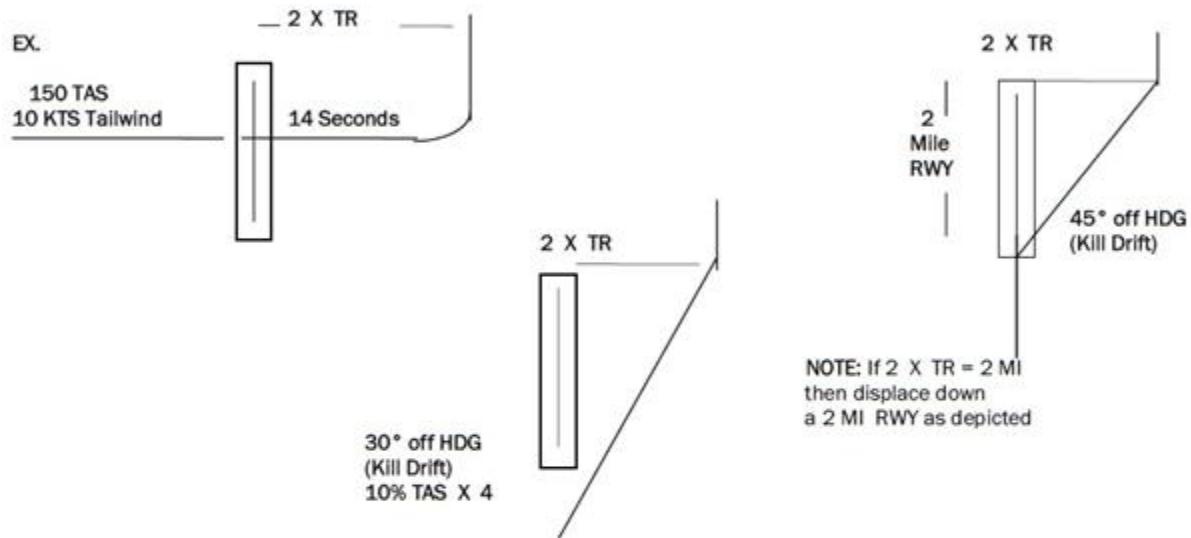

Attachment 3

GENERAL TURNING PERFORMANCE (CONSTANT ALTITUDE, STEADY TURN)

Figure A3.1. DELETE.

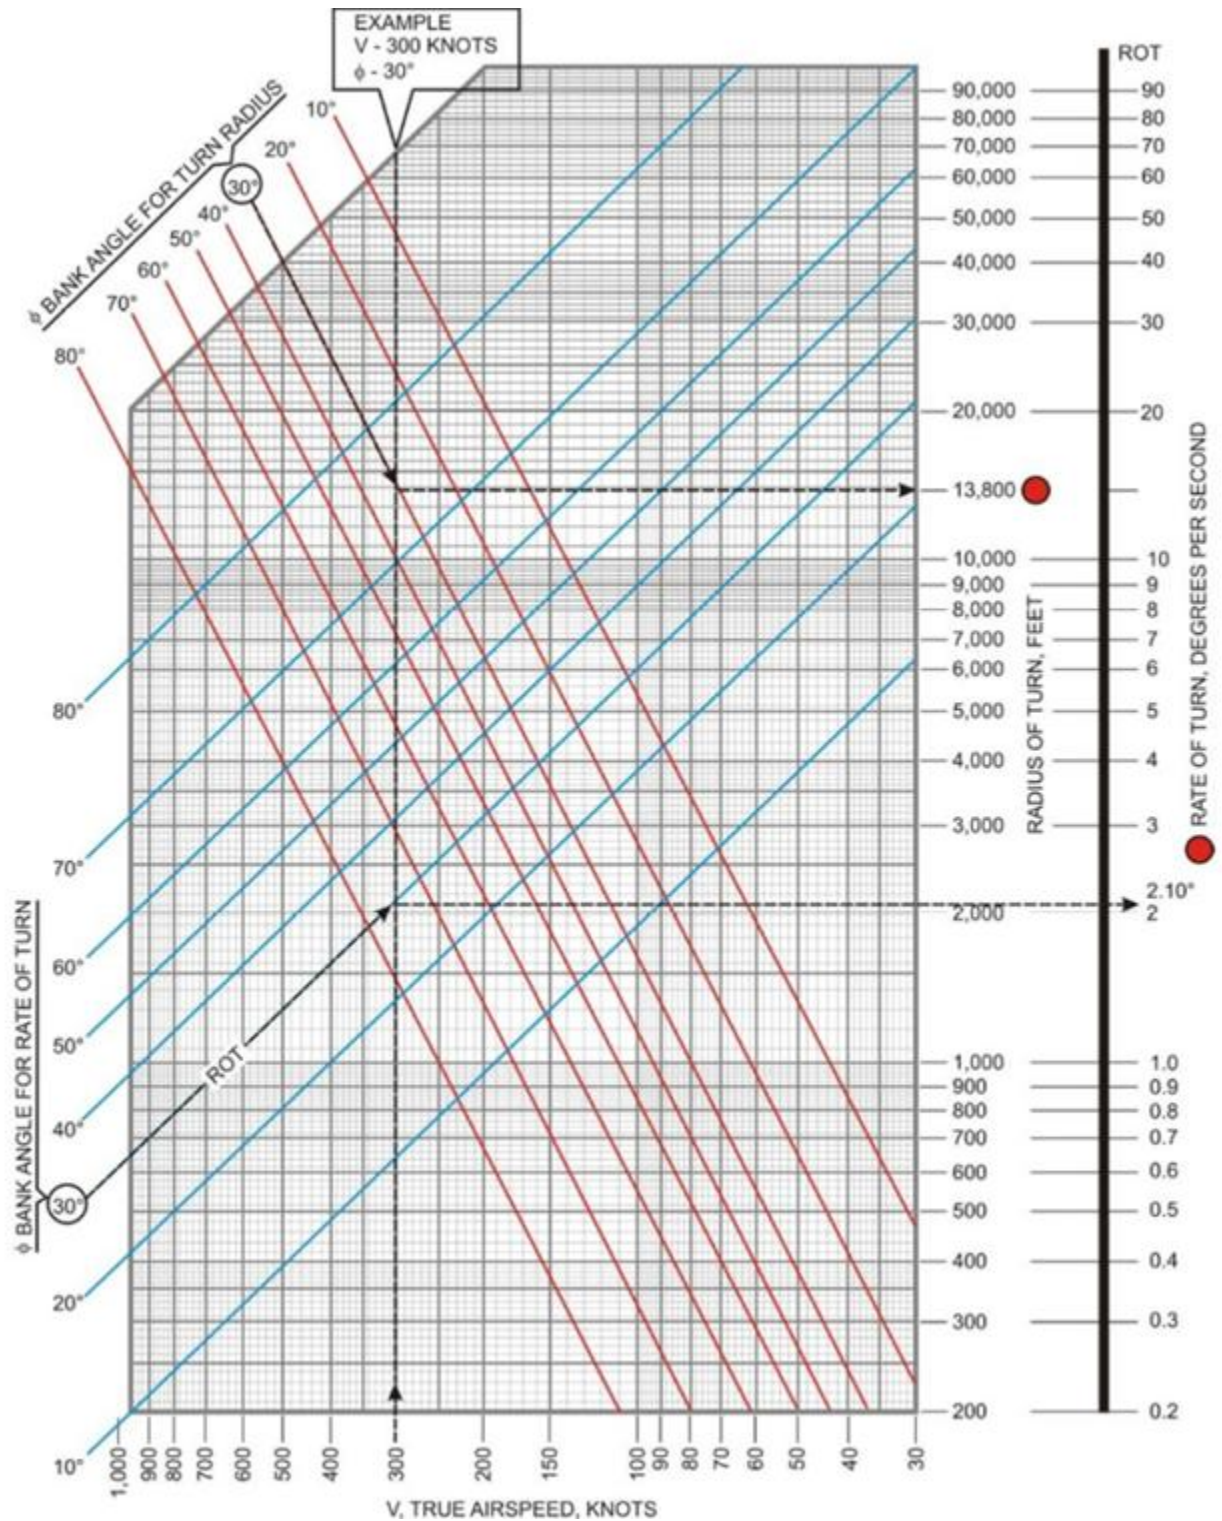

Attachment 4

INSTRUMENT FLYING FUNDAMENTALS

A4.1. General. [FAA-H-8083-15, Chapter 6; FAA-H-8083-25, Chapter 3] Instrument flying is defined as the control of an aircraft's spatial position by using instruments rather than outside visual references (**Figure A4.1.**). Aircraft are equipped with analog, digital, mechanical, electronic, or a combination of instruments. Proper interpretation of aircraft instruments in instrument flight provides essentially the same information as outside visual references when in visual flight. Aircraft instrumentation falls into three broad categories: control, performance, and navigation.

Figure A4.1. Attitude Instrument Flying.



A4.1.1. Control instruments display immediate attitude and power changes and are calibrated to permit adjustments in precise increments (**Figure A4.2.**). Control instruments do not indicate aircraft speed or altitude; refer to performance instruments to determine aircraft performance. Reference to attitude and power indicators determines aircraft control.

A4.1.1.1. The AI displays an aircraft's orientation to the Earth's horizon in its pitch and roll axes.

A4.1.1.2. Power indicators vary between aircraft; they may include manifold pressure, tachometers, fuel flow, engine pressure ratio, etc.

Figure A4.2. Control Instruments.

A4.1.2. Performance instruments indicate the aircraft's actual performance. Performance is determined by reference to the altimeter, airspeed or Mach indicator, vertical velocity indicator (VVI), heading indicator, angle of attack indicator, and turn and slip indicator (**Figure A4.3**). Performance instruments most directly reflect a change in acceleration, which is defined as change in velocity or direction; these instruments indicate if the aircraft is changing airspeed, altitude, or heading, which are horizontal, vertical, or lateral vectors.

Figure A4.3. Performance Instruments.

A4.1.3. Navigation instruments indicate the position of the aircraft in relation to a selected navigation facility, fix, or waypoint. This group of instruments includes various course indicators, range indicators, glideslope indicators, and bearing pointers. Aircraft with more technologically advanced instrumentation provide blended information giving the pilot more accurate positional information. Navigation instruments are comprised of indicators that display navigation information from various ground-based and space-based navigation aids (NAVAID) such as very high frequency (VHF) omni-directional range (VOR), tactical air navigation system (TACAN), non-directional beacon (NDB), instrument landing system (ILS), DME, GNSS, and other navigation information. These instruments also enable a pilot to maneuver an aircraft along a predetermined path in two or three dimensions relative to ground-based or space-based navigation facilities.

A4.2. Control and Performance Method. Aircraft performance is achieved by controlling the aircraft attitude and power. A pilot accomplishes instrument flight by controlling an aircraft's attitude and power to produce controlled and stabilized flight without reference to a visible horizon. This overall process is known as the "control and performance" method of instrument flying. The control and performance method is applied through the use of control, performance, and navigation instruments, resulting in a smooth flight from takeoff to landing.

A4.2.1. The control and performance method has four procedural steps:

A4.2.1.1. Establish an attitude and power setting on the control instruments that results in the desired performance.

A4.2.1.2. Trim (e.g., fine tune the control surfaces) the aircraft until control pressures are neutralized. Trimming for hands-off flight is essential for smooth, precise aircraft control. It allows a pilot to attend to other flight deck duties with minimum deviation from the desired altitude.

A4.2.1.3. Cross-check the performance instruments to determine if the established attitude or power setting is providing the desired performance. The cross-check involves both seeing and interpreting. Determine the magnitude and direction of adjustment required to achieve the desired performance if a deviation is noted.

A4.2.1.4. Adjust the attitude, power setting, or both on the control instruments as necessary.

A4.2.2. Proper control of aircraft attitude results from proper use of the AI, knowing when to change the attitude, and smoothly changing the attitude a precise amount. The AI provides an immediate, direct, and corresponding indication of any change in aircraft pitch or bank attitude.

A4.2.2.1. Changing the "pitch attitude" of the aircraft symbol by precise amounts in relation to the artificial horizon makes pitch changes. These changes are measured in degrees or bar widths depending on the type of AI. The amount of deviation from the pilot's desired performance determines the magnitude of the correction.

A4.2.2.2. Changing the "bank attitude" of the aircraft symbol by precise amounts in relation to the bank scale makes bank changes. The bank scale is normally graduated at 0 degrees, 10 degrees, 20 degrees, 30 degrees, 60 degrees, and 90 degrees and may be located at the top or bottom of the AI. Bank angles used for instrument turns are normally the desired number of degrees to turn not to exceed 30 degrees (e.g., 20 degrees of bank for a 20 degree turn, 30 degrees of bank for a 30 degree turn, 30 degrees of bank for a 90 degree turn).

A4.2.3. Proper power control is the result of smoothly establishing or maintaining desired airspeeds in coordination with attitude changes. Power changes are made by throttle adjustments while referencing power indicators. Power indicators are not affected by factors such as turbulence, improper trim, or inadvertent control pressures. Experience in an aircraft teaches a pilot approximately how far to move the throttle(s) to change the power a given amount. Knowledge of approximate power settings, cross-checking the power indicator(s), and then fine tuning prevents fixating on performance instruments and over-controlling power.

A4.3. Trim. An aircraft is correctly trimmed when it is maintaining a desired attitude with all control pressures neutralized. A pilot can devote more attention to navigation instruments and additional flight deck duties when the aircraft is properly trimmed. An improperly trimmed aircraft requires constant control pressures, produces tension and fatigue, distracts attention from cross-checking, and contributes to abrupt and erratic attitude control. The pressures felt on the controls should be only those applied while controlling the aircraft.

A4.3.1. An airplane is placed in trim by:

A4.3.1.1. Applying control pressure(s) to establish a desired attitude. Then, the trim is adjusted so that the airplane maintains the desired attitude when the pilot releases the flight controls. The aircraft is trimmed for coordinated flight by centering the ball of the turn-and-slip indicator.

A4.3.1.2. Changes in attitude, power, or airspeed may require trim adjustments. Use of trim alone to establish a change in attitude usually results in erratic control. Smooth and precise attitude changes are best achieved through a combination of control pressures and subsequent trim adjustments.

A4.3.2. A helicopter is placed in trim by continually cross-checking the instruments and performing the following:

A4.3.2.1. Use the cyclic-centering button if the helicopter is so equipped; this relieves all possible cyclic pressures.

A4.3.2.2. Use the pedal adjustment to center the ball of the turn indicator. Pedal trim is required during all power changes and is used to relieve all control pressures held after a desired attitude has been achieved.

A4.3.2.3. Adjust the pitch attitude as airspeed changes to maintain desired attitude for the maneuver being executed. Adjust the bank to maintain a desired rate of turn; use the pedals to maintain coordinated flight. Adjust the trim as control pressures indicate a change is needed.

A4.4. Instrument Cross-Check. The first fundamental instrument flying skill is cross-checking (also called “scanning” or “instrument coverage”). Cross-checking is the continuous and logical observation of instruments for attitude, performance, and navigation information. The “hub and spoke” method is the recommended cross-check technique. A pilot spends 80 to 90 percent of the flight time looking at the AI (e.g., the “hub”) and takes quick glances at the other instruments (e.g., the “spokes”). In general, the cross-check progresses from the AI, out to another instrument, back to the AI and then out again ([Figure A4.4.](#)).

Figure A4.4. “Hub and Spoke” Cross-check.



A4.5. Common Instrument Cross-Check Errors. A beginner might cross-check too rapidly, looking at the instruments without knowing exactly what to look for. Pilots learn what to look for, when to look for it, and what corrections to make with increased experience in basic instrument maneuvers and familiarity with the instrument indications associated with these maneuvers. As proficiency increases, a pilot cross-checks primarily from habit, suiting scanning rate and sequence to the demands of the flight situation. Failure to maintain basic instrument proficiency through practice can result in many of the following common scanning errors, both during training and at any subsequent time.

A4.5.1. Fixating, or staring at a single instrument, is a common and dangerous error. For example, if one flight parameter, (e.g., altitude) is frequently wandering, the pilot may devote too much time to the corresponding performance instrument (e.g., altimeter) and lose track of other critical parameters (e.g., attitude). While fixated on the instrument, increasing tension may be unconsciously exerted on the controls, which leads to an unnoticed change that may lead to more errors.

A4.5.2. Omission of an instrument from the cross-check, may be caused by failure to anticipate significant instrument indications. For example, if the pilot neglects to check the heading indicator for constant heading information when straight-and-level flight is established with reference only to the AI during a roll-out from a 180 degree steep turn. Because of precession error, the AI temporarily shows a slight error, correctable by quick reference to the other flight instruments.

A4.5.3. Emphasis on a single instrument, instead of the combination of instruments necessary for attitude information, is an understandable fault during the initial stages of training. It is a natural tendency to rely on the instrument that is most readily understood, even when it provides erroneous or inadequate information. Reliance on a single instrument is a poor technique. For example, a pilot can maintain reasonably close altitude control with the AI but cannot hold altitude with precision without including the altimeter in the cross-check.

A4.6. Instrument Interpretation. The second fundamental skill, instrument interpretation, requires more thorough study and analysis. It begins by understanding each instrument's construction and operating principles. Then, this knowledge is applied to the performance of the aircraft being flown, the maneuvers to be executed, the cross-check and control techniques applicable to that aircraft, and the flight conditions.

A4.6.1. As the performance capabilities of the aircraft are learned, a pilot interprets the instrument indications appropriately in relation to the attitude of the aircraft.

A4.6.2. If the pitch attitude is to be determined, the airspeed indicator, altimeter, VVI, and AI provide the necessary information.

A4.6.3. If the bank attitude is to be determined, the heading indicator, turn coordinator, and AI provide the necessary information.


A4.6.4. For each maneuver, the pilot learns what performance to expect and the combination of instruments to be interpreted to control aircraft attitude during the maneuver.

Attachment 5

INSTRUMENT MANEUVERS

A5.1. General. [FAA-H-8083-15, Chapter 7 (Fixed Wing)/Chapter 8 (Helicopter)] Pilots most commonly use the maneuvers in this chapter during instrument flight (**Figure A5.1**). A high level of proficiency employing these maneuvers is necessary to operate safely in instrument conditions. Additional maneuvers may be required for specific training requirements or helicopter operations; refer to applicable sections of the aircraft flight manual for detailed information.

Figure A5.1. Typical Instrument Flight.

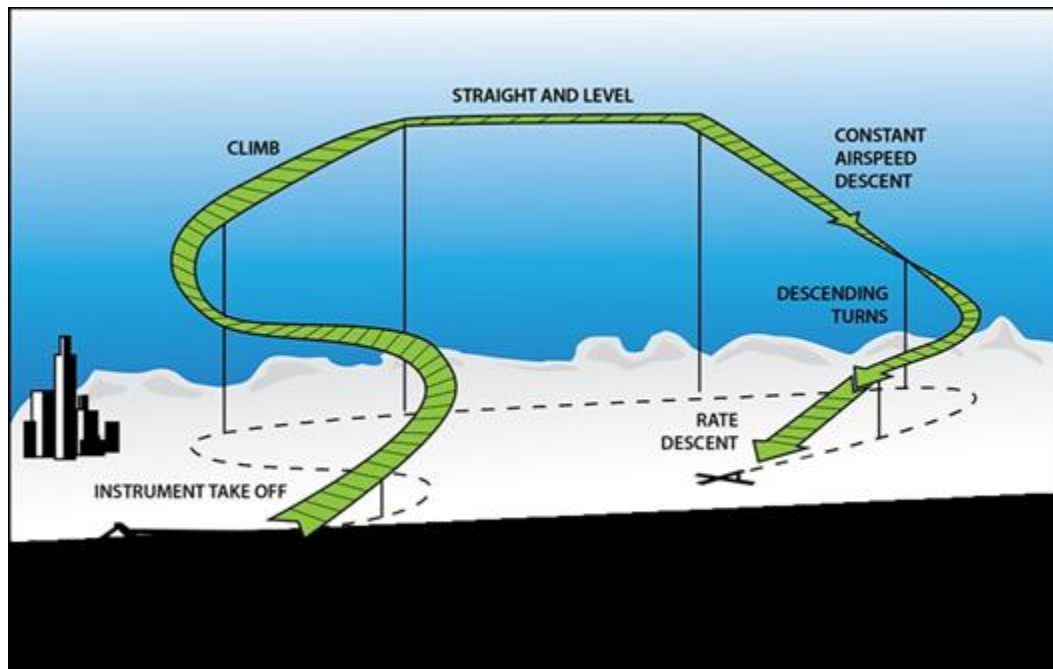

A5.2. Instrument Takeoff. [FAA-H-8083-15, Chapter 7] Accomplish the instrument takeoff by referring to both outside visual references and the flight instruments. The amount of attention given to each reference varies depending on the existing weather conditions. Instrument takeoff procedures and techniques are invaluable aids at night, toward and over water or desolate areas, and during periods of reduced visibility. Immediately transition to instrument references any time disorientation is suspected or when outside visual references become unreliable.

A5.3. Instrument Navigation. [FAA-H-8083-15, Chapter 9] Understanding navigation systems provides the framework for all instrument procedures. FAA-H-8083-15 provides background information for course intercept, maintaining course, station passage, and arc/radial intercept.

A5.3.1. For VOR and VOR/DME navigation, station passage occurs when the TO-FROM indicator makes the first positive change indicating FROM.

A5.3.2. For TACAN navigation, station passage occurs when the range indicator stops decreasing.

A5.3.3. For ADF navigation, station passage occurs when the bearing pointer passes 90 degrees to the inbound course. **Note:** When established in an NDB holding pattern, subsequent station passage occurs at the first definite move by the bearing pointer through the 45-degree index on the indicator.

A5.4. Proceeding Direct. Pilots will not file a flight plan nor accept a clearance that requires an aircraft to navigate direct to a fix (e.g., radial/DME or radial/radial) unless the primary navigation equipment onboard the aircraft is certified for the appropriate area navigation capability. **(T-0)** Pilots of aircraft without the appropriate area navigation capability will reply with “unable” when given a clearance to proceed direct to a fix. **(T-0)** ATC should provide radar vectors or an alternate routing under these circumstances.

A5.5. Instrument Flying Maneuvers. Detailed descriptions of instrument flying maneuvers may be found in FAA-H-8083-15.

A5.5.1. Climbing and descending maneuvers can be performed as constant airspeed or constant rate. The constant airspeed maneuver is accomplished by setting power and varying pitch to maintain a specific airspeed. The constant rate maneuver is accomplished by varying both pitch and power to maintain a specific airspeed and vertical velocity. Either type of climb or descent may be performed while maintaining a constant heading or while turning and should be practiced at airspeeds, configurations, and ascent or descent rates used in actual instrument flight.

A5.5.1.1. Most aircraft have a standard set of pitch and power settings for certain airspeeds and configurations. For instance, to maintain 300 knots in a clean configuration, an aircraft might require 10 degrees nose down pitch at idle power. A pilot might also know that for that aircraft, each degree of pitch change at a constant power setting and configuration changes the airspeed 10 knots.

A5.5.1.2. To perform a constant airspeed climb or descent, make a smooth and simultaneous change in pitch and power corresponding to the desired airspeed and configuration. Once the initial attitude is established, fine-tune the airspeed by adjusting pitch. Confirm the pitch change by noting a change on the VVI and wait for the airspeed to stabilize. Continue this process until the desired airspeed is attained.

A5.5.1.3. Rate climbs and descents are like constant airspeed climbs and descents but require a constant VVI. An effective instrument cross-check and minor power adjustments allow a pilot to fine-tune the descent profile.


A5.5.2. Straight and level un-accelerated flight consists of maintaining desired altitude, heading, and airspeed.

A5.5.2.1. Maintain altitude by setting a specific pitch on the AI that maintains the desired altitude. As airspeed decreases, a higher pitch attitude is required to maintain altitude due to the loss of lift. Conversely, higher airspeeds require lower pitch attitudes. Each aircraft has basic pitch and power settings to maintain altitude and airspeed which may change slightly with changes in atmospheric conditions.

A5.5.2.2. While maintaining altitude, continue the instrument cross-check. If the altimeter or VVI indicate an altitude deviation, a pitch change is necessary. For small deviations, use control pressure rather than movement to make smooth and small pitch changes. Use trim to reduce control forces once the desired pitch is set. This allows the performance instruments time to display the new parameter before making an additional correction. Common errors include “chasing” the VVI and making erratic or large control inputs. Make another small and smooth pitch correction on the AI to level off. The attitude should be slightly different than the original pitch setting held when the altitude deviation occurred.

A5.5.2.3. When making pitch corrections, a VVI one to two times the amount of the altitude deviation prevents overshoots (e.g., if 100 feet off altitude, set a pitch that produces a 100 to 200 foot per minute climb or descent on the VVI). Approaching the desired altitude, begin the pitch change to level off at approximately 10% of the vertical rate. (Figure A5.2.).

Figure A5.2. Leading the Level Off.

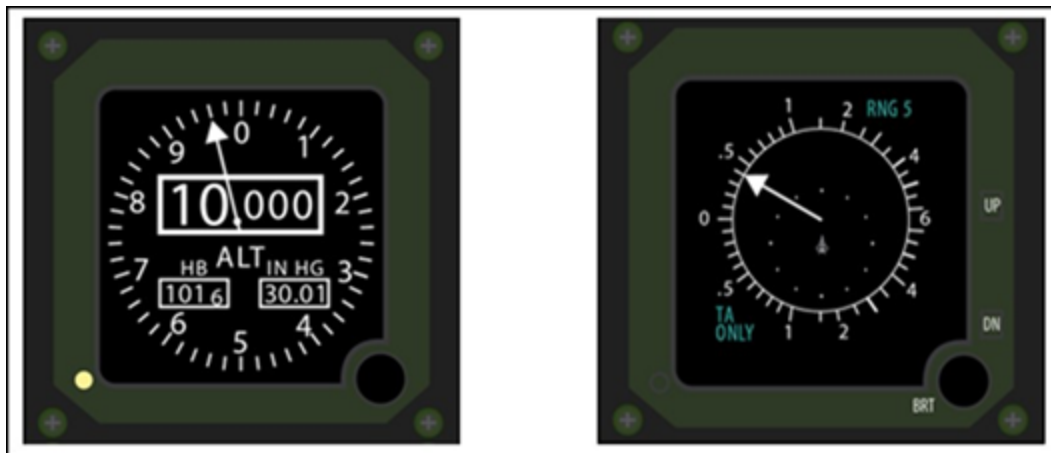

A5.5.2.4. Maintaining a desired heading is accomplished by maintaining a zero-bank attitude in coordinated flight. If a heading deviation occurs, make a smooth bank change on the AI to return to the desired heading. As a guide, the bank attitude change on the AI should equal the heading deviation in degrees, not to exceed 30 degrees (e.g., if the heading deviation is 10 degrees, then use 10 degrees of bank). At higher true airspeeds, a larger bank may be needed to prevent an excessive course deviation. **Note:** If maintaining zero bank attitude on the AI and the heading changes, the AI may be “precessing.” Confirm this by referencing backup AIs. If precession is noted, it may be necessary to transition to the backup AI depending on the severity of the precession.

A5.5.2.5. Maintain airspeed by referring to the airspeed or Mach indicator and adjust the power, drag devices (for large airspeed changes), or aircraft attitude. Known pitch and power settings required for desired airspeed and attitude aid in determining adjustments. An effective instrument cross-check indicates if subsequent power adjustments are required after establishing the approximate initial power setting. **Note:** An airspeed deviation may be the result of a pitch change, not an incorrect power setting (Figure A5.3.). Check all other flight parameters when an airspeed deviation occurs. Conversely, if in level

flight and a power change is necessary to correct airspeed, the new power setting or the employment of drag devices coupled with a change in airspeed may induce a climb or descent and require an attitude correction to maintain level flight. This relationship between airspeed and aircraft attitude requires an effective instrument cross-check.

Figure A5.3. Airspeed Deviation.



A5.5.3. The pitch, bank, and power principles discussed in maintaining straight and level flight apply while performing level turns (**Figure A5.4.**). Performing a level turn requires an understanding of several factors: entering the turn; maintaining bank, altitude, and airspeed during the turn; and returning to level flight. A “standard rate turn” is defined as a rate at which the aircraft makes a 360 degree turn in 120 seconds.

A5.5.3.1. To prevent heading overshoots, for heading changes of less than 30 degrees, the bank angle should equal the number of degrees to be turned. For heading changes of more than 30 degrees, use a bank angle of 30 degrees. Instrument procedures, high airspeeds, flight manual procedures, or airspace may require other angles of bank. Helicopters should use no more than standard rate turns (15 degrees to 20 degrees) when operating between 80 and 120 knots.

A5.5.3.2. To enter a turn, refer to the AI while applying smooth and coordinated control pressures to establish the desired angle of bank. It is normally necessary to increase pitch slightly to counteract the loss of vertical lift due to the bank. The increased pitch in prolonged turns requires consistent back pressure on the elevator control. Trimming off the pressure on the elevator aids in smooth aircraft control and enhance cross-check capability in the turn. Additionally, to maintain airspeed, an increase in power is required to counteract the induced drag produced by the elevator inputs. The bank, pitch change and power increase should all be applied smoothly as the aircraft enters the turn to prevent the need for large corrections during the turn.

Figure A5.4. Level Turns.




A5.5.3.3. To roll out on a desired heading, calculate a lead point that is approximately one-third the angle of bank used in the turn (e.g., if making a 30 degrees bank turn, begin roll out at 10 degrees of heading prior to the desired final heading). Upon reaching the lead point, smoothly and simultaneously reverse the bank, pitch, trim, and power inputs used to roll into the turn. Once on the new heading, check for deviations from straight and level flight and apply corrections as needed.

A5.5.4. Steep turns are normally defined as any turn greater than 30 degrees of bank and are practiced in simulated instrument conditions. The control inputs for steep turn entry and exit are identical to a normal turn except all inputs are more pronounced. The increased bank requires more pitch, more back pressure, and more power to counteract the further reduced vertical lift and increased induced drag. The rate of turn is much faster in a steep turn and requires a more aggressive lead point. For helicopters, any rate greater than standard is considered a steep turn; most helicopters practice steep turns using 30 degrees of bank, which is the maximum angle of bank recommended under instrument conditions.


A5.6. The “Vertical S.” The “Vertical S” maneuvers are proficiency maneuvers designed to improve cross-check and aircraft control necessary for the different phases of instrument flight. Each may be flown utilizing various configurations, airspeeds, rates, etc.

A5.6.1. The “Vertical S Alpha” is a continuous series of rate climbs and descents flown on a constant heading utilizing a vertical velocity compatible with aircraft performance ([Figure A5.5](#)).

Figure A5.5. Vertical S Alpha.

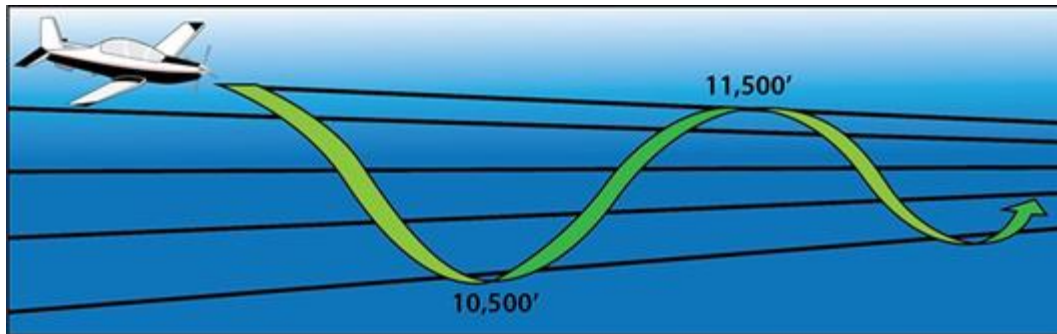


A5.6.2. The “Vertical S Bravo” is the same as the Vertical S Alpha except that a constant angle of bank is maintained during the climb and descent ([Figure A5.6](#)). The angle of bank used should be compatible with aircraft performance (e.g., usually that required for a normal turn). The turn is established simultaneously with the initial climb or descent.

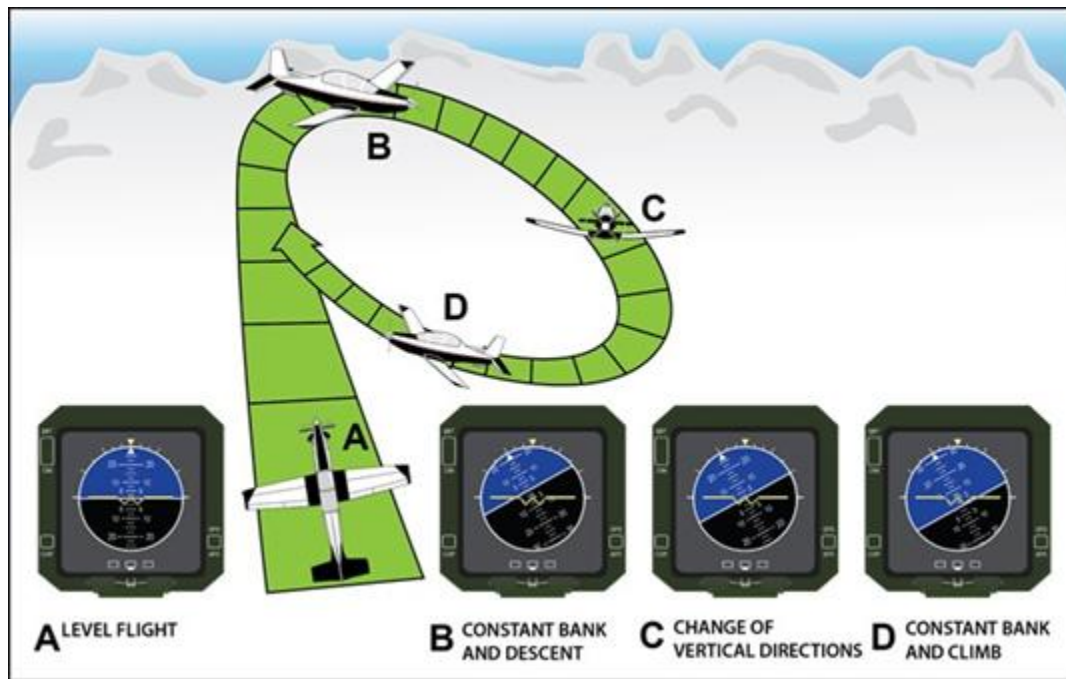Figure A5.6. Vertical S Bravo.


A5.6.3. The “Vertical S Charlie” is the same as Vertical S Bravo, except that the direction of turn is reversed at the beginning of each descent ([Figure A5.7.](#)). Enter the Vertical S Charlie in the same manner as the Vertical S Bravo.

A5.6.4. The “Vertical S Delta” is the same as the Vertical S Charlie, except that the direction of turn is reversed simultaneously with each change of vertical direction ([Figure A5.7.](#)). Enter the Vertical S Delta in the same manner as the Vertical S Bravo or Charlie.

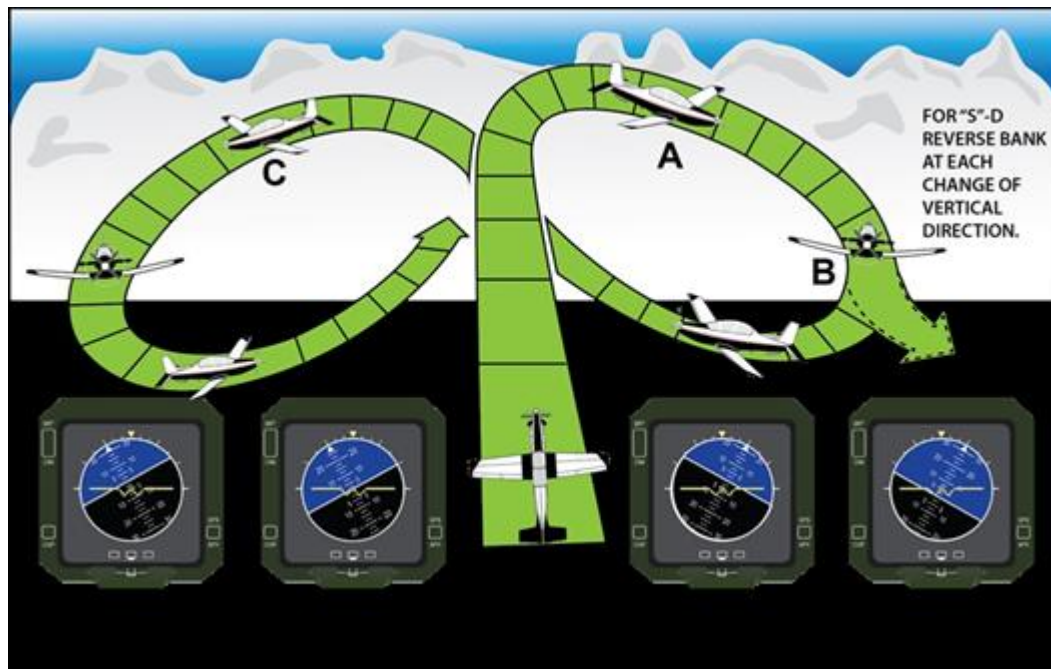
Figure A5.7. Vertical S Charlie and Delta.

A5.7. Wingover. Begin the wingover maneuver from straight and level flight ([Figure A5.8](#)). After obtaining the desired airspeed, start a climbing turn in either direction while maintaining the wing tip of the miniature aircraft on the horizon bar until reaching 60 degrees of bank. Allow the nose of the aircraft to start down while continuing to increase the angle of bank, planning to arrive at 90 degrees of bank as the fuselage dot of the miniature aircraft reaches the horizon bar. Begin decreasing the angle of bank as the fuselage dot of the miniature aircraft reaches the horizon bar so that the wing tip of the miniature aircraft reaches the horizon bar as 60 degrees of bank is reached. Maintain the wing tip on the horizon bar while rolling to a wings level attitude. The rate of roll during the recovery should be the same as the rate of roll used during the entry. Control pitch and bank throughout the maneuver by reference to the AI.

Figure A5.8. Wingover.

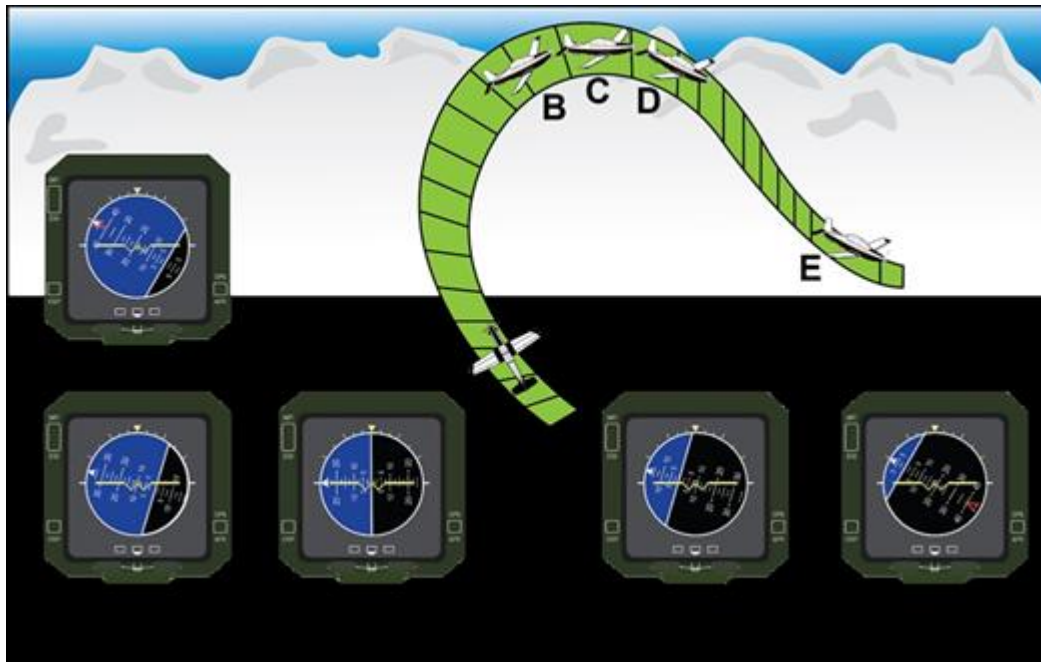

A5.8. Aileron Roll. Begin the aileron roll maneuver from straight and level flight ([Figure A5.9](#)). After obtaining the desired airspeed, smoothly increase the pitch attitude with the wings level 15 degrees to 25 degrees nose up on the AI. Start a roll in either direction and adjust the rate of roll so that, when inverted, the wings are level as the fuselage dot of the miniature aircraft passes through the horizon bar. Continue the roll and recover to level flight. The entire maneuver should be accomplished by reference to the AI. Use sufficient back pressure to maintain normal seat pressures throughout the maneuver.

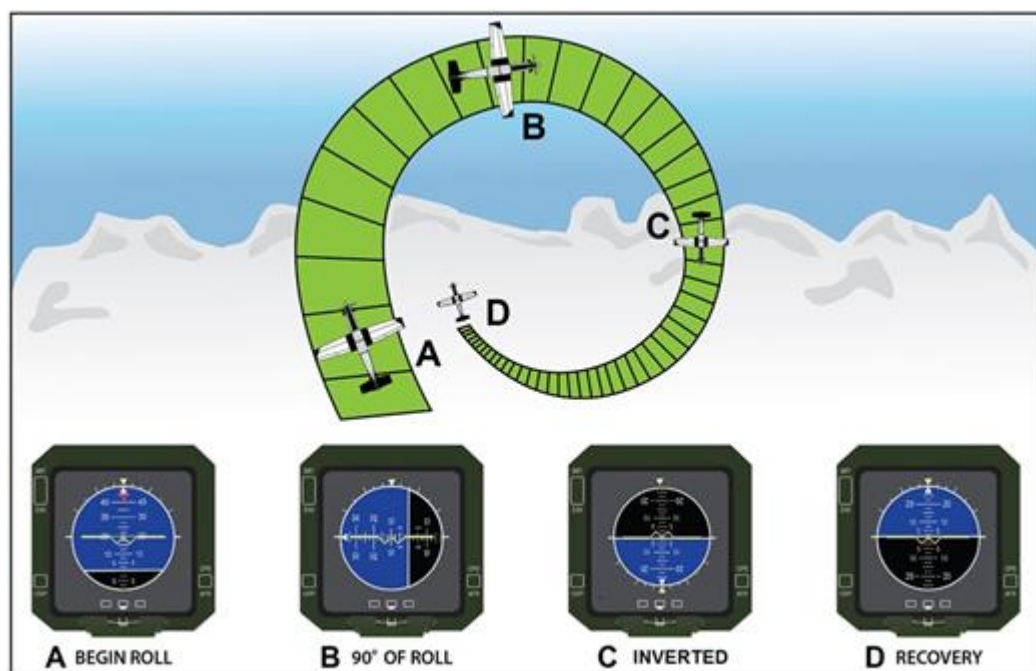Figure A5.9. Aileron Roll.

A5.9. Unusual Attitudes. An unusual attitude is an aircraft attitude which occurs inadvertently, is not normally required for instrument flight, or is not anticipated.

A5.9.1. Immediately transition to instrument references if disoriented or when outside visual references become unreliable. Recognizing an unusual attitude is critical to a successful recovery.

A5.9.2. Recognize an unusual attitude in one of two ways – an unusual attitude “picture” on the AI or unusual performance on the performance instruments.

A5.9.3. Confirm that an unusual attitude exists by comparing control and performance instrument indications prior to initiating recovery on the AI. This precludes entering an unusual attitude because of correcting for erroneous instrument indications. Use additional independent attitude indicating sources (e.g., standby AI, copilot’s AI) to verify the actual aircraft attitude. If there is any doubt as to proper AI operation, then recover using AI inoperative procedures.

A5.9.4. The recovery actions should be compatible with the severity of the unusual attitude, the characteristics of the aircraft, and the altitude available for the recovery. The following aerodynamic principles and considerations are applicable to the recovery from unusual attitudes:

A5.9.4.1. Reducing bank in a dive or increasing bank in a climb aids pitch control.

A5.9.4.2. Power and drag devices used properly aid airspeed control if the aircraft flight manual allows their use in unusual attitude situations.

A5.9.4.3. During unusual attitude recoveries, unless necessary to avoid a greater emergency, ensure bank and power do not exceed aircraft limitations.

A5.9.4.4. For AI with a bank pointer and bank scale at the top, the bank pointer that is always aligned above and perpendicular to the surface of the earth is considered a sky pointer. Rolling towards the sky pointer to place it in the upper half of the case corrects an inverted attitude.

A5.9.4.5. For AI with the bank scale at the bottom, rolling in the direction that places the pitch reference scale right side up corrects an inverted attitude.

A5.9.5. Night vision devices (NVDs) may be distracting during unusual attitude recoveries. Once transition to instruments has occurred, do not rely on outside NVD cues until the aircraft is recovered.

A5.9.6. Spatial disorientation may become severe during the recovery from an unusual attitude with an inoperative AI. Unusual attitudes may result in excess loss of altitude and possible loss of aircraft control.

A5.9.7. Due to limited attitude information, recovery from unusual attitudes using a HUD or helmet mounted display may be difficult or impossible.

A5.10. Fixed-wing Unusual Attitudes – AI Operative. For fixed-wing aircraft, use the following procedures if specific unusual attitude recovery procedures are not in the flight manual:

A5.10.1. If diving, adjust power and drag devices as appropriate while rolling to a wings level, upright attitude, and correct pitch to level flight on the AI. Do not add back pressure until the aircraft is less than 90 degrees of bank.

A5.10.2. If climbing, use power and bank as necessary to assist pitch control and avoid negative loads on the aircraft. As the AI airplane symbol approaches the horizon bar, adjust bank, power, and pitch to complete recovery and establish the desired aircraft attitude. Exercise care when recovering from a steep climb to avoid exceeding bank limitations.

A5.11. Fixed-wing Unusual Attitudes – AI Inoperative. Successful recovery from unusual attitudes depends greatly on pilot proficiency and early recognition of AI failure. AI failure should be immediately suspected if control pressures are applied without corresponding AI changes or performance instrument indications contradict the “picture” on the AI. The following procedures are recommended should an unusual attitude be encountered without any functioning AIs:

A5.11.1. If the aircraft flight manual allows and an available autopilot is not slaved to gyros of the malfunctioning AI, consideration may be given to engaging the autopilot and setting it to straight and level flight. If airspeed or vertical velocity are excessive, use the procedures below to return the aircraft to acceptable flight parameters before attempting to engage the autopilot.

A5.11.2. Determine whether the aircraft is in a climb or a dive by referring to the airspeed, altimeter, and vertical velocity indicators.

A5.11.3. If climbing, use power as required. If the airspeed is low or decreasing rapidly, pitch control may be aided by maintaining or rolling into a turn of approximately standard rate on the turn needle until reaching level flight.

A5.11.4. If diving, roll to center the turn needle and recover from the dive. Adjust power and drag devices as appropriate. Except for vertical attitudes, rolling “away” from the turn needle or turn coordinator and centering it results in an upright attitude.

A5.11.5. Upon reaching level flight, center the turn needle. The aircraft is level when the altimeter stops. The vertical velocity indicator lag error may cause it not to indicate level until the aircraft passes through level flight.

A5.12. Helicopter Unusual Attitudes – AI Operative. Recoveries from helicopter unusual attitudes are unique due to rotary-wing aerodynamics as well as application of the control and performance concept to helicopter flight. Application of improper recovery techniques can result in blade stall, power settling, or an uncontrollable yaw if recovery is delayed. Due to these differences, unusual attitude recoveries for helicopters are decidedly different from fixed-wing recoveries and require immediate action. Use the following guidance if specific unusual attitude recovery procedures are not contained in the aircraft flight manual:

A5.12.1. Determine whether the aircraft is in a climb, dive, or hover by referring to the airspeed, altimeter, and VVI.

A5.12.2. If climbing, consider pitch attitude and airspeed. If the inadvertent pitch attitude is not extreme (10 degrees or less from level flight), smoothly lower the miniature aircraft back to a level flight indication, level the wings, and resume a normal cross-check using power as required. For extreme pitch attitudes (above 10 degrees), bank the aircraft in the shorter direction toward the nearest 30 degrees bank index. The amount of bank used should be commensurate with the pitch attitude and external conditions, but do not exceed 30 degrees of bank in making the recovery. Allow the miniature aircraft to fall toward the horizon. When the aircraft symbol is on the horizon, level the wings and adjust the aircraft attitude to a level flight indication. Use power as necessary throughout the recovery.

A5.12.3. If diving, consider altitude, acceleration limits, and the possibility of encountering blade stall. If altitude permits, avoid rolling pullouts. To recover from a diving unusual attitude, roll to a wings level indication then establish a level flight attitude on the AI. Adjust power as necessary and resume a normal cross-check.

A5.12.4. If the aircraft is in a hover or low speed when the unusual attitude is recognized, smoothly but immediately roll to a wings level attitude and apply maximum power available. Once attitude control is reestablished, execute an instrument takeoff, or refer to hover velocity instrumentation to maintain position (if available). This condition is most common during dust or white out situations, or when performing terminal operations at night or over water.

A5.12.5. For helicopters encountering an unusual attitude resulting from blade stall, reduce collective before applying attitude corrections if the aircraft is in a climbing unusual attitude. This aids in eliminating the possibility of aggravating the blade stall condition. To aid in avoiding blade stall in a diving unusual attitude recovery, reduce power and bank attitude before initiating a pitch change. In all cases avoid abnormal positive or negative loading which could lead to additional unusual attitudes or aircraft structural damage.

A5.13. Helicopter Unusual Attitudes – AI Inoperative. With an inoperative AI, successful recovery from unusual attitudes depends greatly on pilot proficiency and early recognition of AI failure. For example, AI failure should be immediately suspected if control pressures are applied for a turn without corresponding AI changes or performance instrument indications that contradict the “picture” on the AI. Should an unusual attitude be encountered without an AI, the following procedures are recommended:

A5.13.1. Determine whether the aircraft is in a climb or a dive by referring to the airspeed, altimeter, and vertical velocity indicators.


A5.13.2. If climbing, use power as required. If the airspeed is low or decreasing rapidly, pitch control may be aided by maintaining a standard rate turn on the turn needle until reaching level flight. If the turn needle in a flight director system is used, center the turn needle. This is because it is very difficult to determine between a standard rate turn and full needle deflection.

A5.13.3. If diving, roll to center the turn needle and recover from the dive. Adjust power as appropriate. Disregarding vertical attitudes, rolling “away” from the turn needle and centering it results in an upright attitude.

A5.13.4. Upon reaching level flight, center the turn needle. The aircraft is level when the altimeter stops. The vertical velocity indicator lag error may cause it not to indicate level until the aircraft passes level flight.

Attachment 6
FLIP DECISION TREE


Figure A6.1. DELETE.

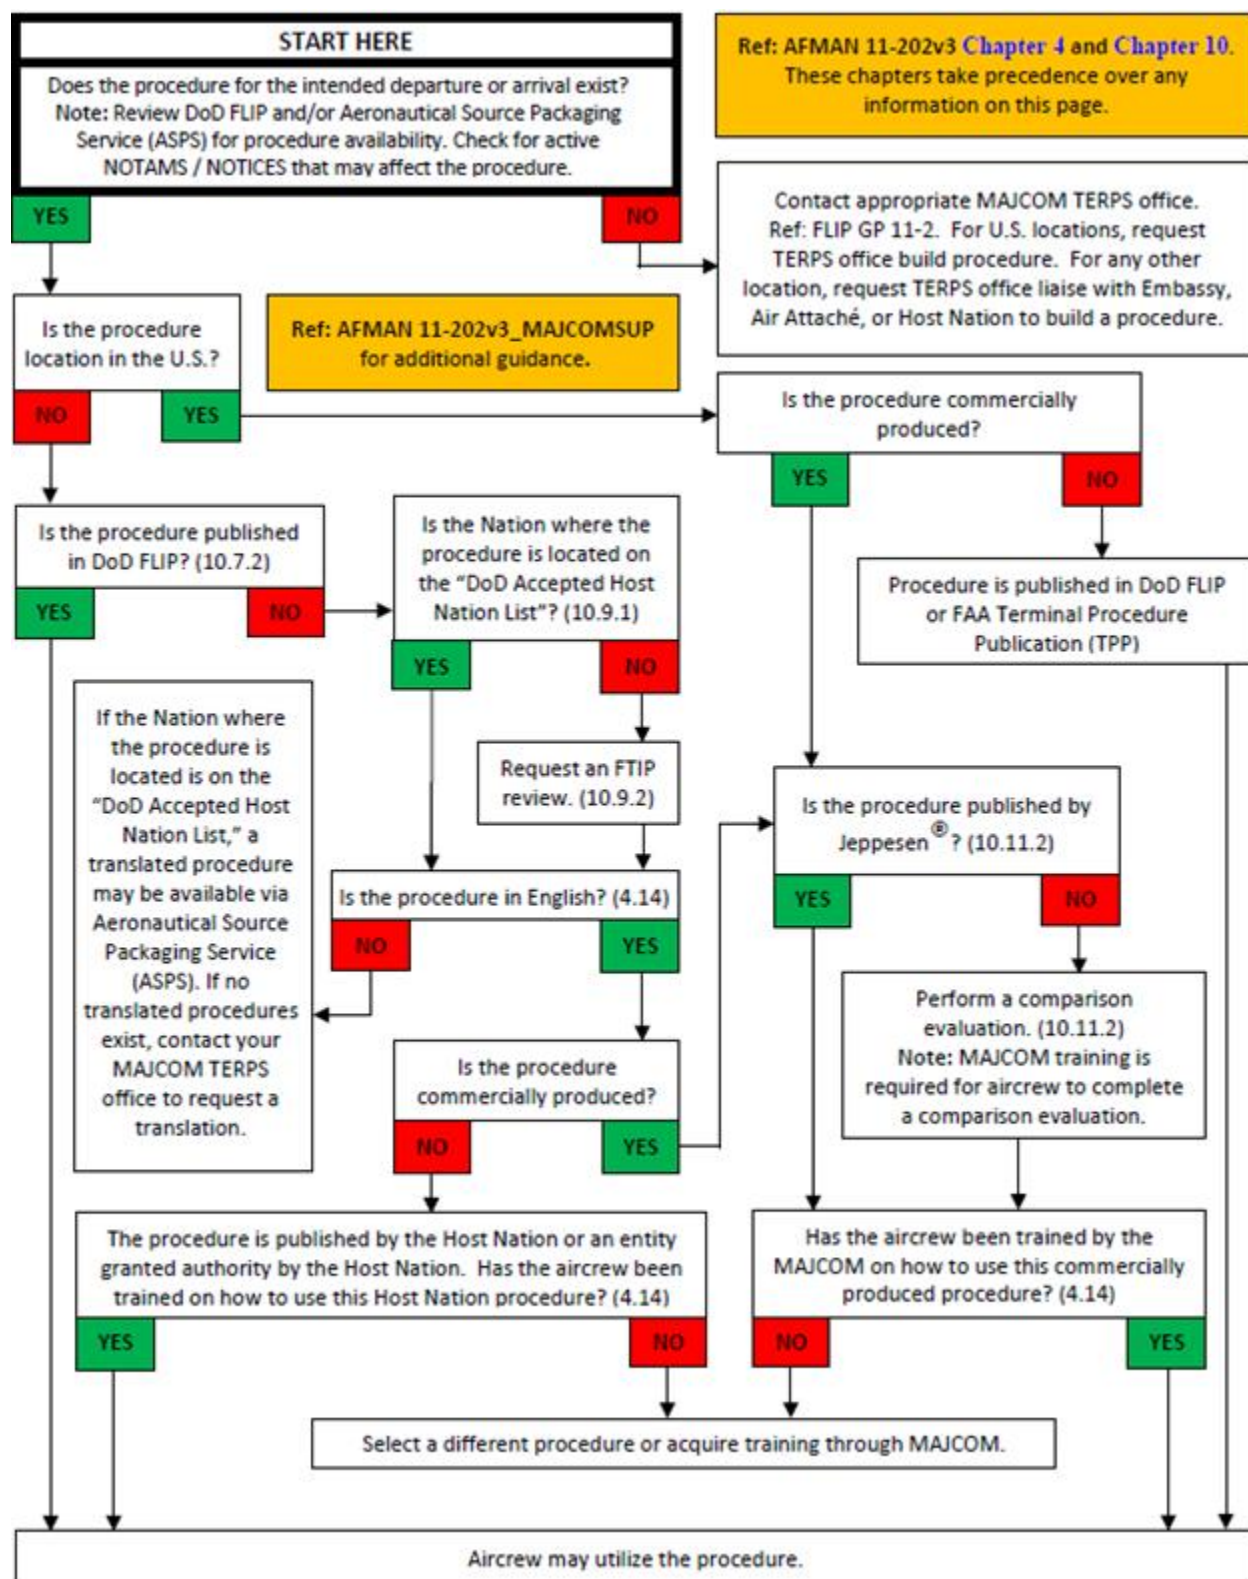

Attachment 7

IFR FILING AND WEATHER DECISION TREE

Figure A7.1. DELETE.

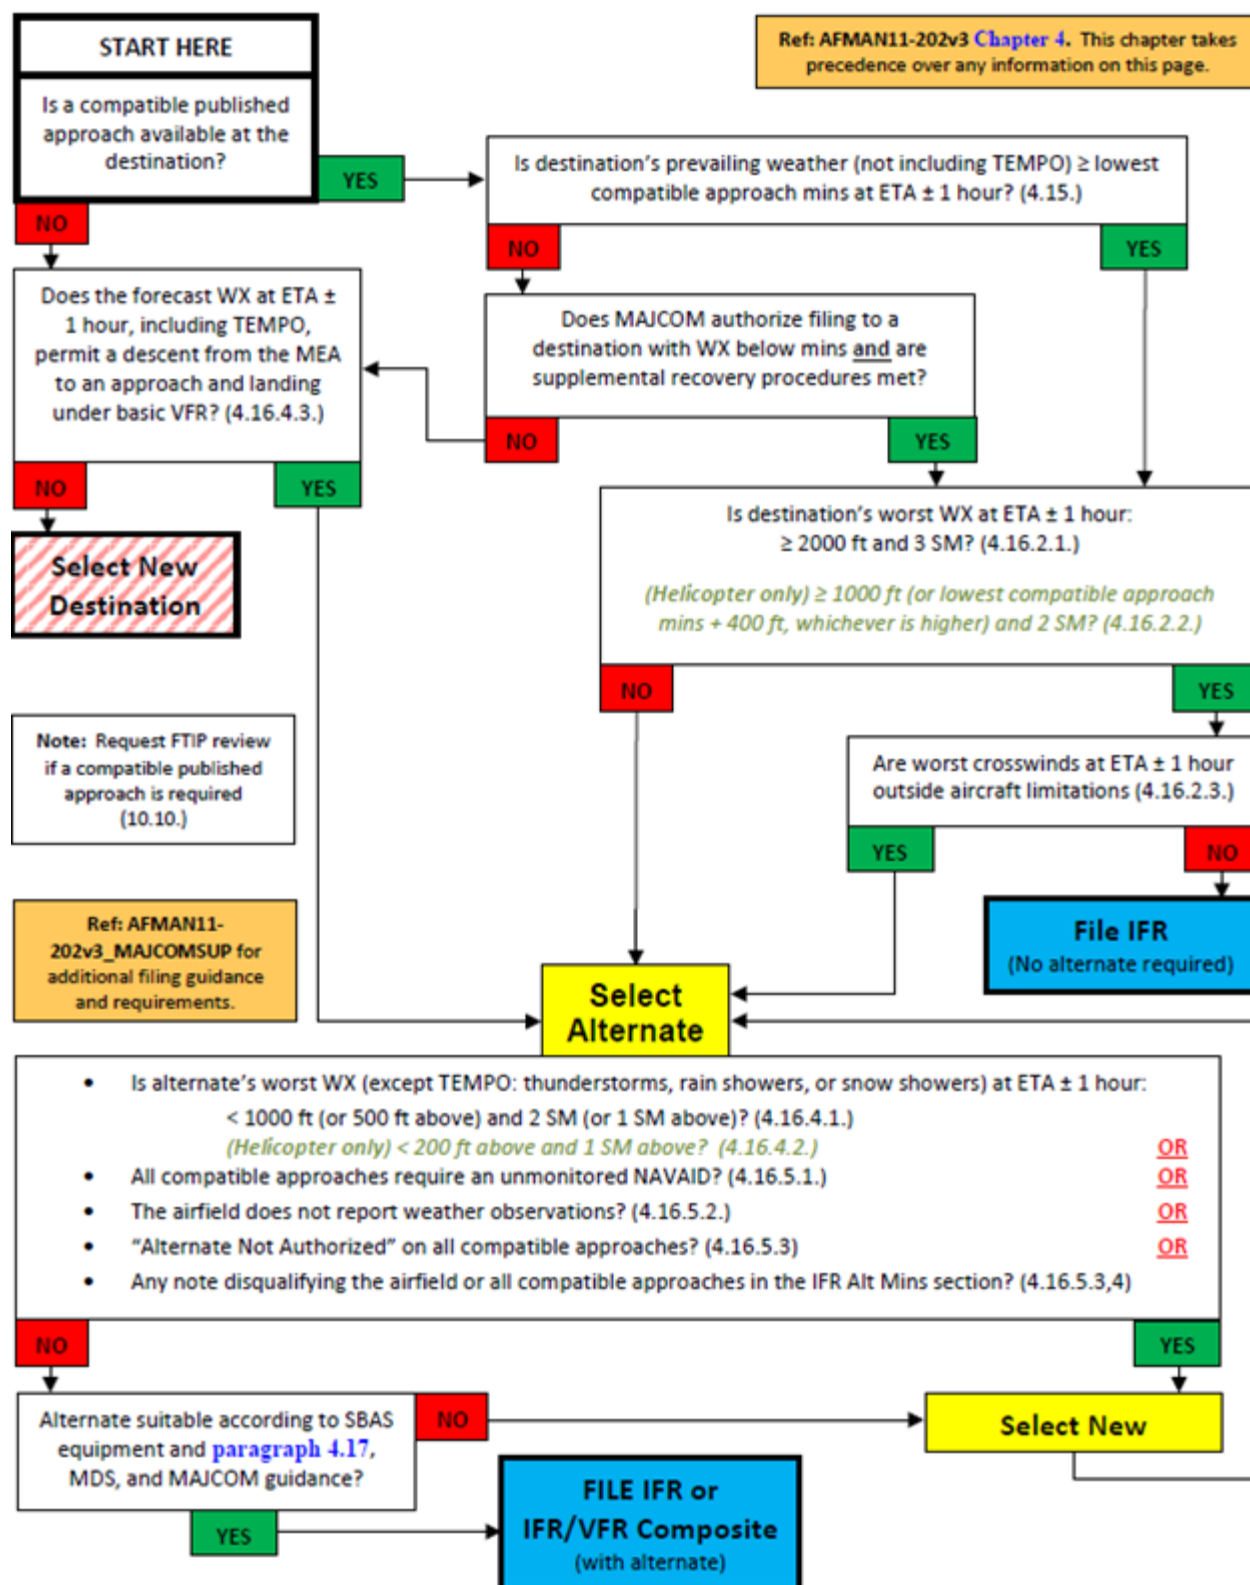

Attachment 8

DEPARTURE DECISION TREE

Figure A8.1. DELETE.

